



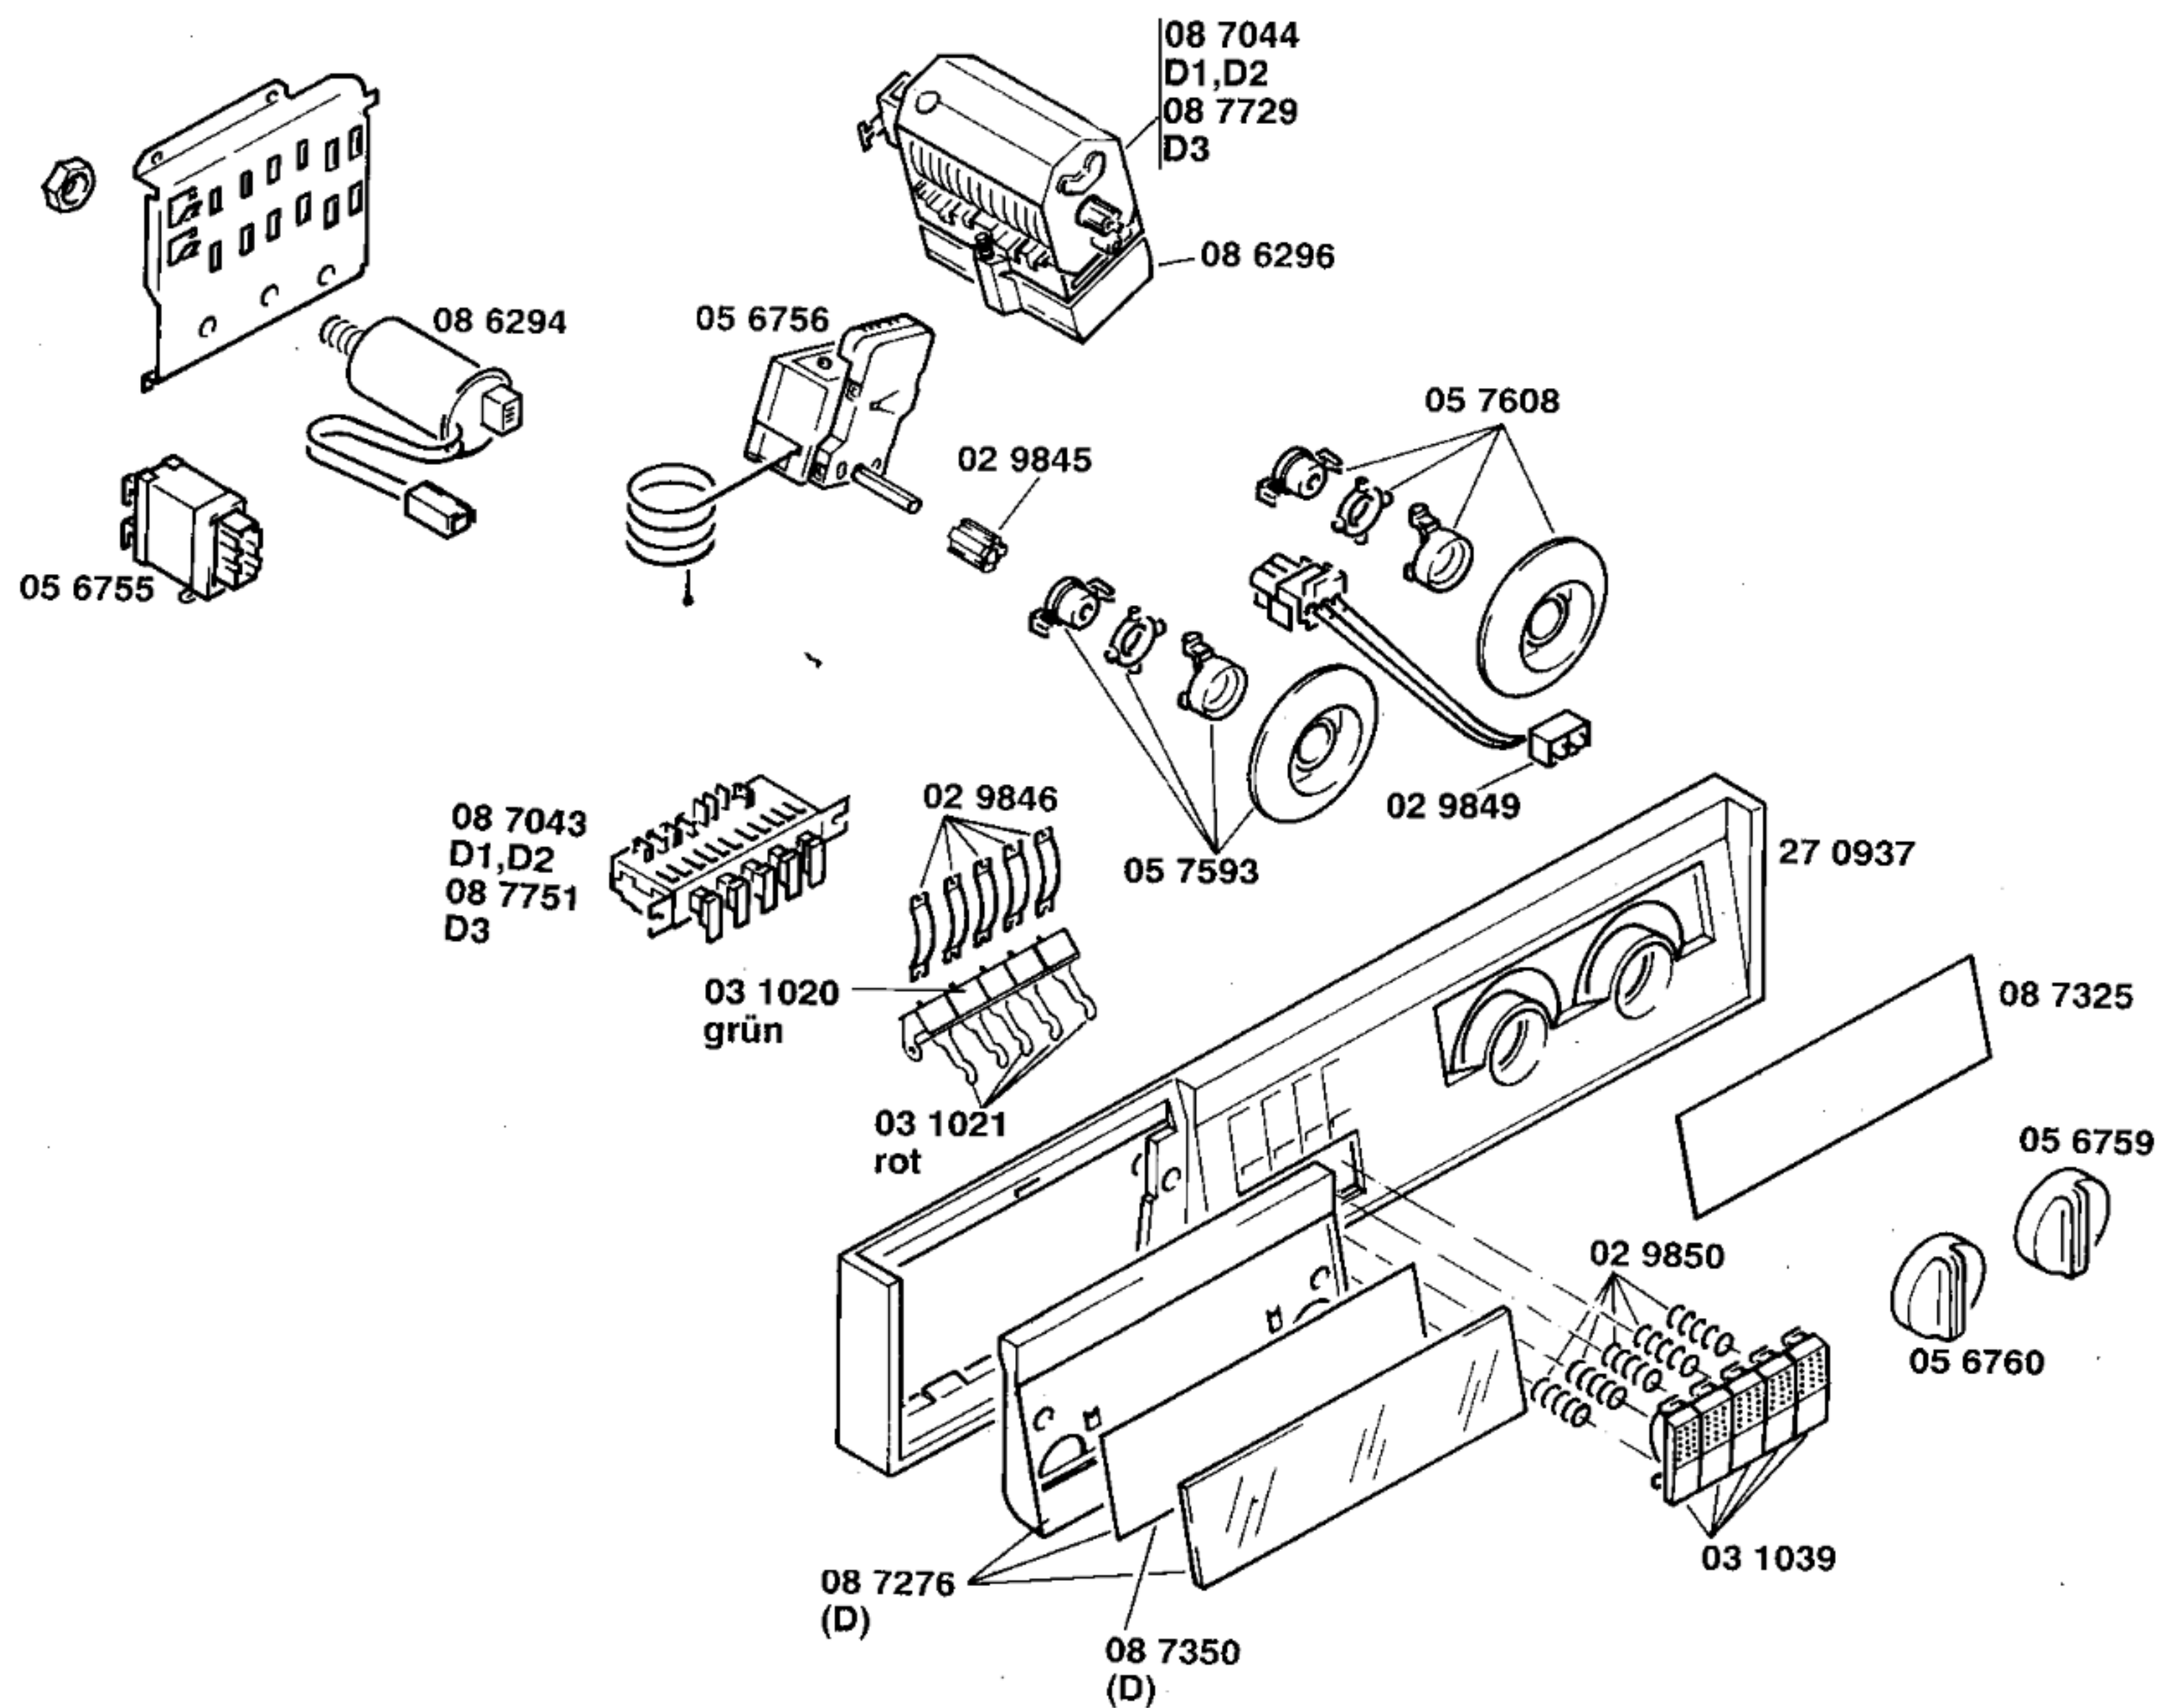


Gebrauchsanweisung
51 4118
(D)

Programmtabelle
51 3940
(D)

Aufstellanweisung
51 3965
(D)

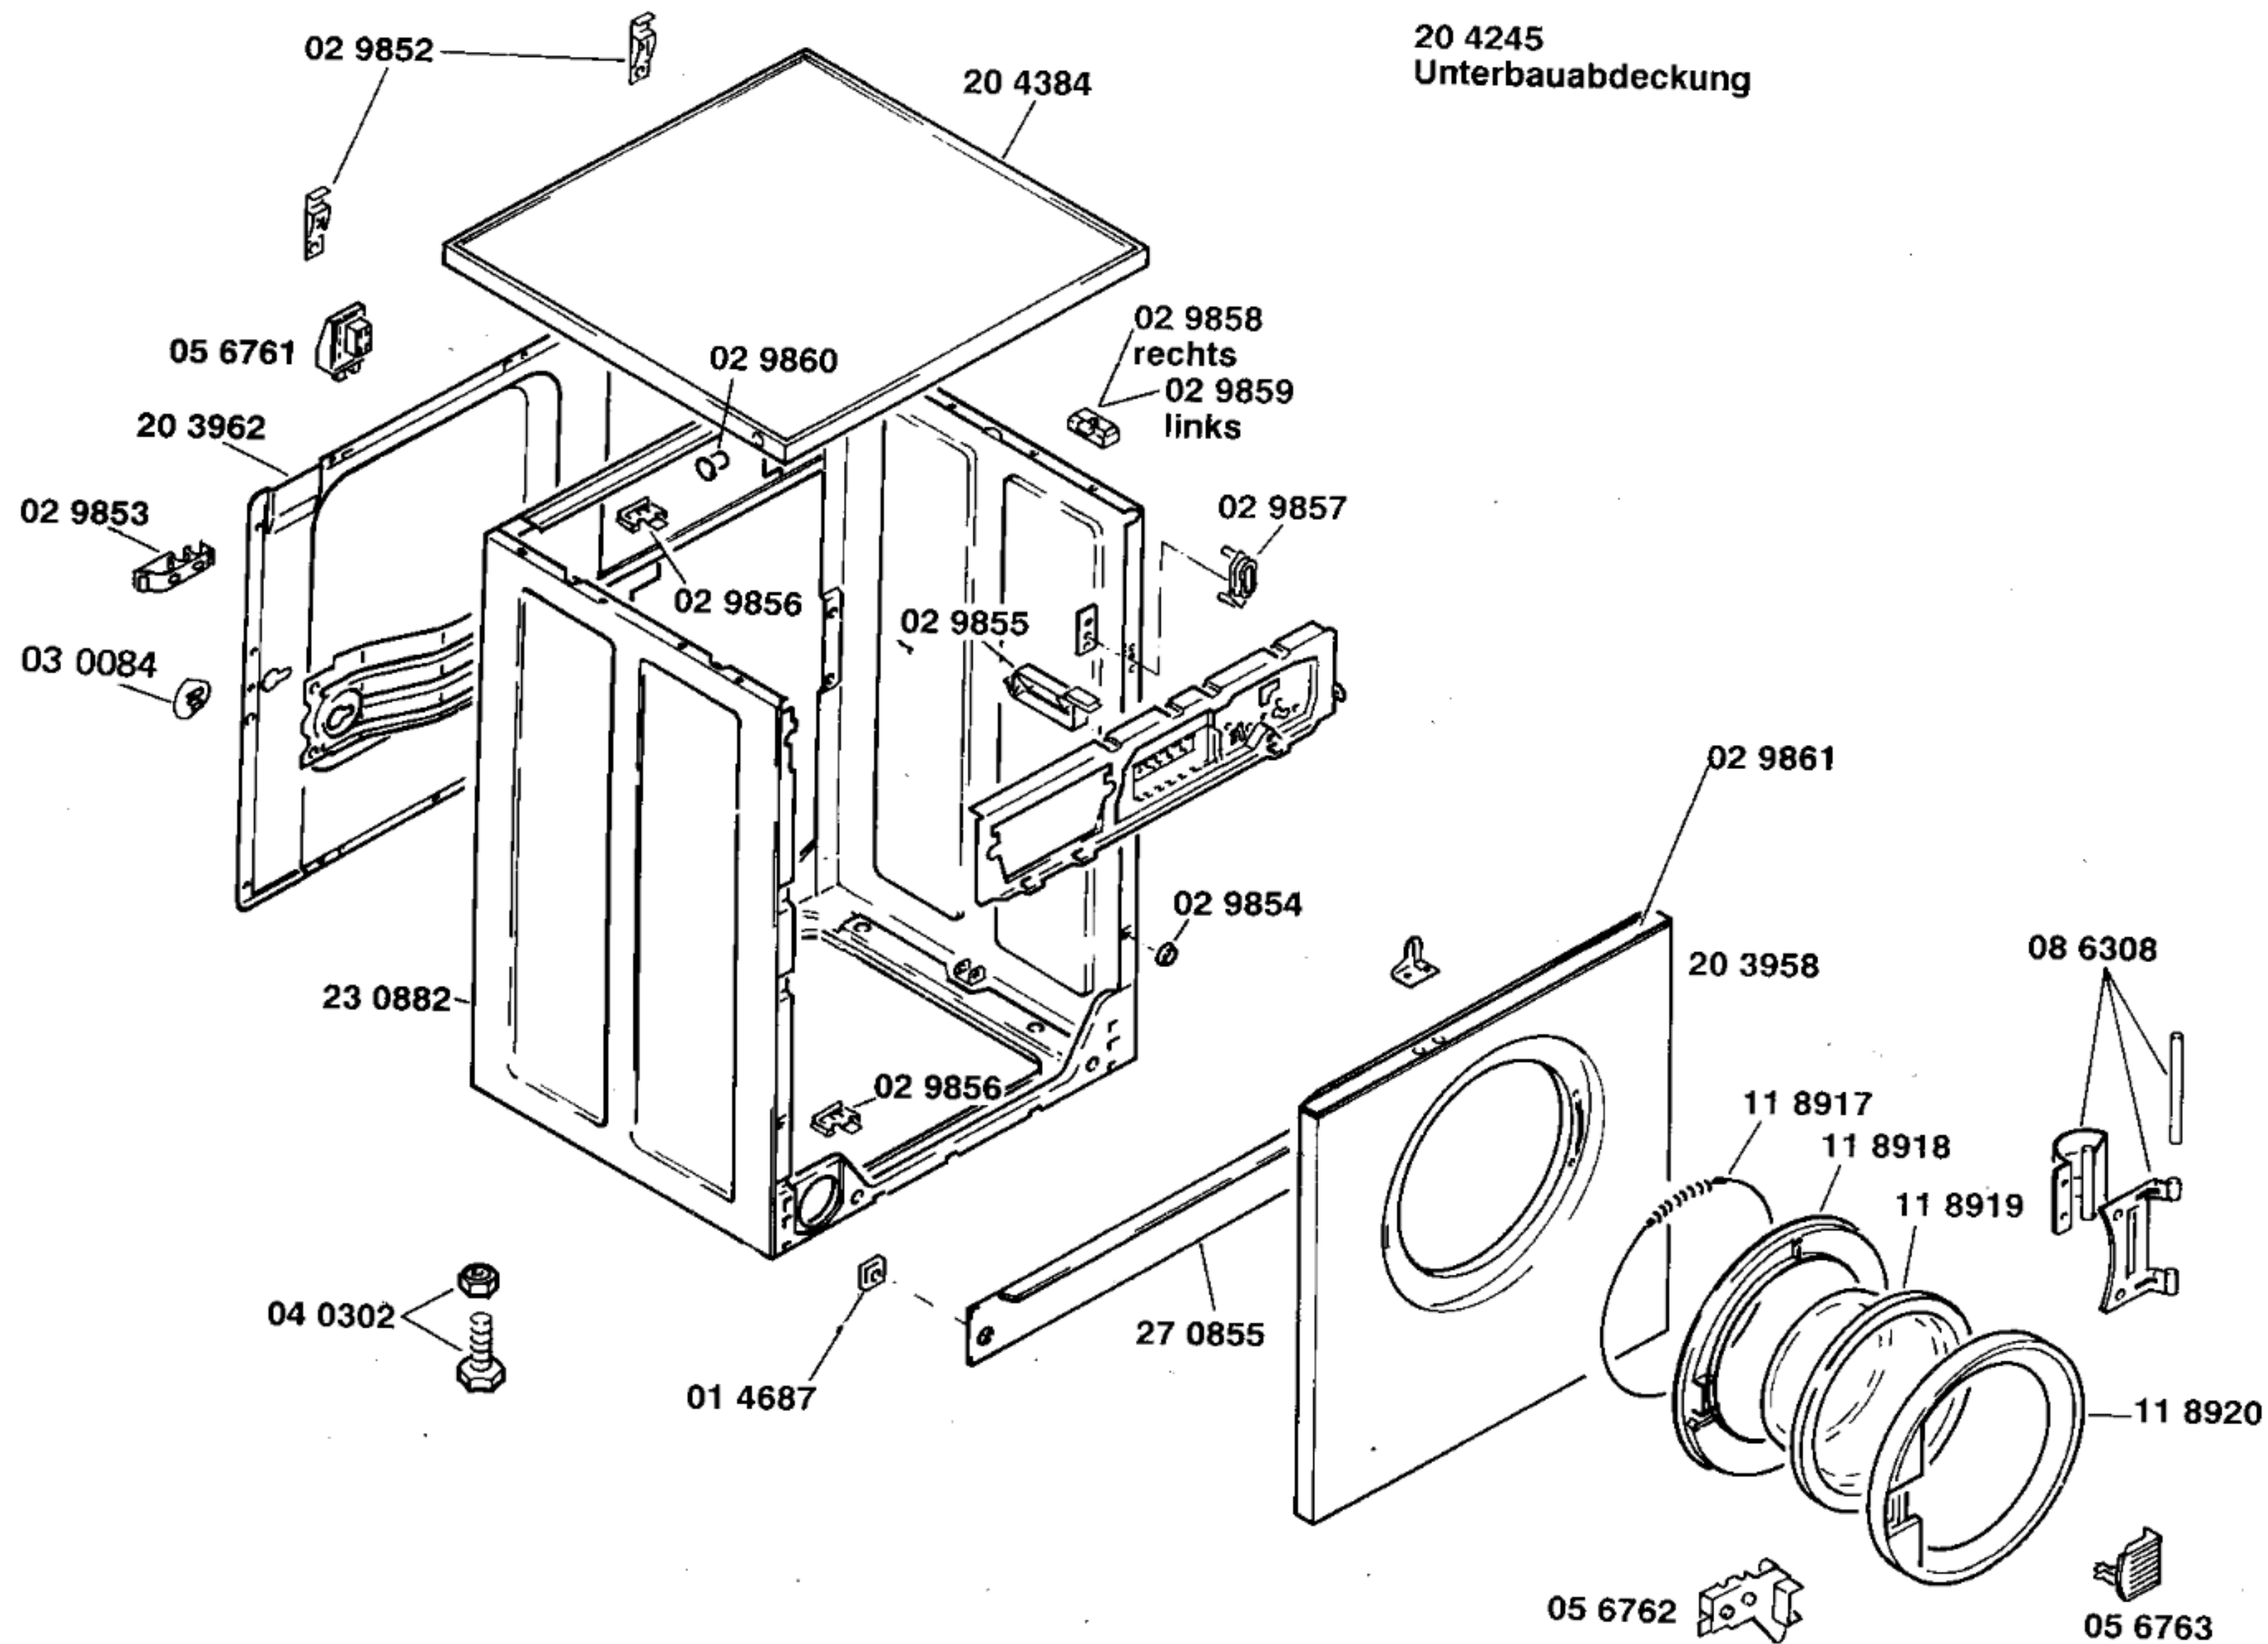

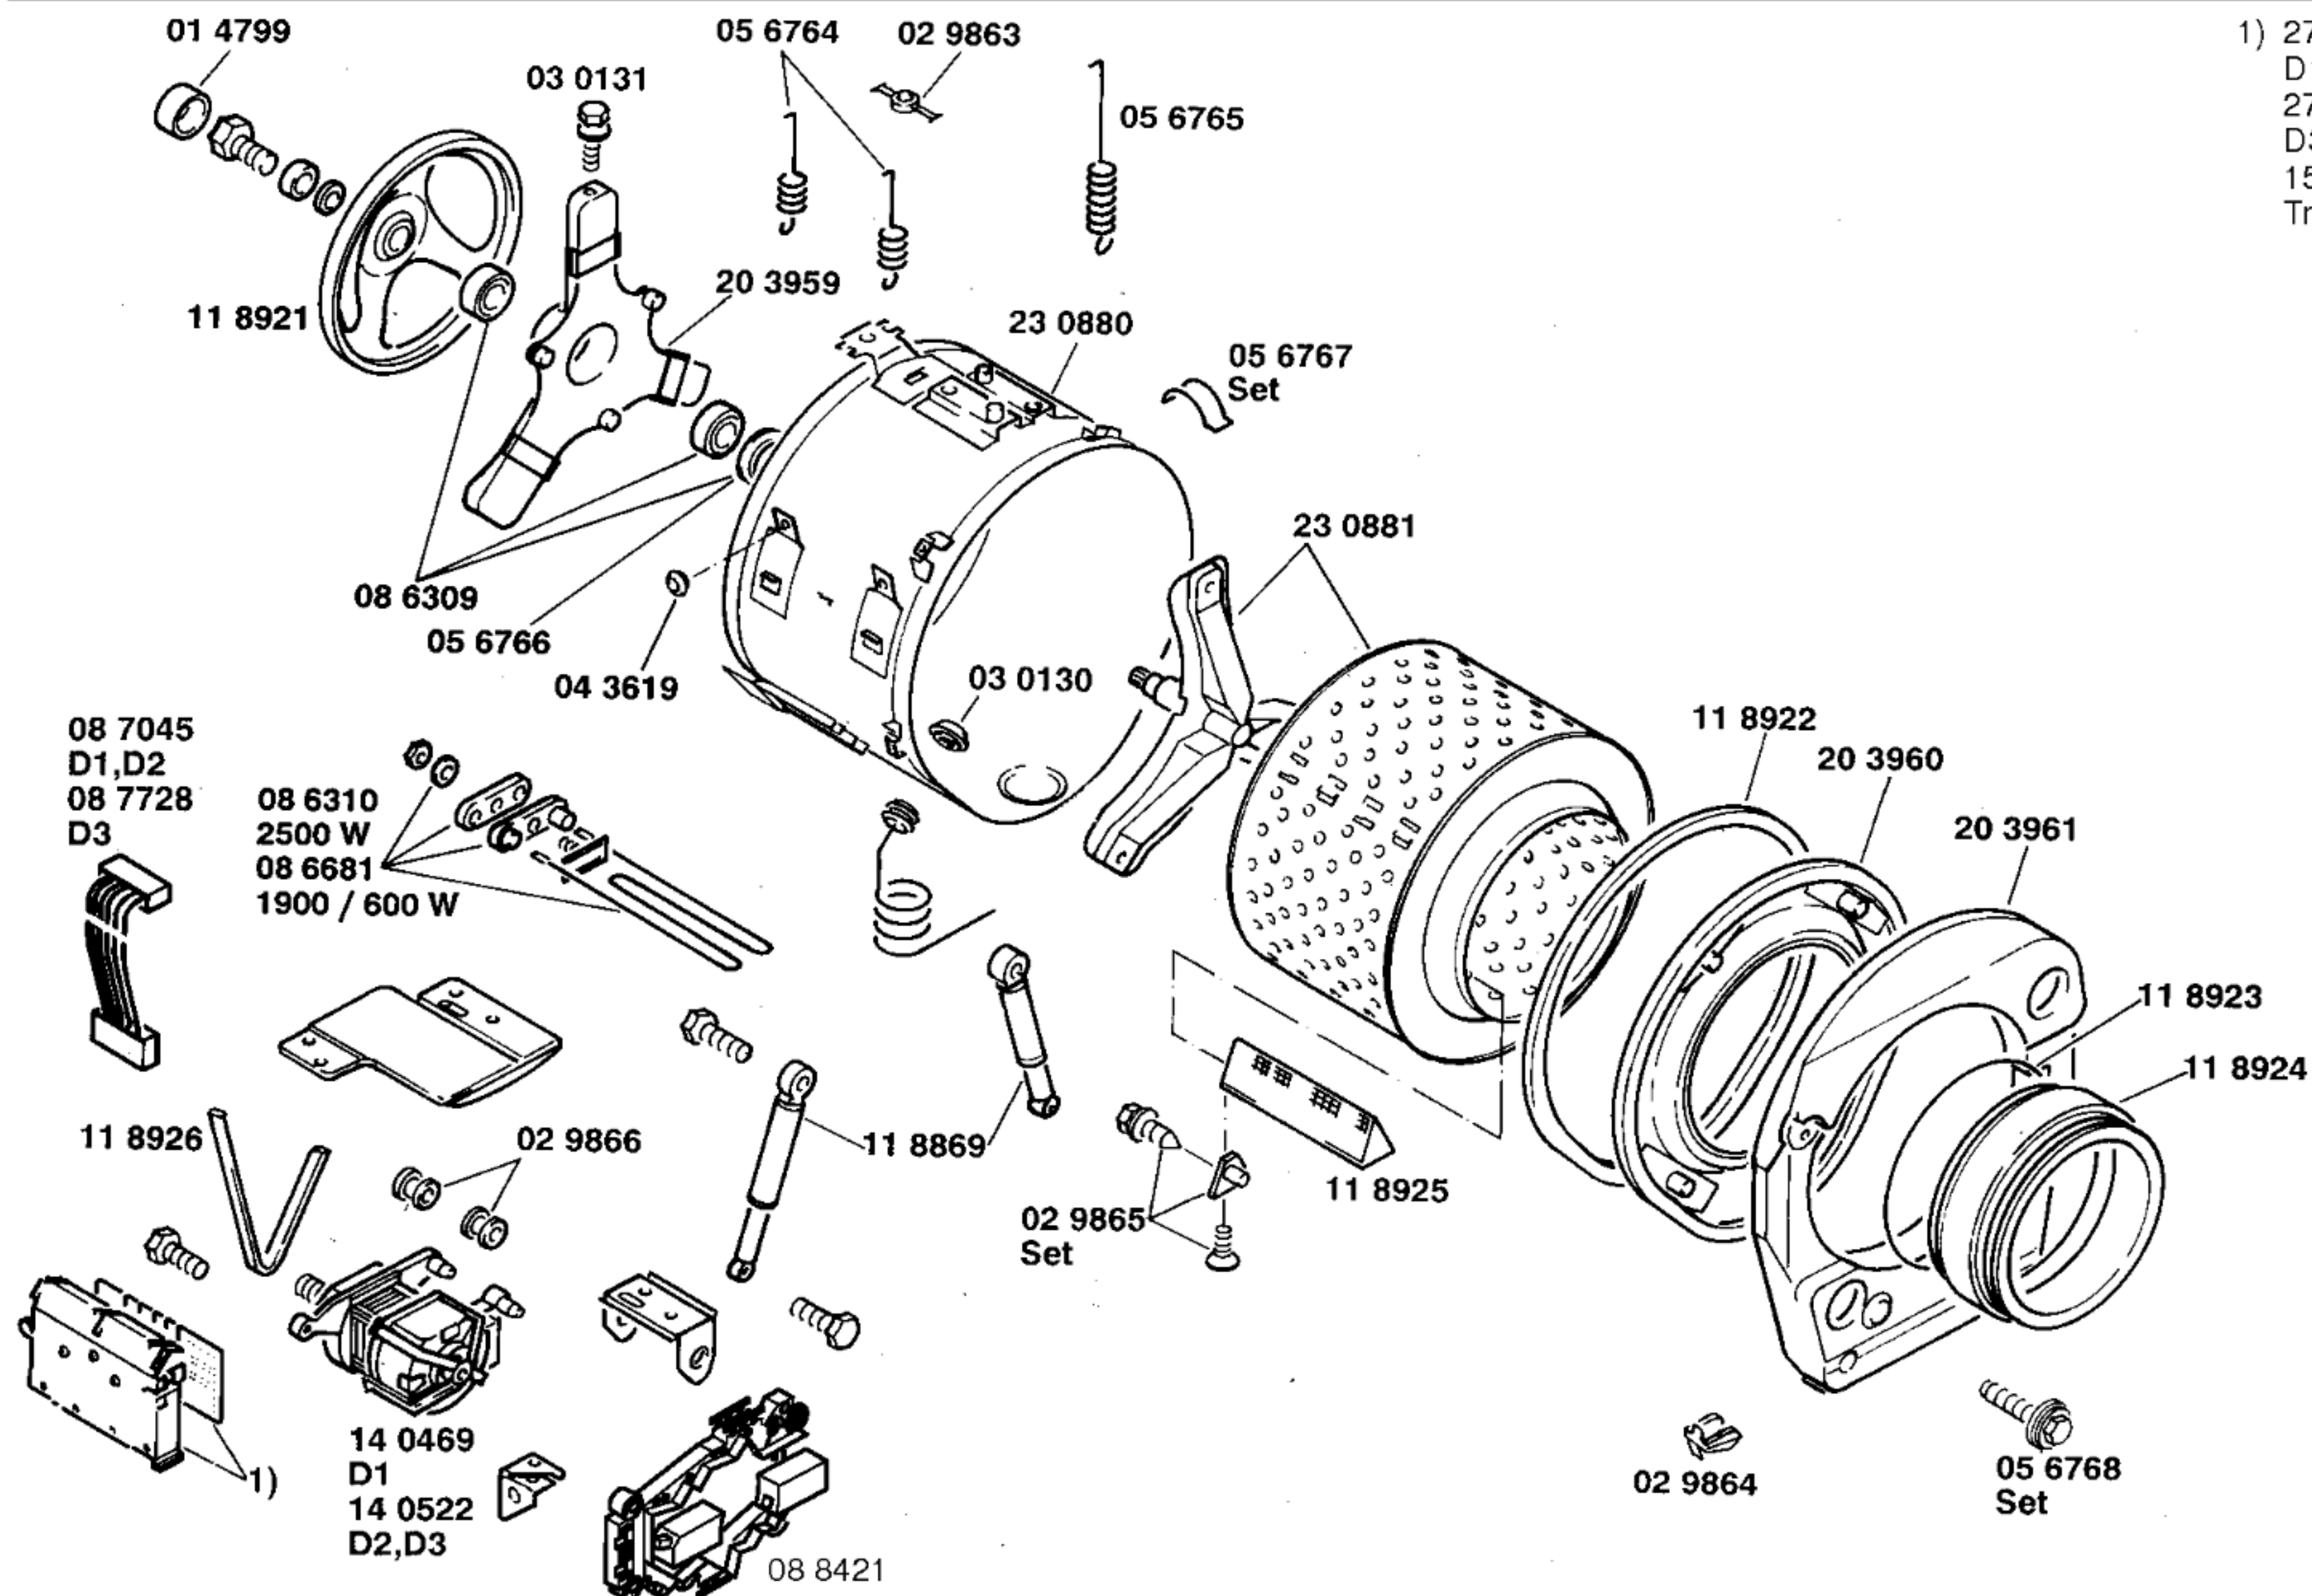

- 1) 27 0442
D1,D2
27 1716
D3
15 5272
Triac-Motorleistung

