


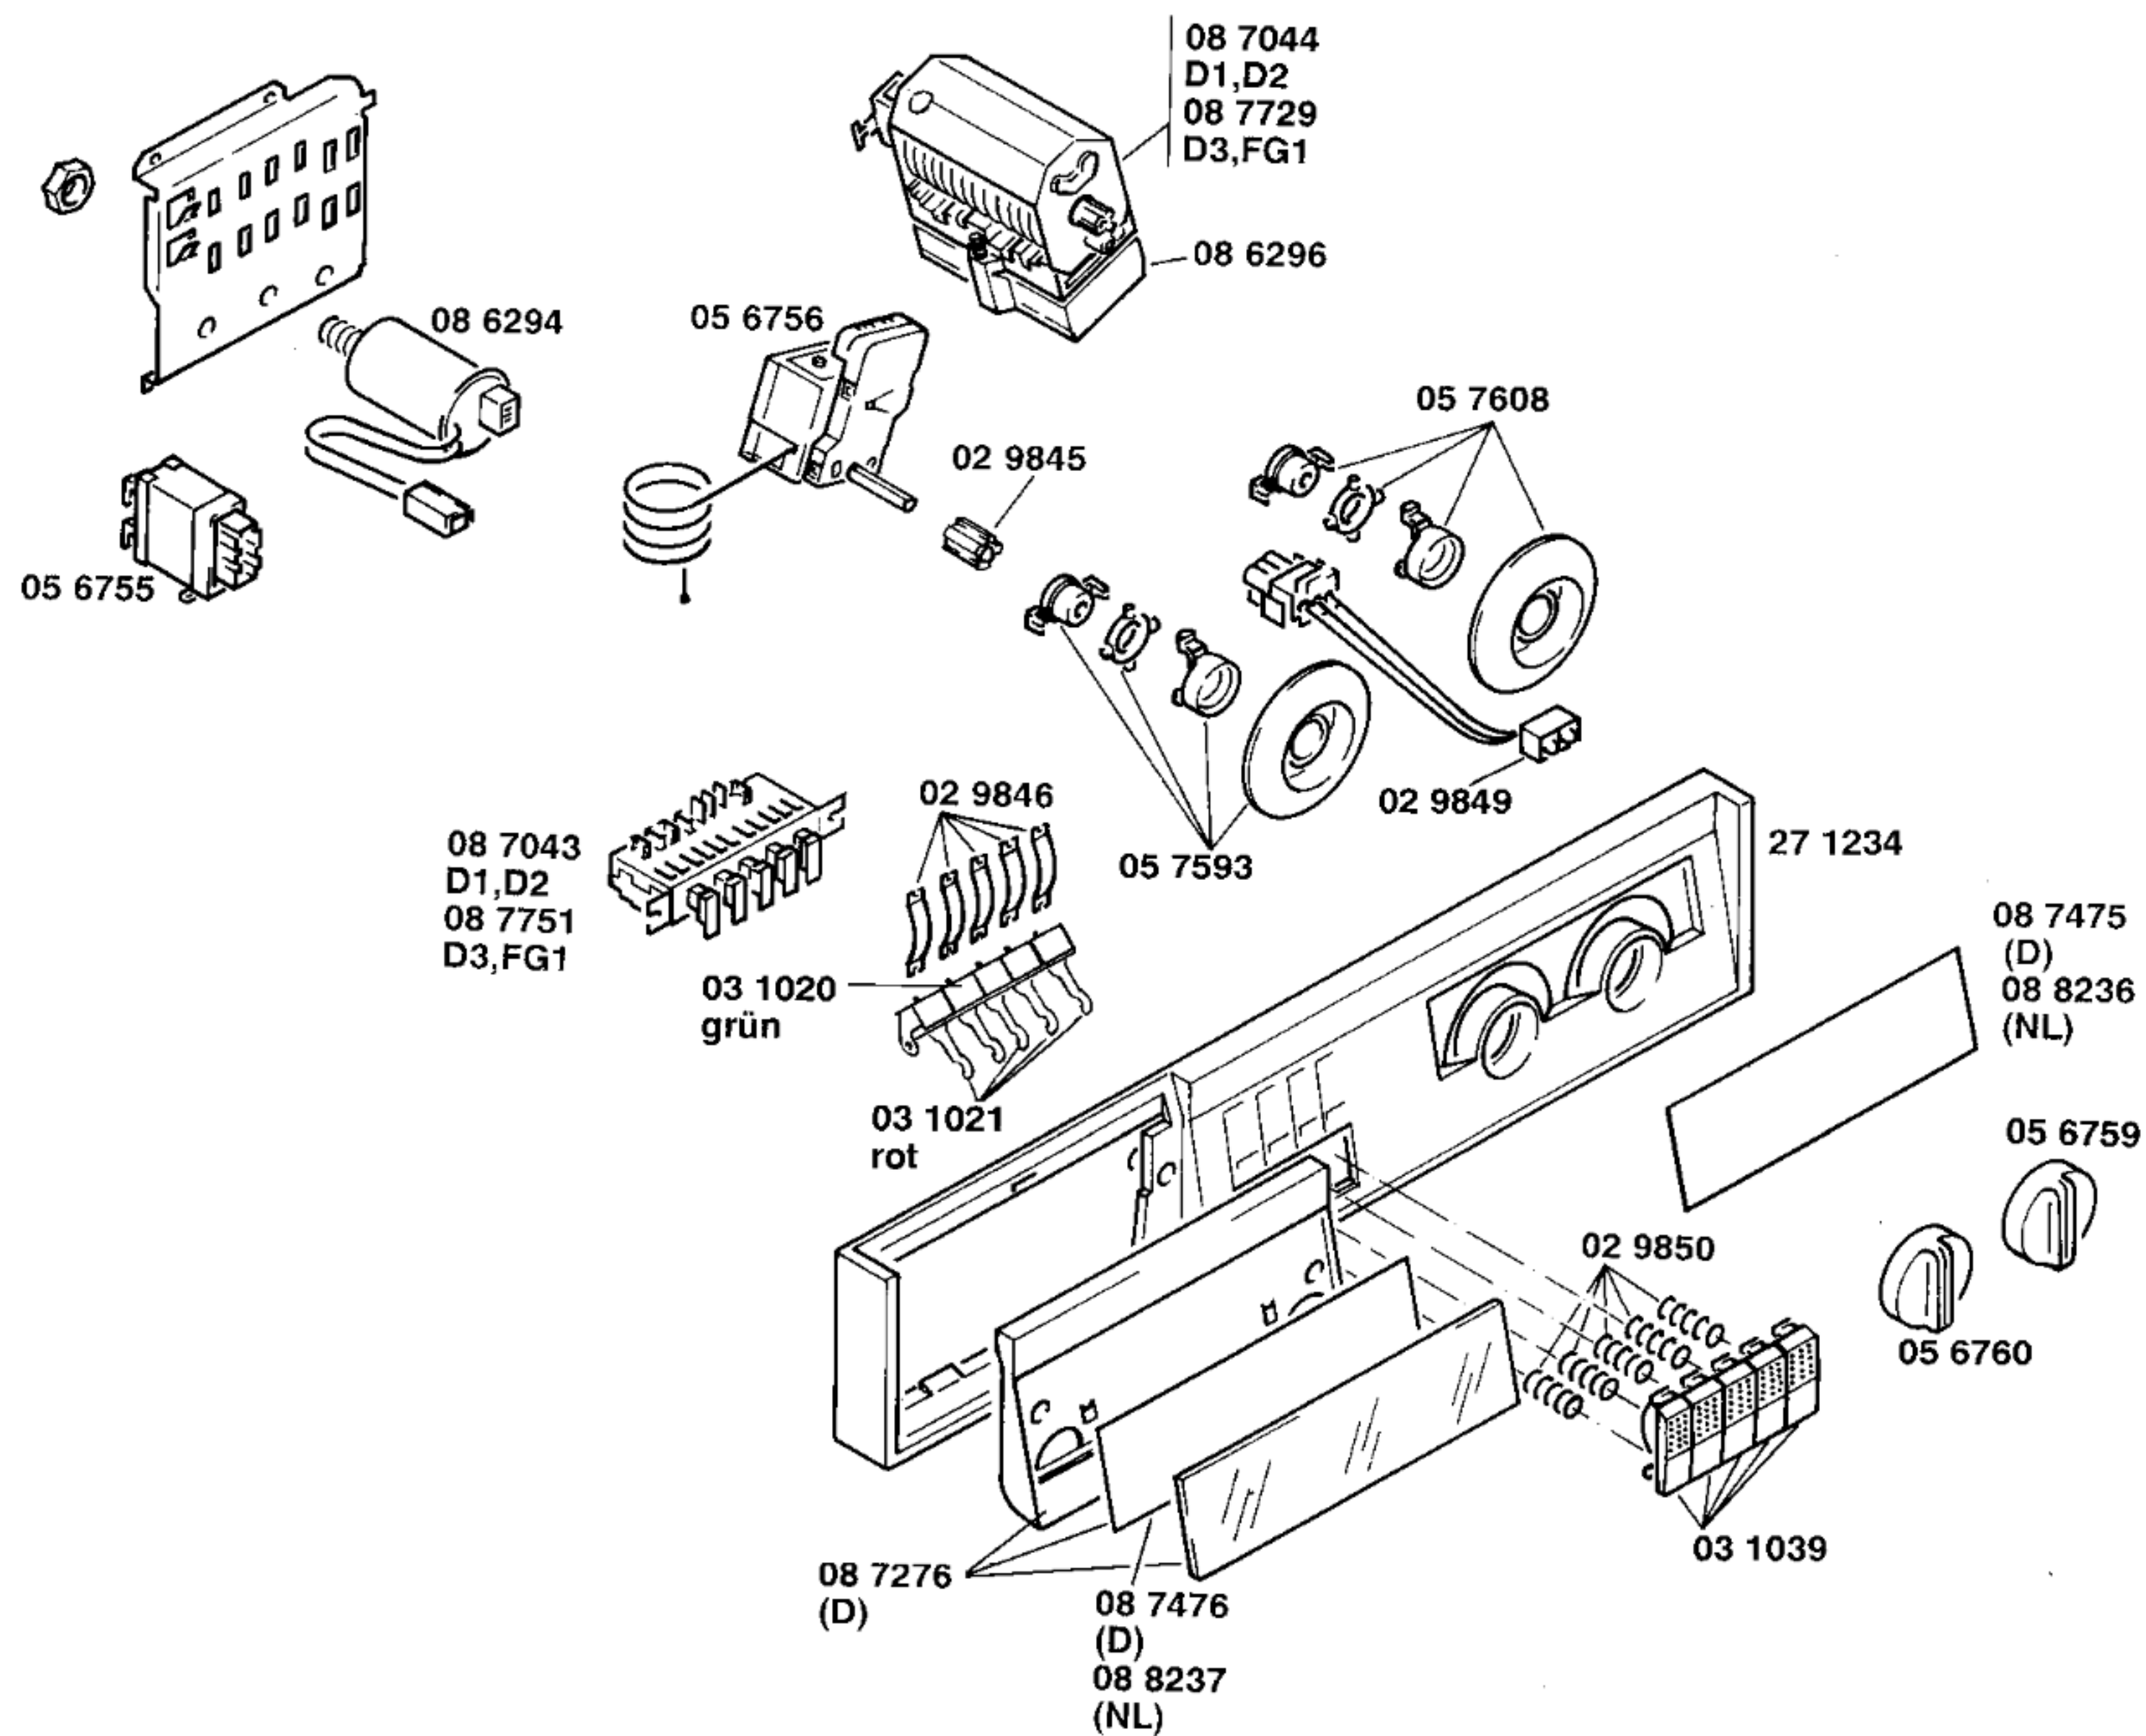

Gebrauchsanweisungen:

51 4118

(D)

51 4592

(NL,F,E,GB)

Programmtabellen:

51 3940

(D)

51 3555

(NL,F,E,GB)


Aufstellanweisungen:

51 3965

(D)

51 3969

(NL,F,E,GB)

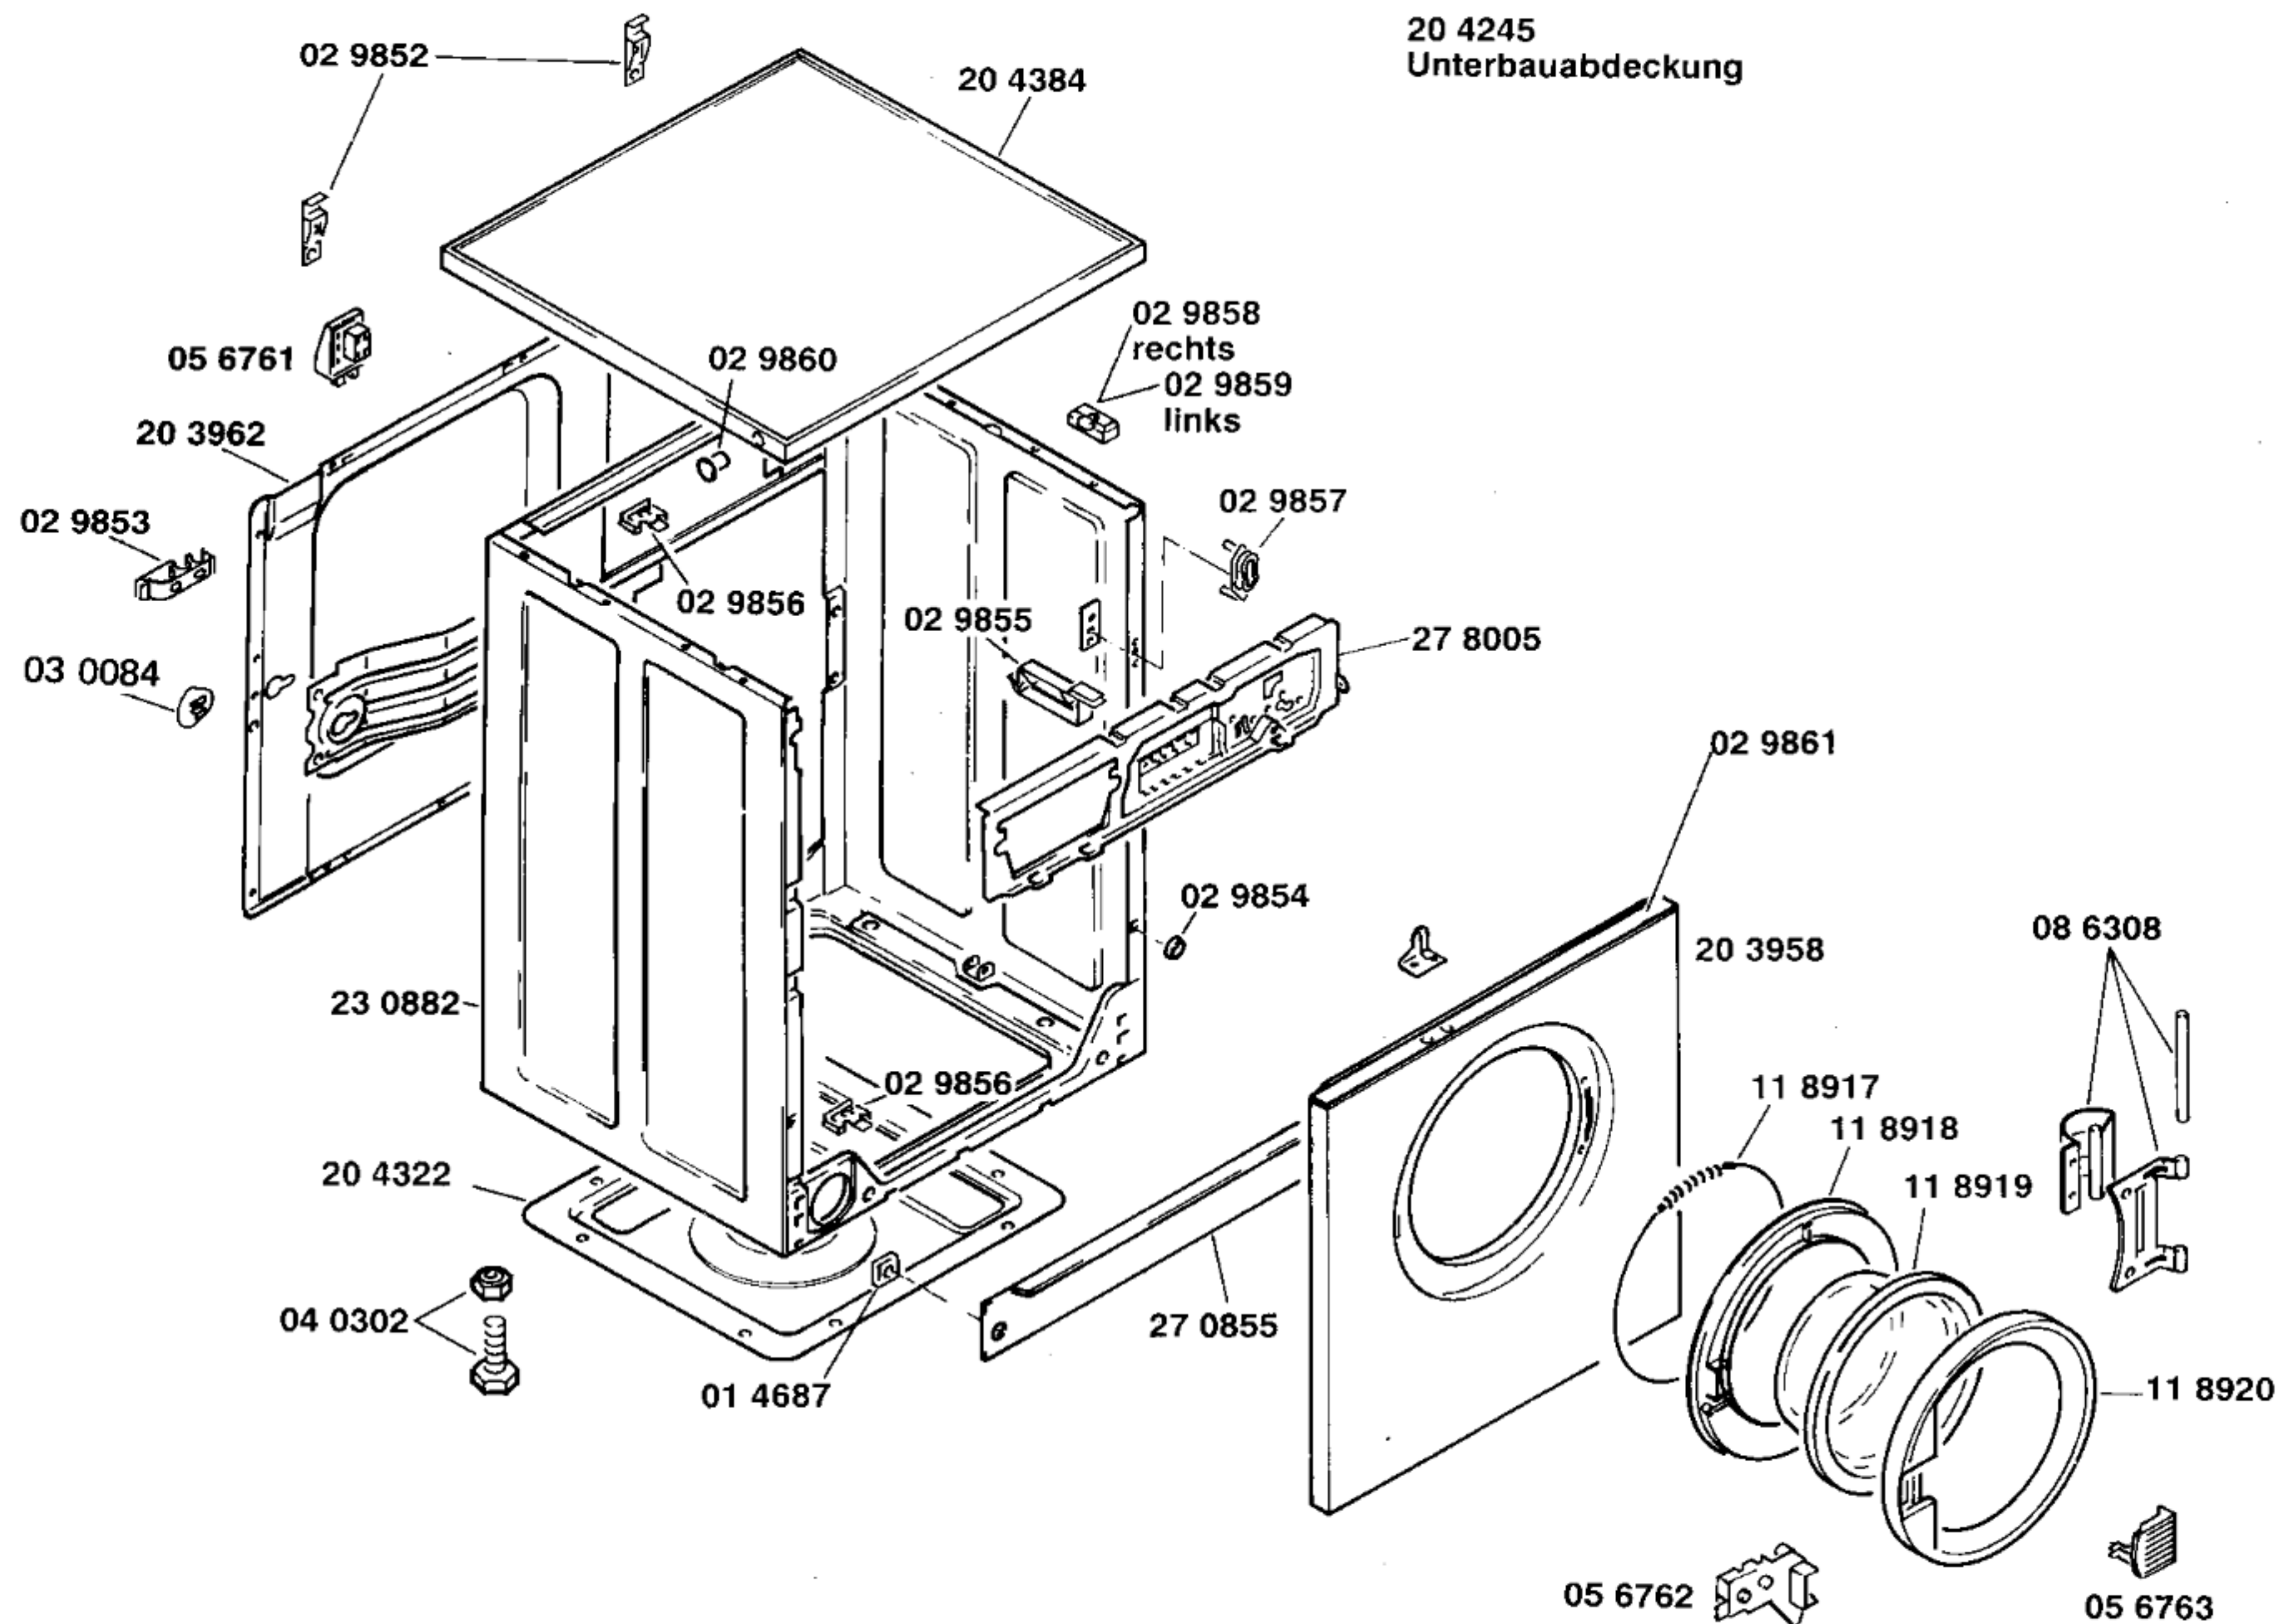

- 1) 27 0442
 D1,D2
 27 1716
 D3,FG1
 15 5272
 Triac-Motorleistung

