


**BOSCH**

V341-WMV3414/00-D1
 V341-WMV341426/00-I1
 V341-WMV341453/00-N1
 V341-WMV3414/01-D2

V341-WMV341426/01-I2
 V341-WMV341453/01-N2

WASCHGERÄTE
 Waschvollautomaten

Ident - Nummern - Konstante
 3740

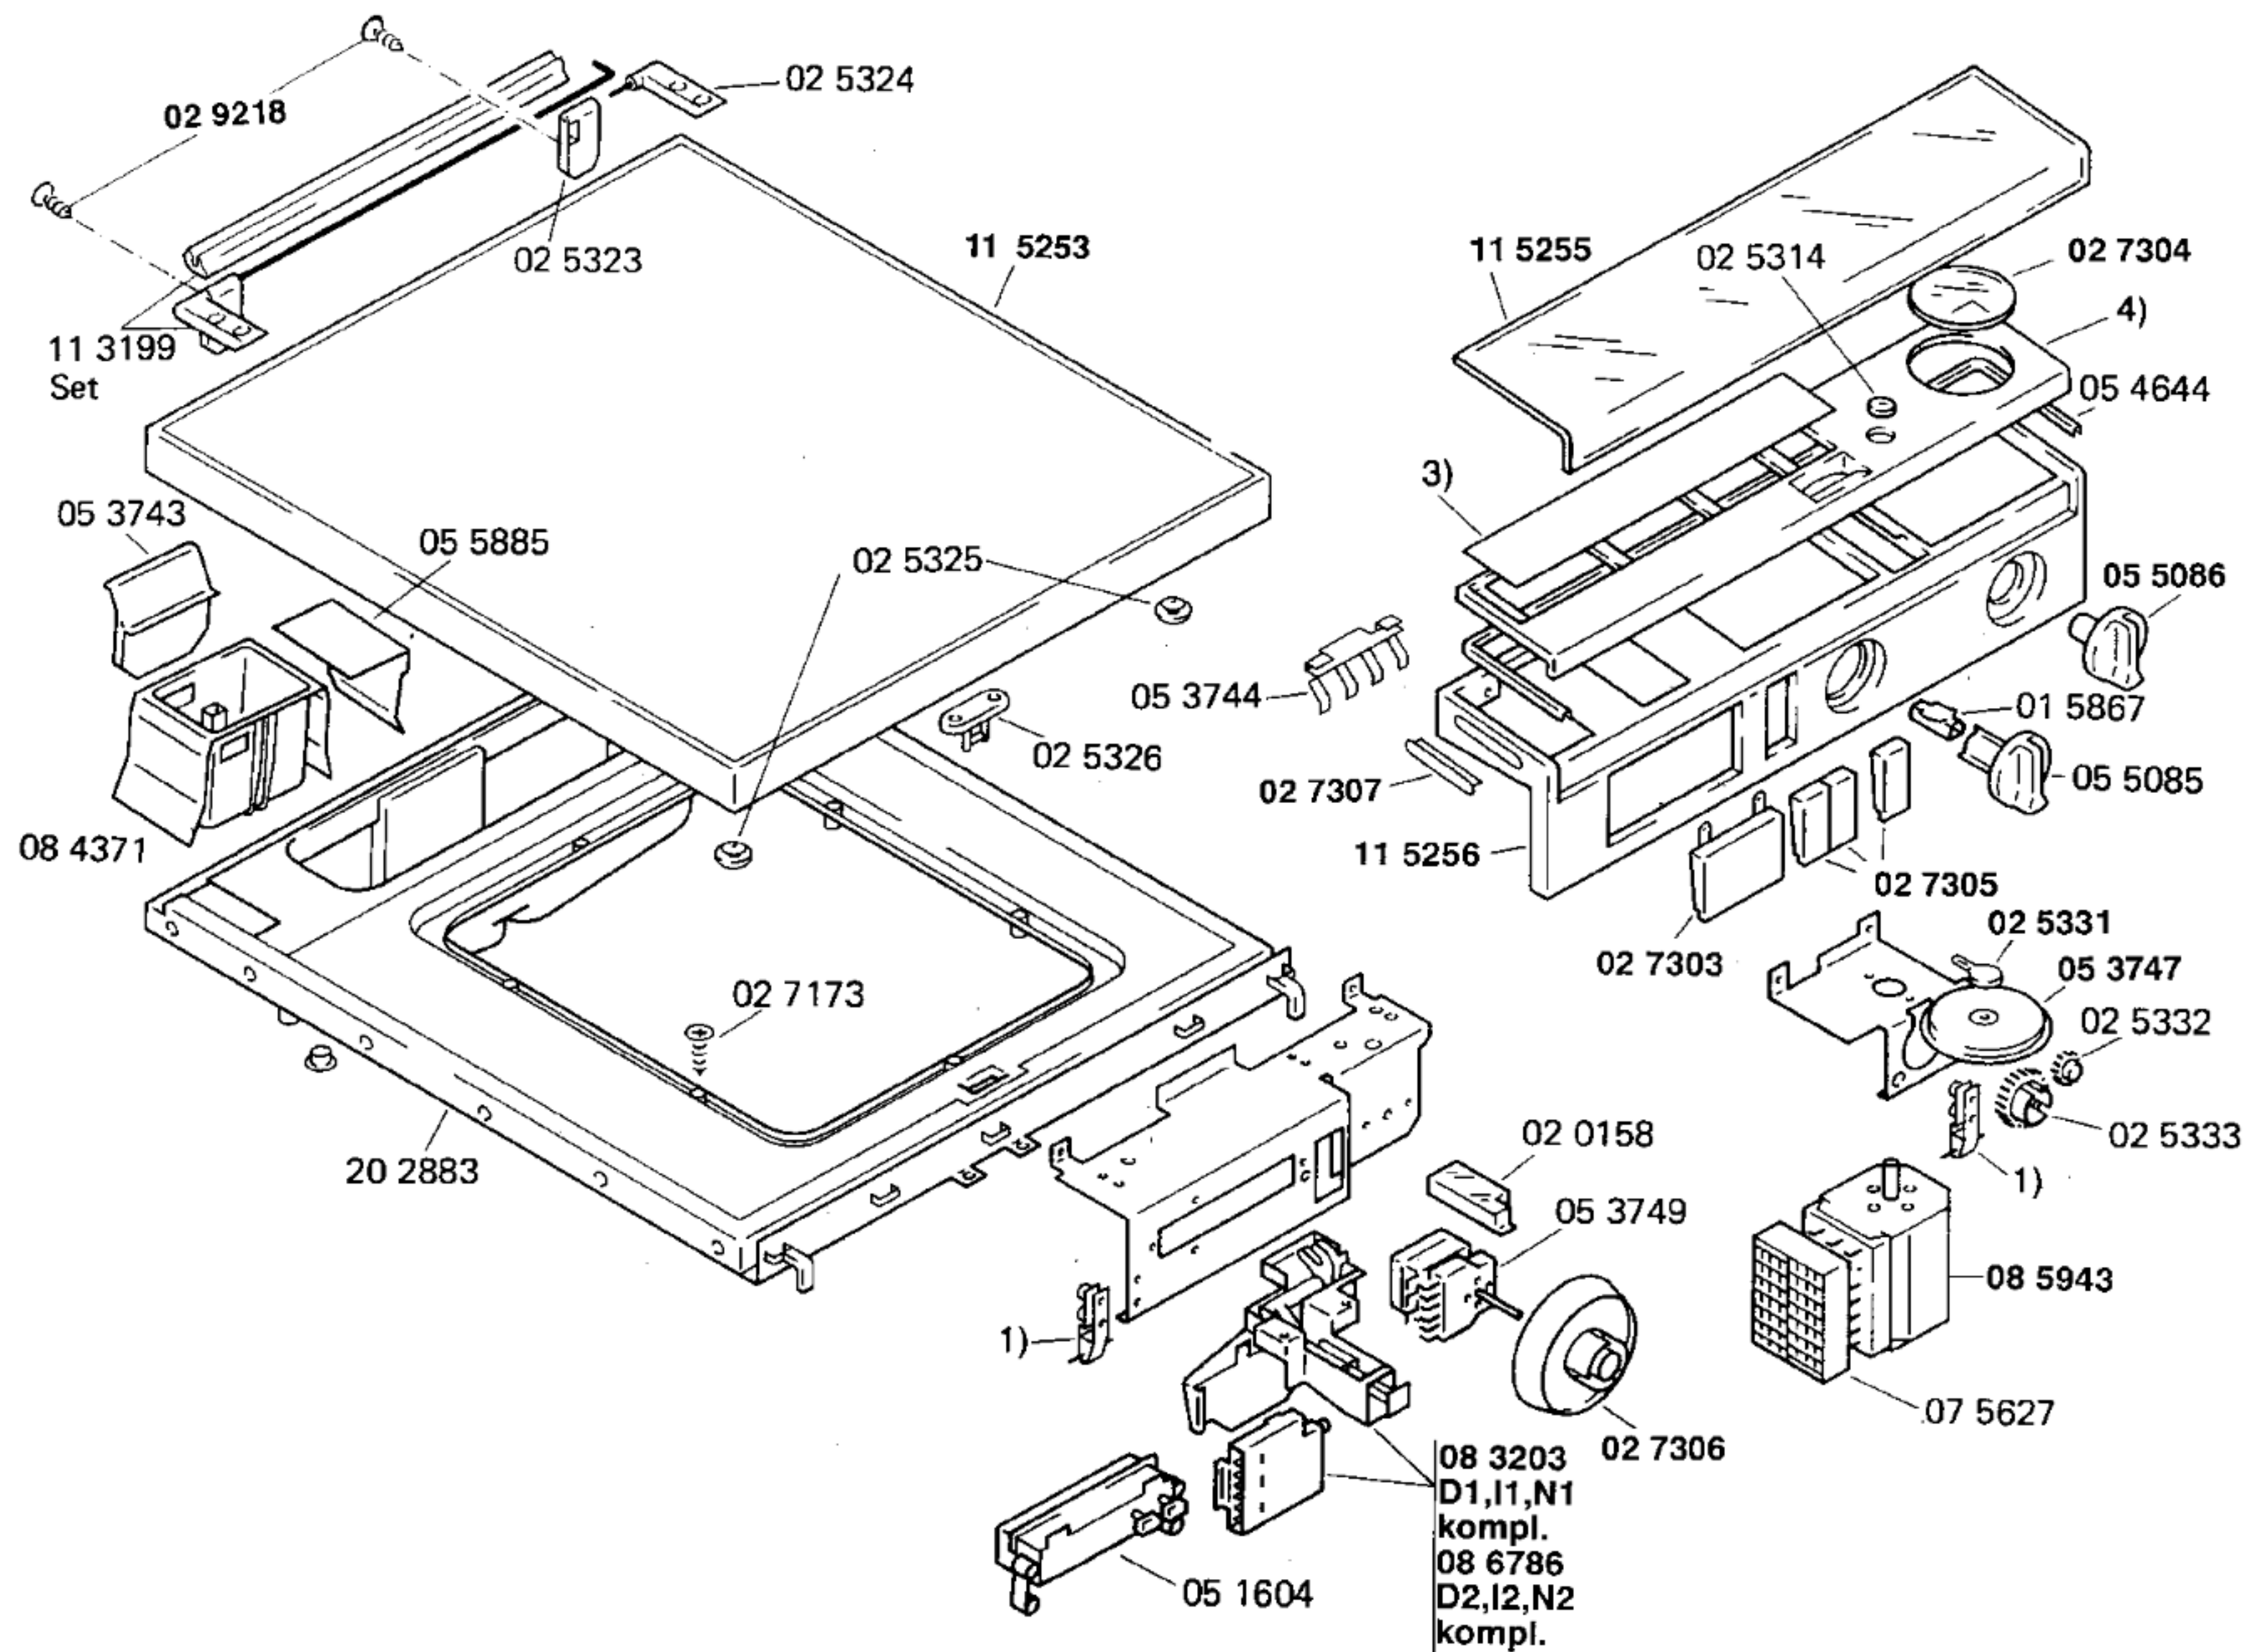

- Aufstellanweisungen:**
 51 3182
 (D,GB,F,I,NL,E)
 51 1674
 (D,I,S,DK,N,SF)
Gebrauchsanweisungen:
 51 3216
 (D,GB,F,I,NL,E)
 51 3217
 (D,I,S,DK,N,SF)
Programmtabellen:
 51 3178
 (D,GB,F,I,NL,E)
 51 3177
 (D,I,S,DK,N,SF)
- 1) 02 5334
 2) einschl. 05 4644
 3) 08 5880
 (D,Symbole)
 08 5881
 (F,NL)
 08 5882
 (SF,DK)
 08 5883
 (S,N)
 08 5884
 (I,GB)
 08 5885
 (E)
 4) 11 8162
 (D,N)
 11 8766
 (I)

**BOSCH**


V341-WMV3414/00-D1
 V341-WMV341426/00-I1
 V341-WMV341453/00-N1
 V341-WMV3414/01-D2

V341-WMV341426/01-I2
 V341-WMV341453/01-N2

WASCHGERÄTE
 Waschvollautomaten

Ident – Nummern – Konstante
 3740

- 1) 04 5561
- 2) 01 4687
- 3) 02 5342
- 4) 02 8340
- 5) 02 5345

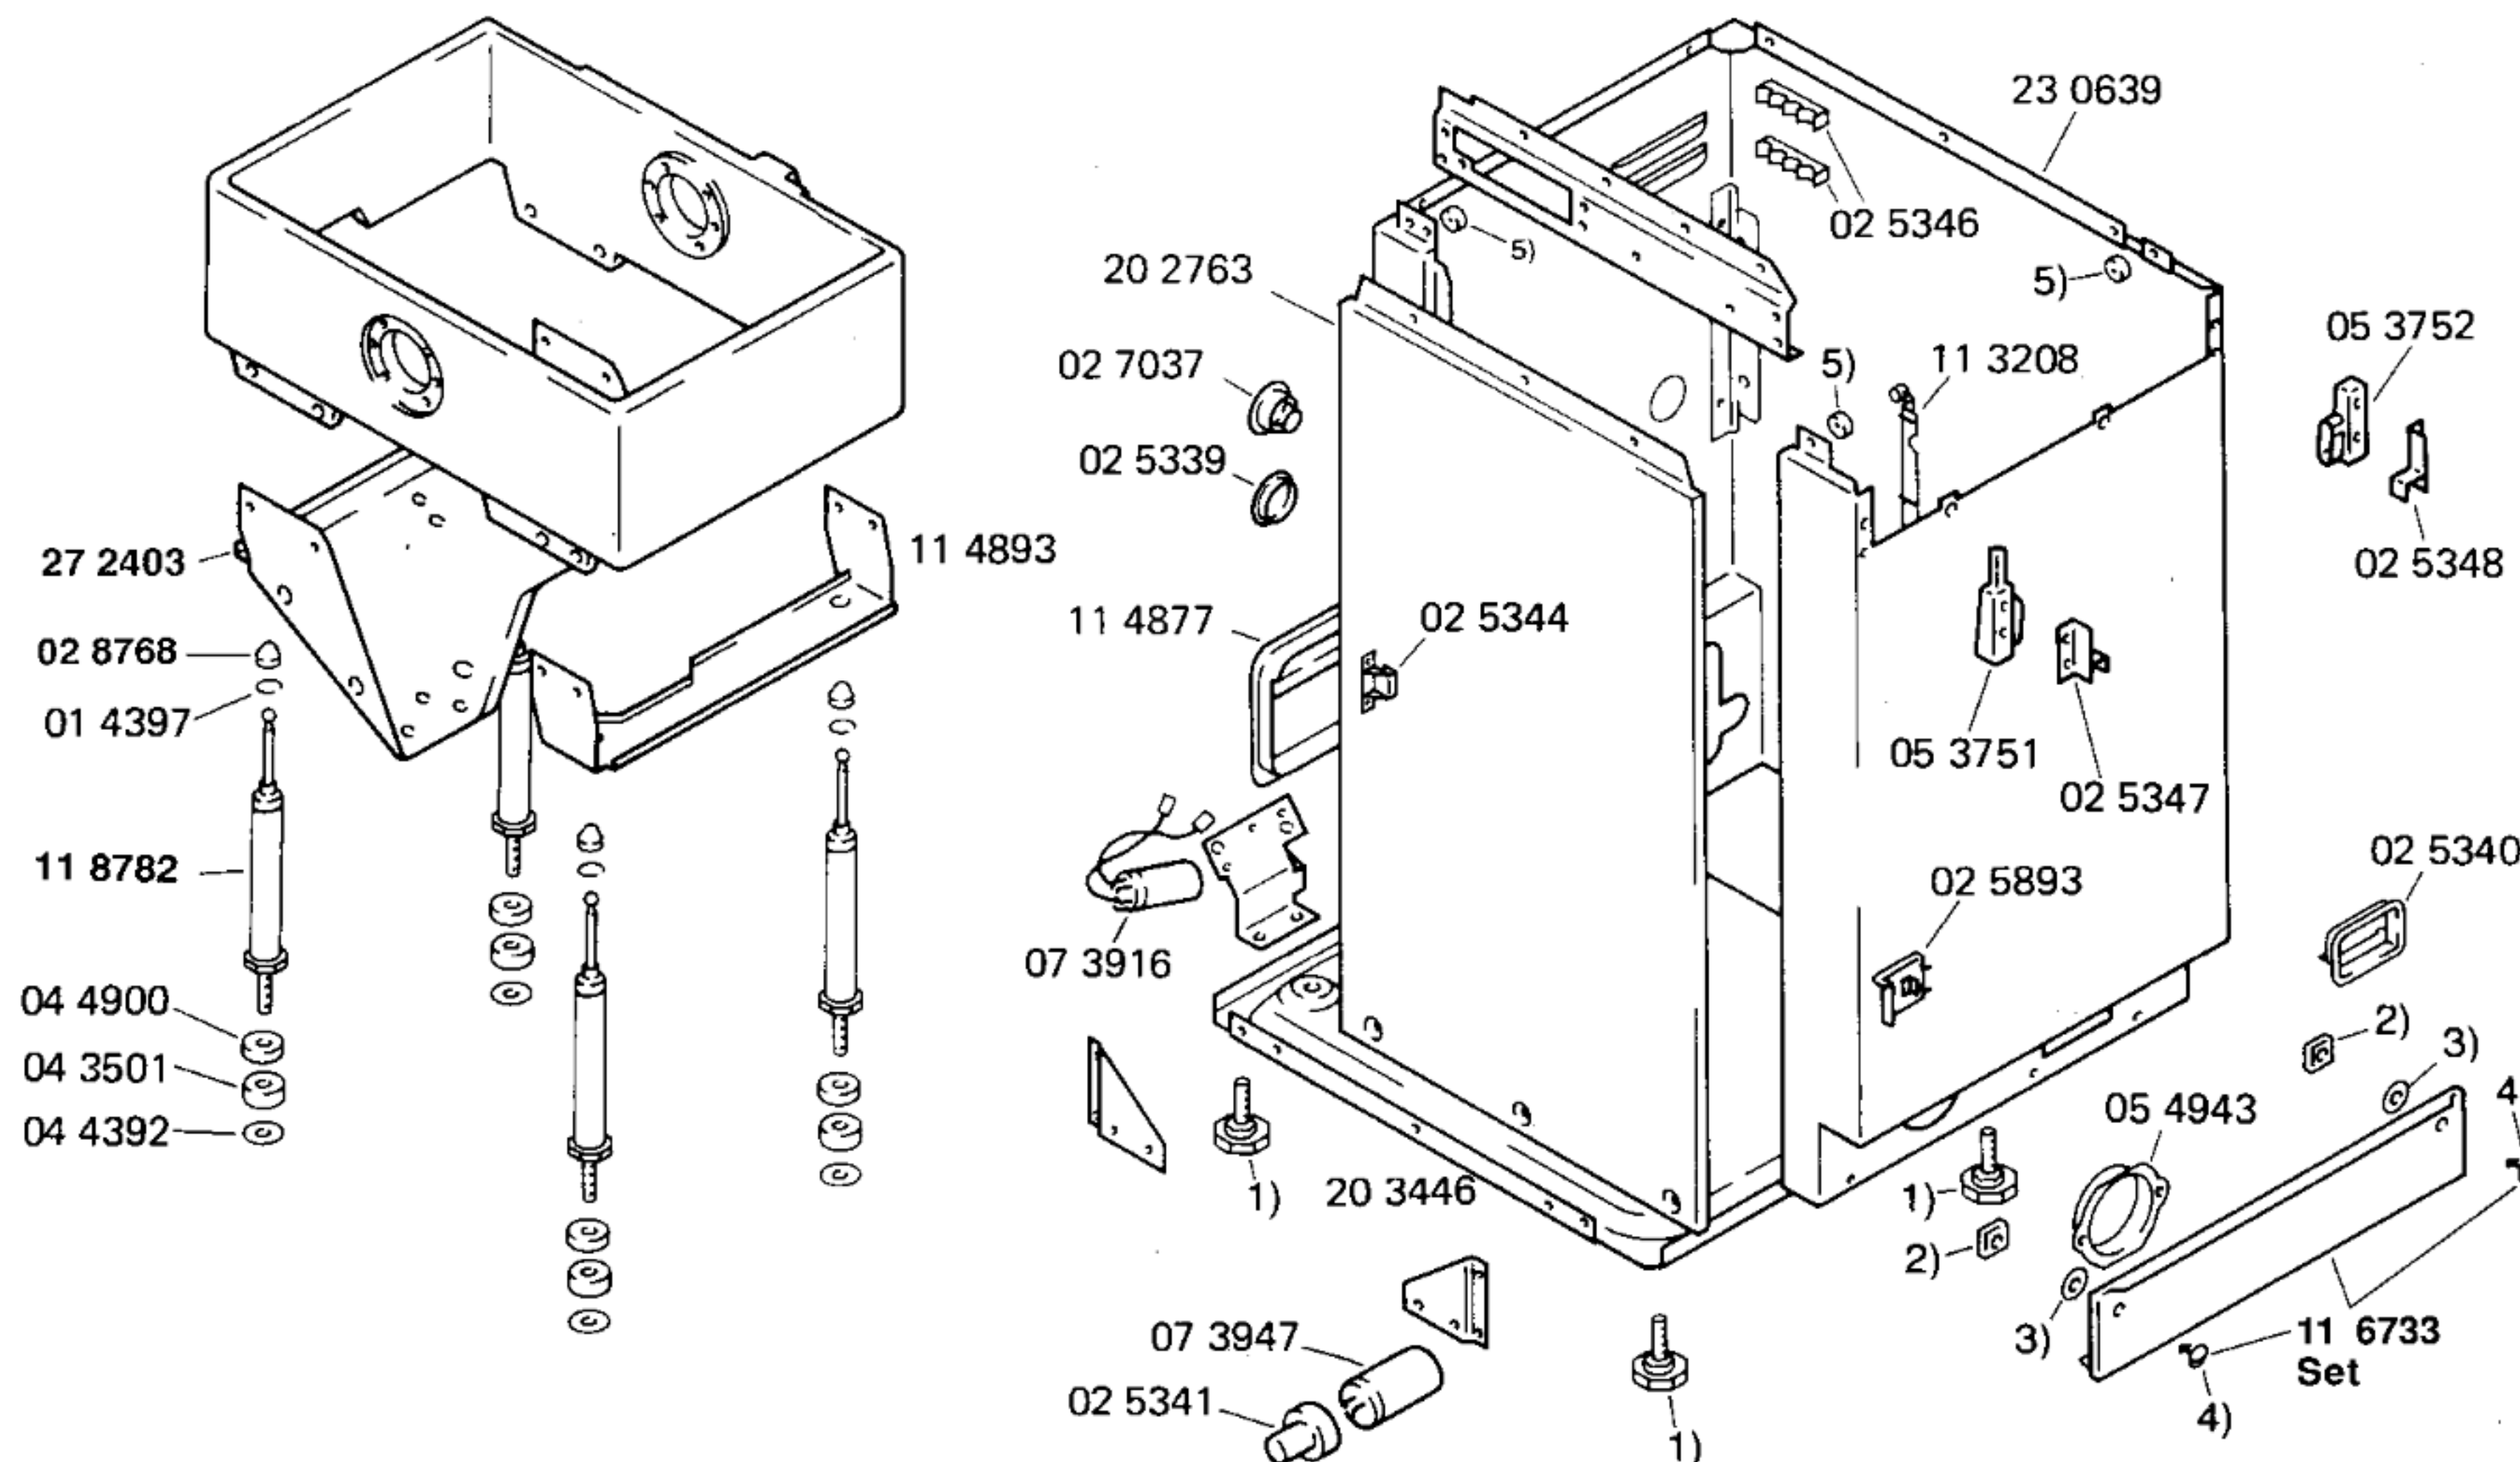


**BOSCH**

V341-WMV3414/00-D1
 V341-WMV341426/00-I1
 V341-WMV341453/00-N1
 V341-WMV3414/01-D2

V341-WMV341426/01-I2
 V341-WMV341453/01-N2

WASCHGERÄTE
 Waschvollautomaten

Ident – Nummern – Konstante
 3740

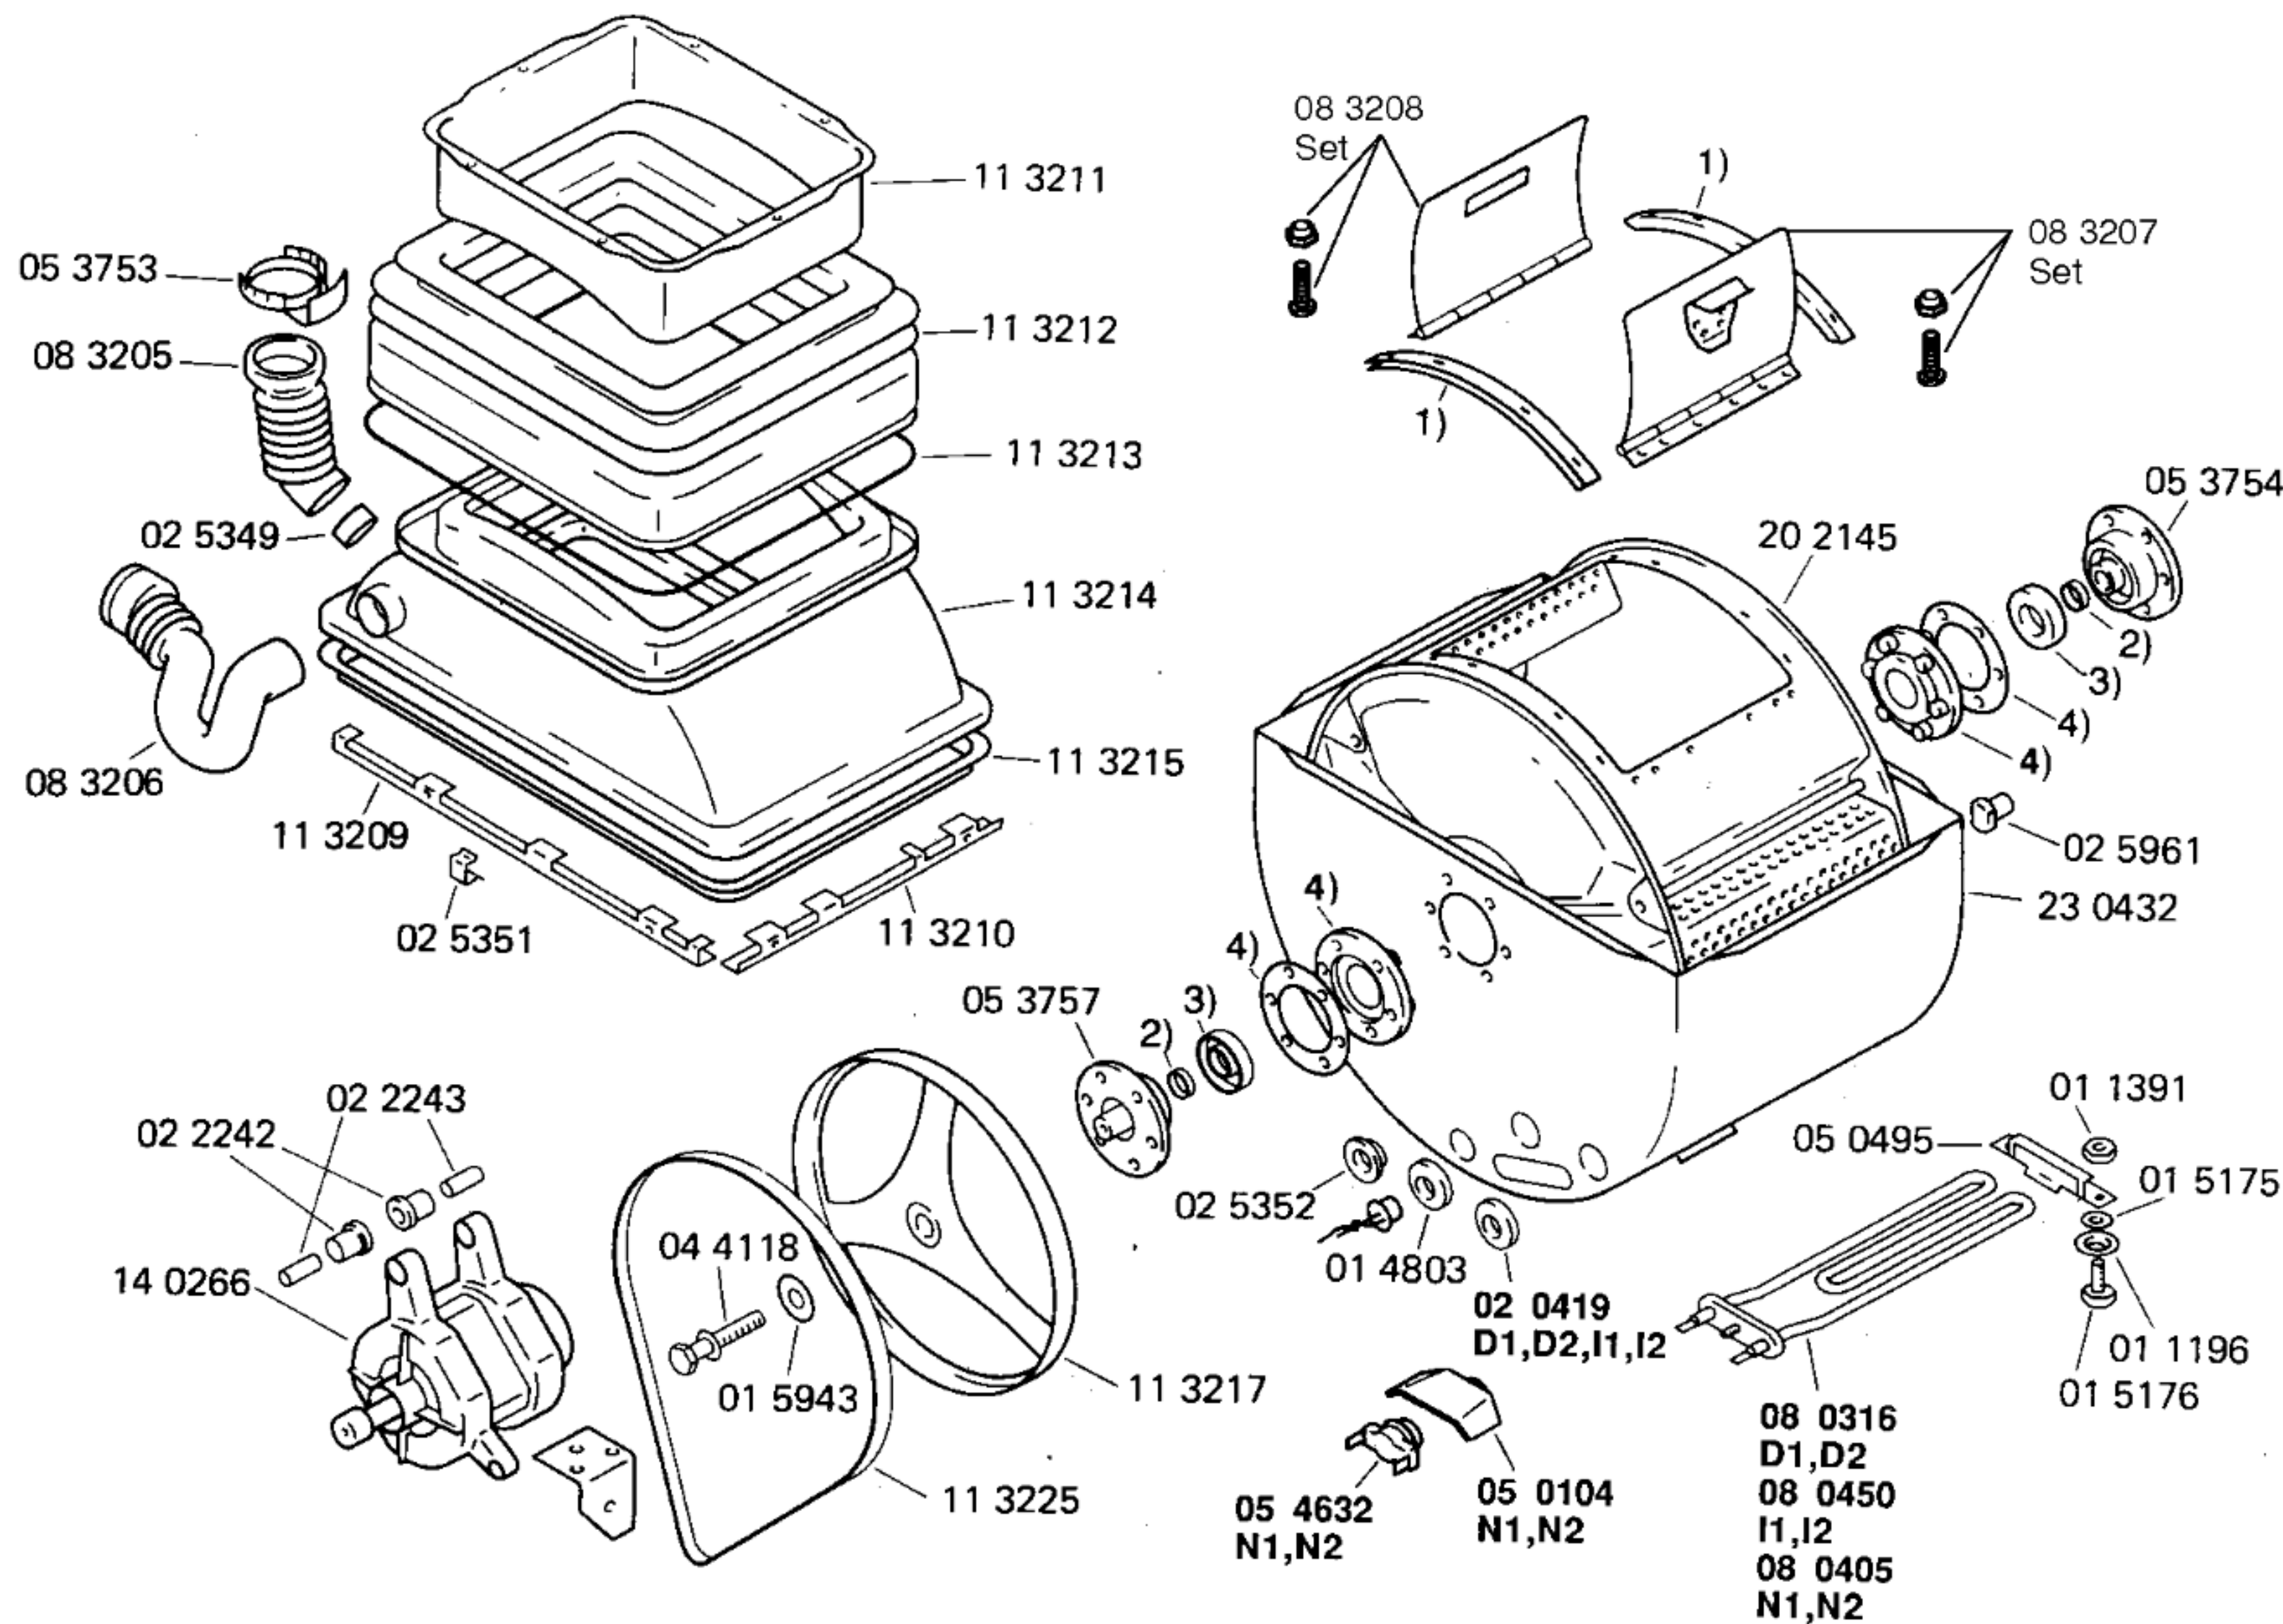

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 7022

**BOSCH**

V341-WMV3414/00-D1
V341-WMV341426/00-I1
V341-WMV341453/00-N1
V341-WMV3414/01-D2

V341-WMV341426/01-I2
V341-WMV341453/01-N2

WASCHGERÄTE
Waschvollautomaten

Ident – Nummern – Konstante
3740

