

- 1) 02 5334
- 2) 02 5332

Aufstellenanweisung
 51 1497
 (D,GB,F,I,NL)
 51 1674
 (D,I,S,DK,N,SF)


Gebrauchsanweisung
 51 1498
 (D,GB,F,I,NL)
 51 1675
 (D,I,S,DK,N,SF)
 51 1684
 (F)

Programmtabelle
 51 1499
 (D,GB,F,I,NL)
 51 1634
 (D,I,S,DK,N,SF)


- 3) 05 3745
 bis FD 6403
 05 4644
 ab FD 6404


- 4) einschl. 05 4644

- 5) 08 3202
 (D, Symbole)
 08 3554
 (F, NL)
 08 3536
 (I, GB)
 08 3537
 (S, N)
 08 3538
 (SF, DK)
 08 3546
 (YU, GR, TR, E)

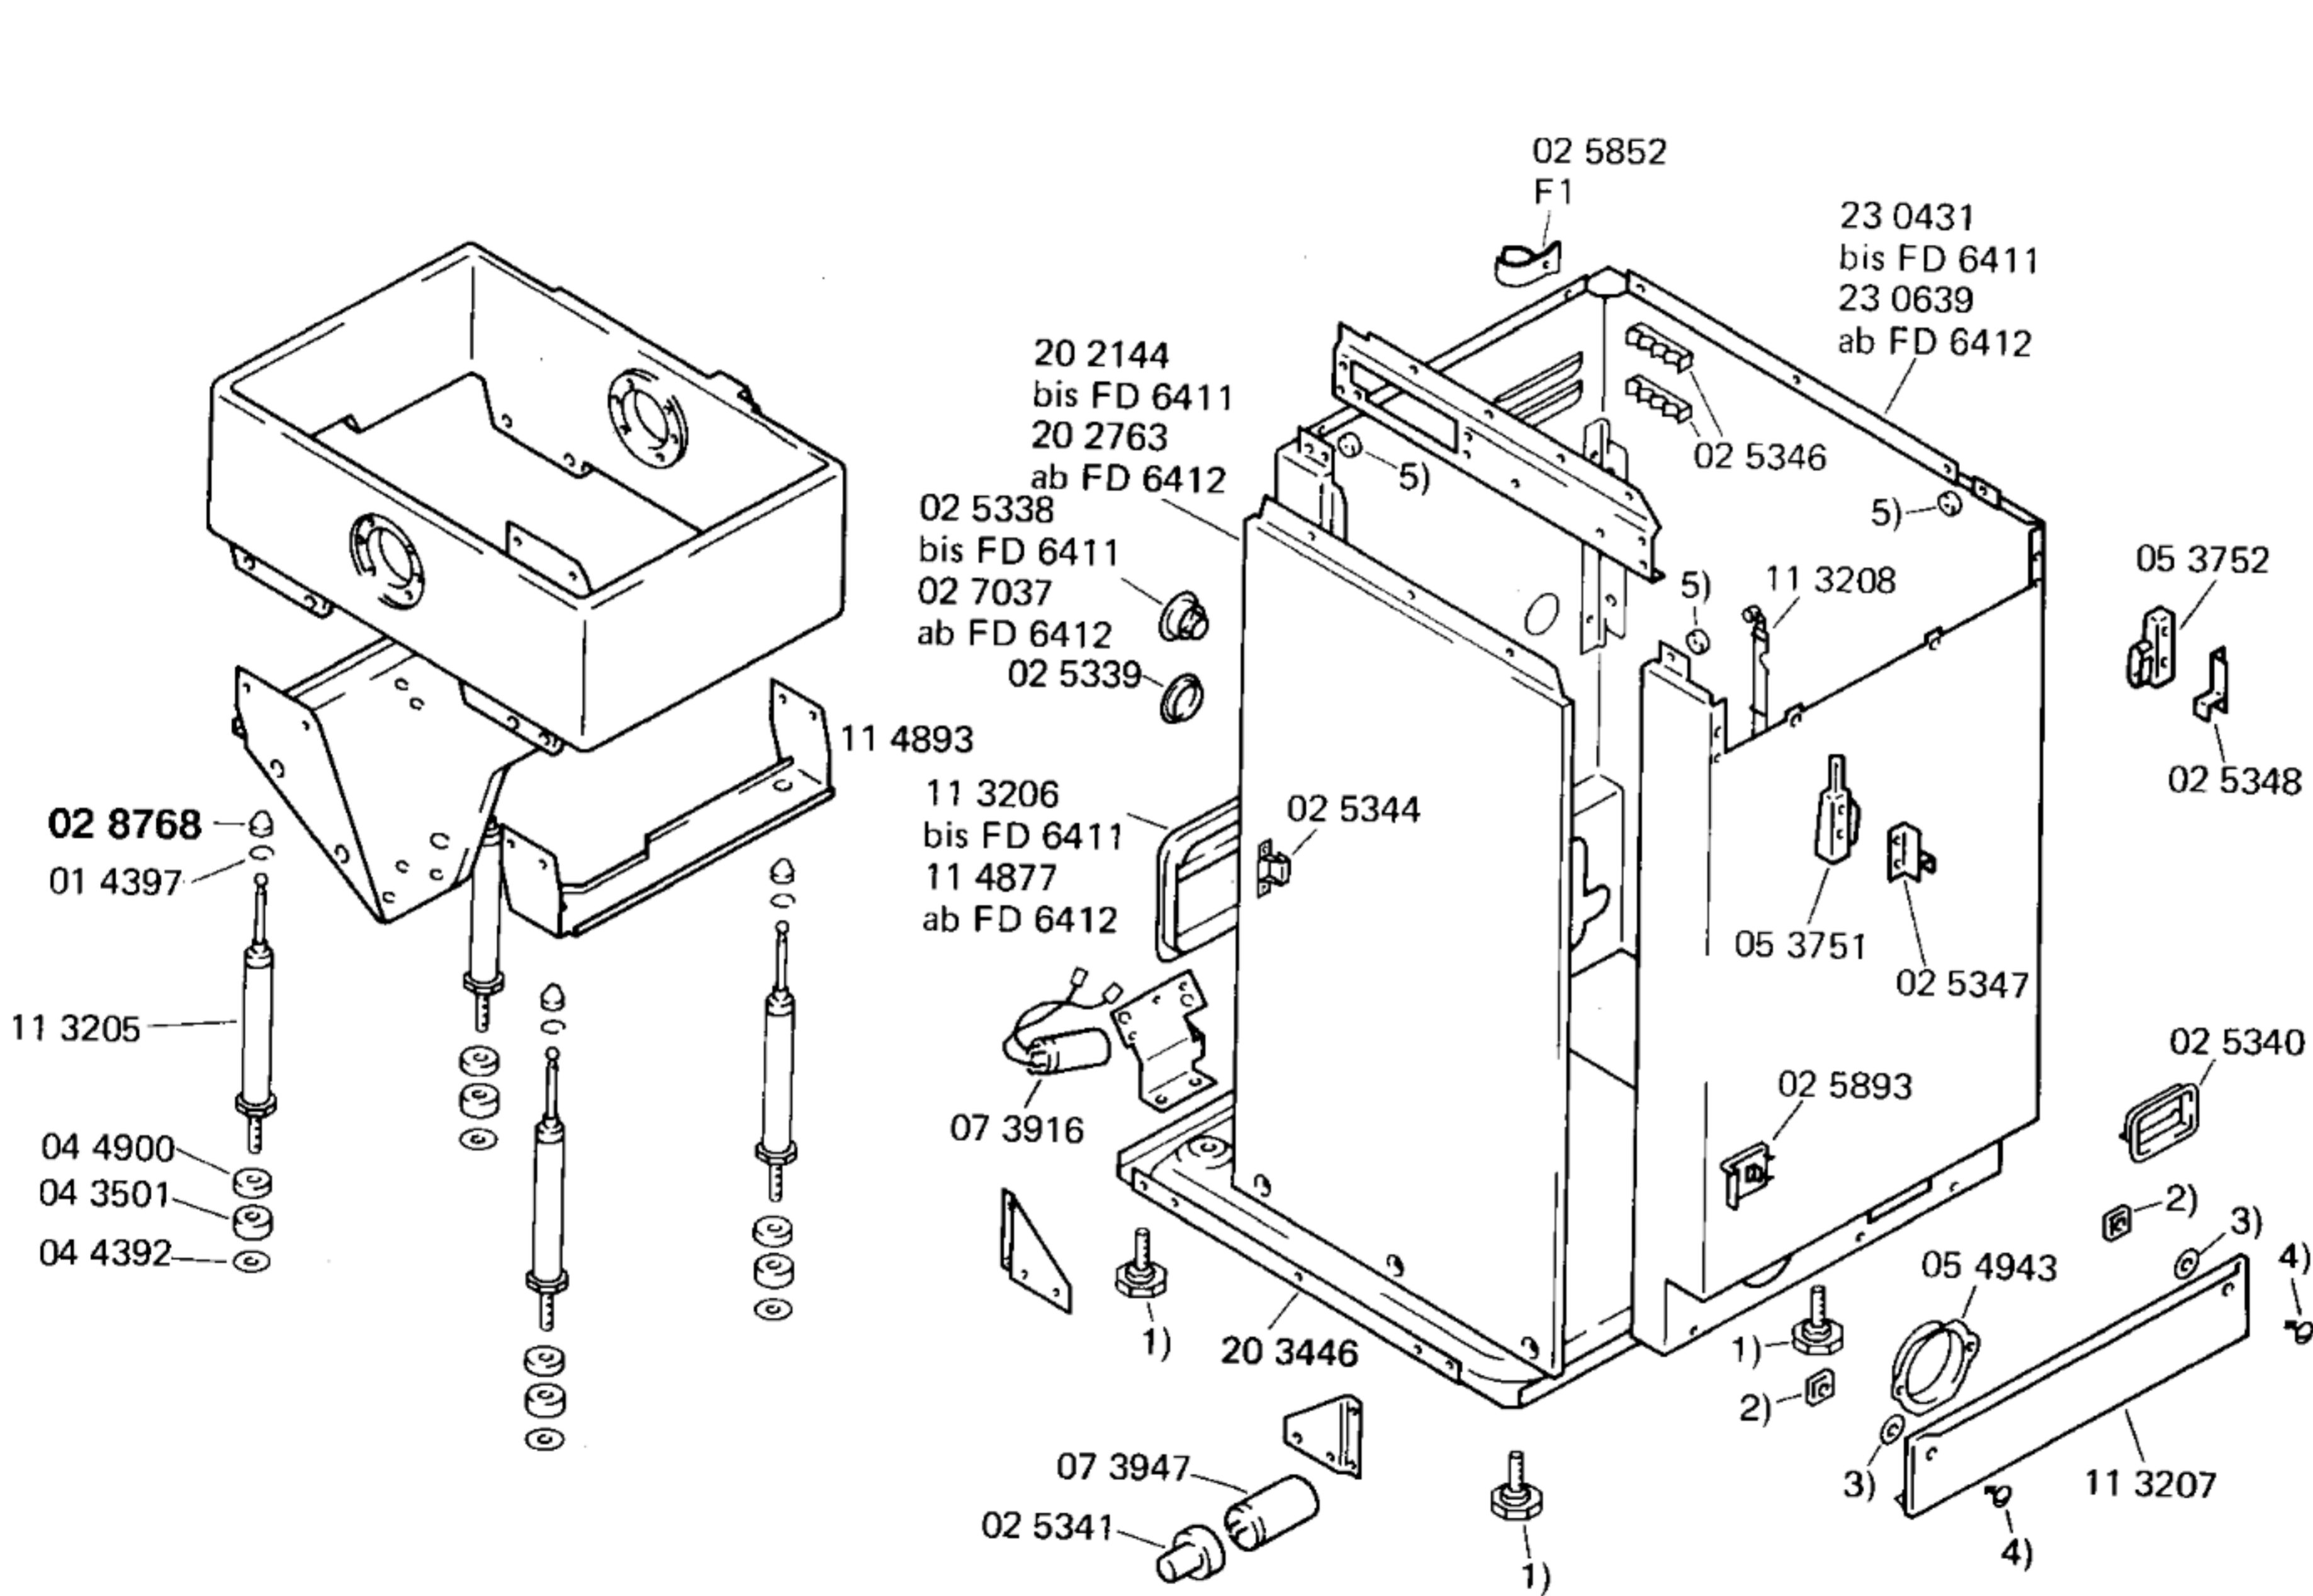

- 1) 04 5561
- 2) 01 4687
- 3) 02 5342
- 4) 02 5343
- 5) 02 5345

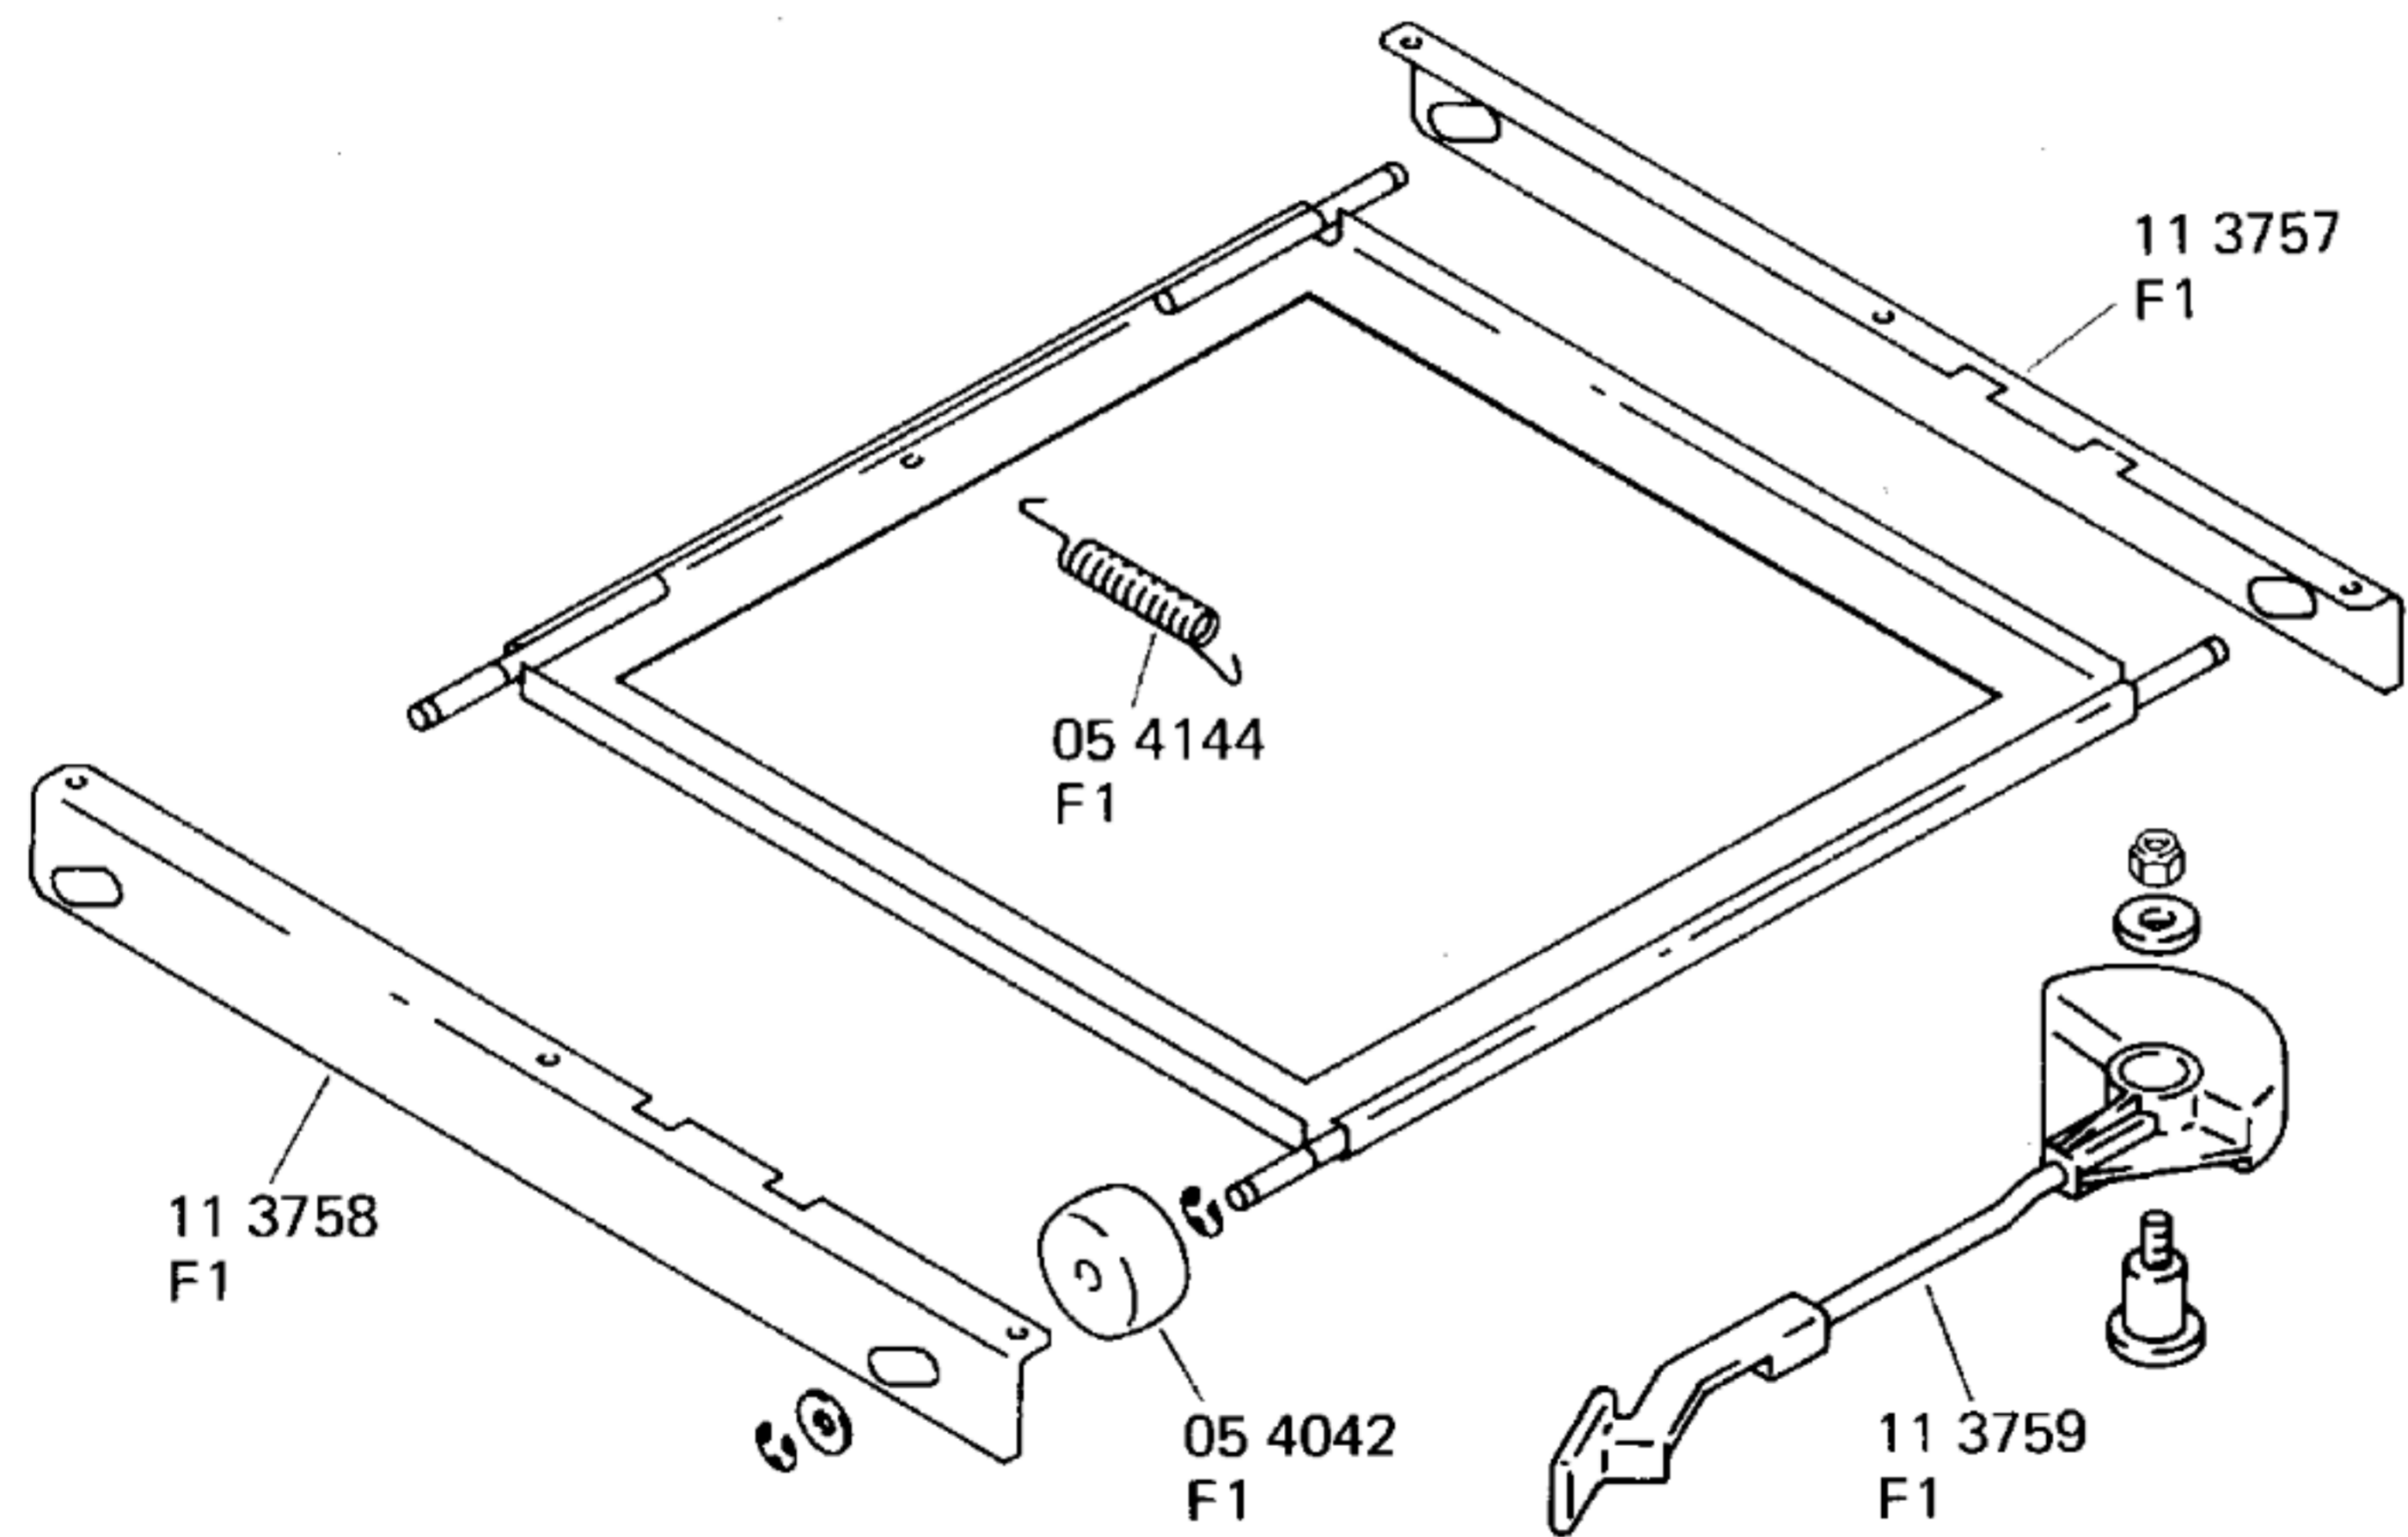

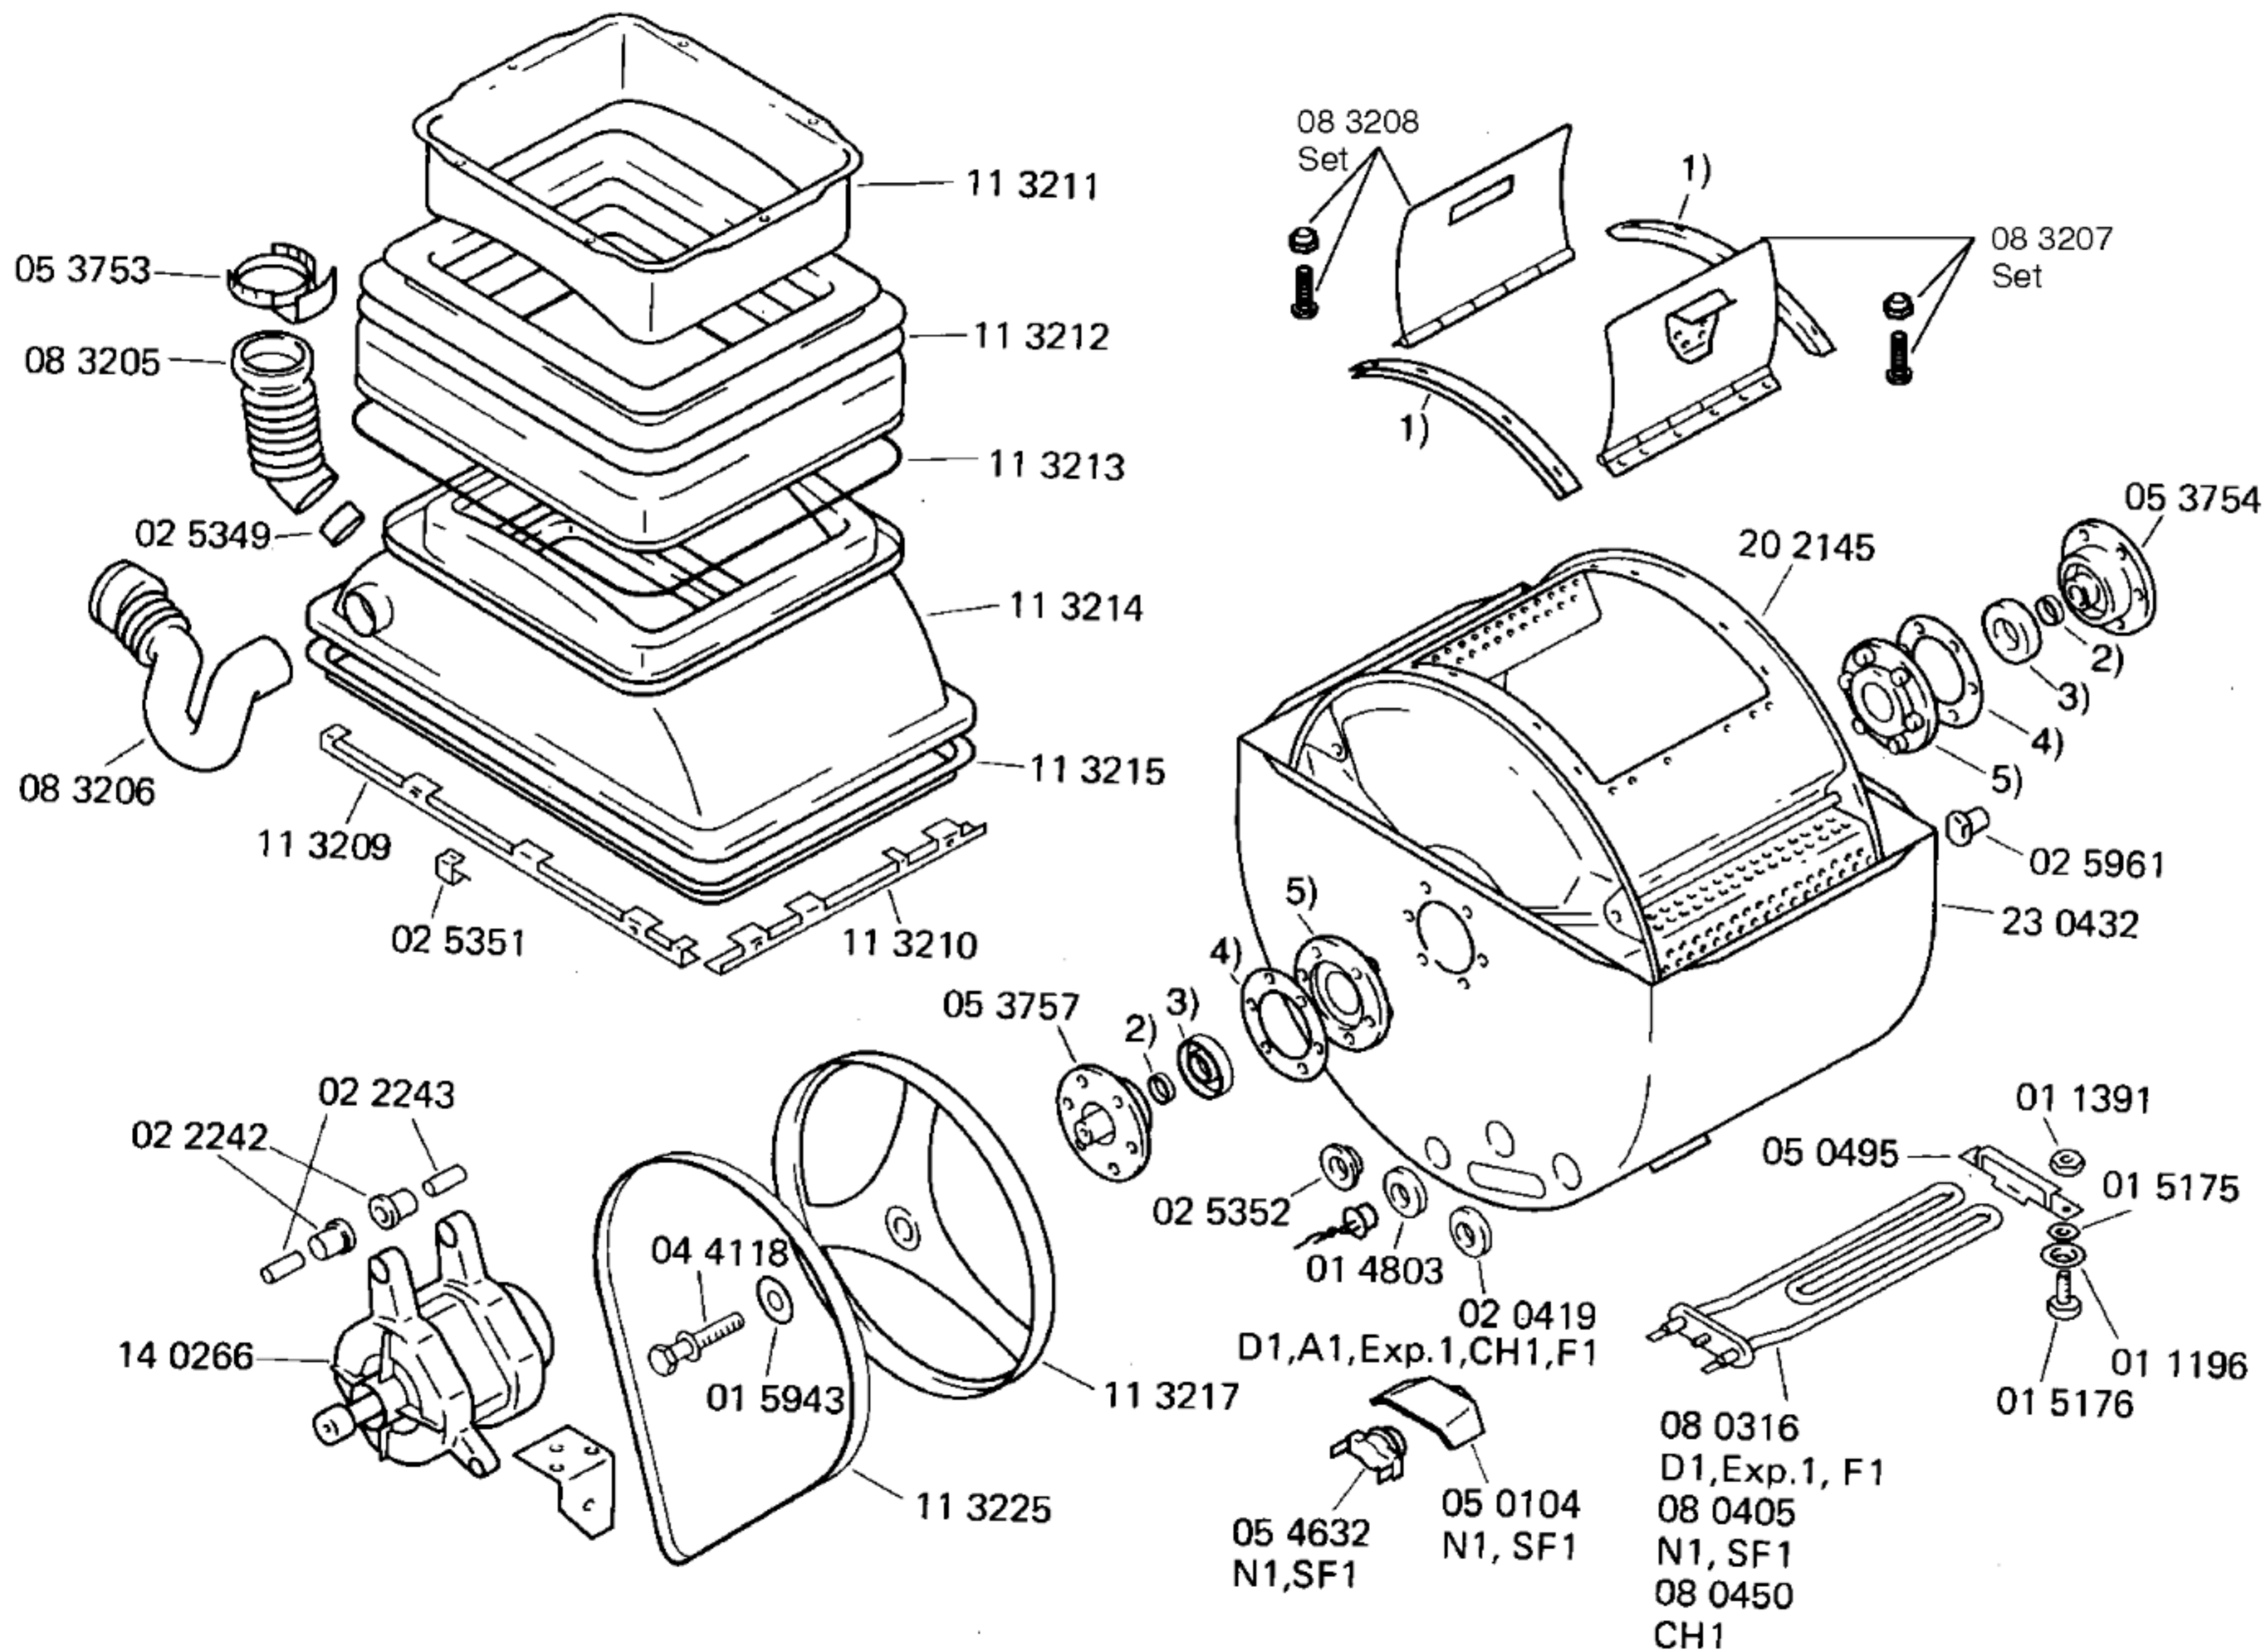

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 3755
- 5) 05 3756

