



Aufstellanweisungen:
 51 1497
 (D, GB, F, I, NL)
 51 1674
 (D, I, S, DK, N, SF)
Gebrauchsanweisungen
 51 3019
 (D, GB, F, I, NL)
 51 3299
 (N, S, SF)
Programmtabellen
 51 2680
 (D, GB, F, I, NL)
 51 3304
 (S, N, SF)

- 1) 02 5334
- 2) 02 5332
- 3) 02 8421

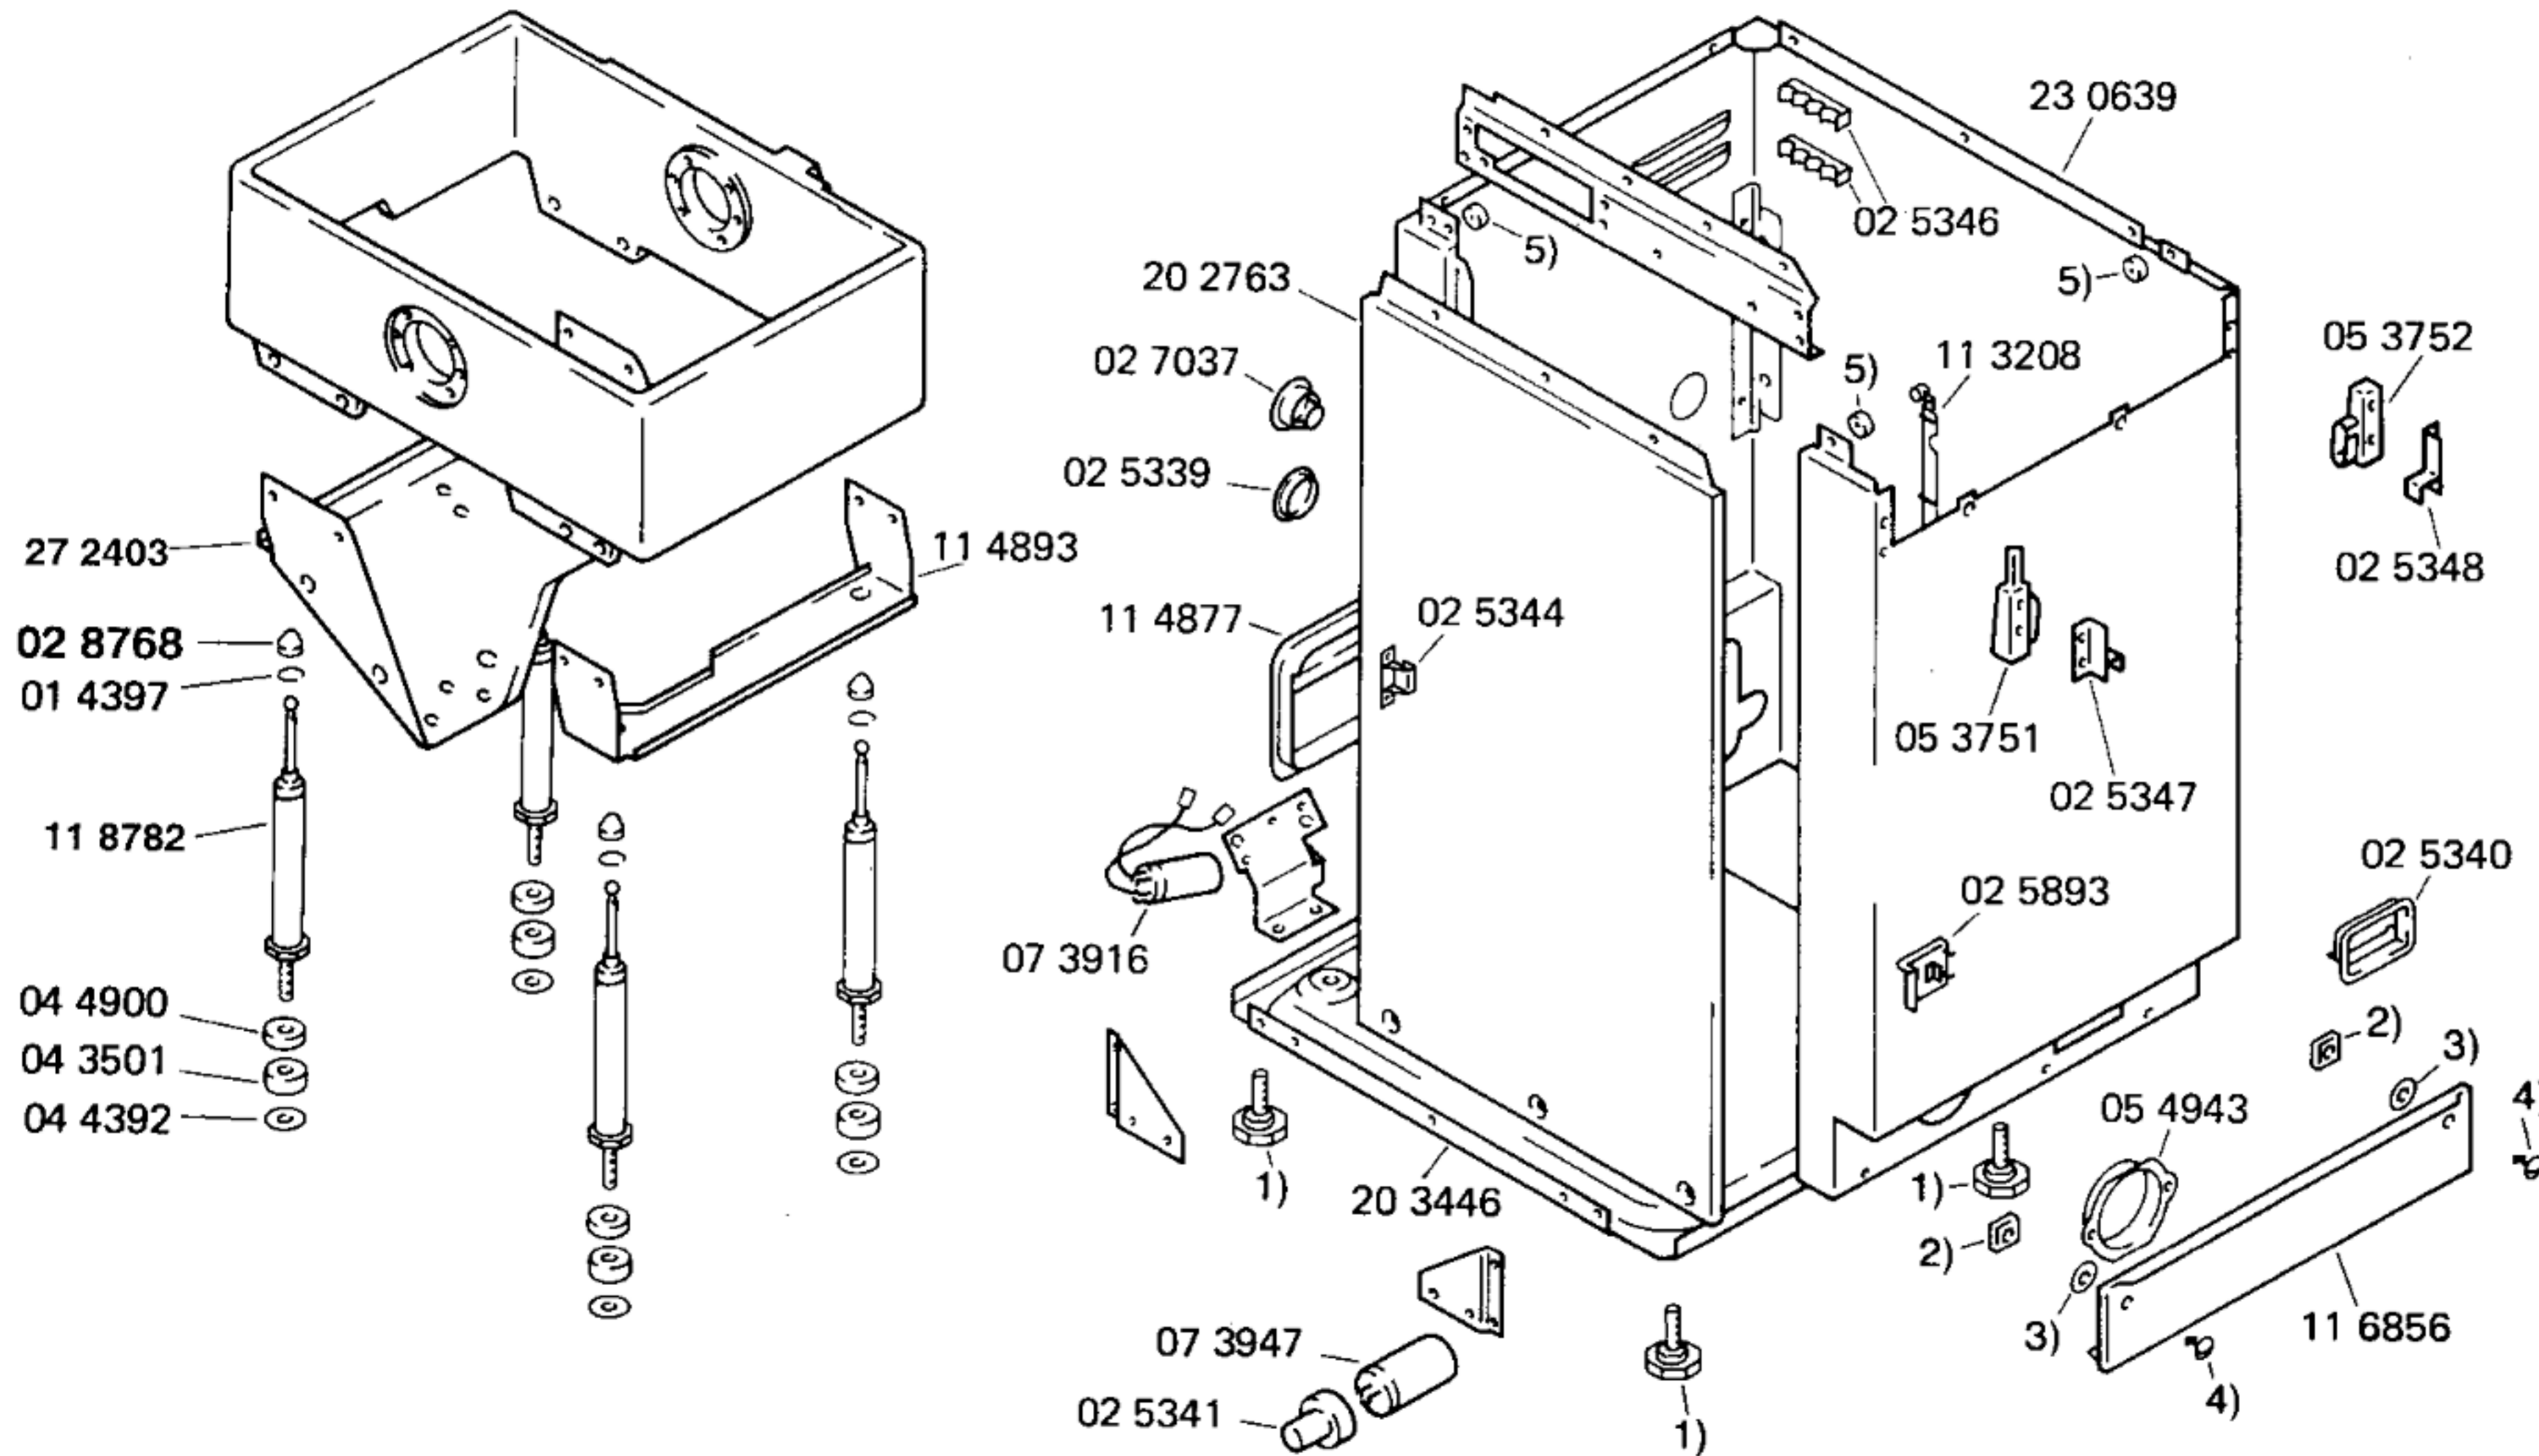

- 1) 04 5561
- 2) 01 4687
- 3) 02 5342
- 4) 02 8437
- 5) 02 5345

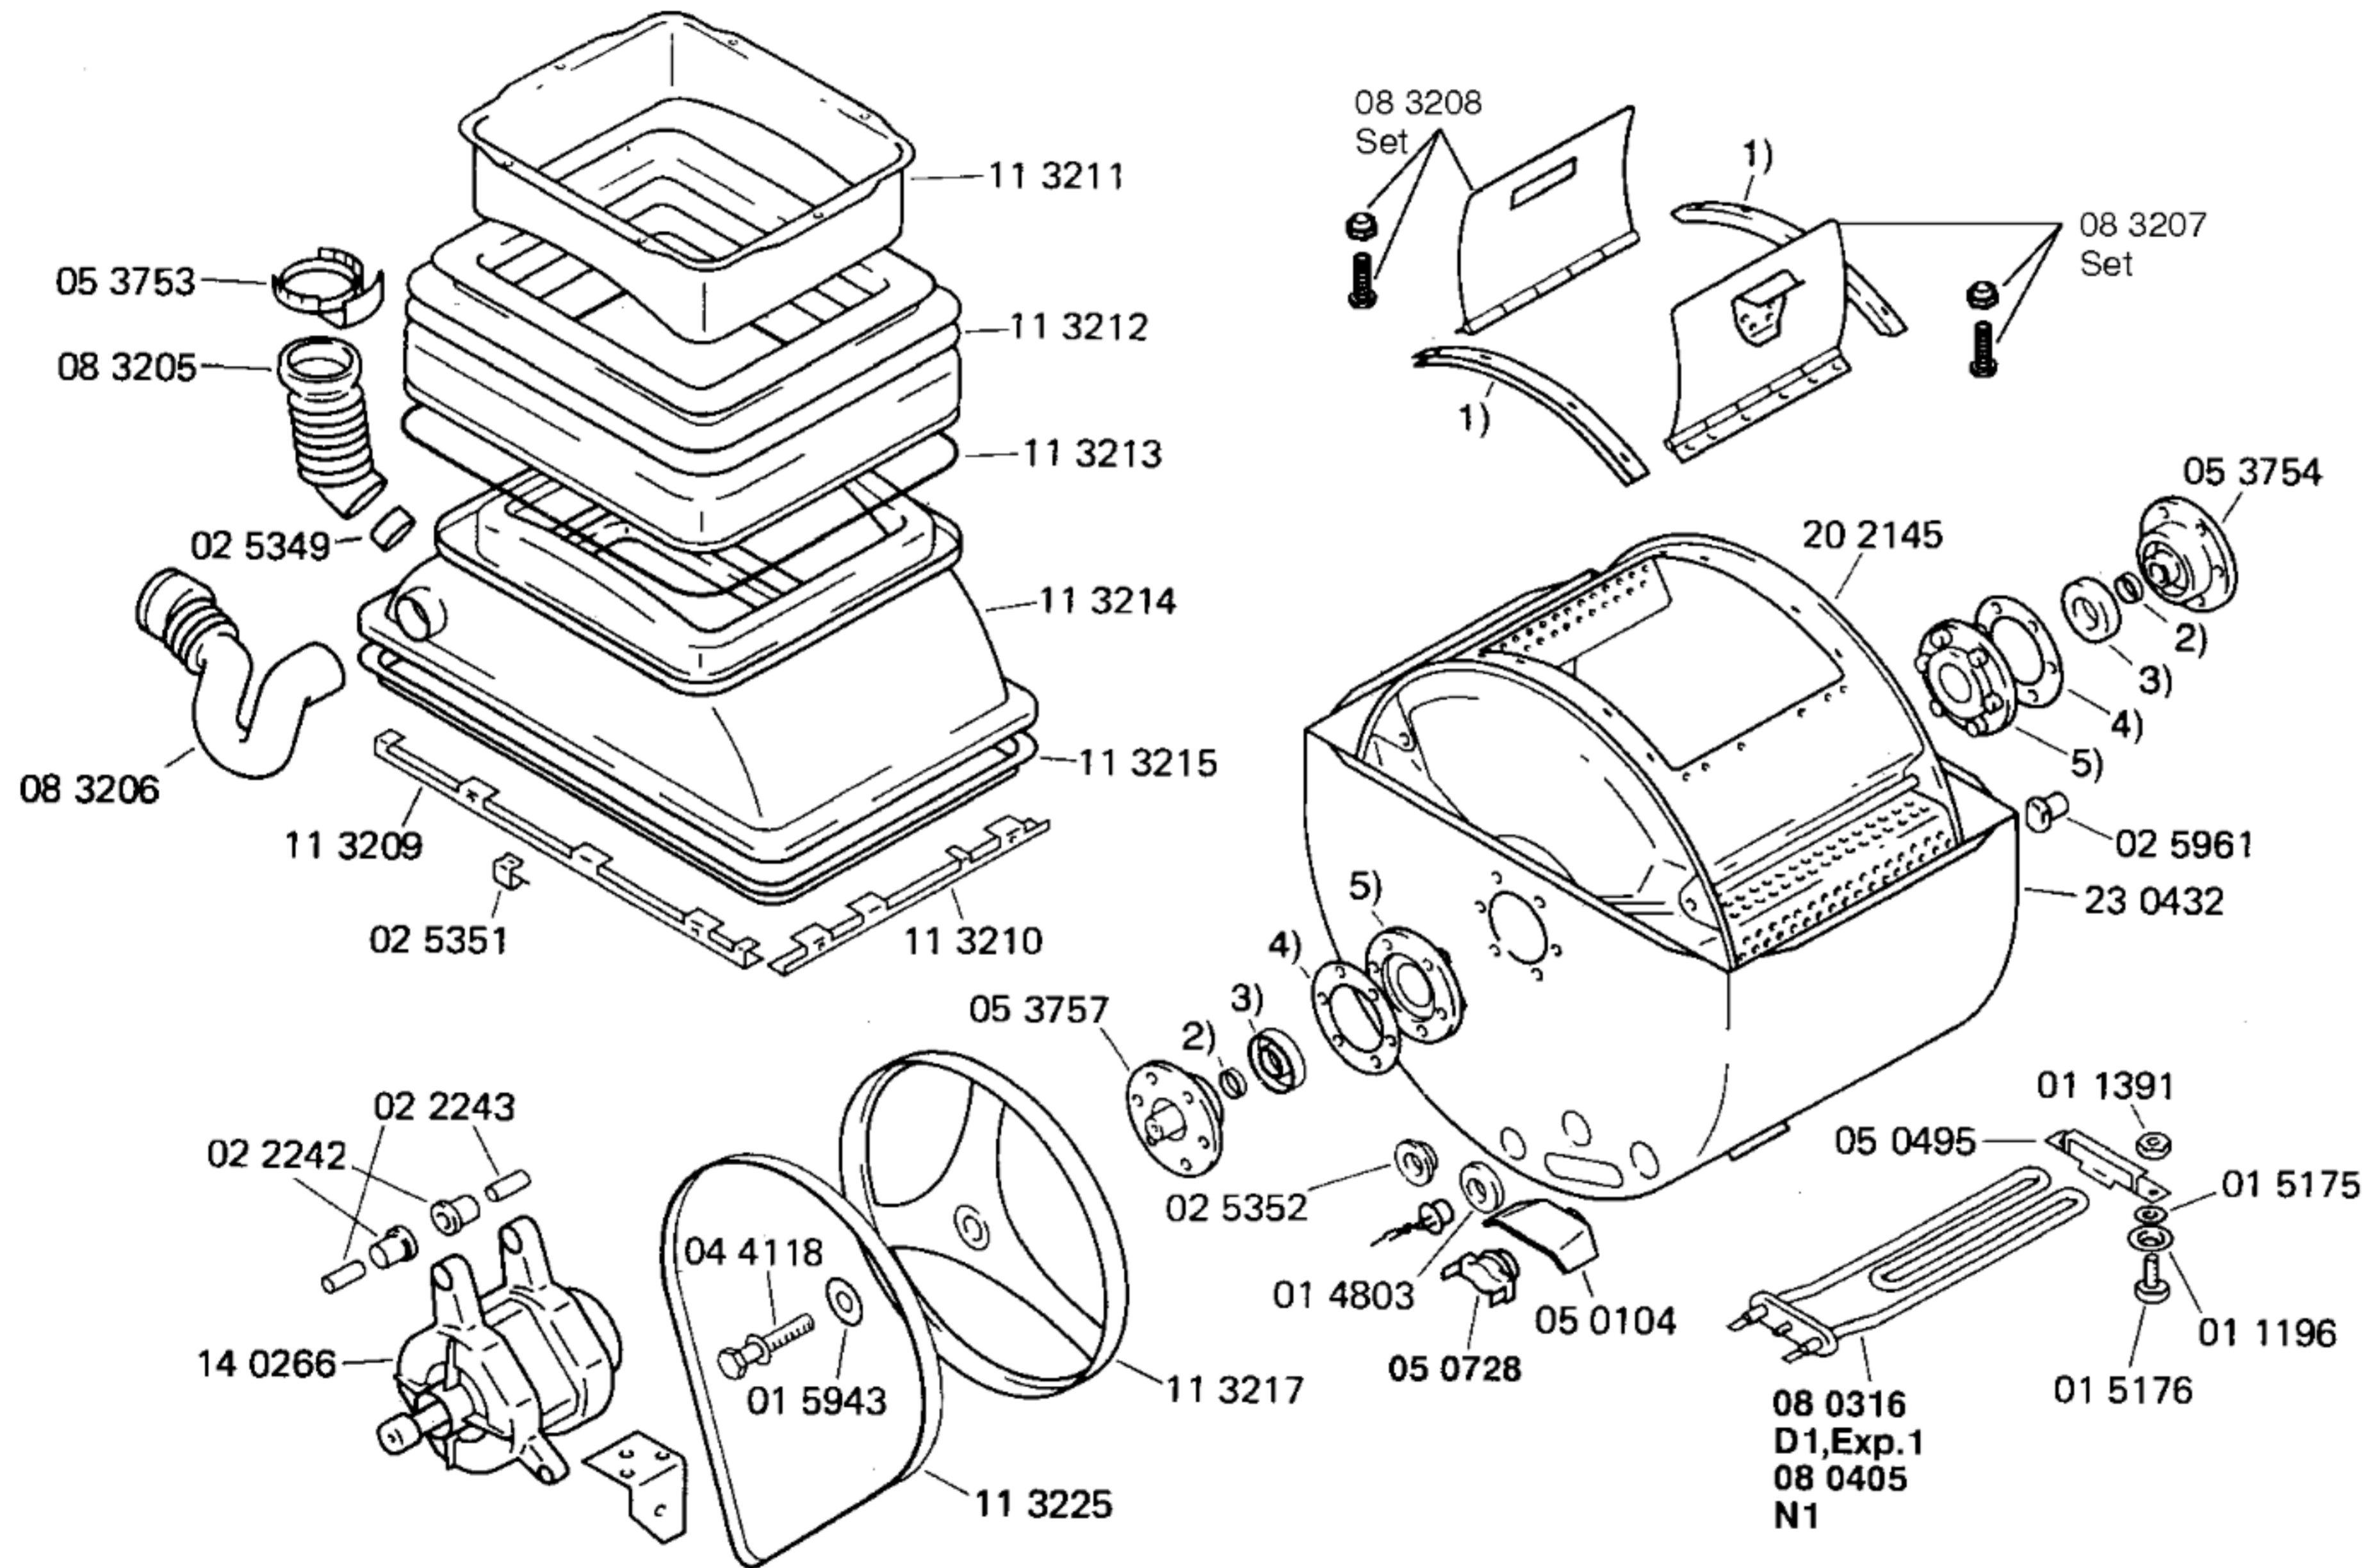

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 3755
- 5) 05 3756

