



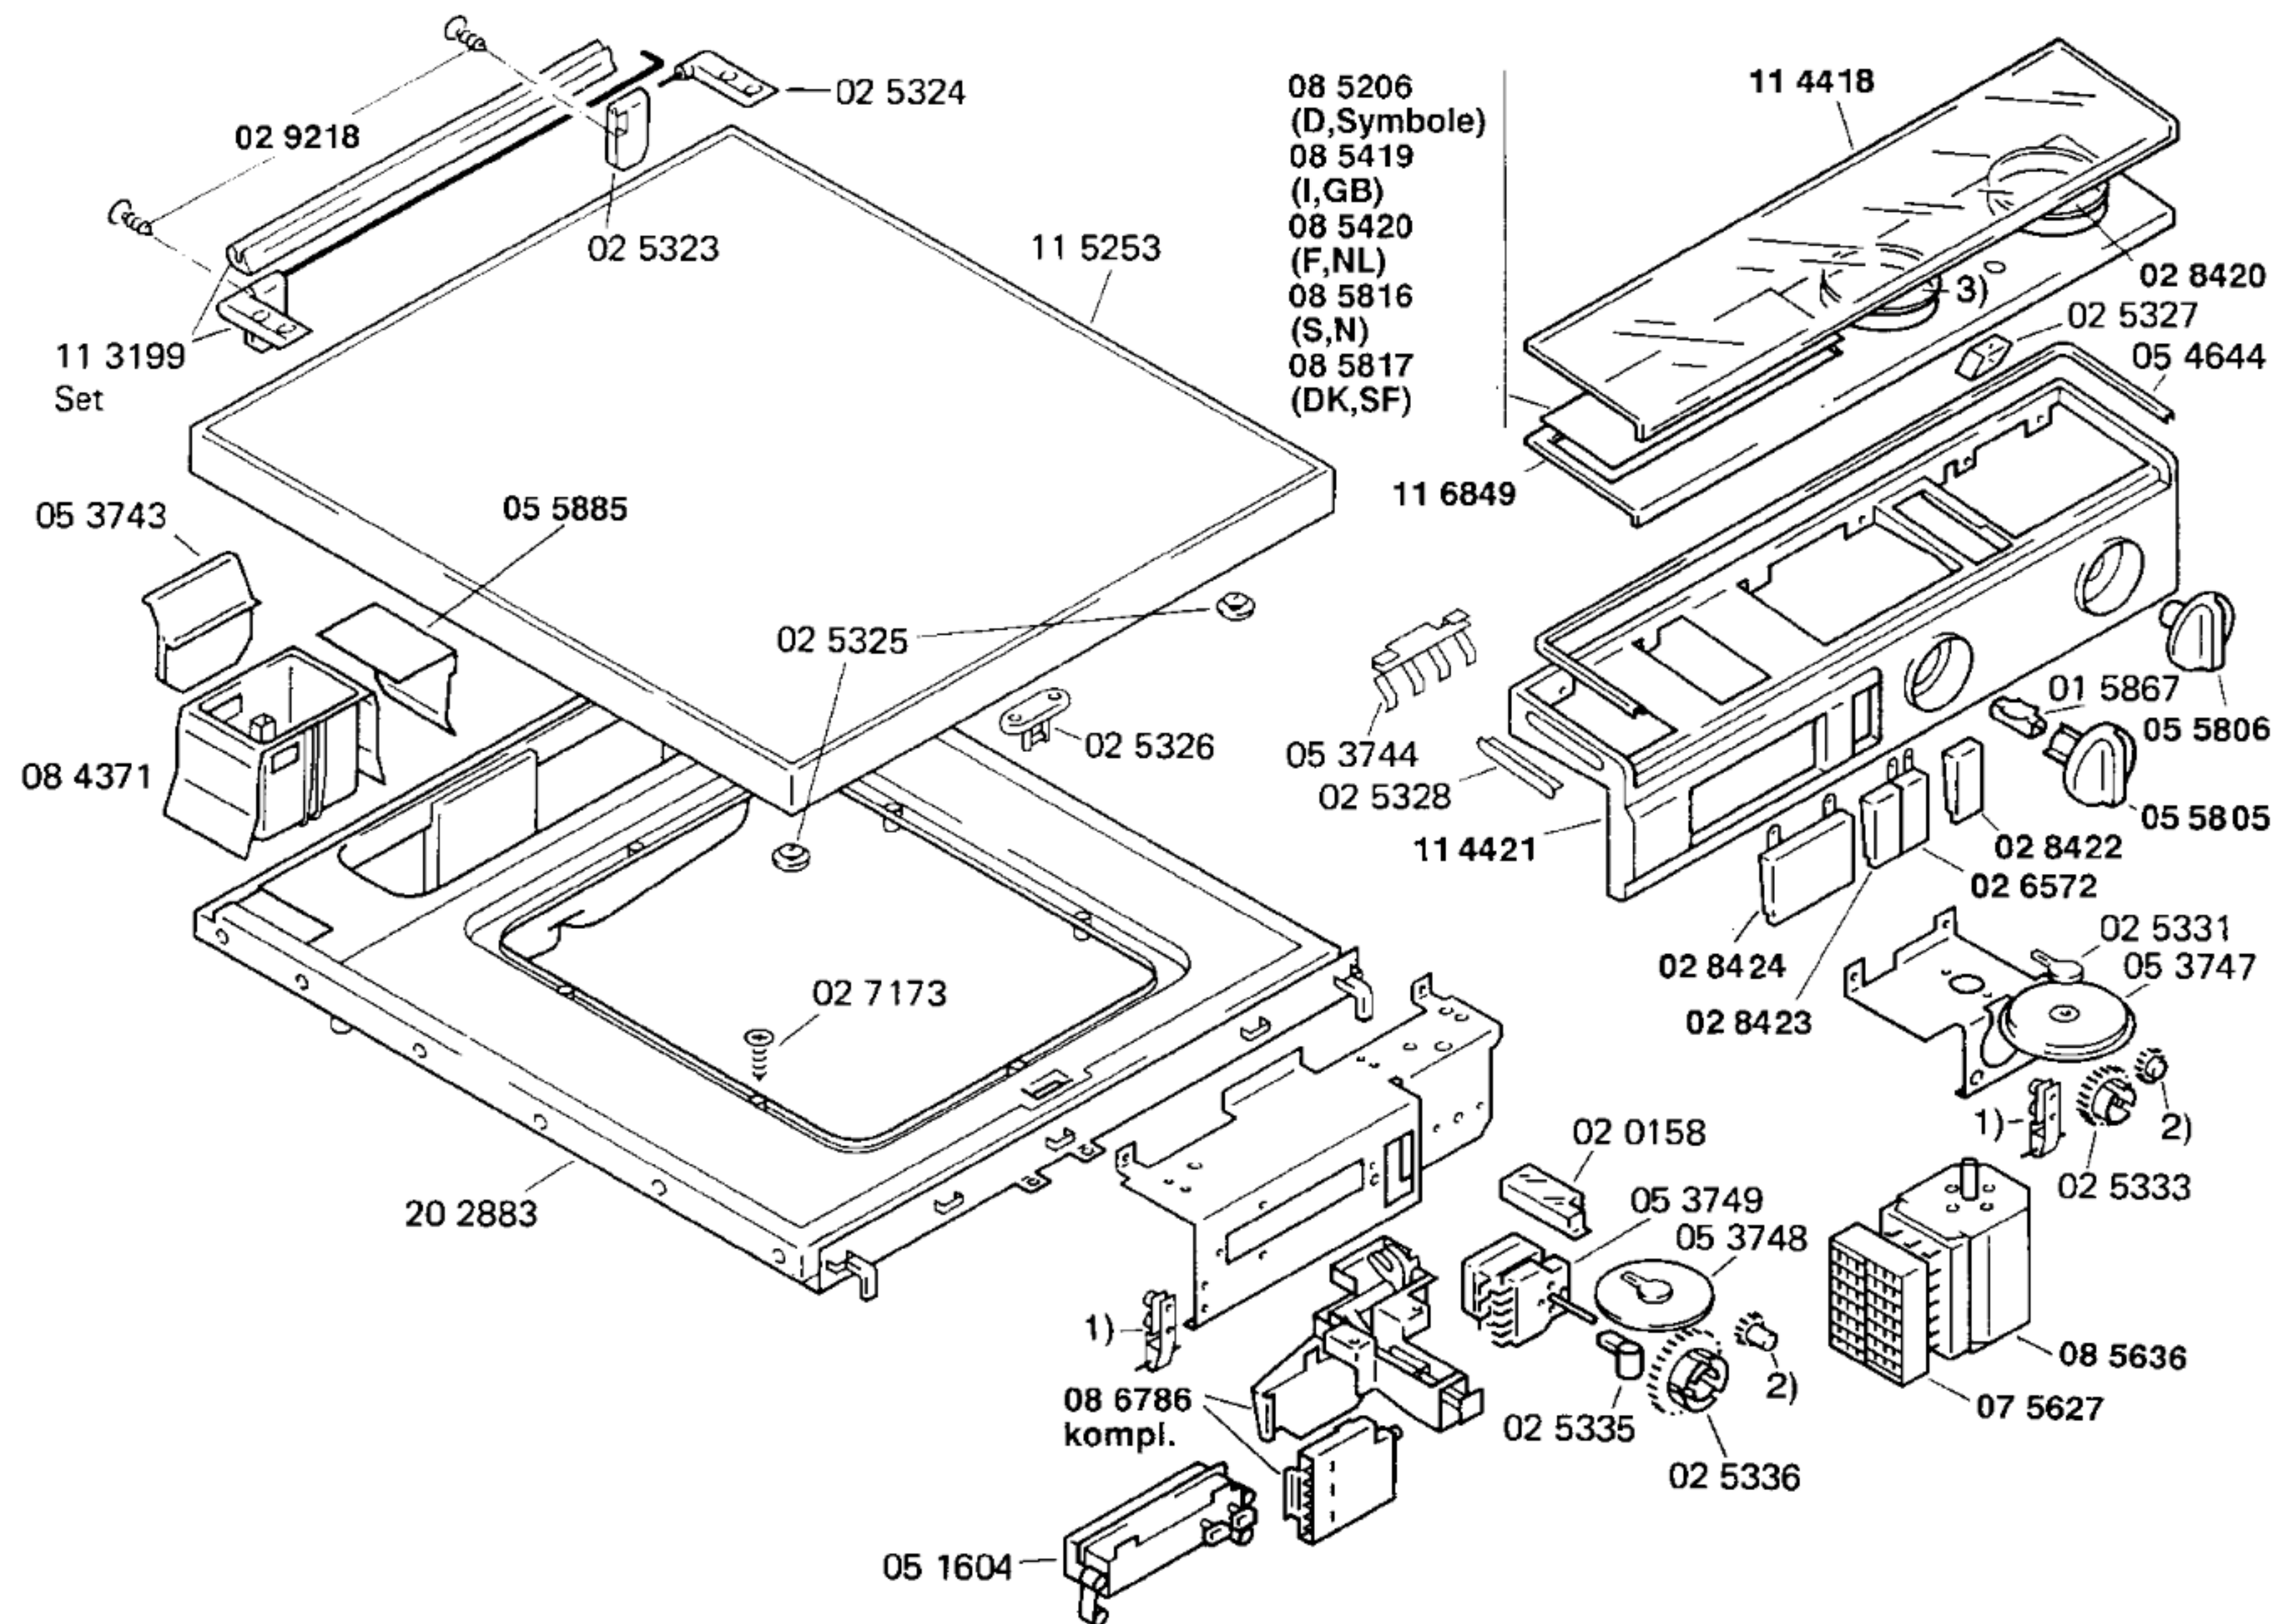


Aufstellanweisungen:

51 1497
(D, GB, F, I, NL)
51 1674
(D, I, S, DK, N, SF)
Gebrauchsanweisungen
51 3019
(D, GB, F, I, NL)
51 3299
(N, S, SF)
Programmtabellen
51 2680
(D, GB, F, I, NL)
51 3304
(S, N, SF)

- 1) 02 5334
- 2) 02 5332
- 3) 02 8421

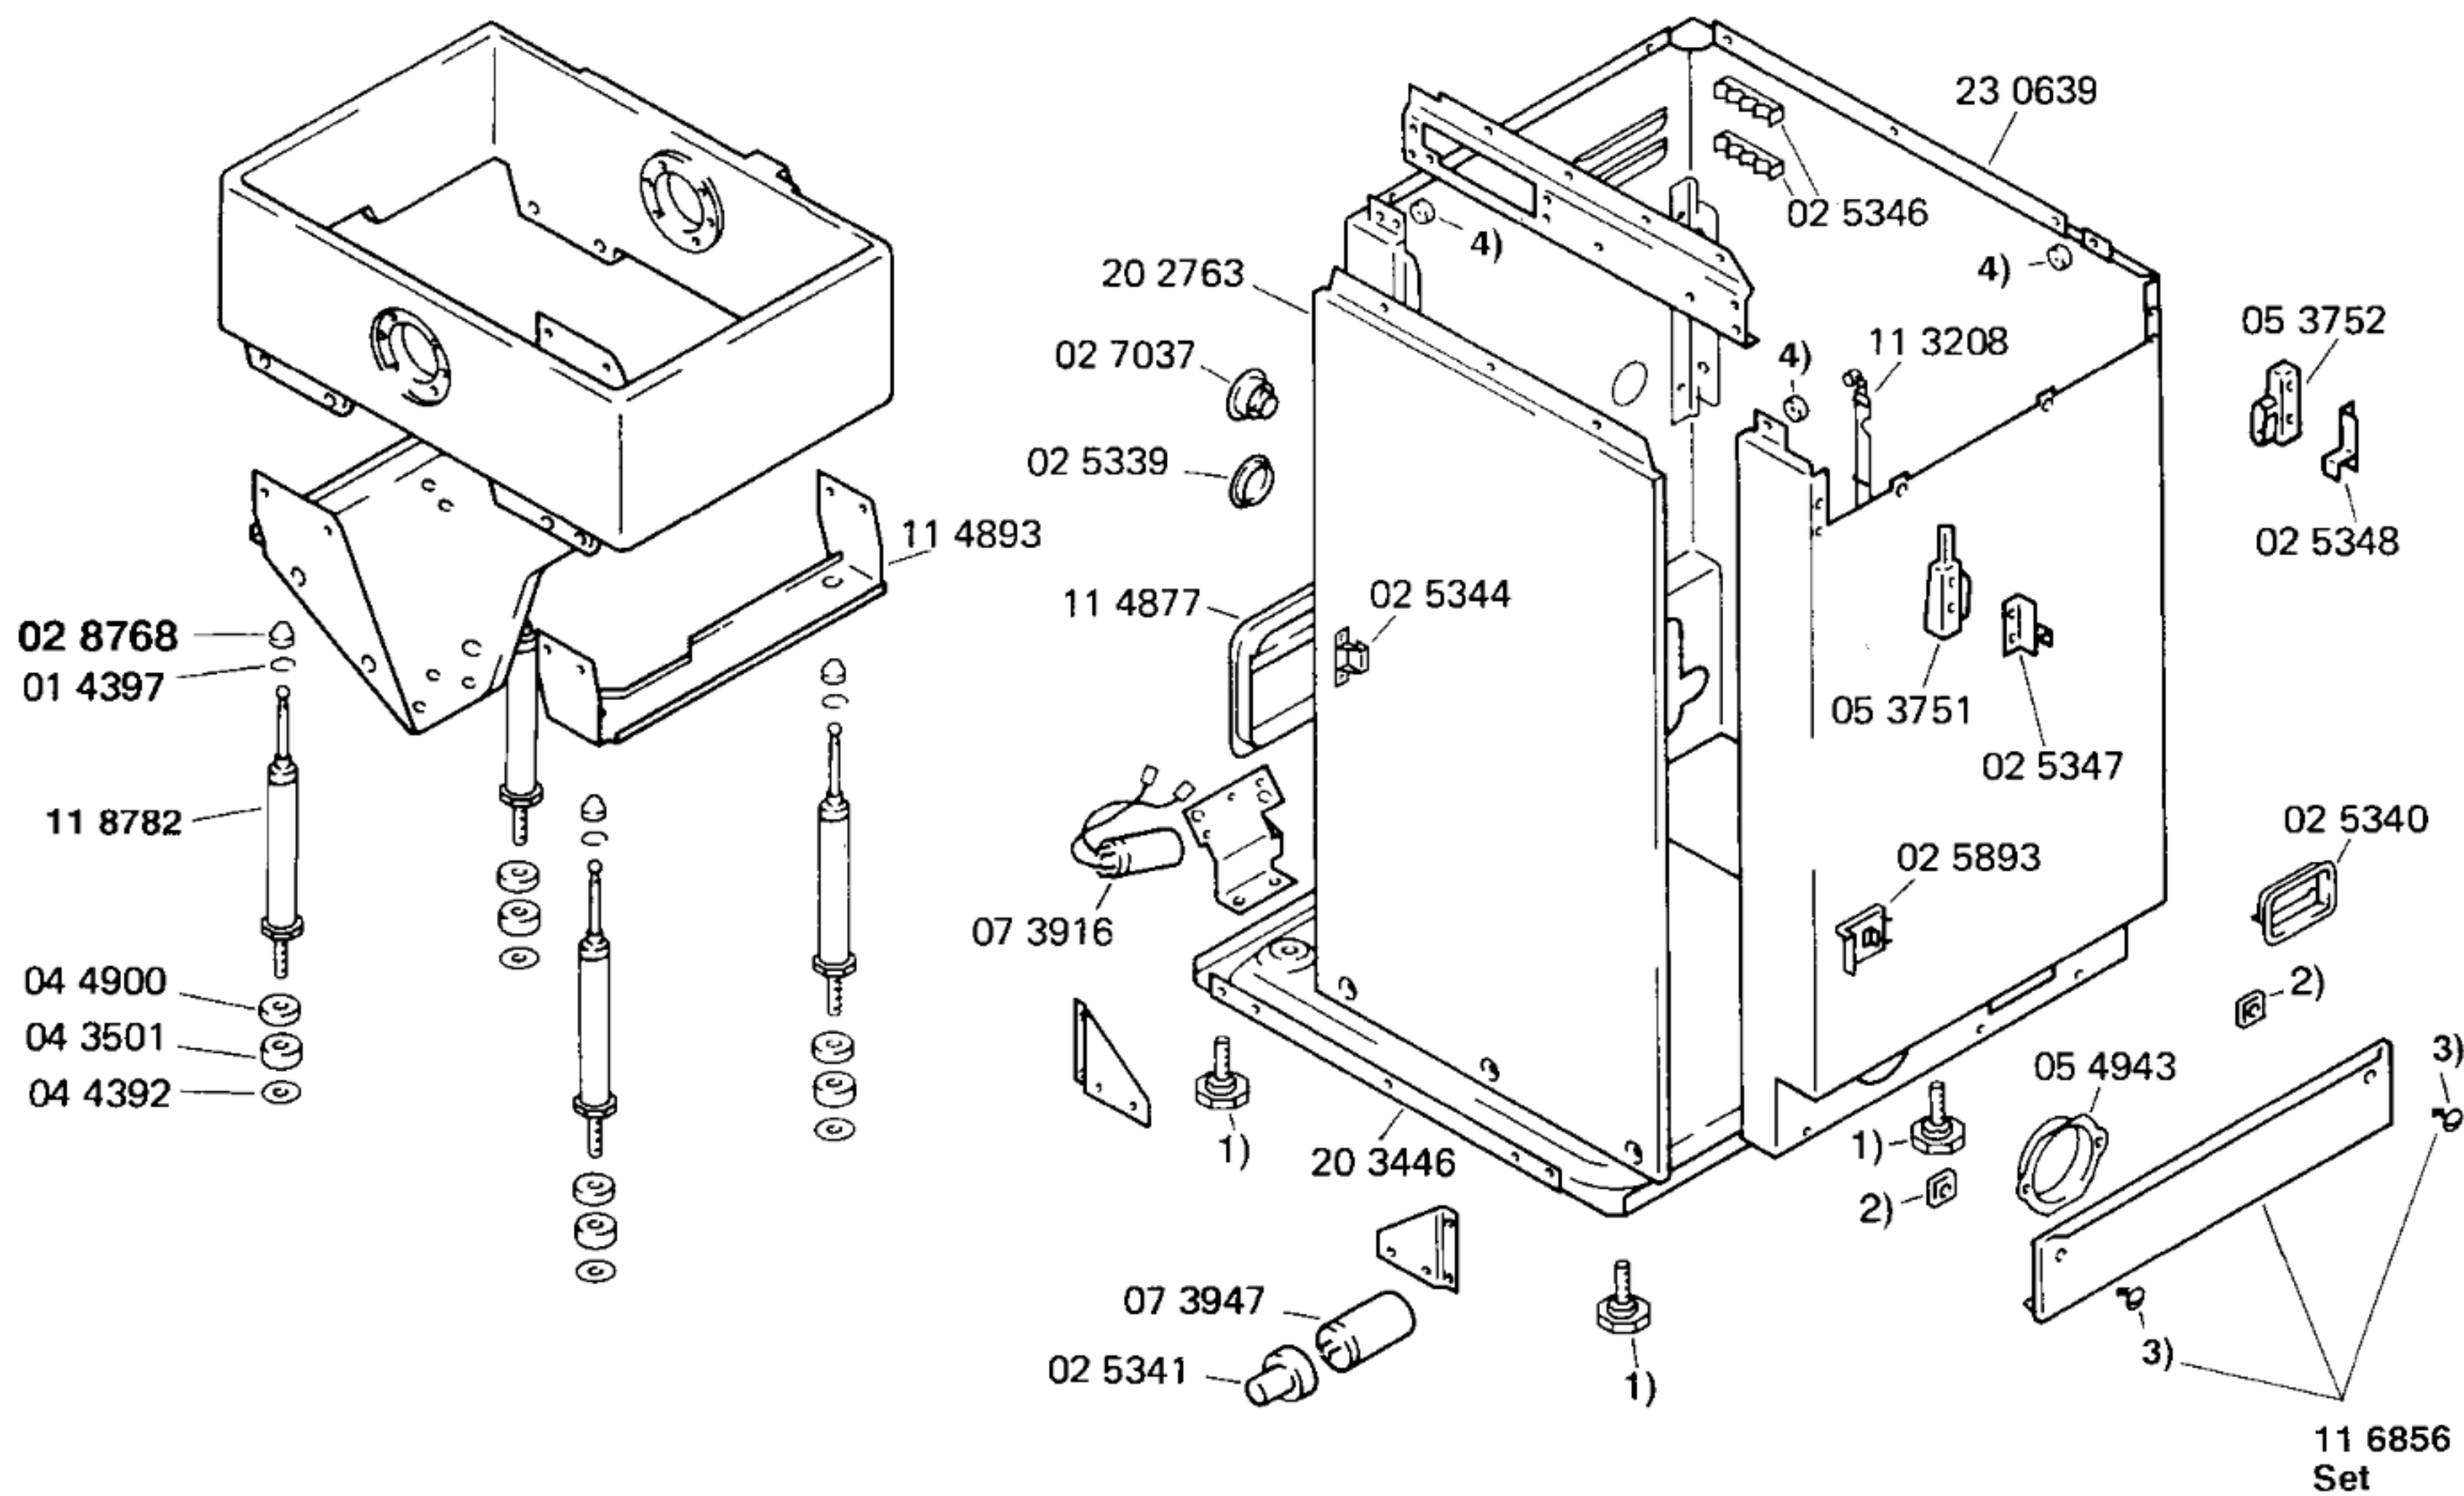

- 1) 04 5561
- 2) 01 4687
- 3) 02 8437
- 4) 02 5345

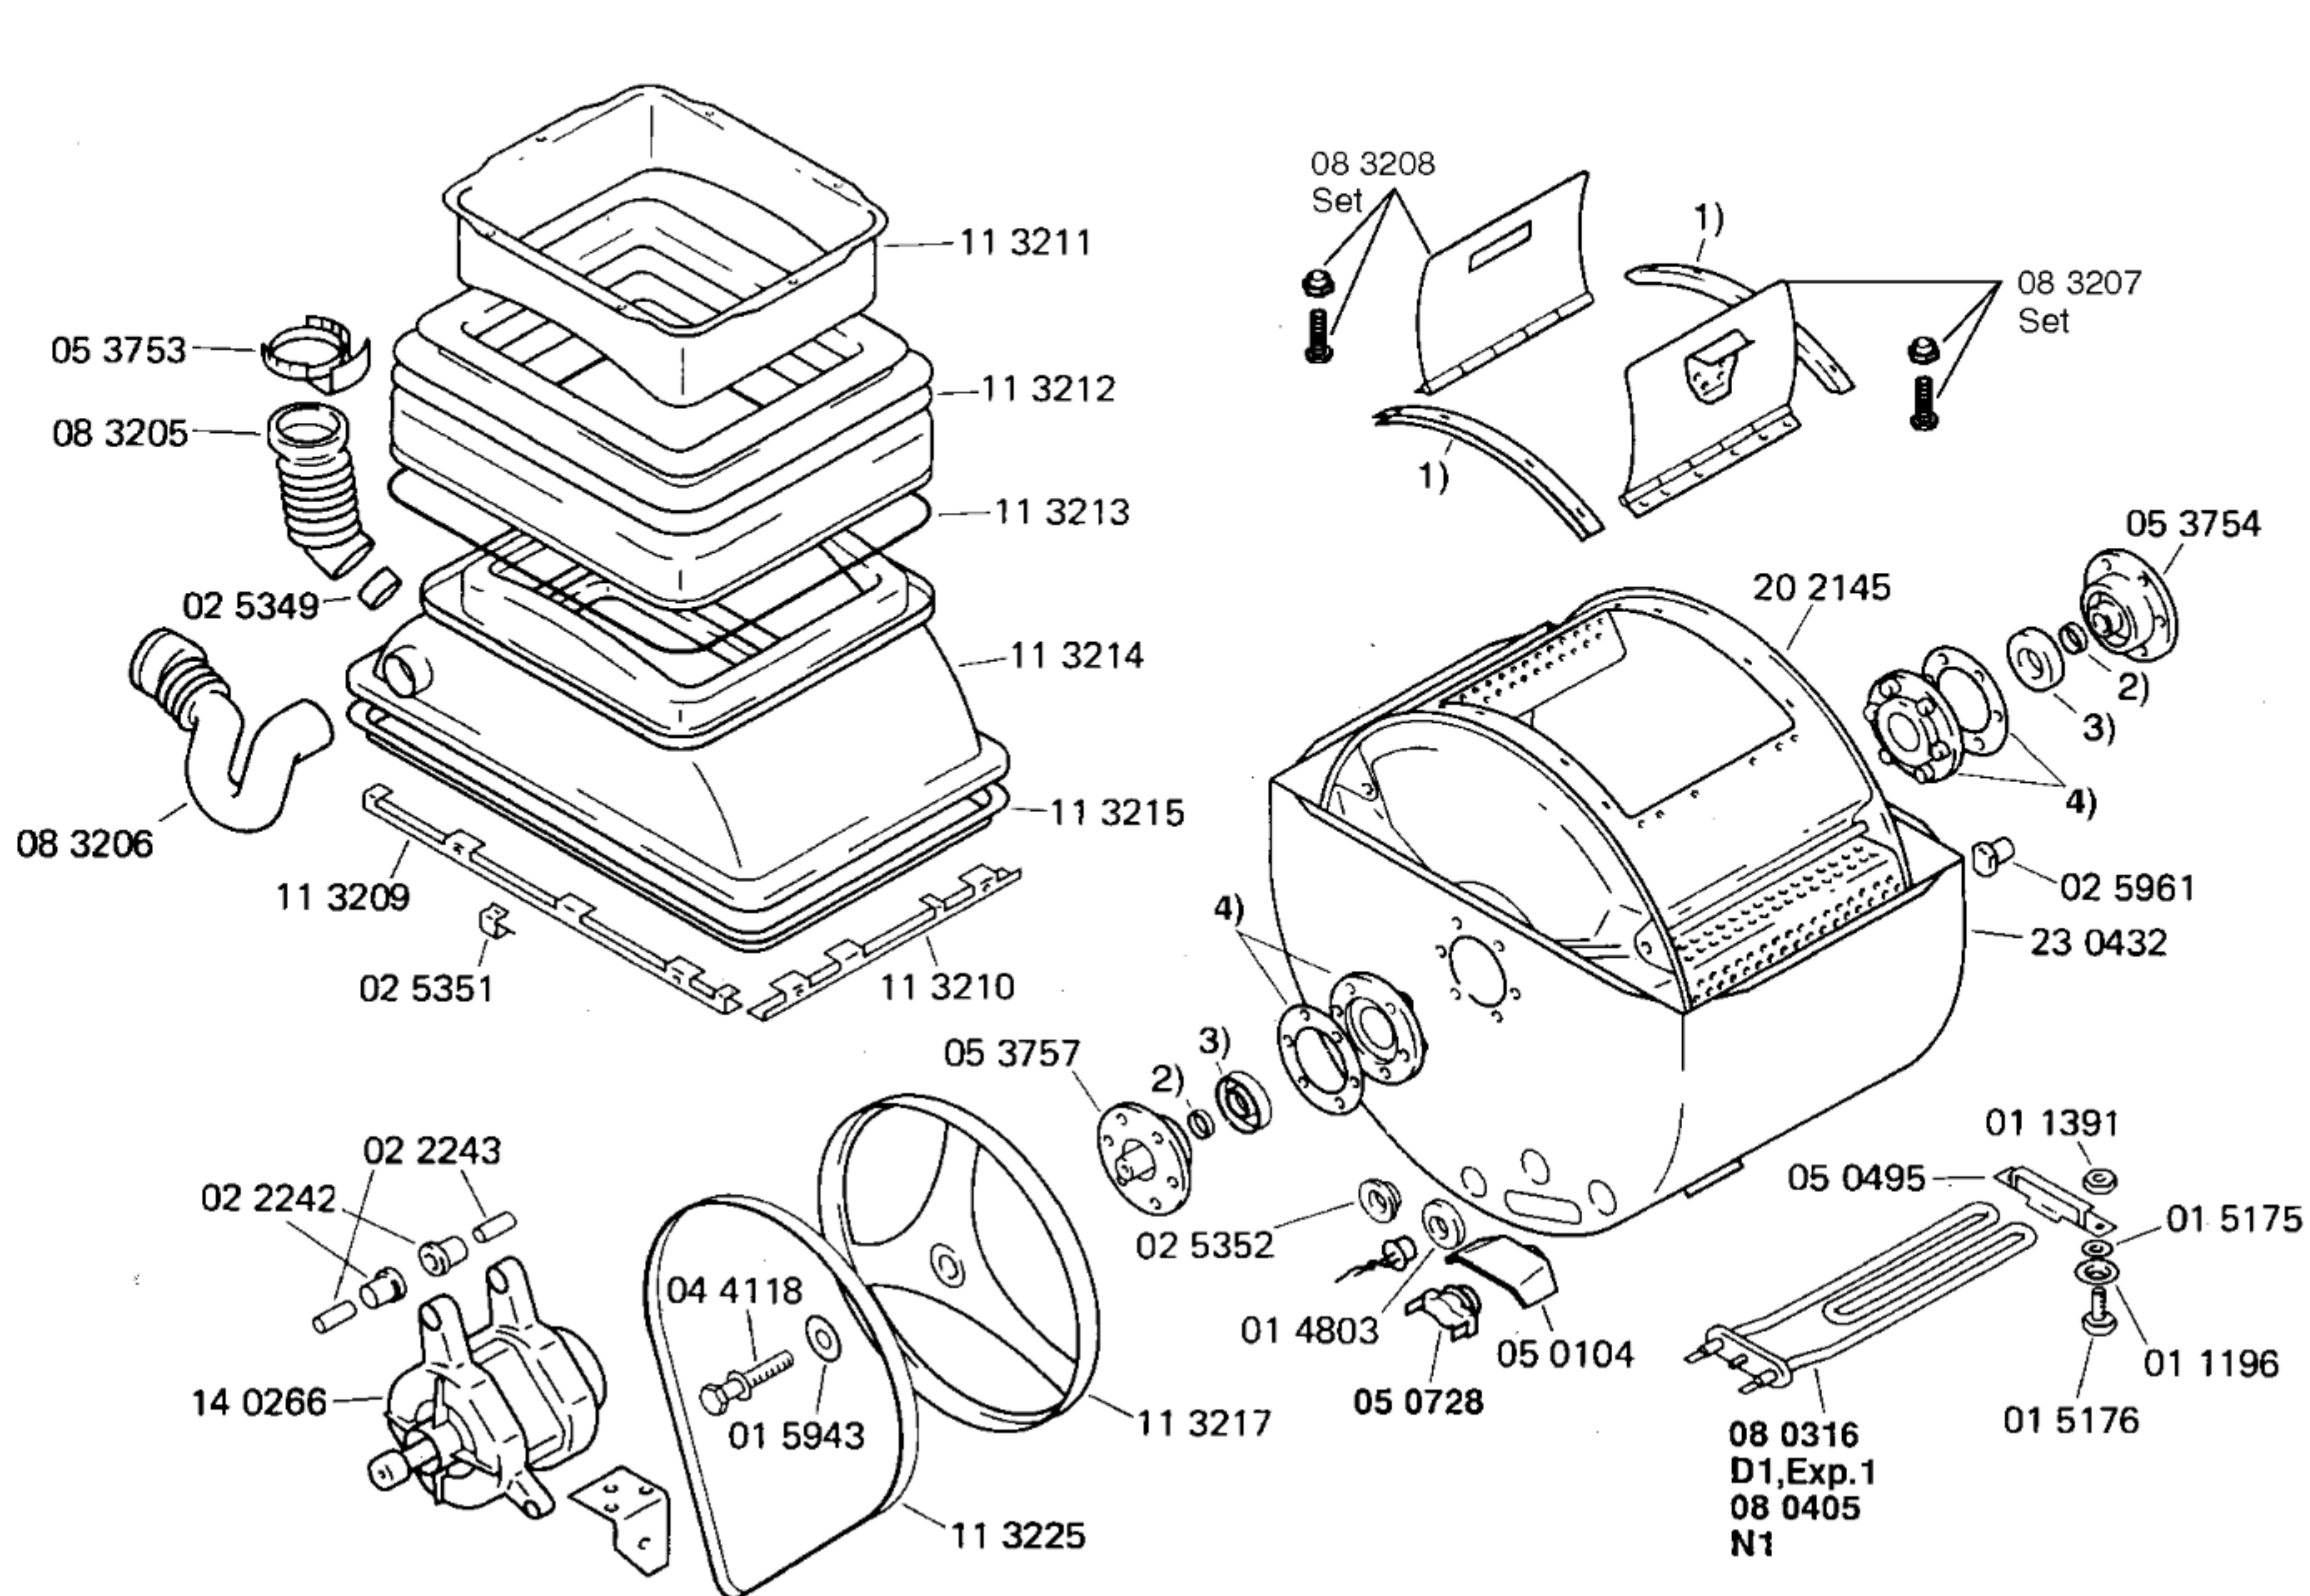

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 7022

