 


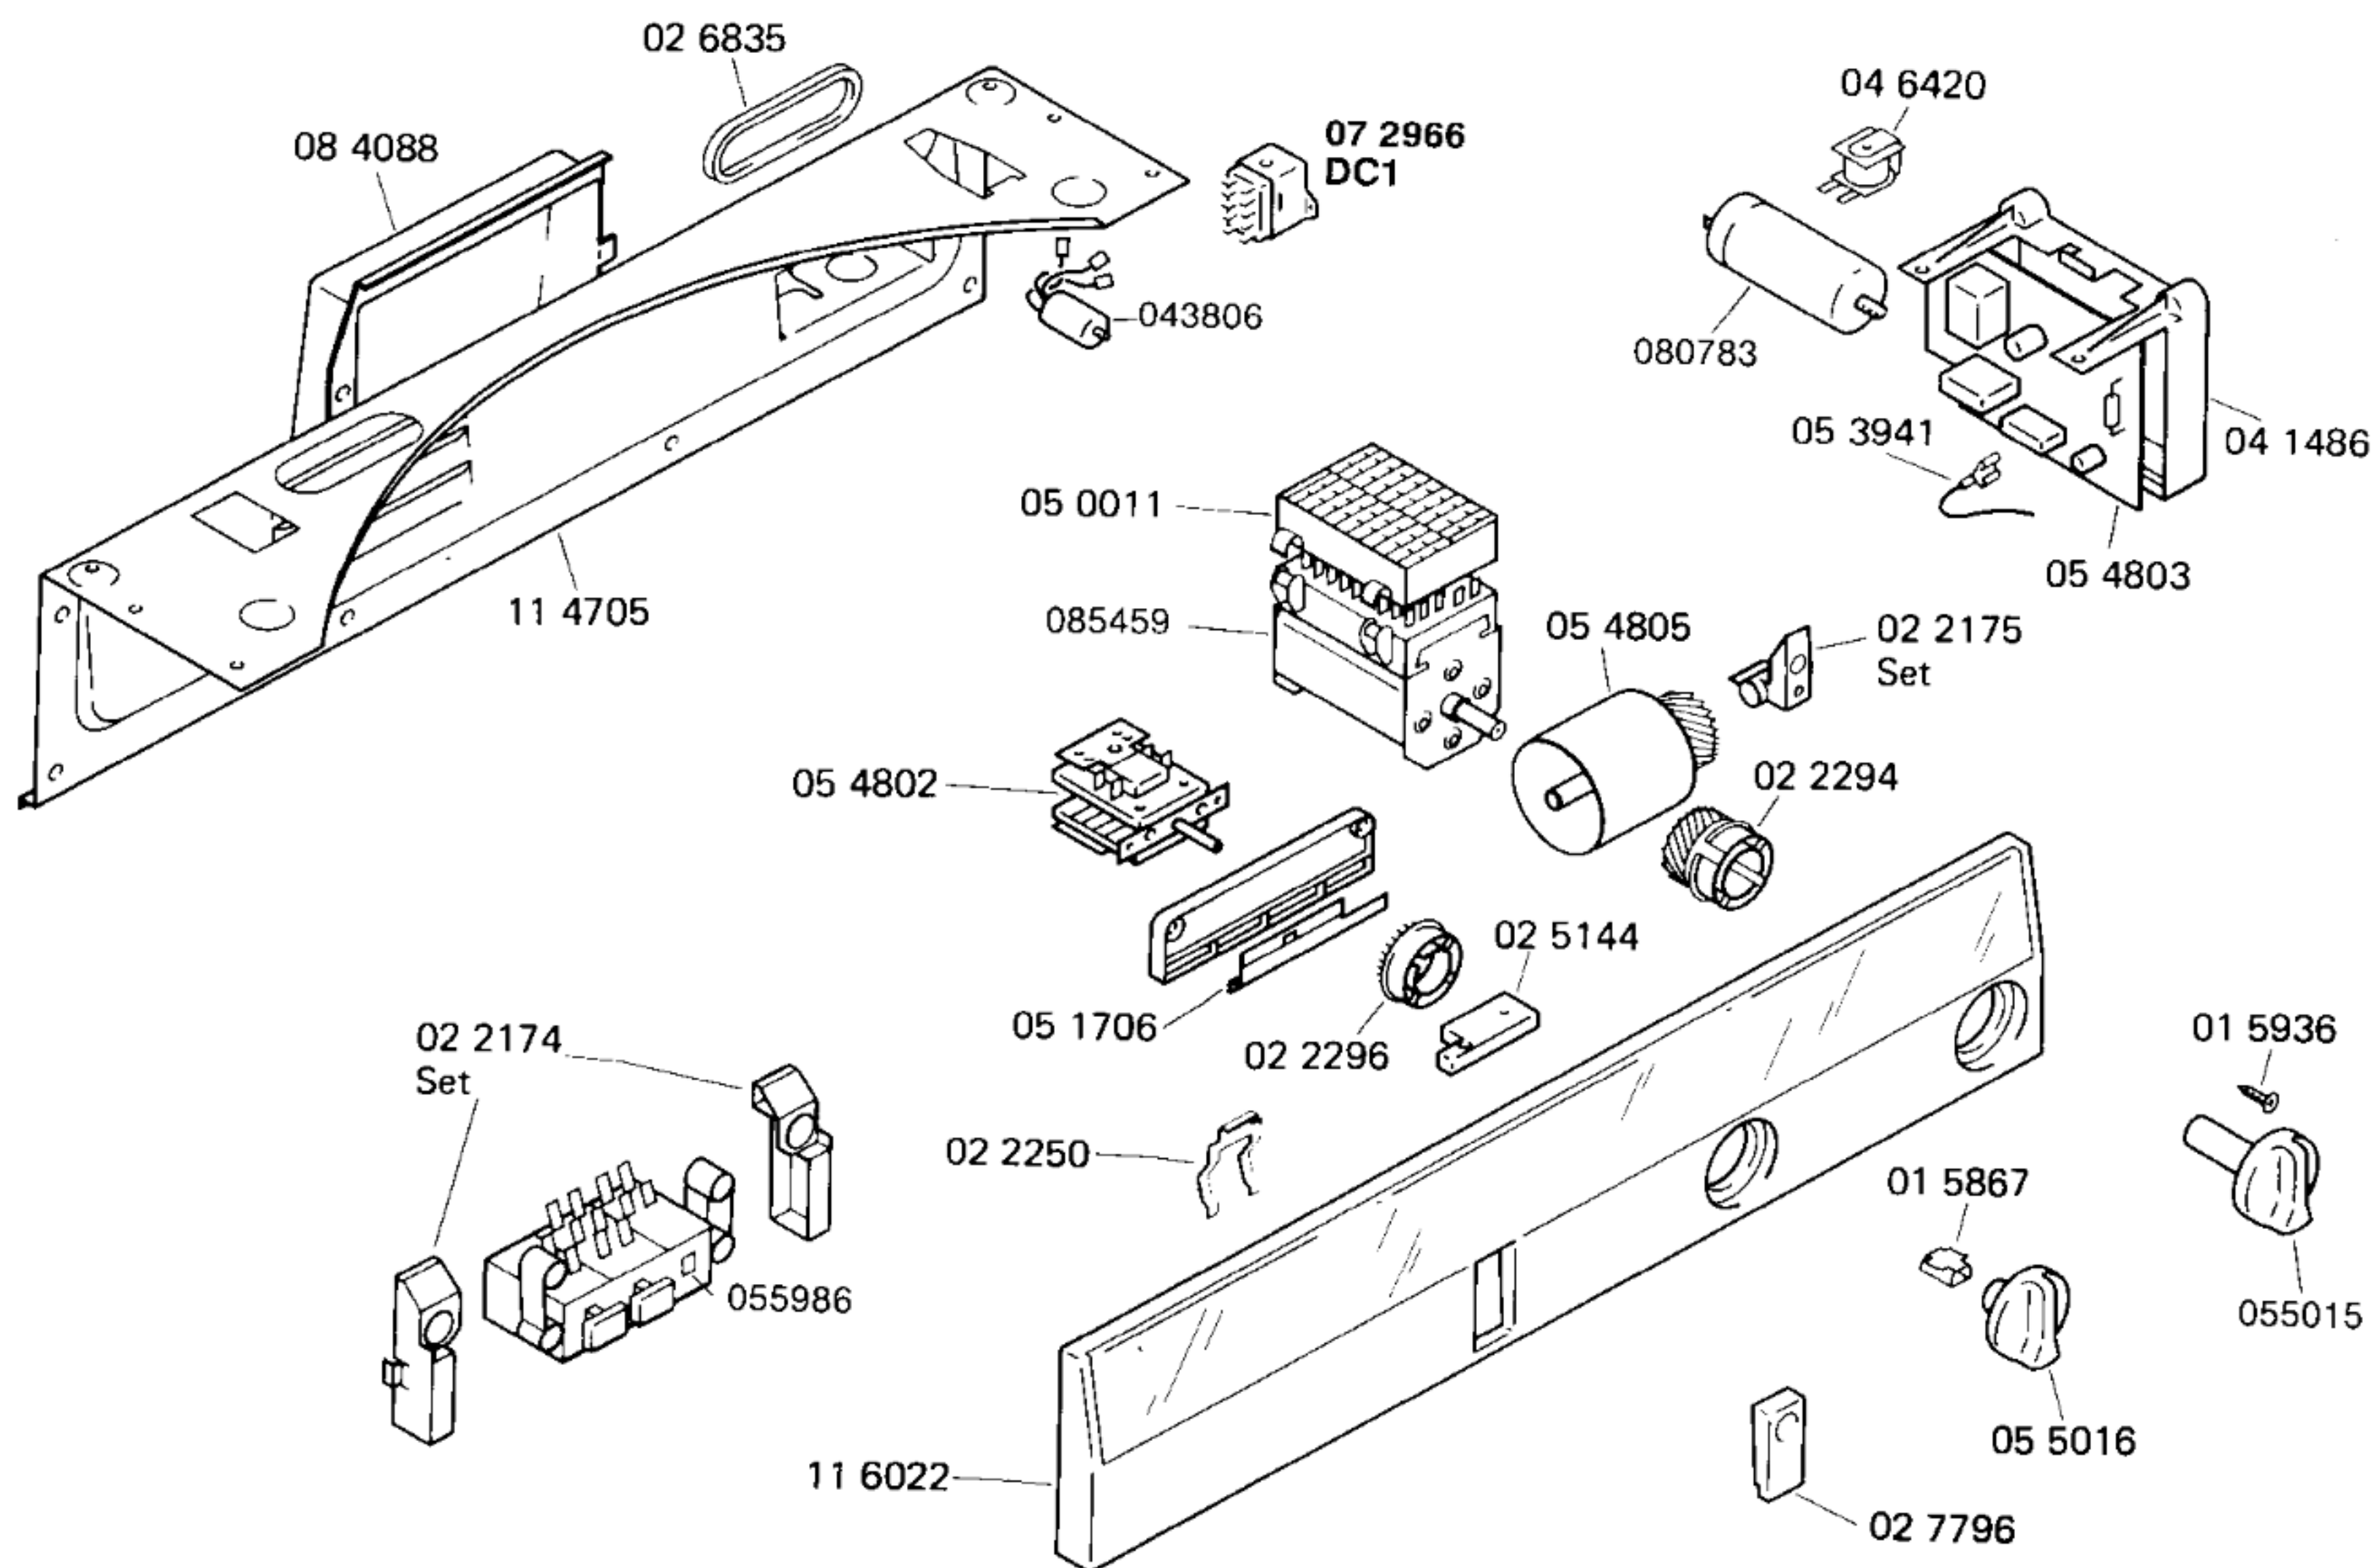

Gebrauchsanweisungen
51 1976
(D,GB,F,I,NL)
51 1981
(D,F,I,DK,S)
Aufstellanweisungen
51 1191
(D,GB,F,I,NL,E)
51 1366
(D,F,I,DK,S)

**BOSCH**

 
T4652-T4652B/00-D1
T4652-T465259B/00-DC1

 
WASCHGERÄTE
Trockner

 
Ident-Nummern-Konstante
3740

1) 02 0159

2) 01 5938

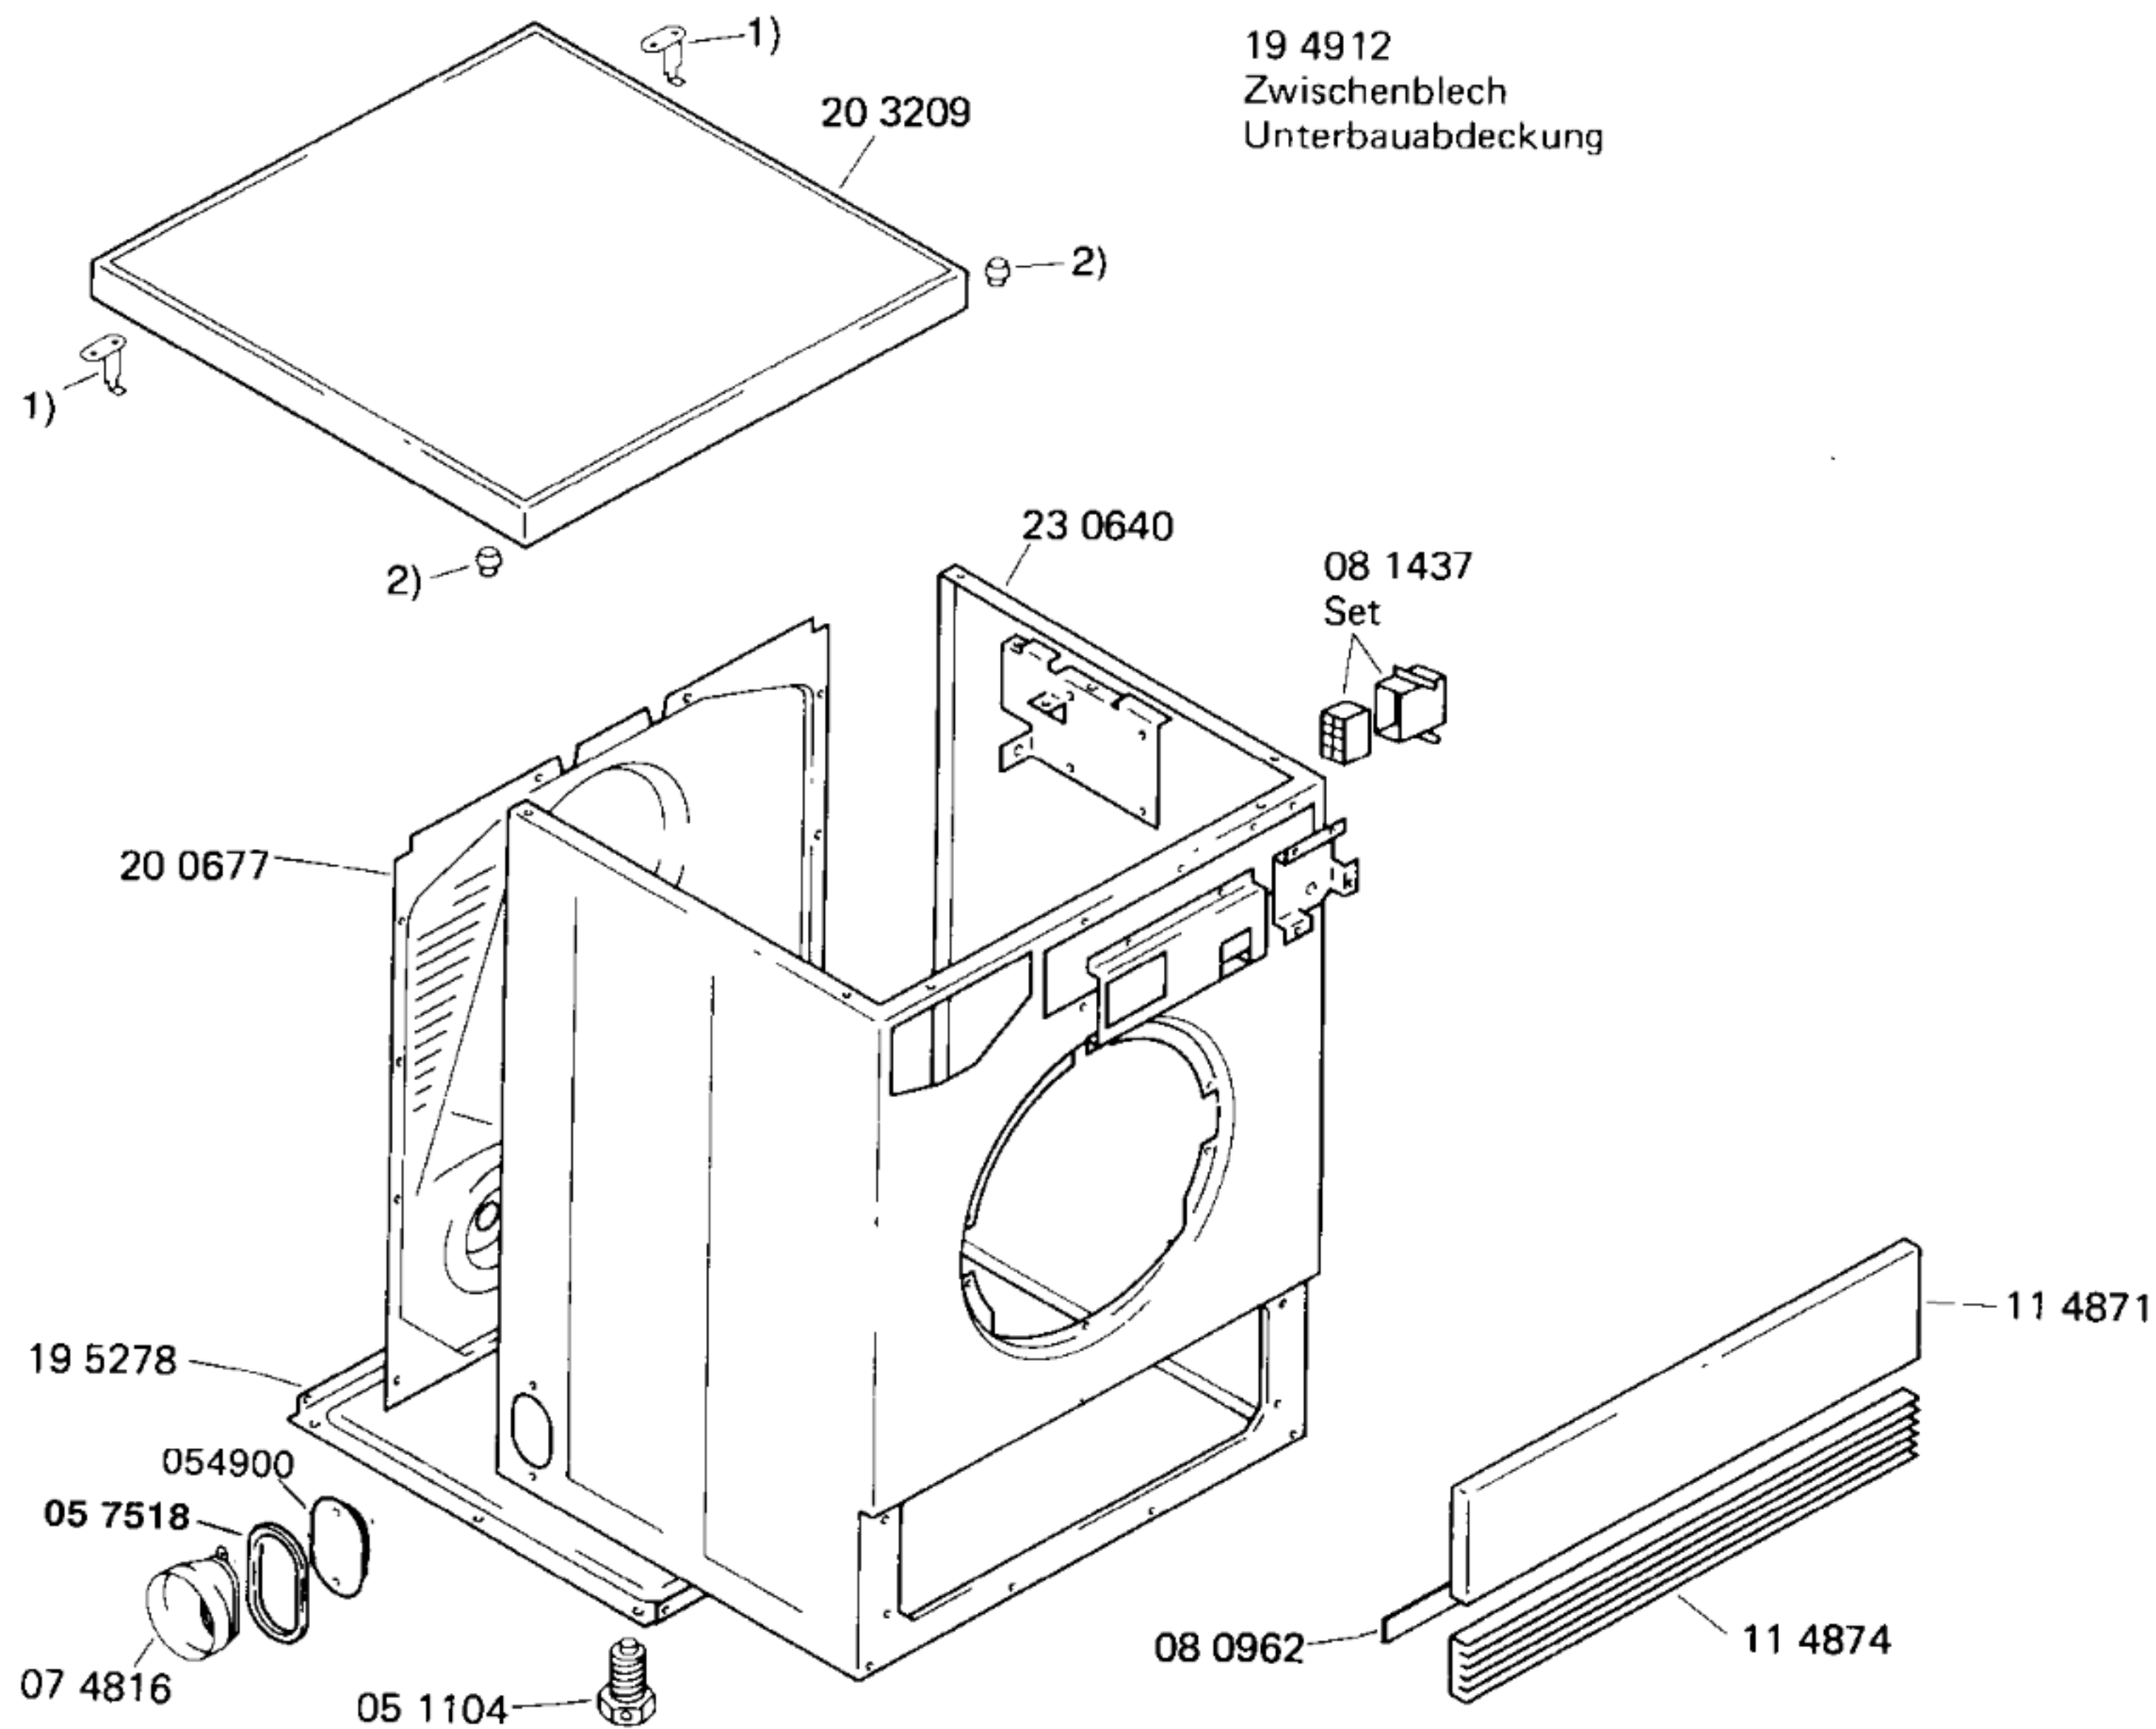

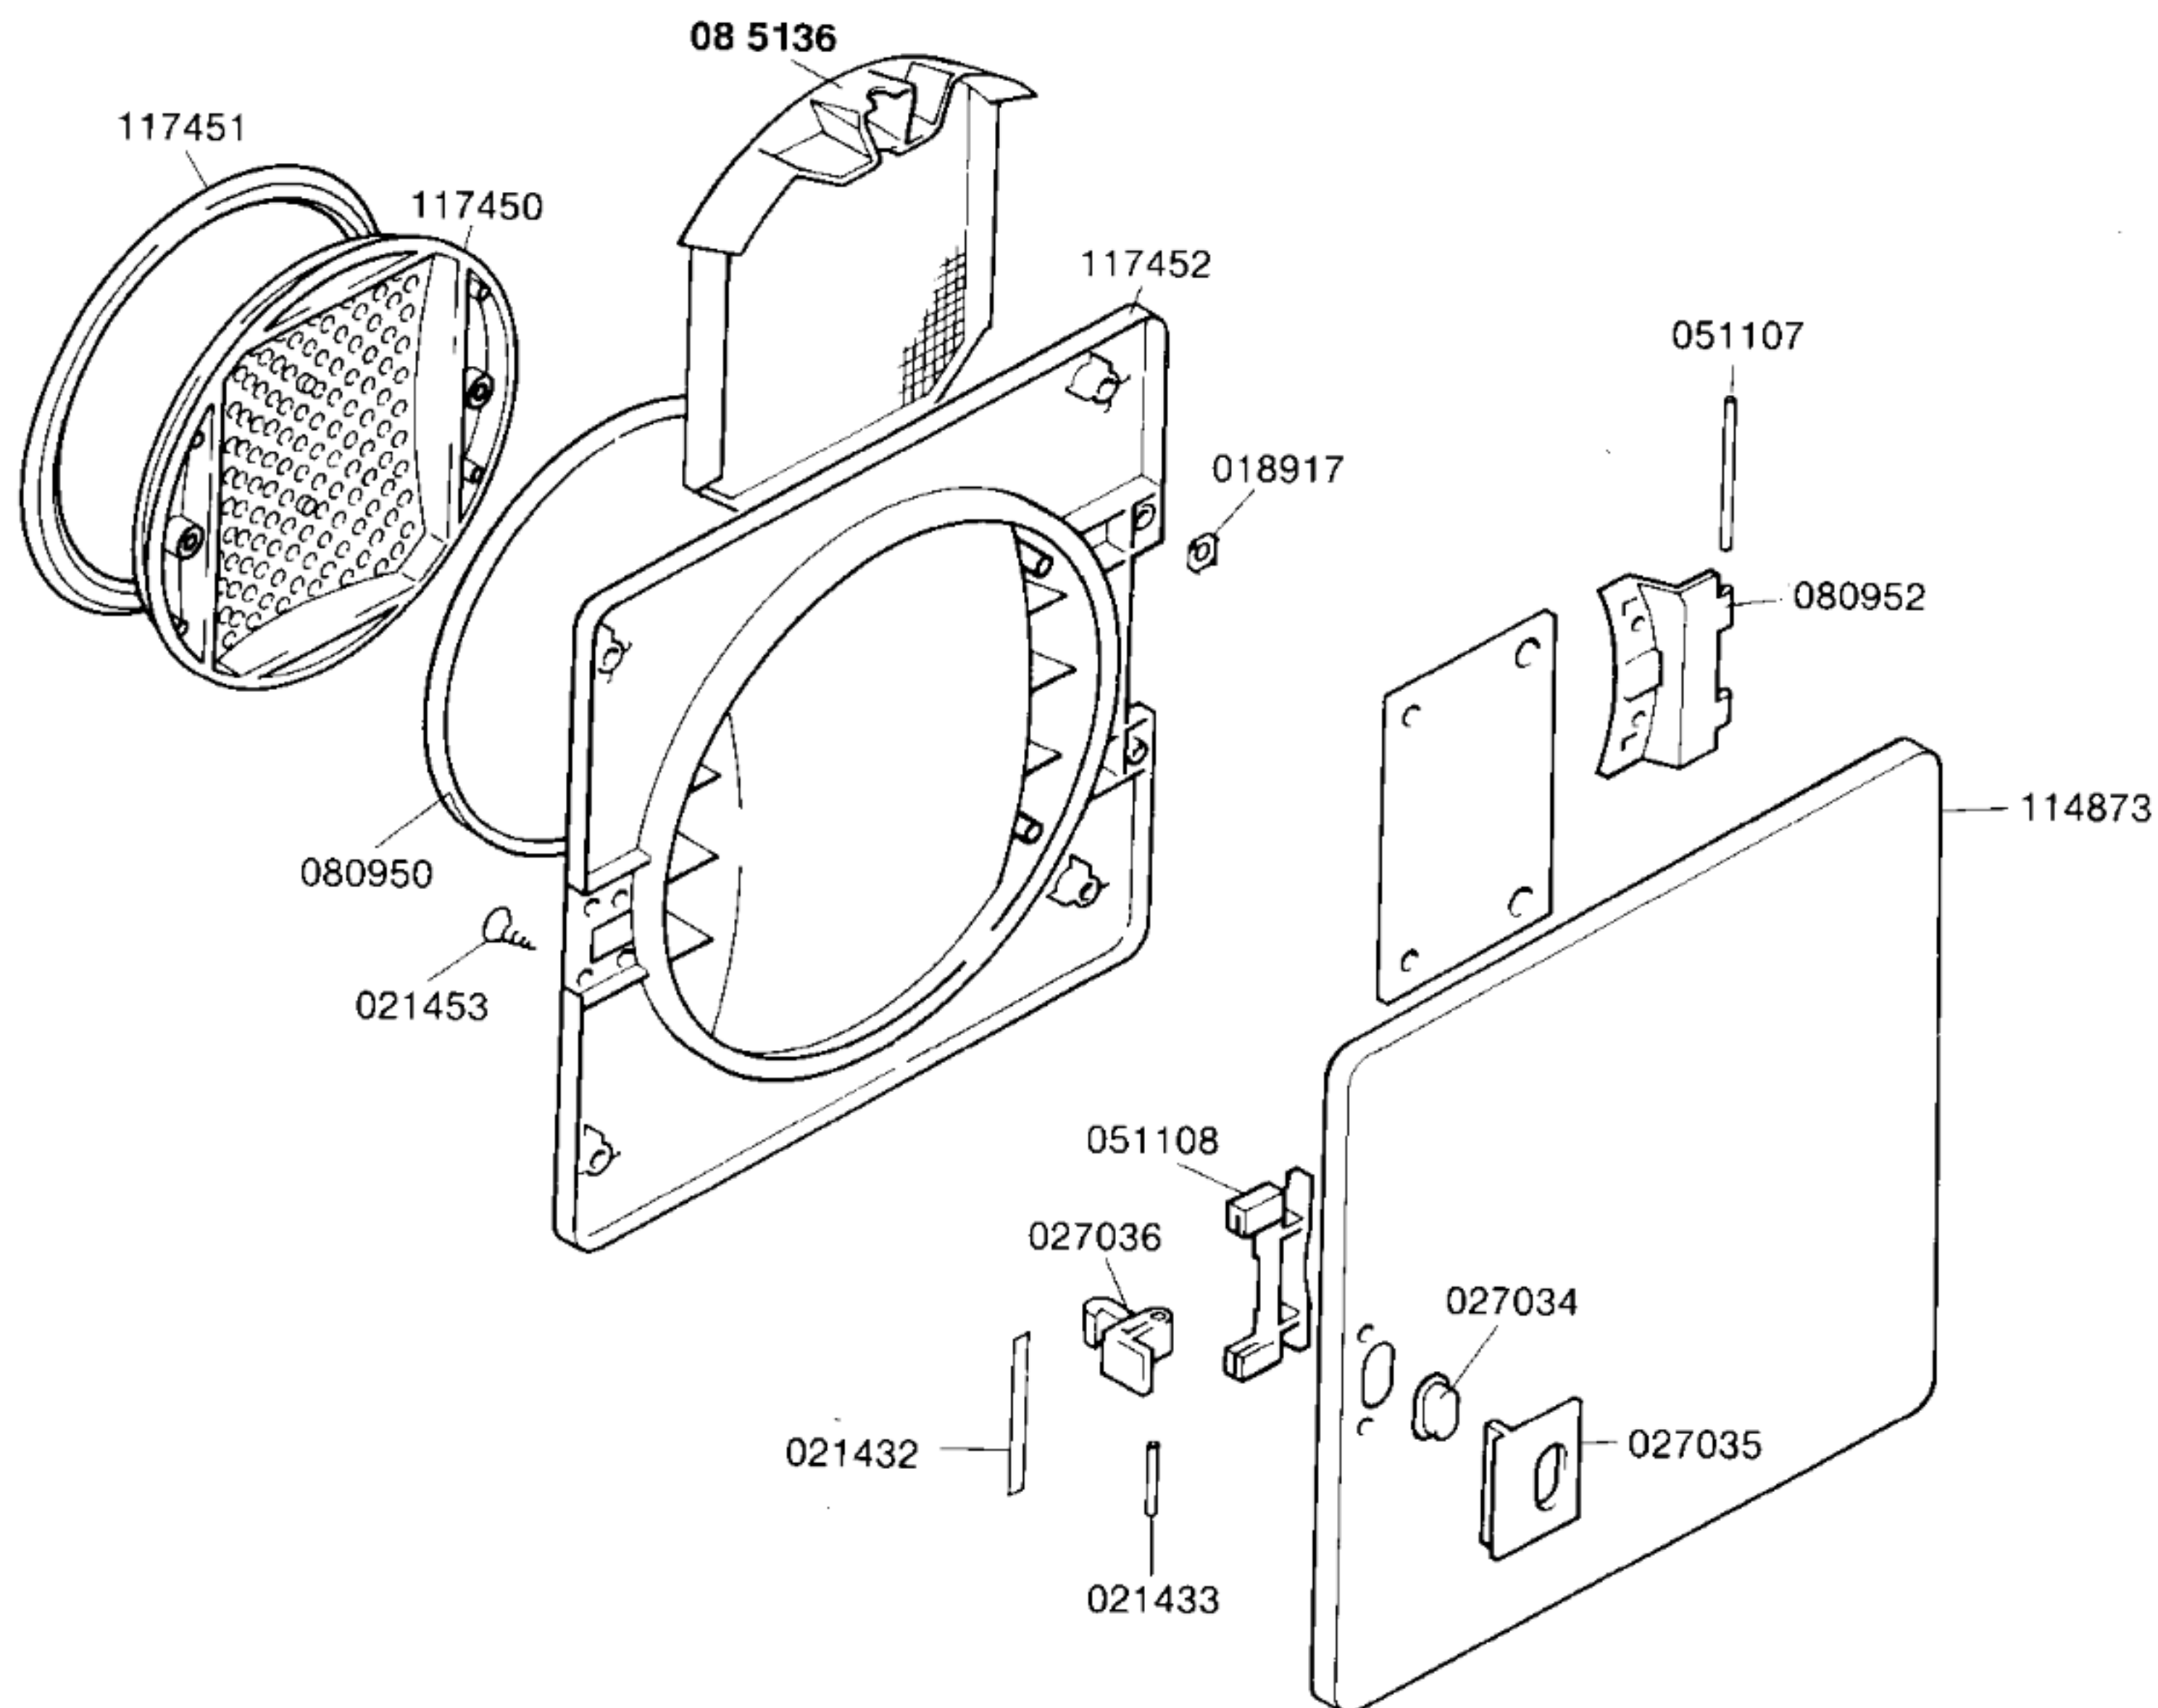

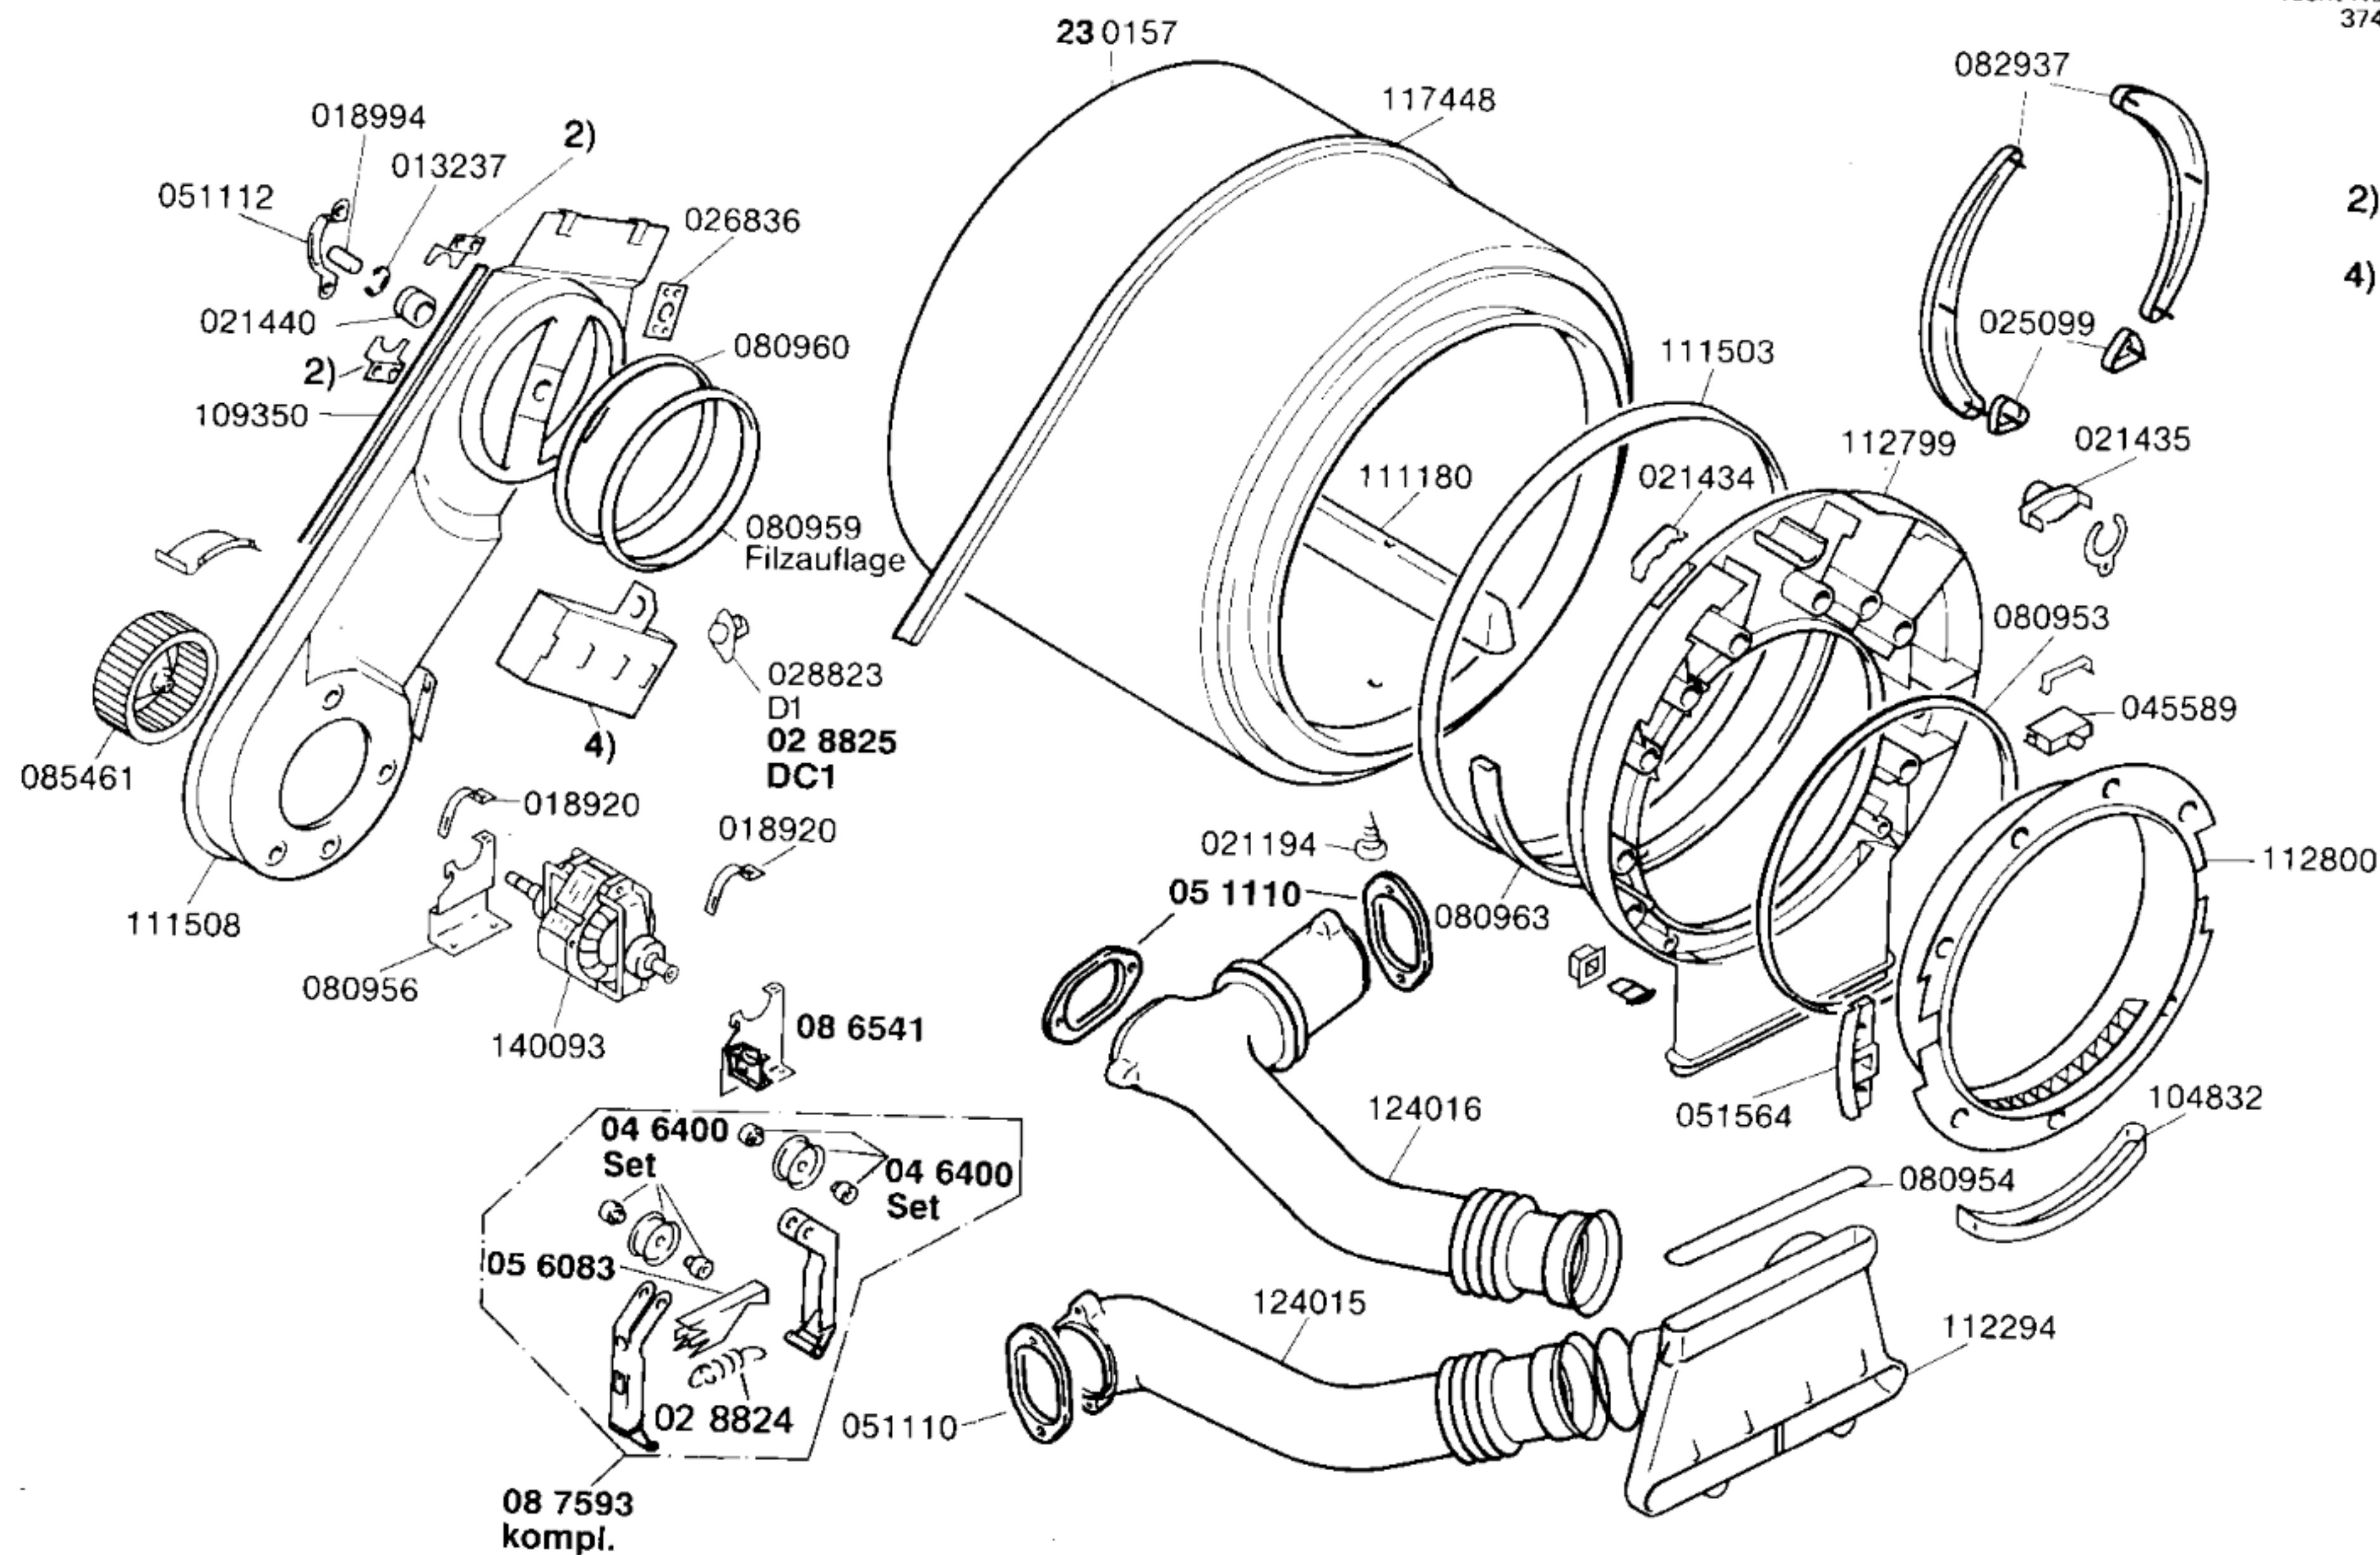

2) 02 1439

4) 08 7191
D1
08 5462
DC1