

Pos. Item Pos.	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
		MECHANISCHE UND ELEKTRISCHE TEILE	MECHANIK AND ELECTRICAL PARTS PIECES ELECTRIQUE
	75 5517	Fernbedienung	remote control telecommande
	78 2161	Lautsprecherbox RS150R4	loudspeaker box haut-parleur separe
	78 2162	Lautsprecherbox RS151R4	loudspeaker box haut-parleur separe
	78 2163	Plattenspieler kpl.	record player cpl. tourne disques cpl.
	73 6030	Batteriedeckel f. Fernbedienung	battery cover couvercle de batterie
	73 6704	Beschläge f. RZ151	stud
	78 2328	Cassettenfächer f. RZ151	cassette compartments casier cassette
		LEITERPLATTEN	PRINTED BOARDS PLAQUES A CIRCUIT
	75 5482	- Netz	power/reseau
	75 5594	- Uhr	clock/horloge
	75 5483	- Haupt	main/principal
	75 6175	- Equalizer (G.E.Q.)	equalizer/ G.E.Q.
	75 6176	- Sensor	sensor/palpeur
	75 6177	- Mikrofon	microphone
	75 6178	- Kopfhörer	headphone/casque
	75 6179	- Schalter	switch/interrupteur

 
Pos. Item Pos.	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
IC1	73 2251	 AN7205	
IC2	73 5455	AN7222N	
IC3	73 2252	AN7420	
IC4	73 5456	AN7310	
IC5	73 3855	TA7668BP	
IC6	73 5139	TC9153P	
IC7	73 5457	TC9149P	
IC8	73 5458	μPD4013BC	
IC9	73 0494	μPC1373	
IC10	73 6073	AN7147	
IC11	73 5459	TMS3451NLR	
IC12	73 5460	TC9148	
Q1	72 6516	 2SC1359	
Q2-6,51-56	71 3704	2SC945	
Q7	73 5461	2SB986	
Q8,9,30	71 3466	2SC1317	
Q10	70 9389	2SD1265 or BD243	
Q11	73 3454	2SB641 or BC556	
Q12	73 5462	2SD973	
Q13	72 0291	2SA733	
D1	72 5277	 MA345E	
D2-10,21-23	70 6829	1N4148	
D11	73 4039	UZ-11BL or UZ-12BL	
D12	73 2254	UZ-6.8BM	
D13-20	70 9579	1N4002	
D24	73 5463	PN323B (Photo)	
D25	73 0355	U-9.1BL	

 
Pos. Item Pos.	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
LED1 LED2, 3 LED4 LED5	73 5464 73 5465 73 5466 73 5467	 LN242RP LN249RP NA221RP LN66(NC)S	LED (Red) Stereo LED (Red) Mute/Catch LED (Red) Pointer LED
VR1-6 VR7	73 5468 73 5469	 RS20411GA030 RS20411KA001	Graphic Equalizer Volume Balance Volume
	73 5663 73 5662 73 5673	 Funktion (Satz) A/W Tast	function/fonction R/P tact
	75 5480	 Netztrafo	power transformer transfo d'alimentation
	70 0613	 1.000A	
	73 5654 73 5659 73 5655 73 5656 73 5667 73 5658	Knopf f. Volume f. G.E.Q. f. Power f. Funktion A f. Funktion B f. Clock	knob/button

 
SIEMENS

RS 150R4
RS 151R4


AUDIOGERÄTE
HIFI-STEREO-KOMPONENTE
Audio Equipment
HiFi-Stereo-Component
Equipment Audio
Composante HiFi-Stéréo


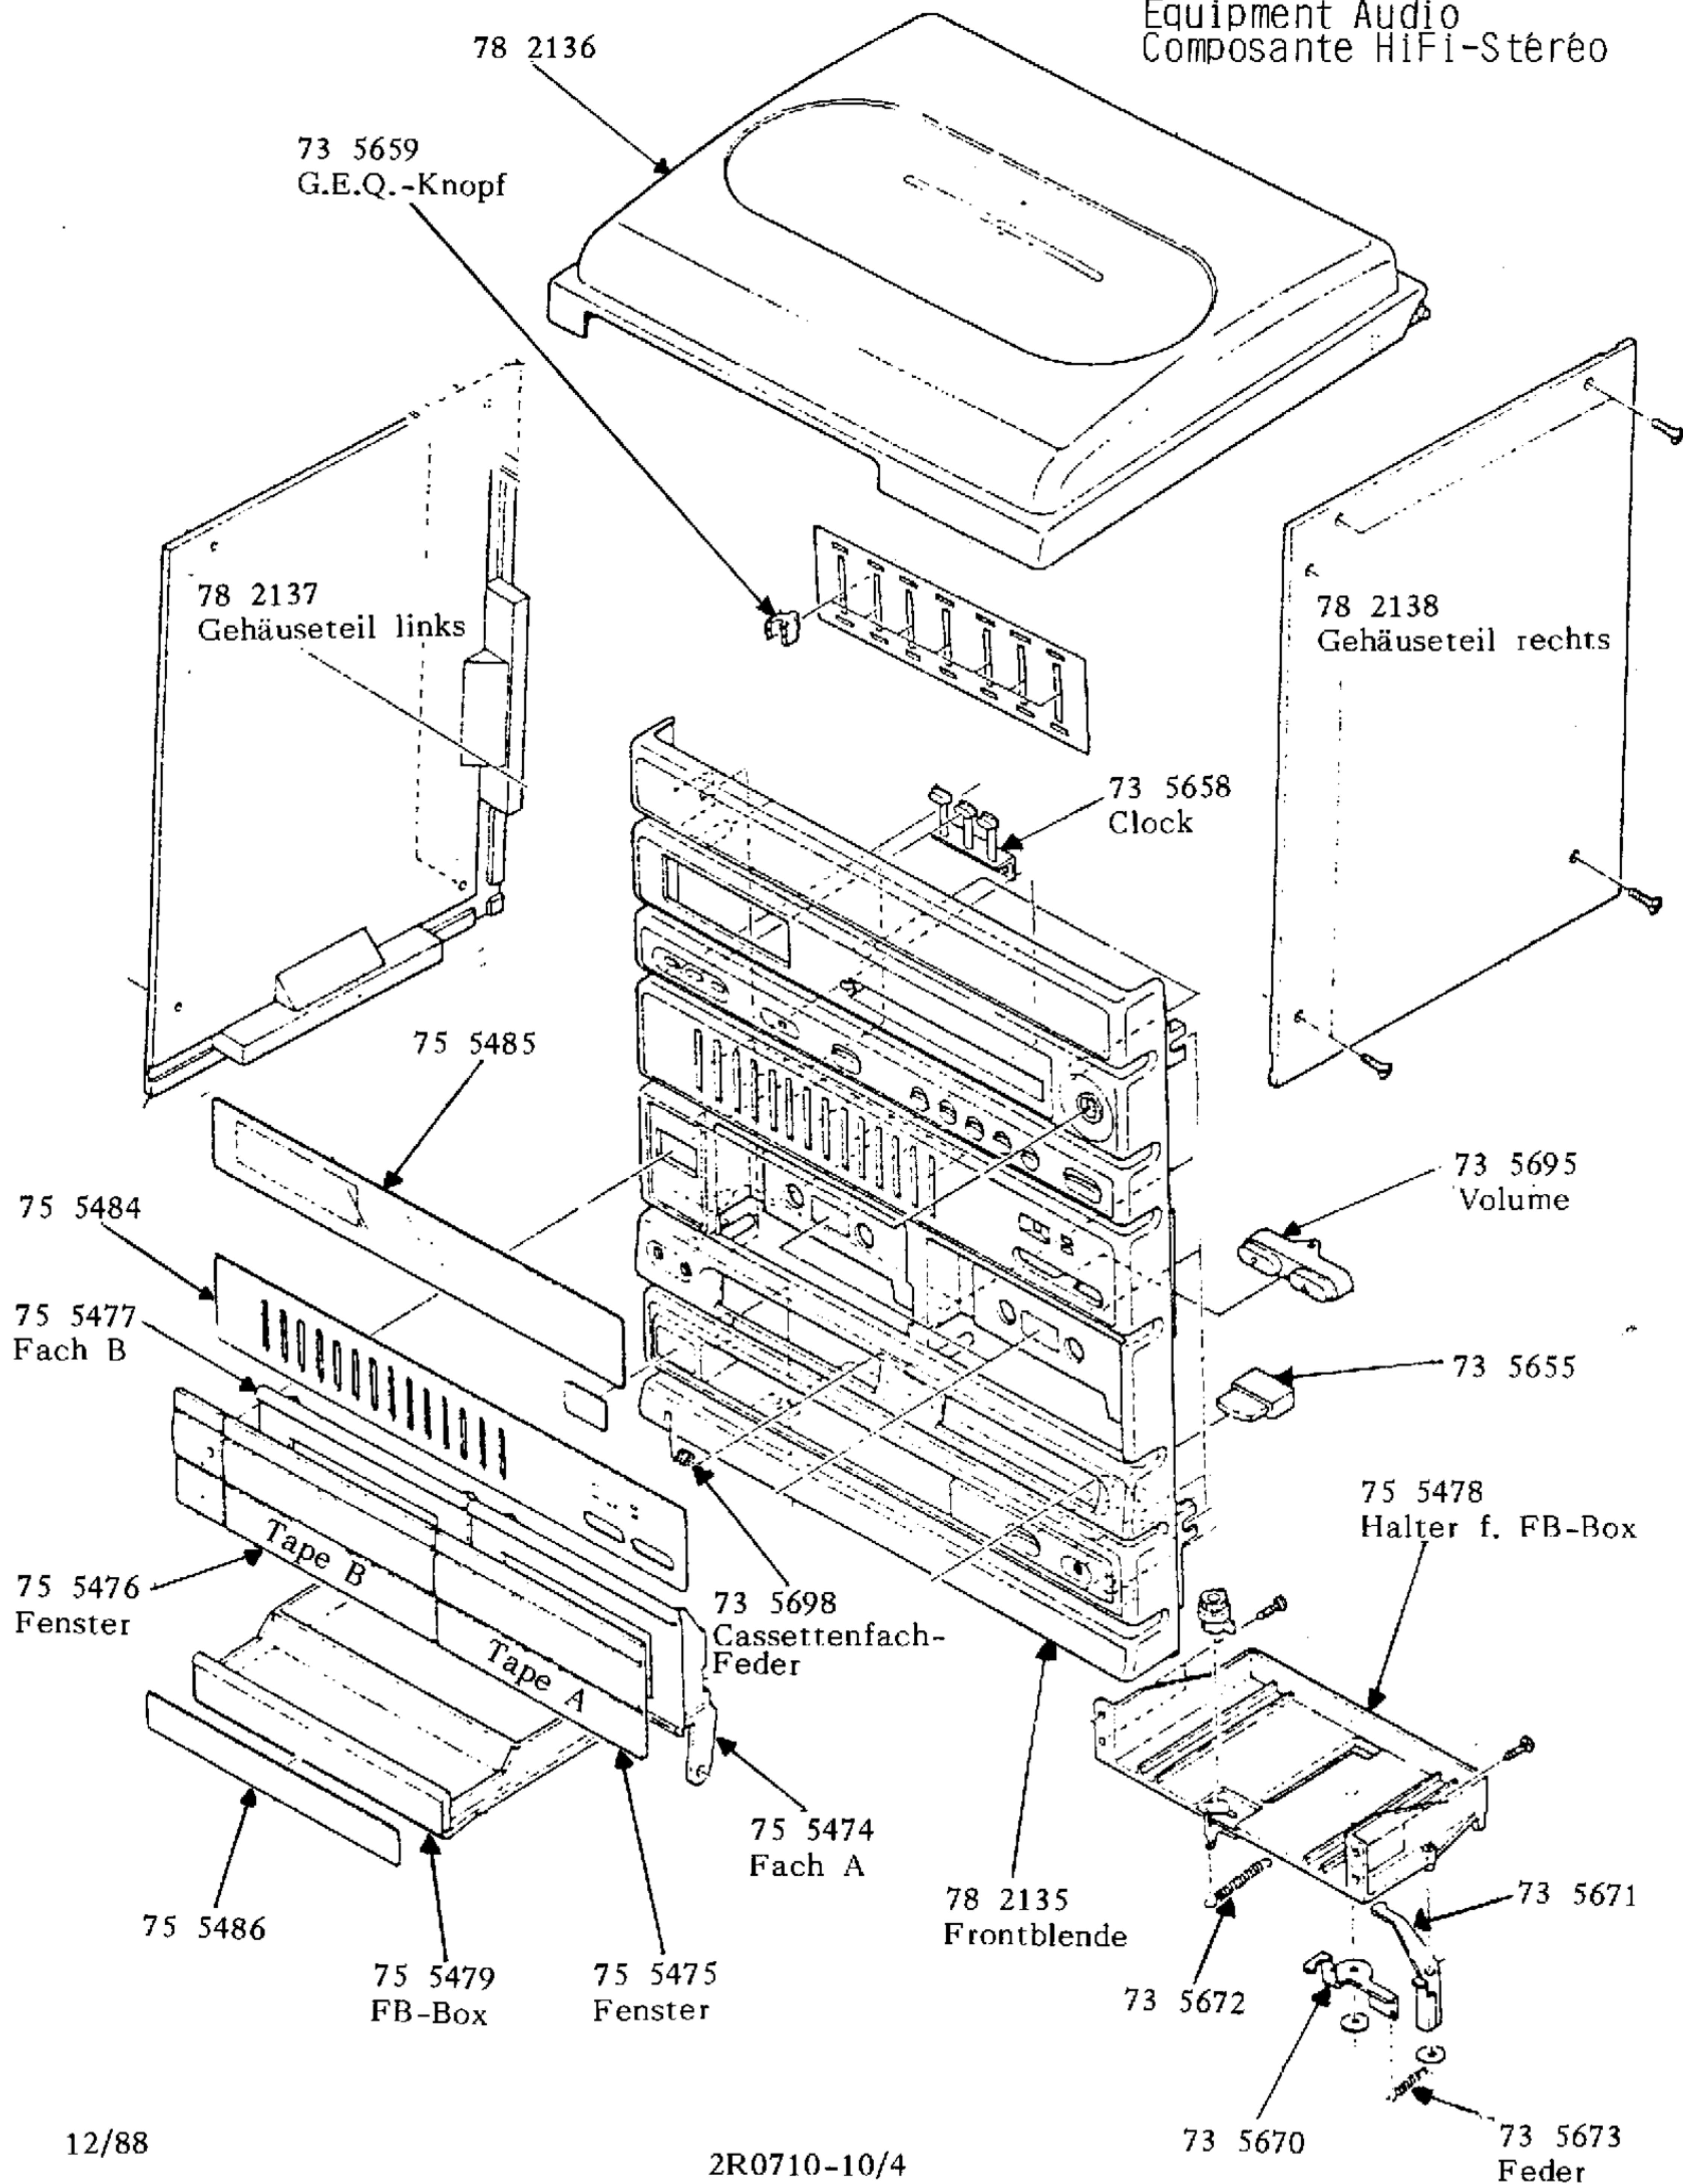


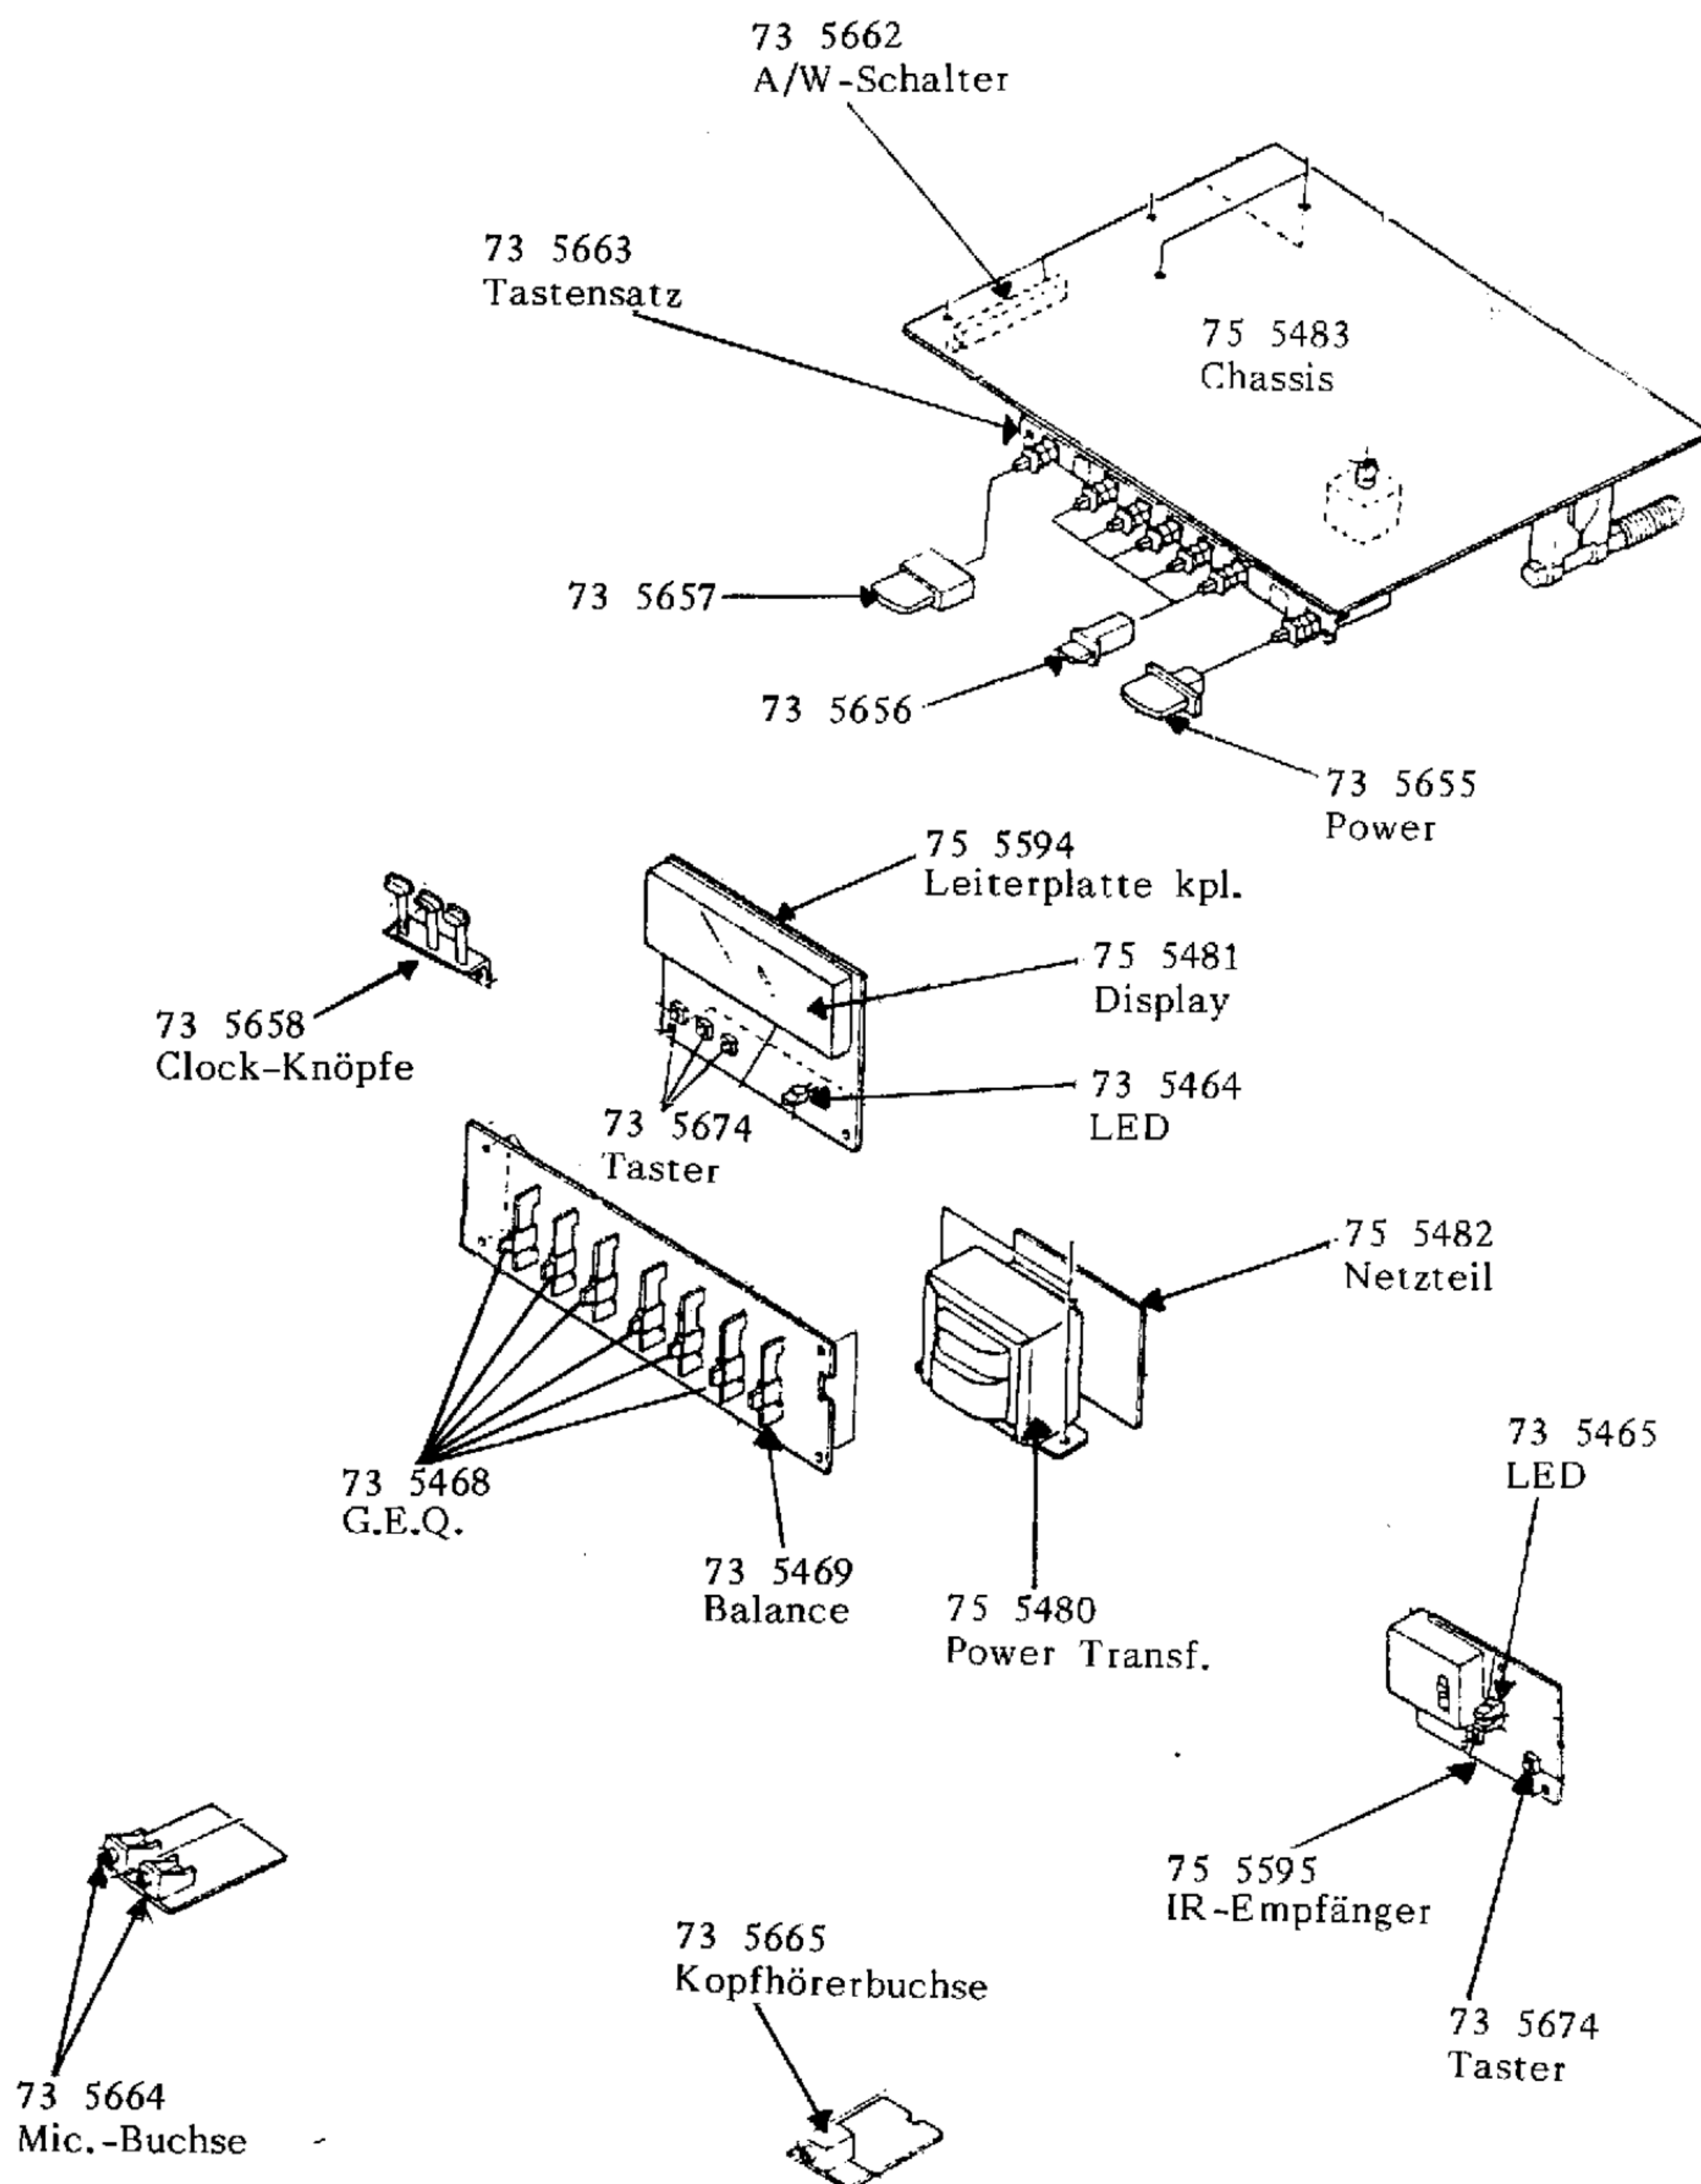


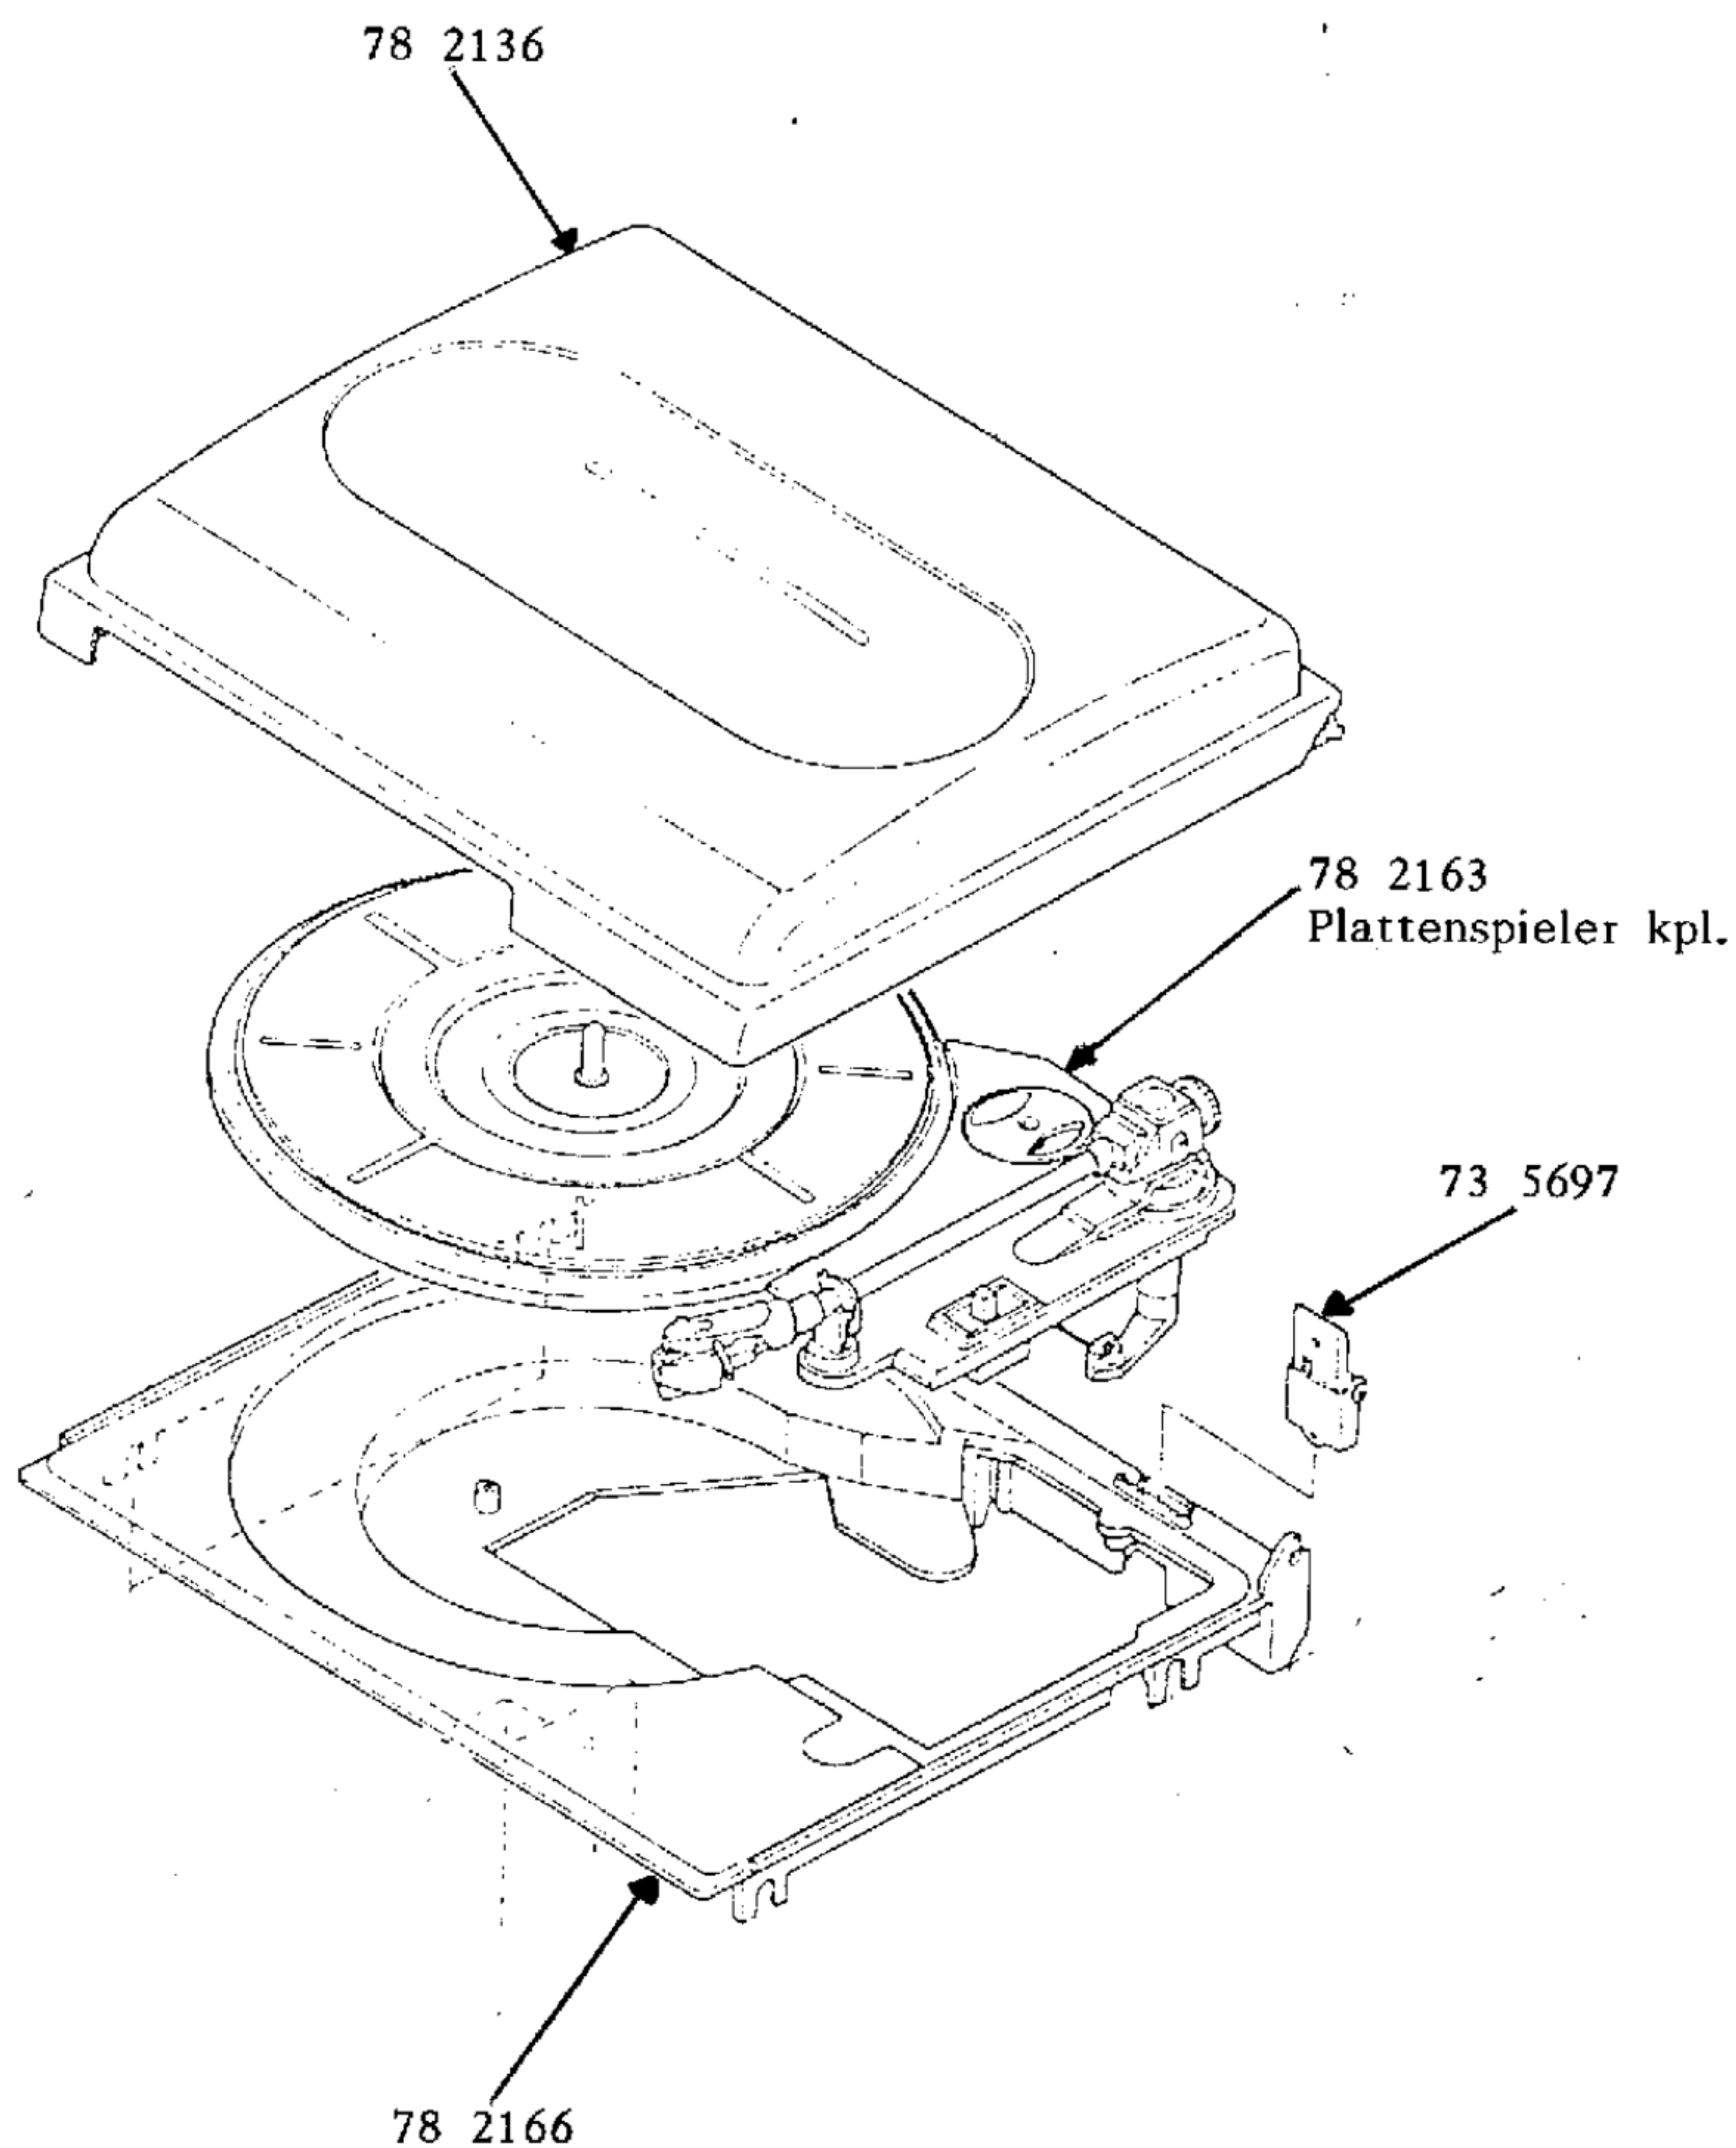

78 2163
Plattenspieler kpl.

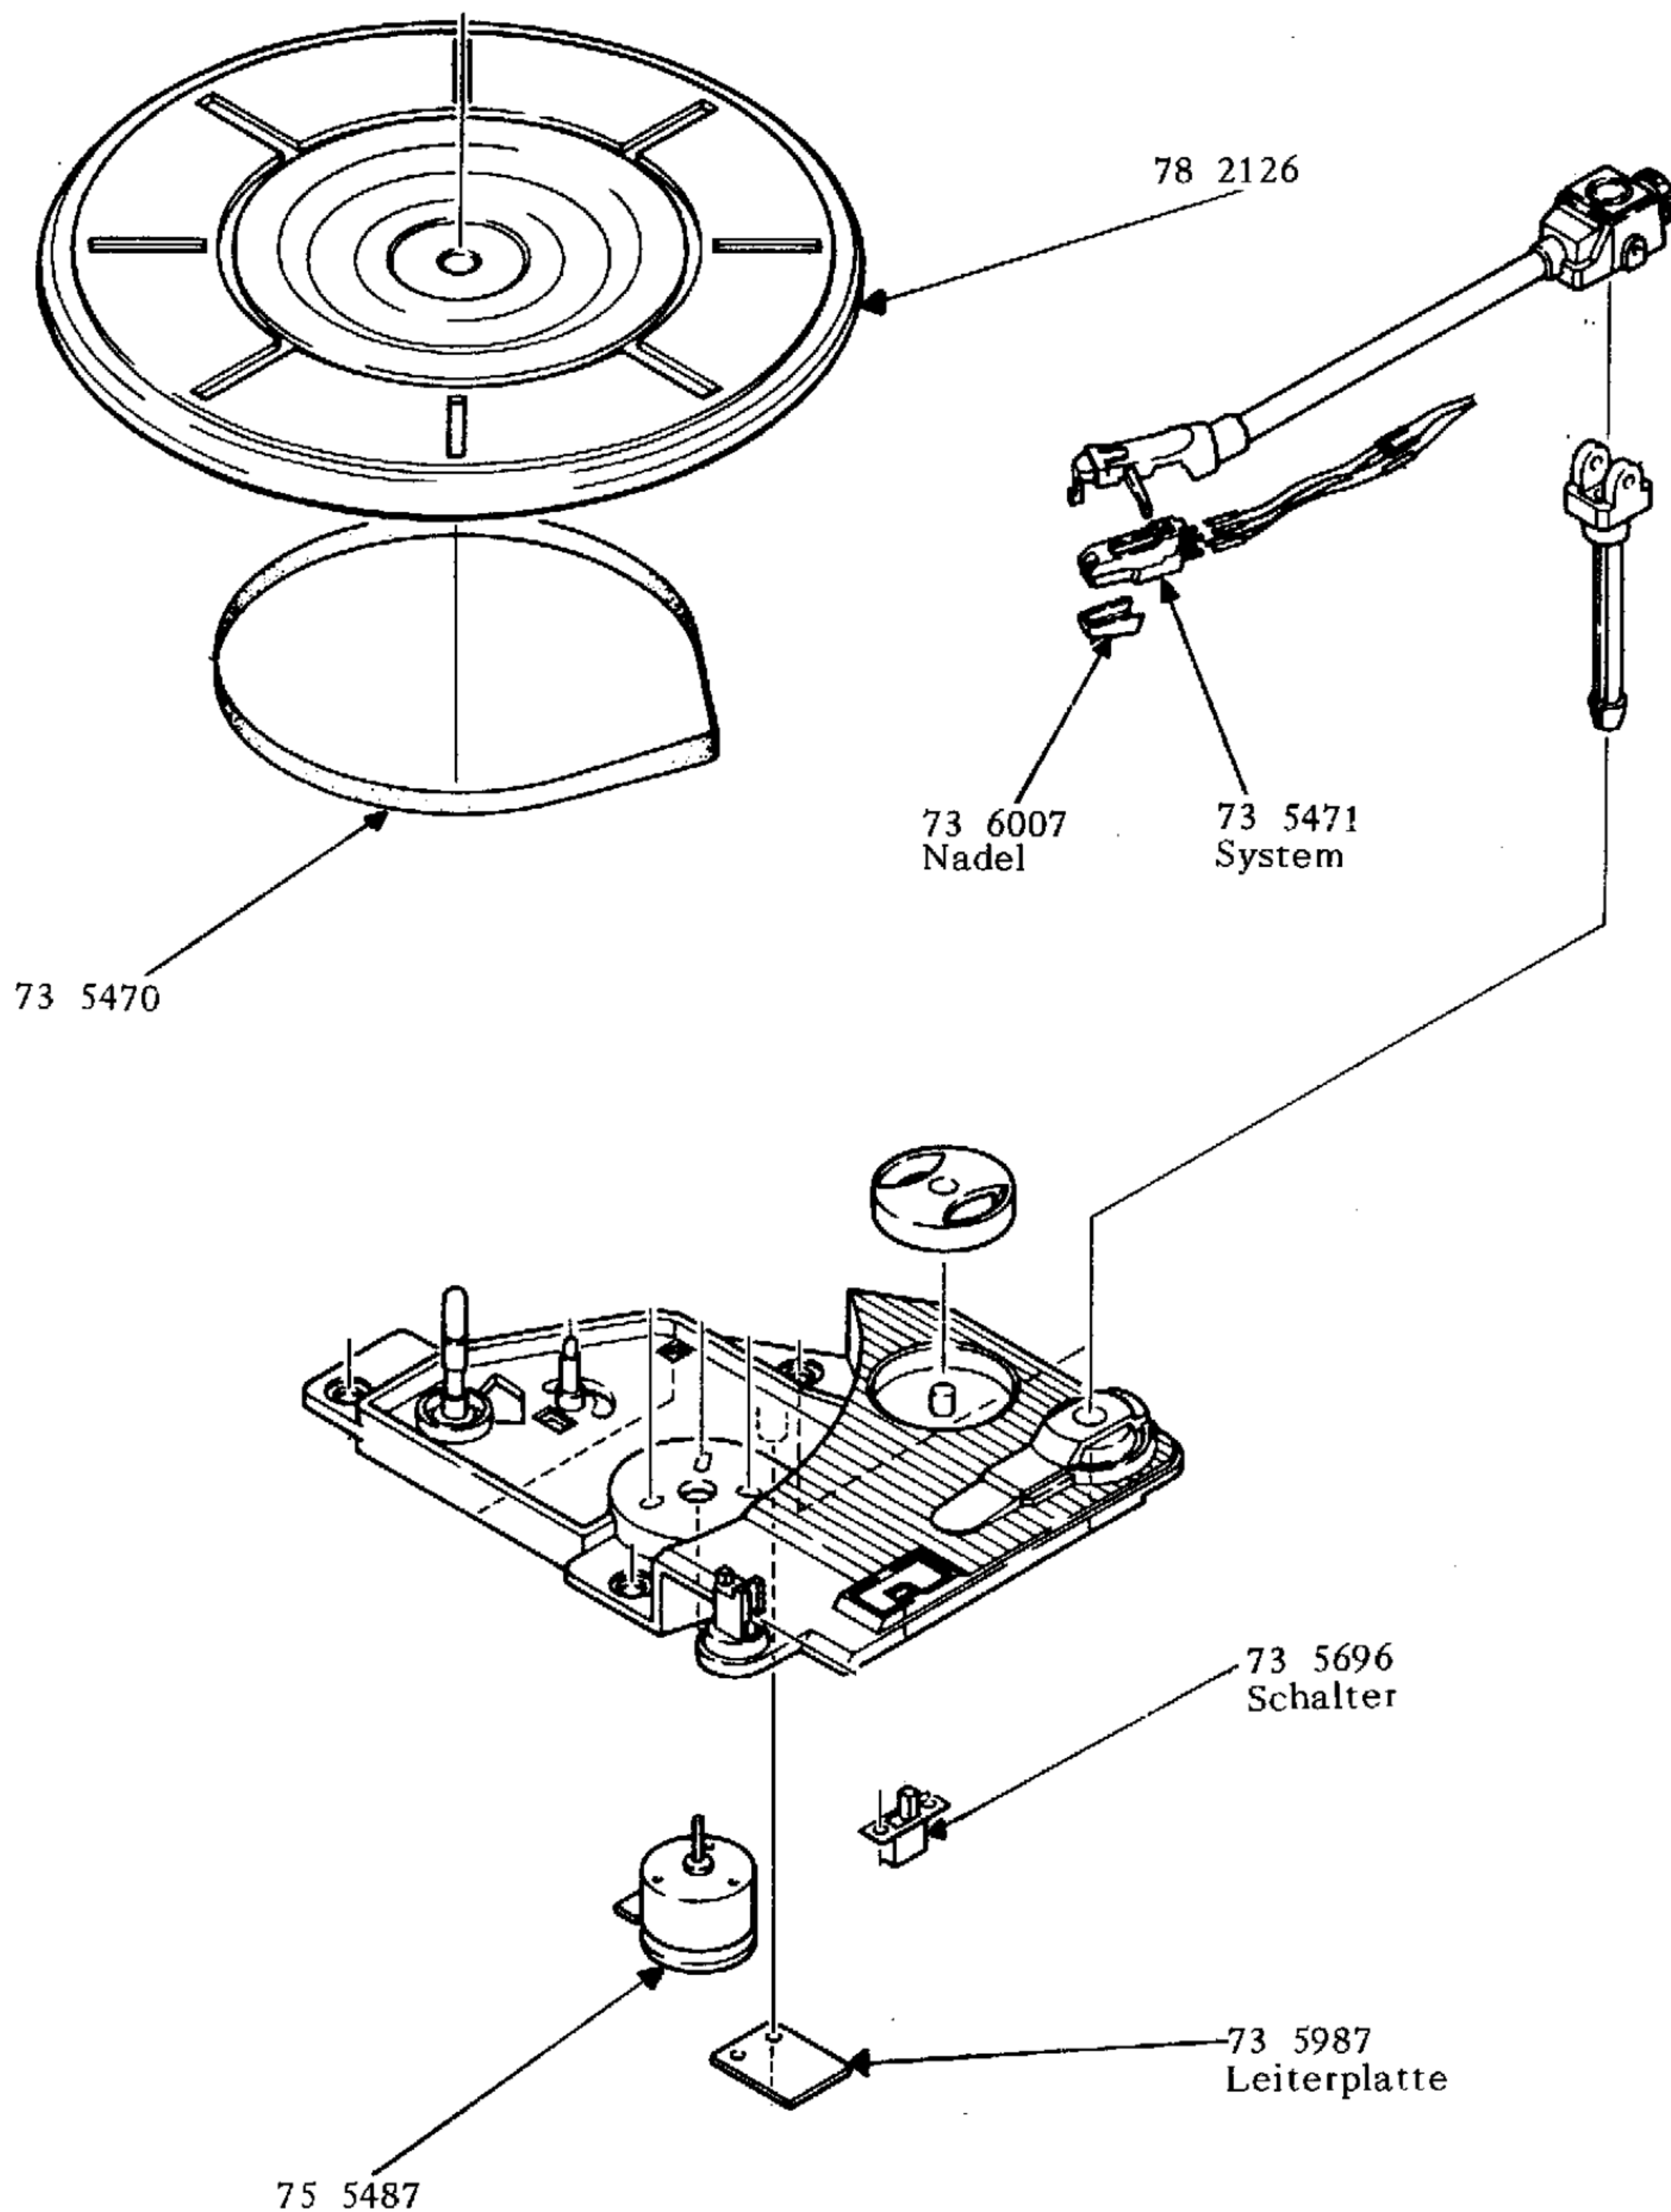 

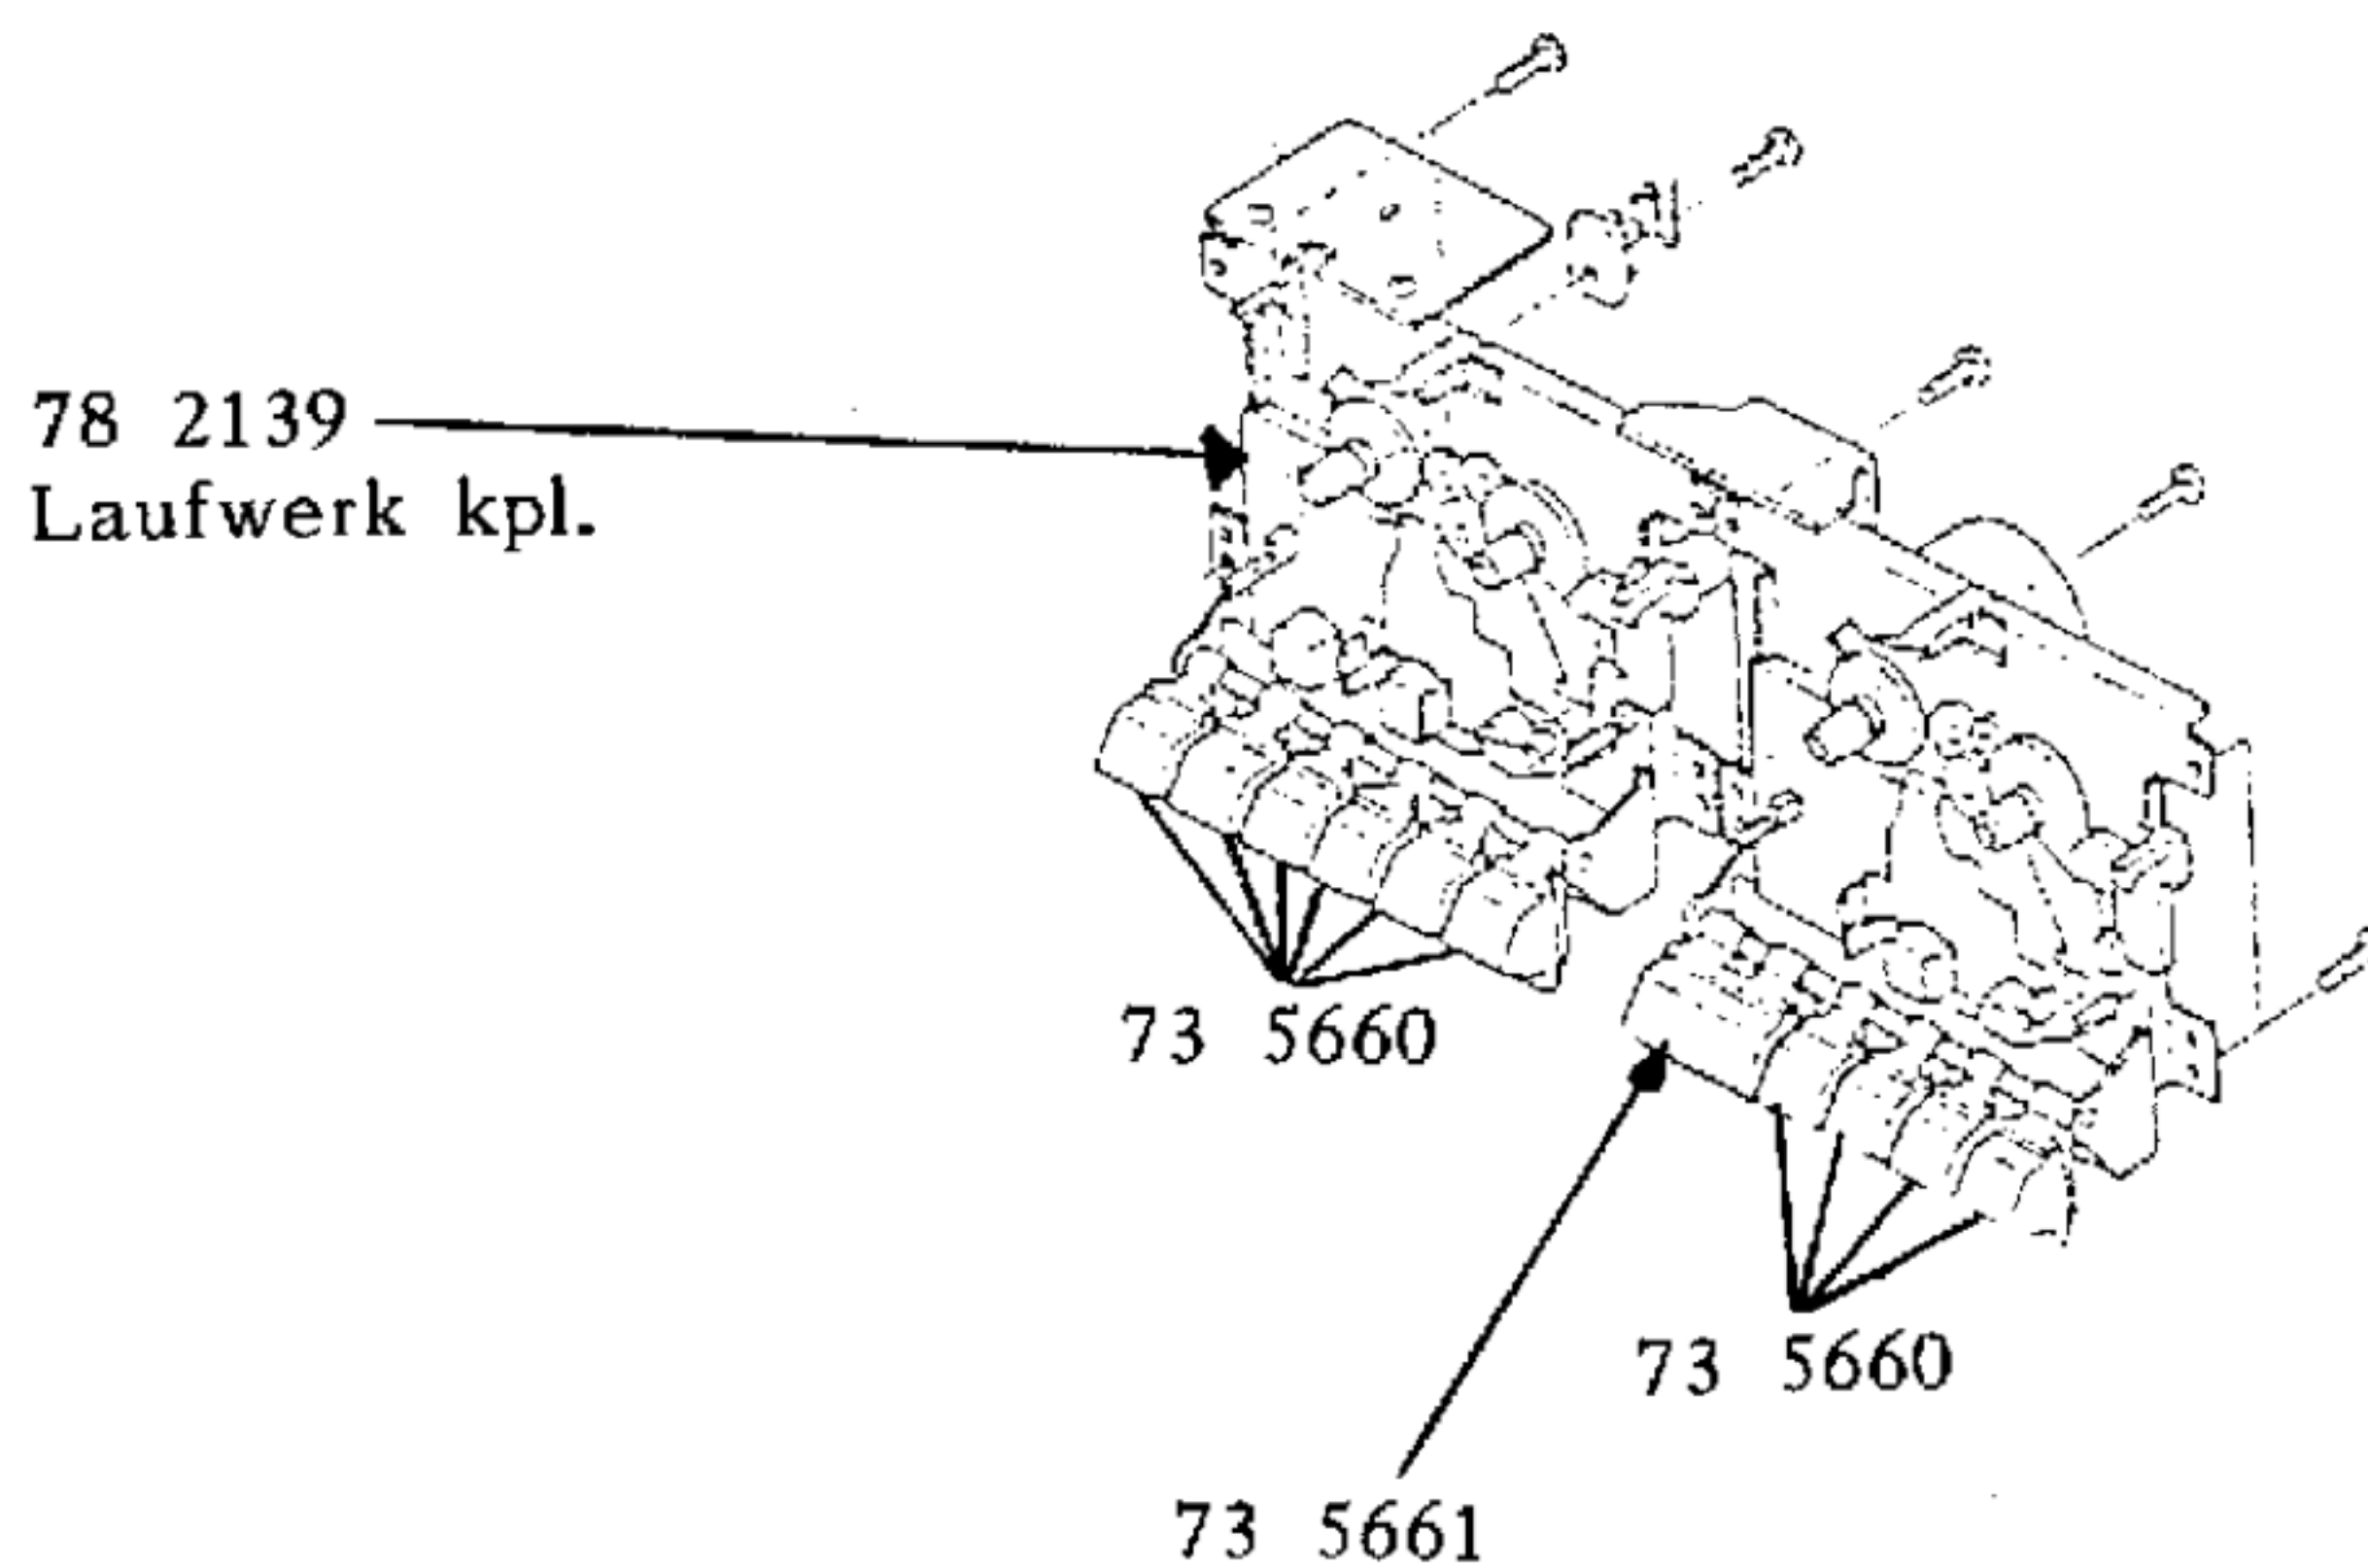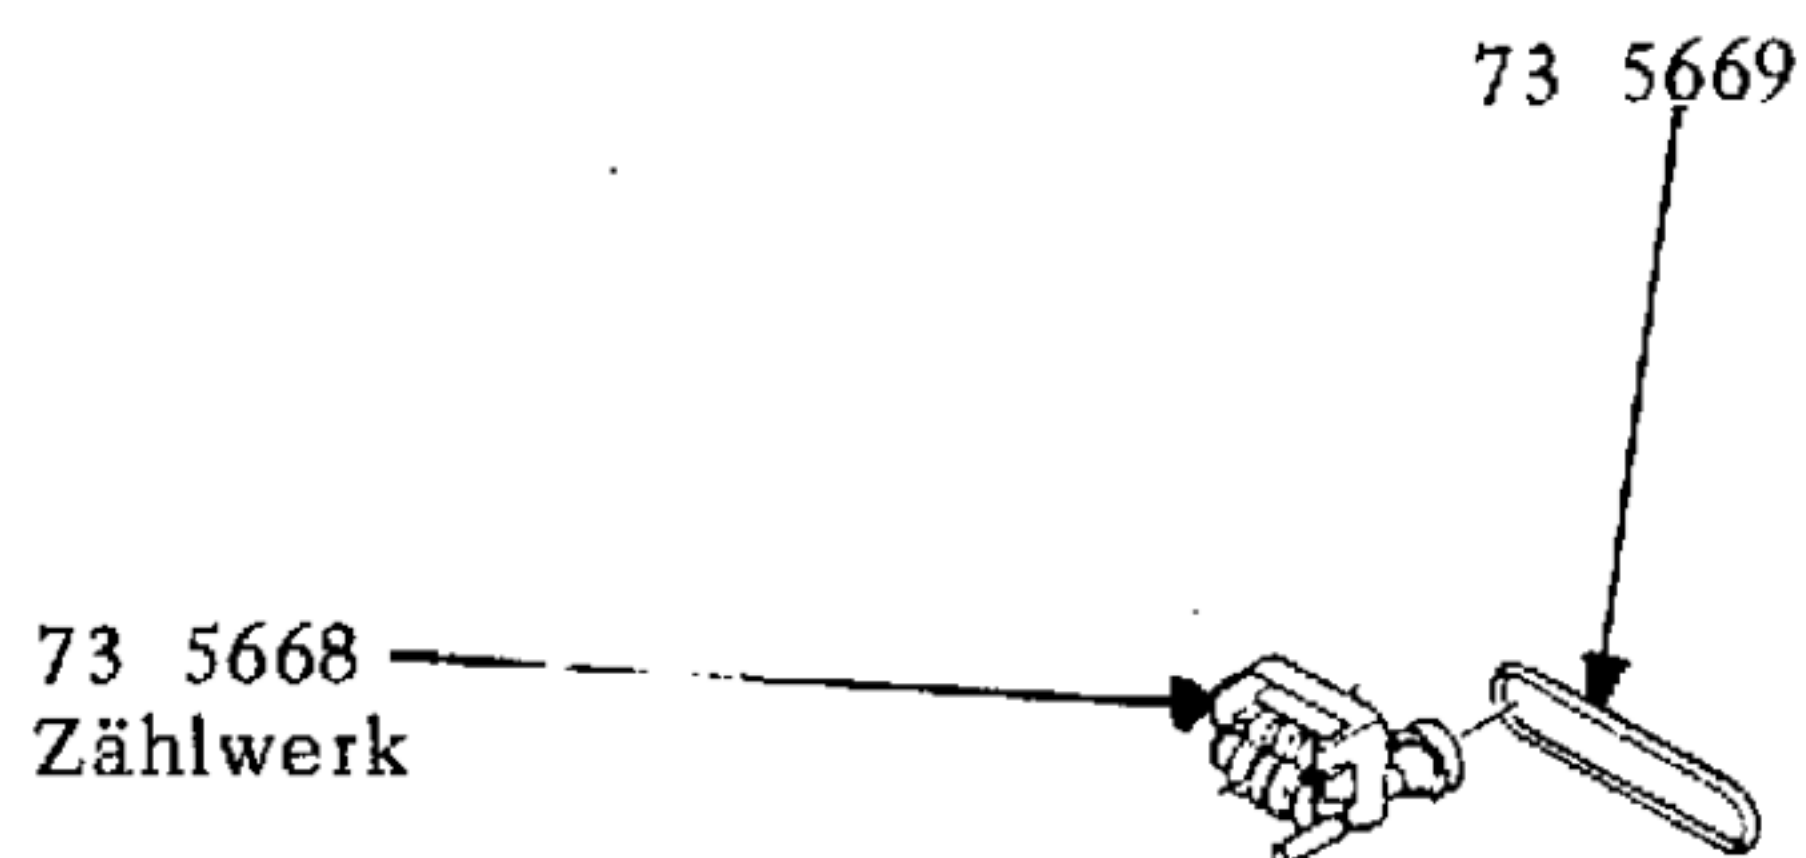  

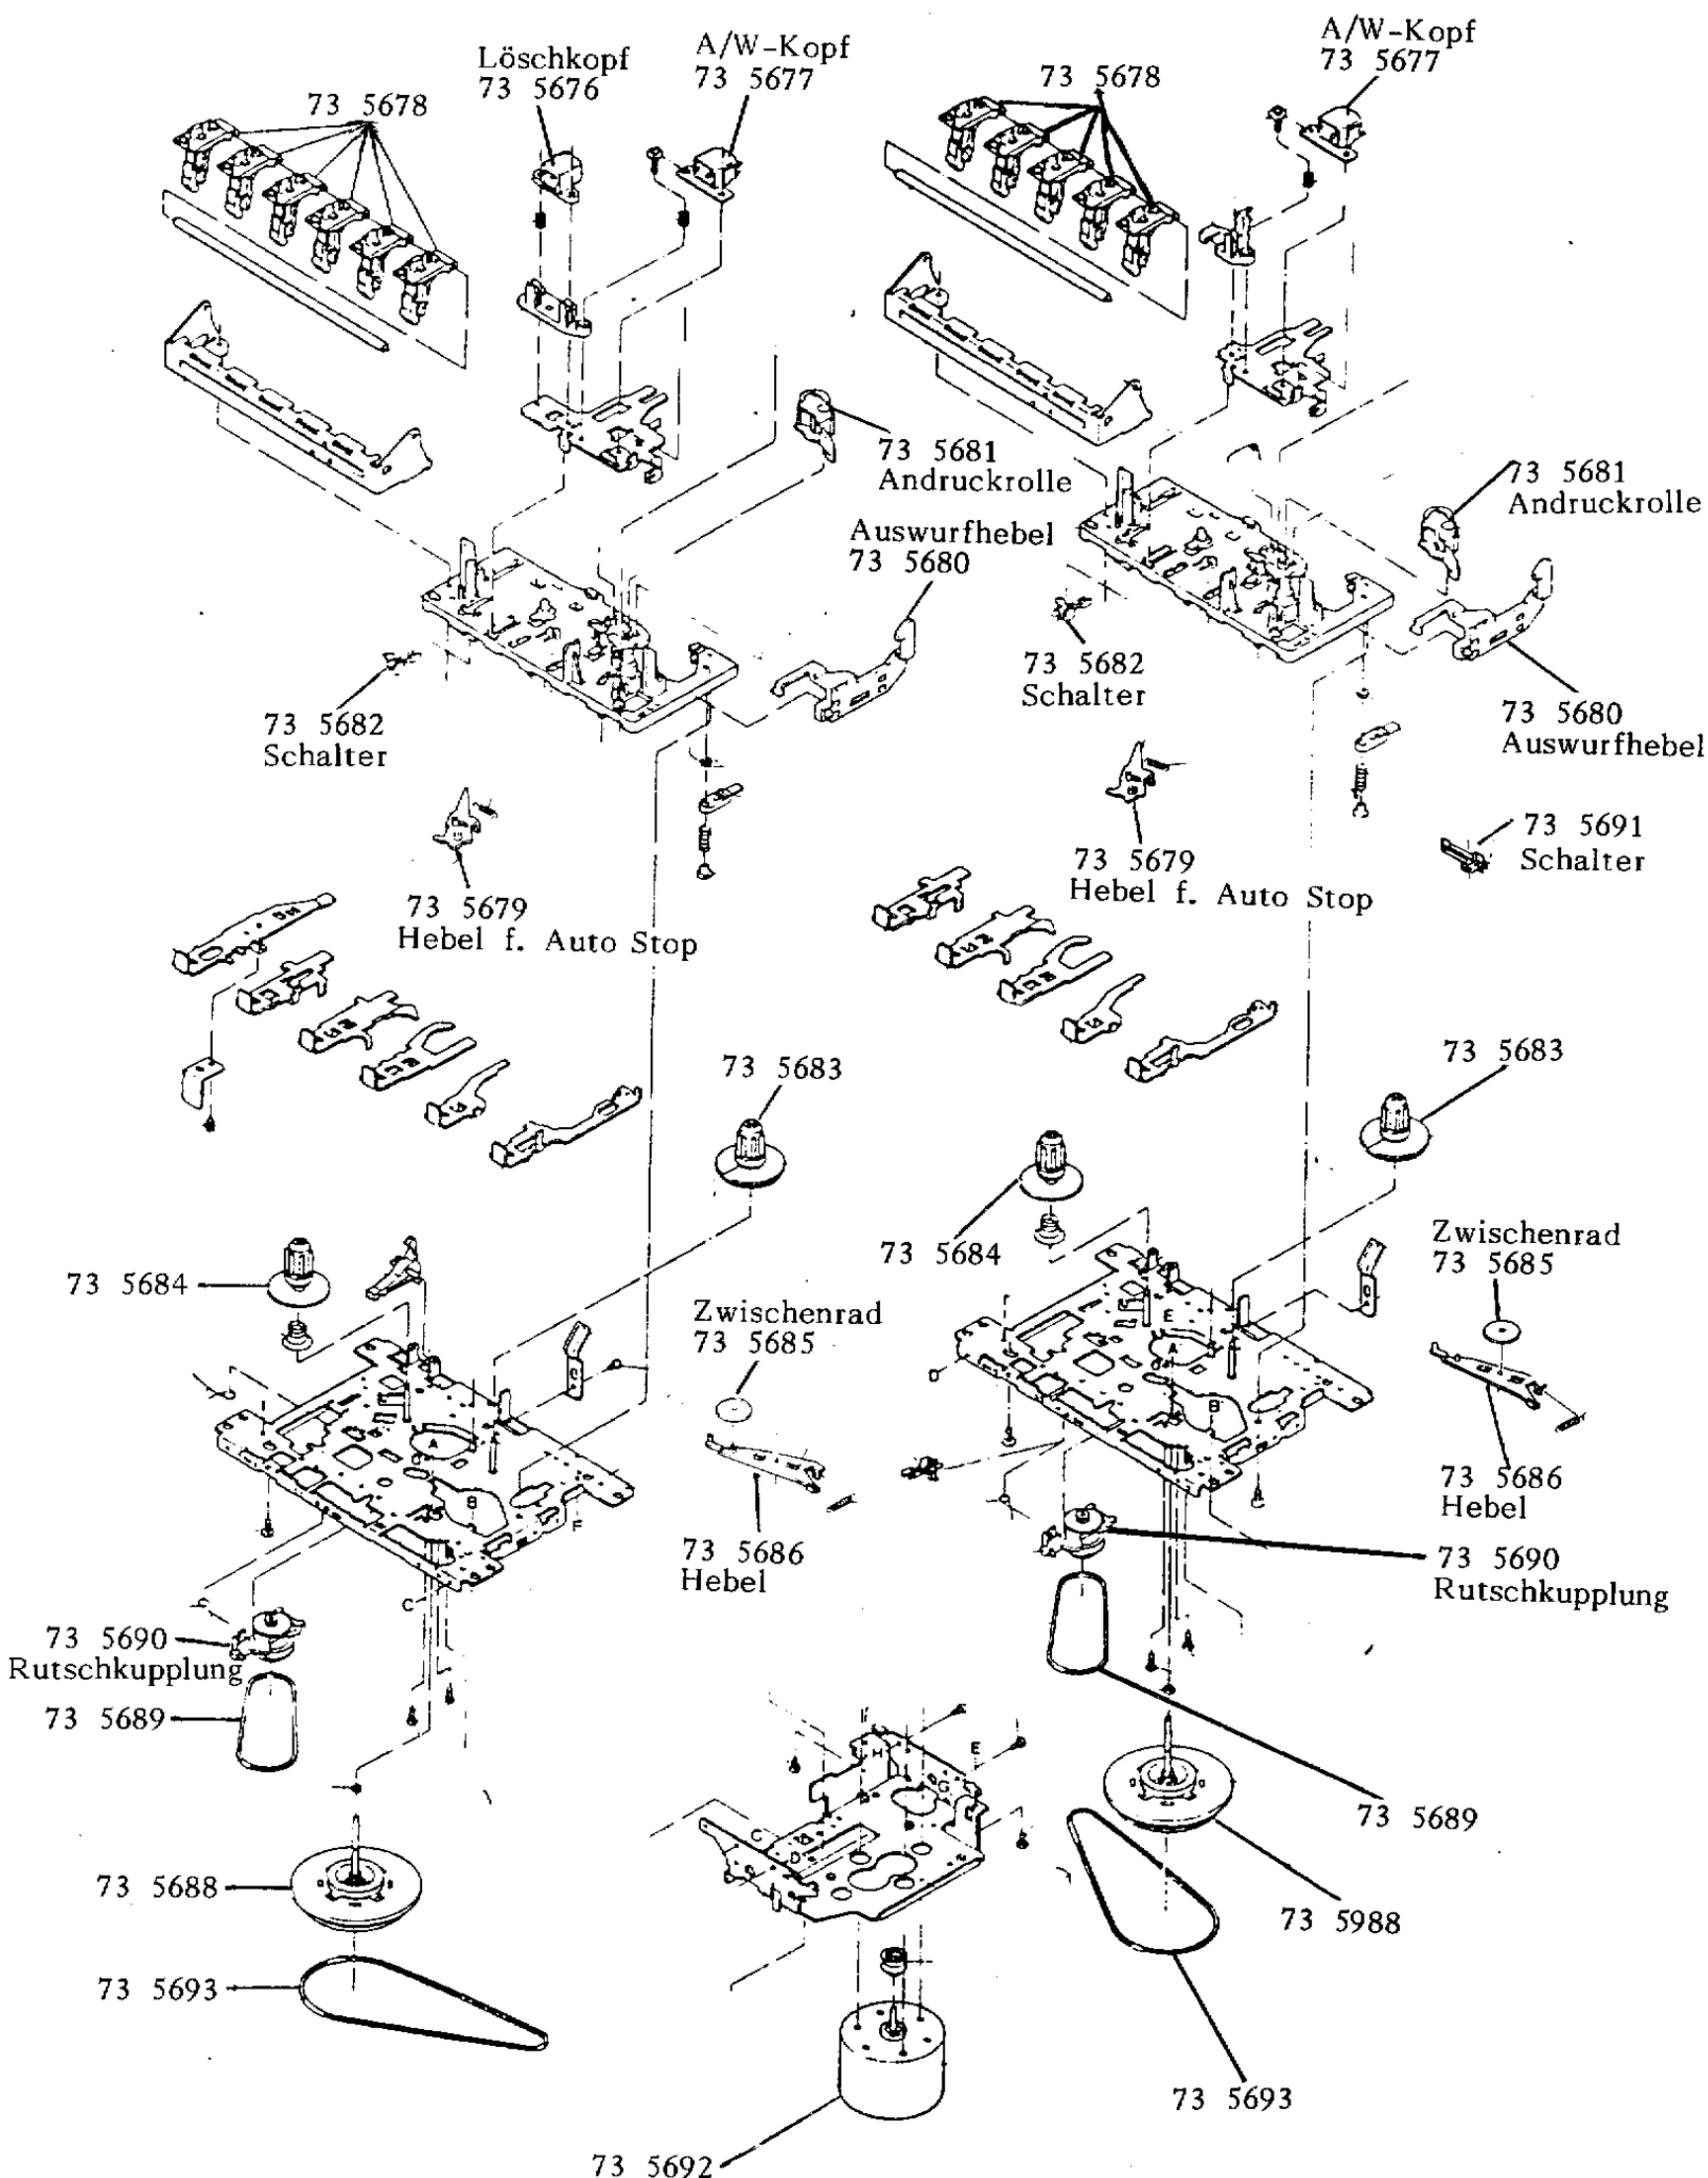 

SIEMENS

RS150R4
RS151R4

AUDIOGERÄTE
HIFI-STEREO-KOMPONENTE
Audio Equipment
HiFi-Stereo-Component
Equipment Audio
Composante HiFi-Stéréo

Pos. Item Pos.	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
	53 0510 53 0510	Gebrauchsanweisung RS150R4 RS151R4	instruction manual instruction d'emploi
	53 5276	Service-Druckschrift	service-booklet brochure service