 


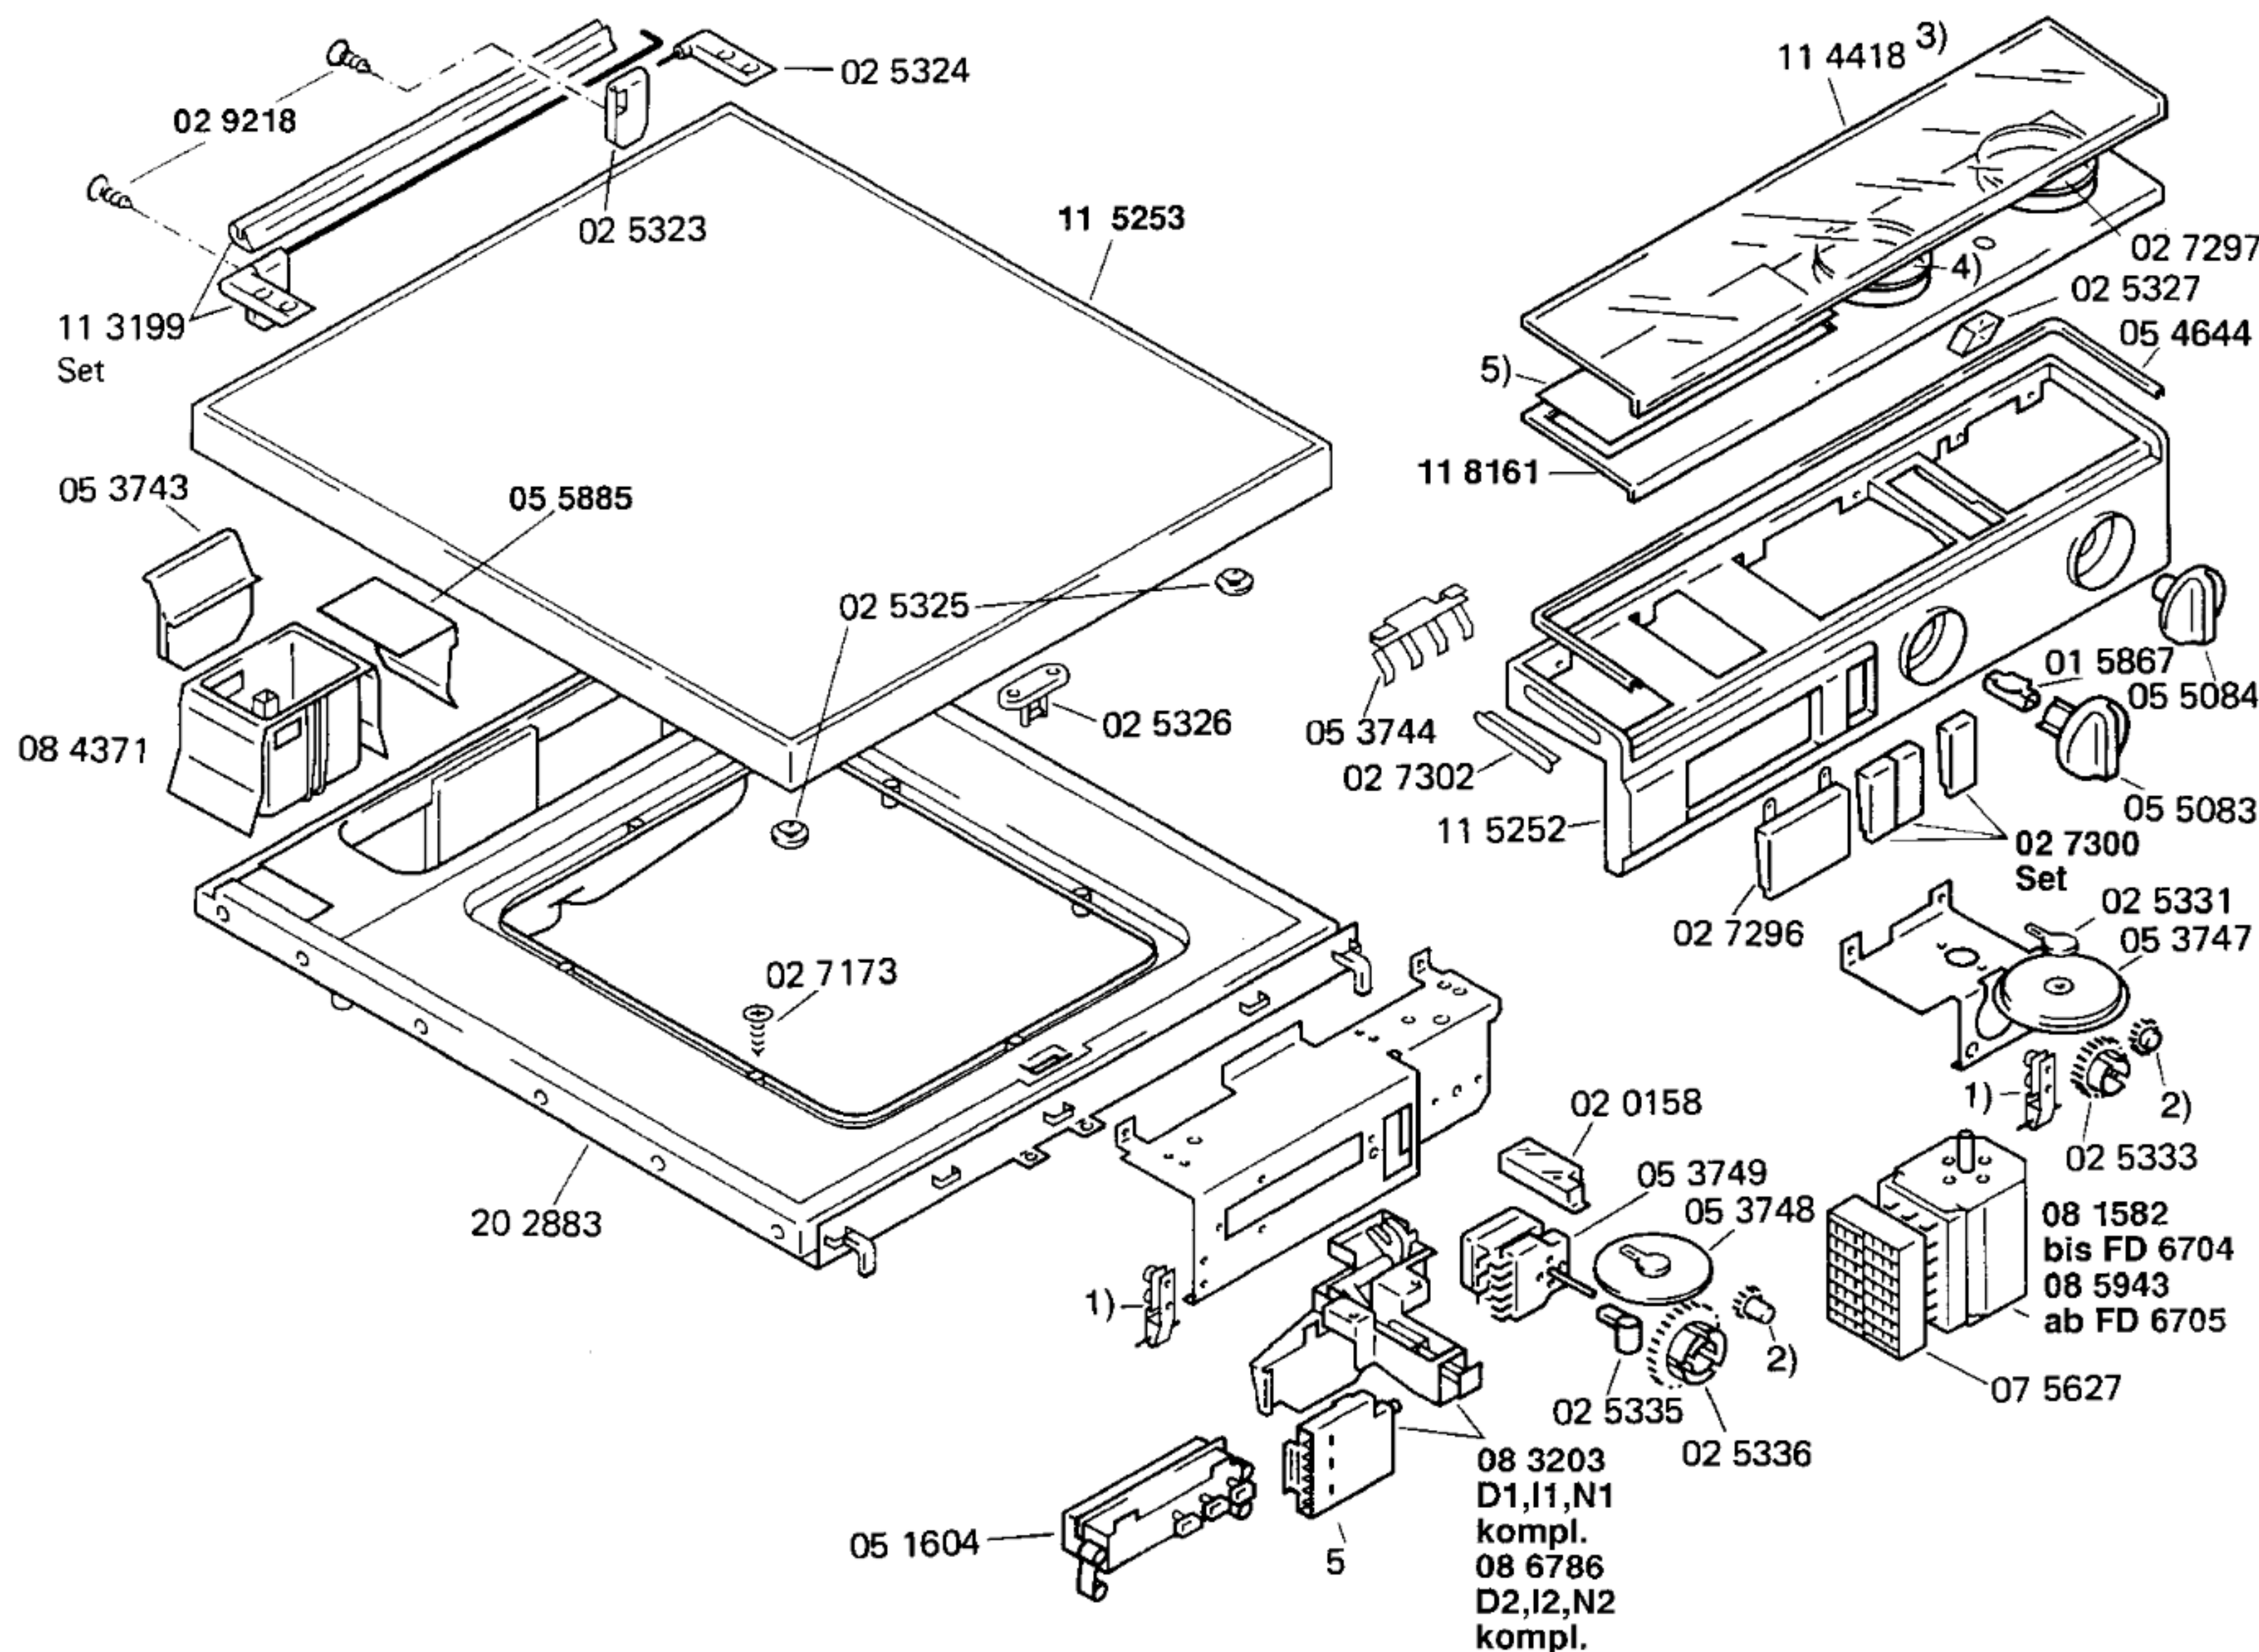

Aufstellanweisungen

51 3182
(D,GB,F,I,NL,E)
51 1674
(D,I,S,DK,N,SF)

 
Gebrauchsanweisungen

 
51 3321
(D,GB,F,I,NL,E)
51 3180
(D,I,S,DK,N,SF)

Programmtabellen

51 3177
(D,I,S,DK,N,SF)
51 3178
(D,GB,F,I,NL,E)

- 1) 02 5334
- 2) 02 5332
- 3) einschl. 05 4644
- 4) 02 8435
- 5) 08 5818
(D,Symbole)
08 5819
(F,NL)
08 5877
(SF,DK)
08 5878
(S,N)
08 5820
(I,GB)
08 5879
(E)

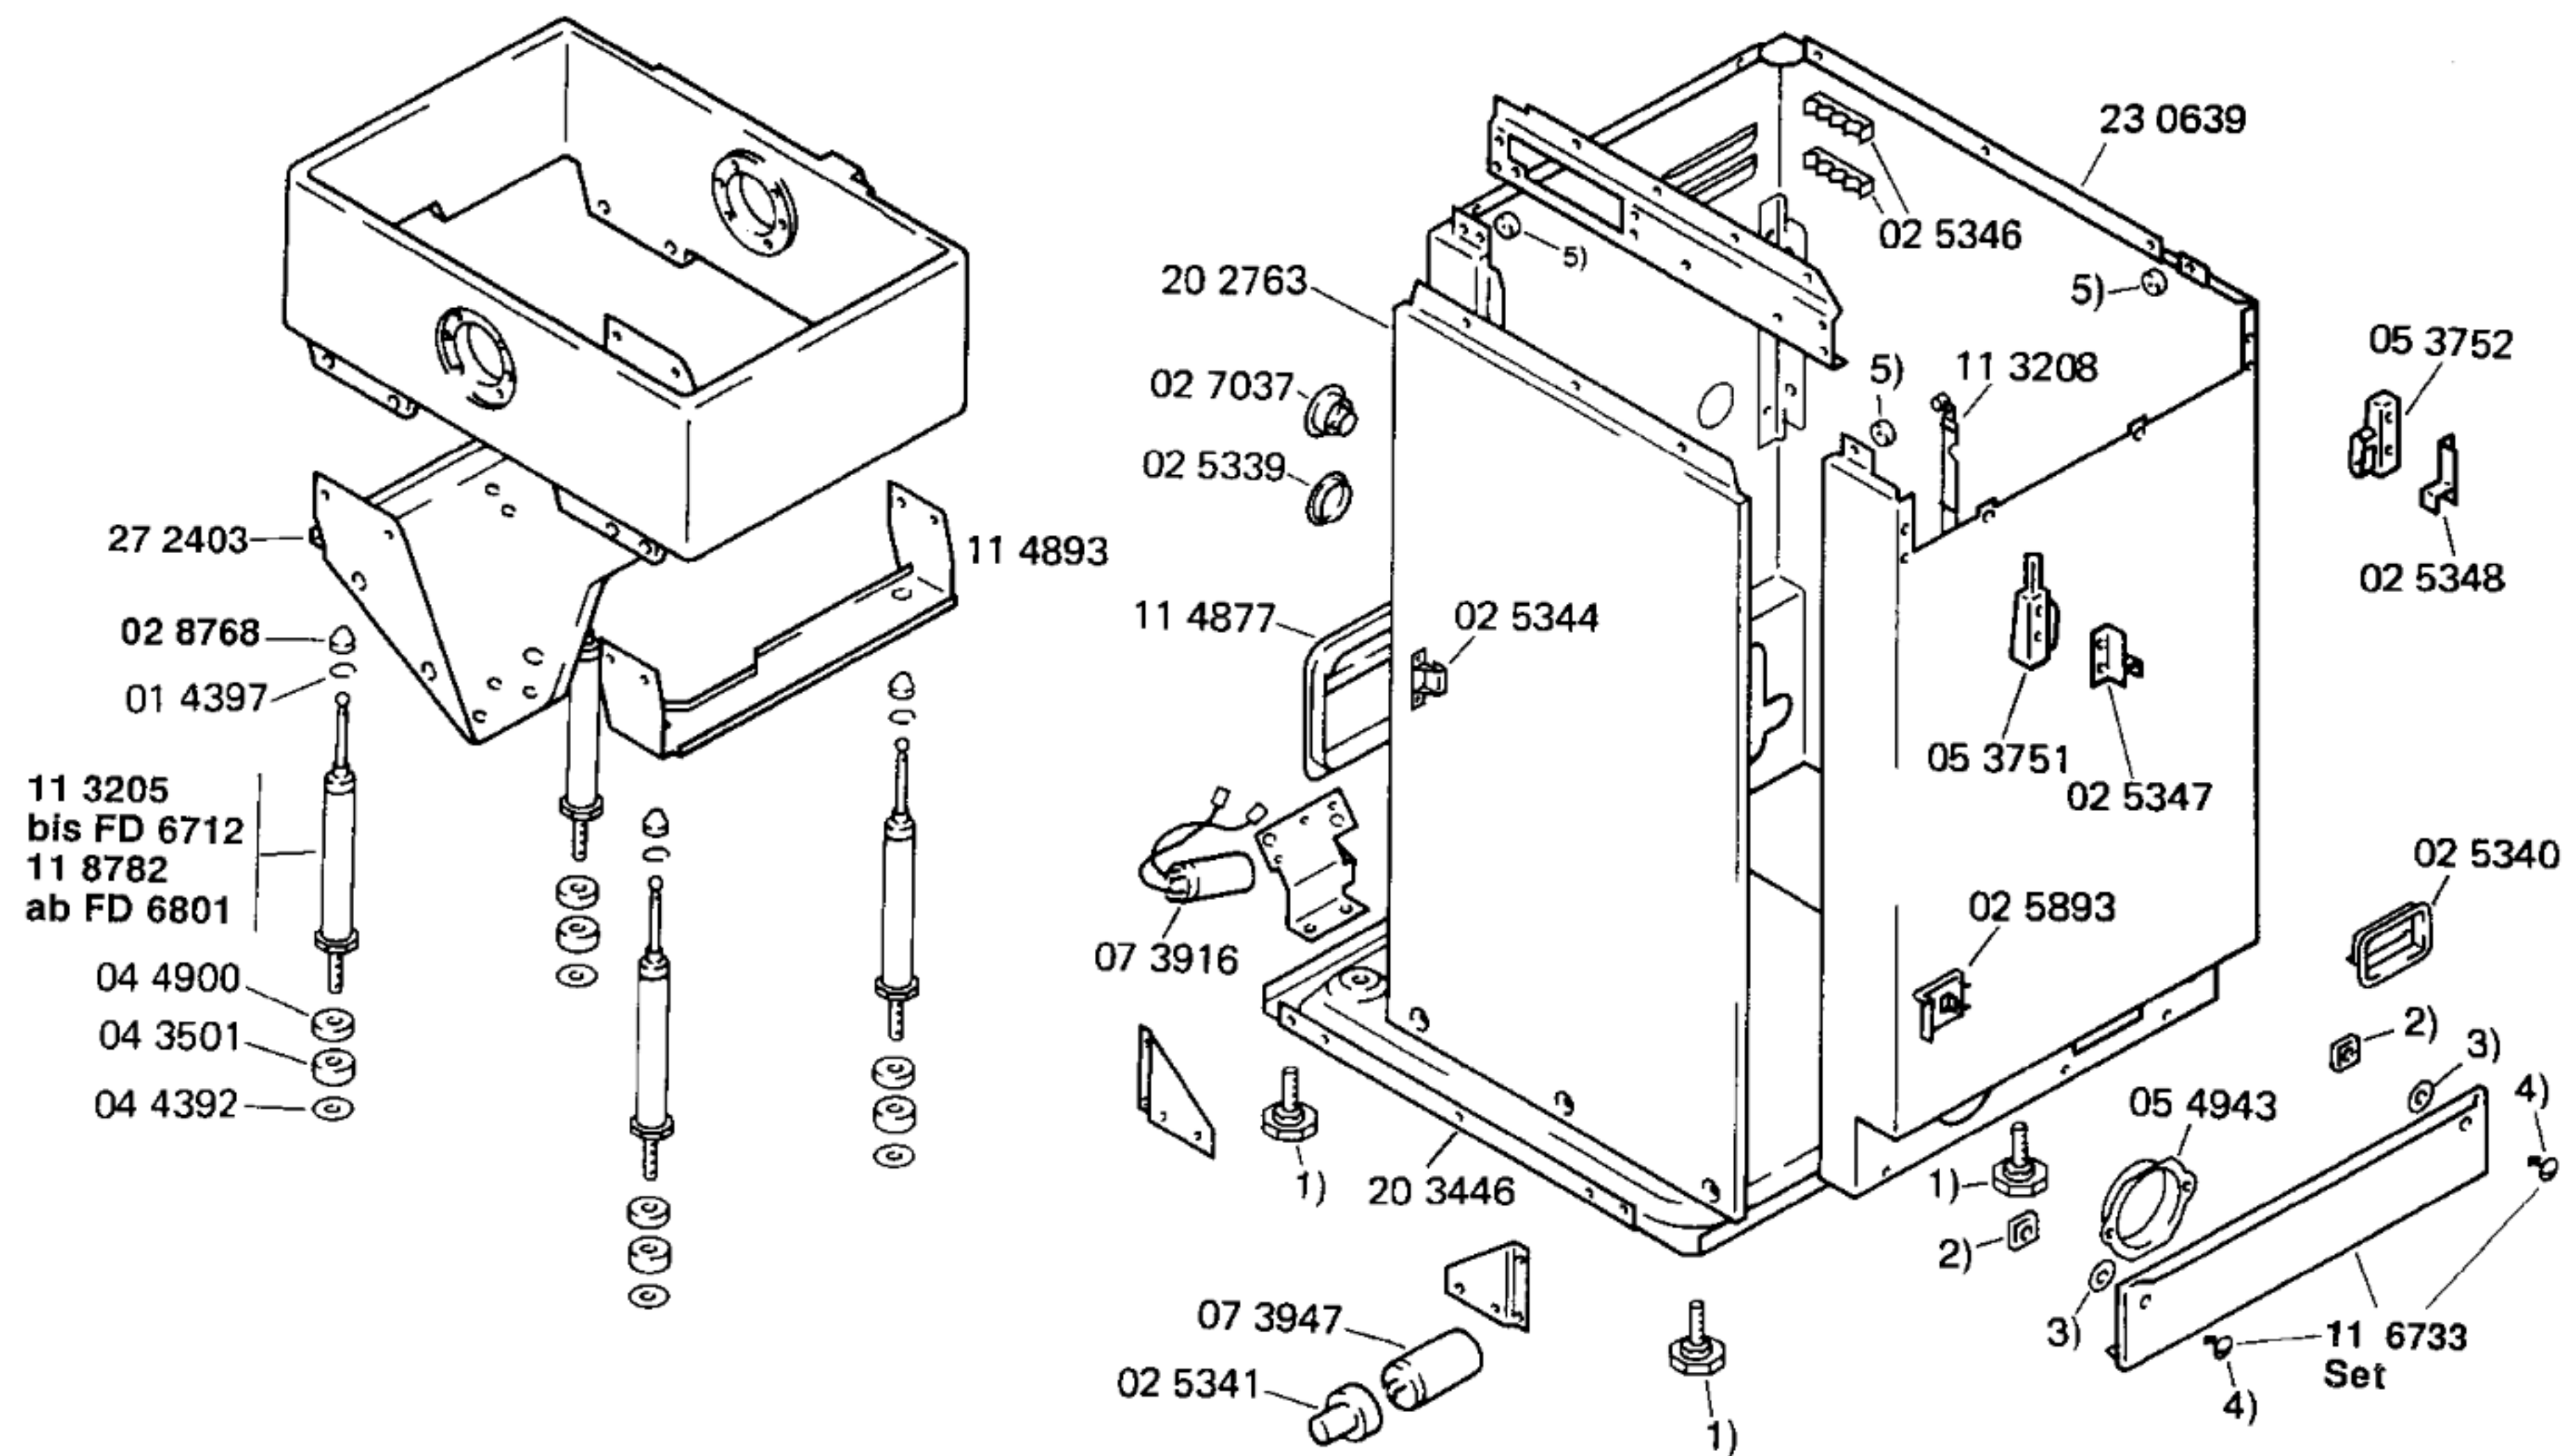

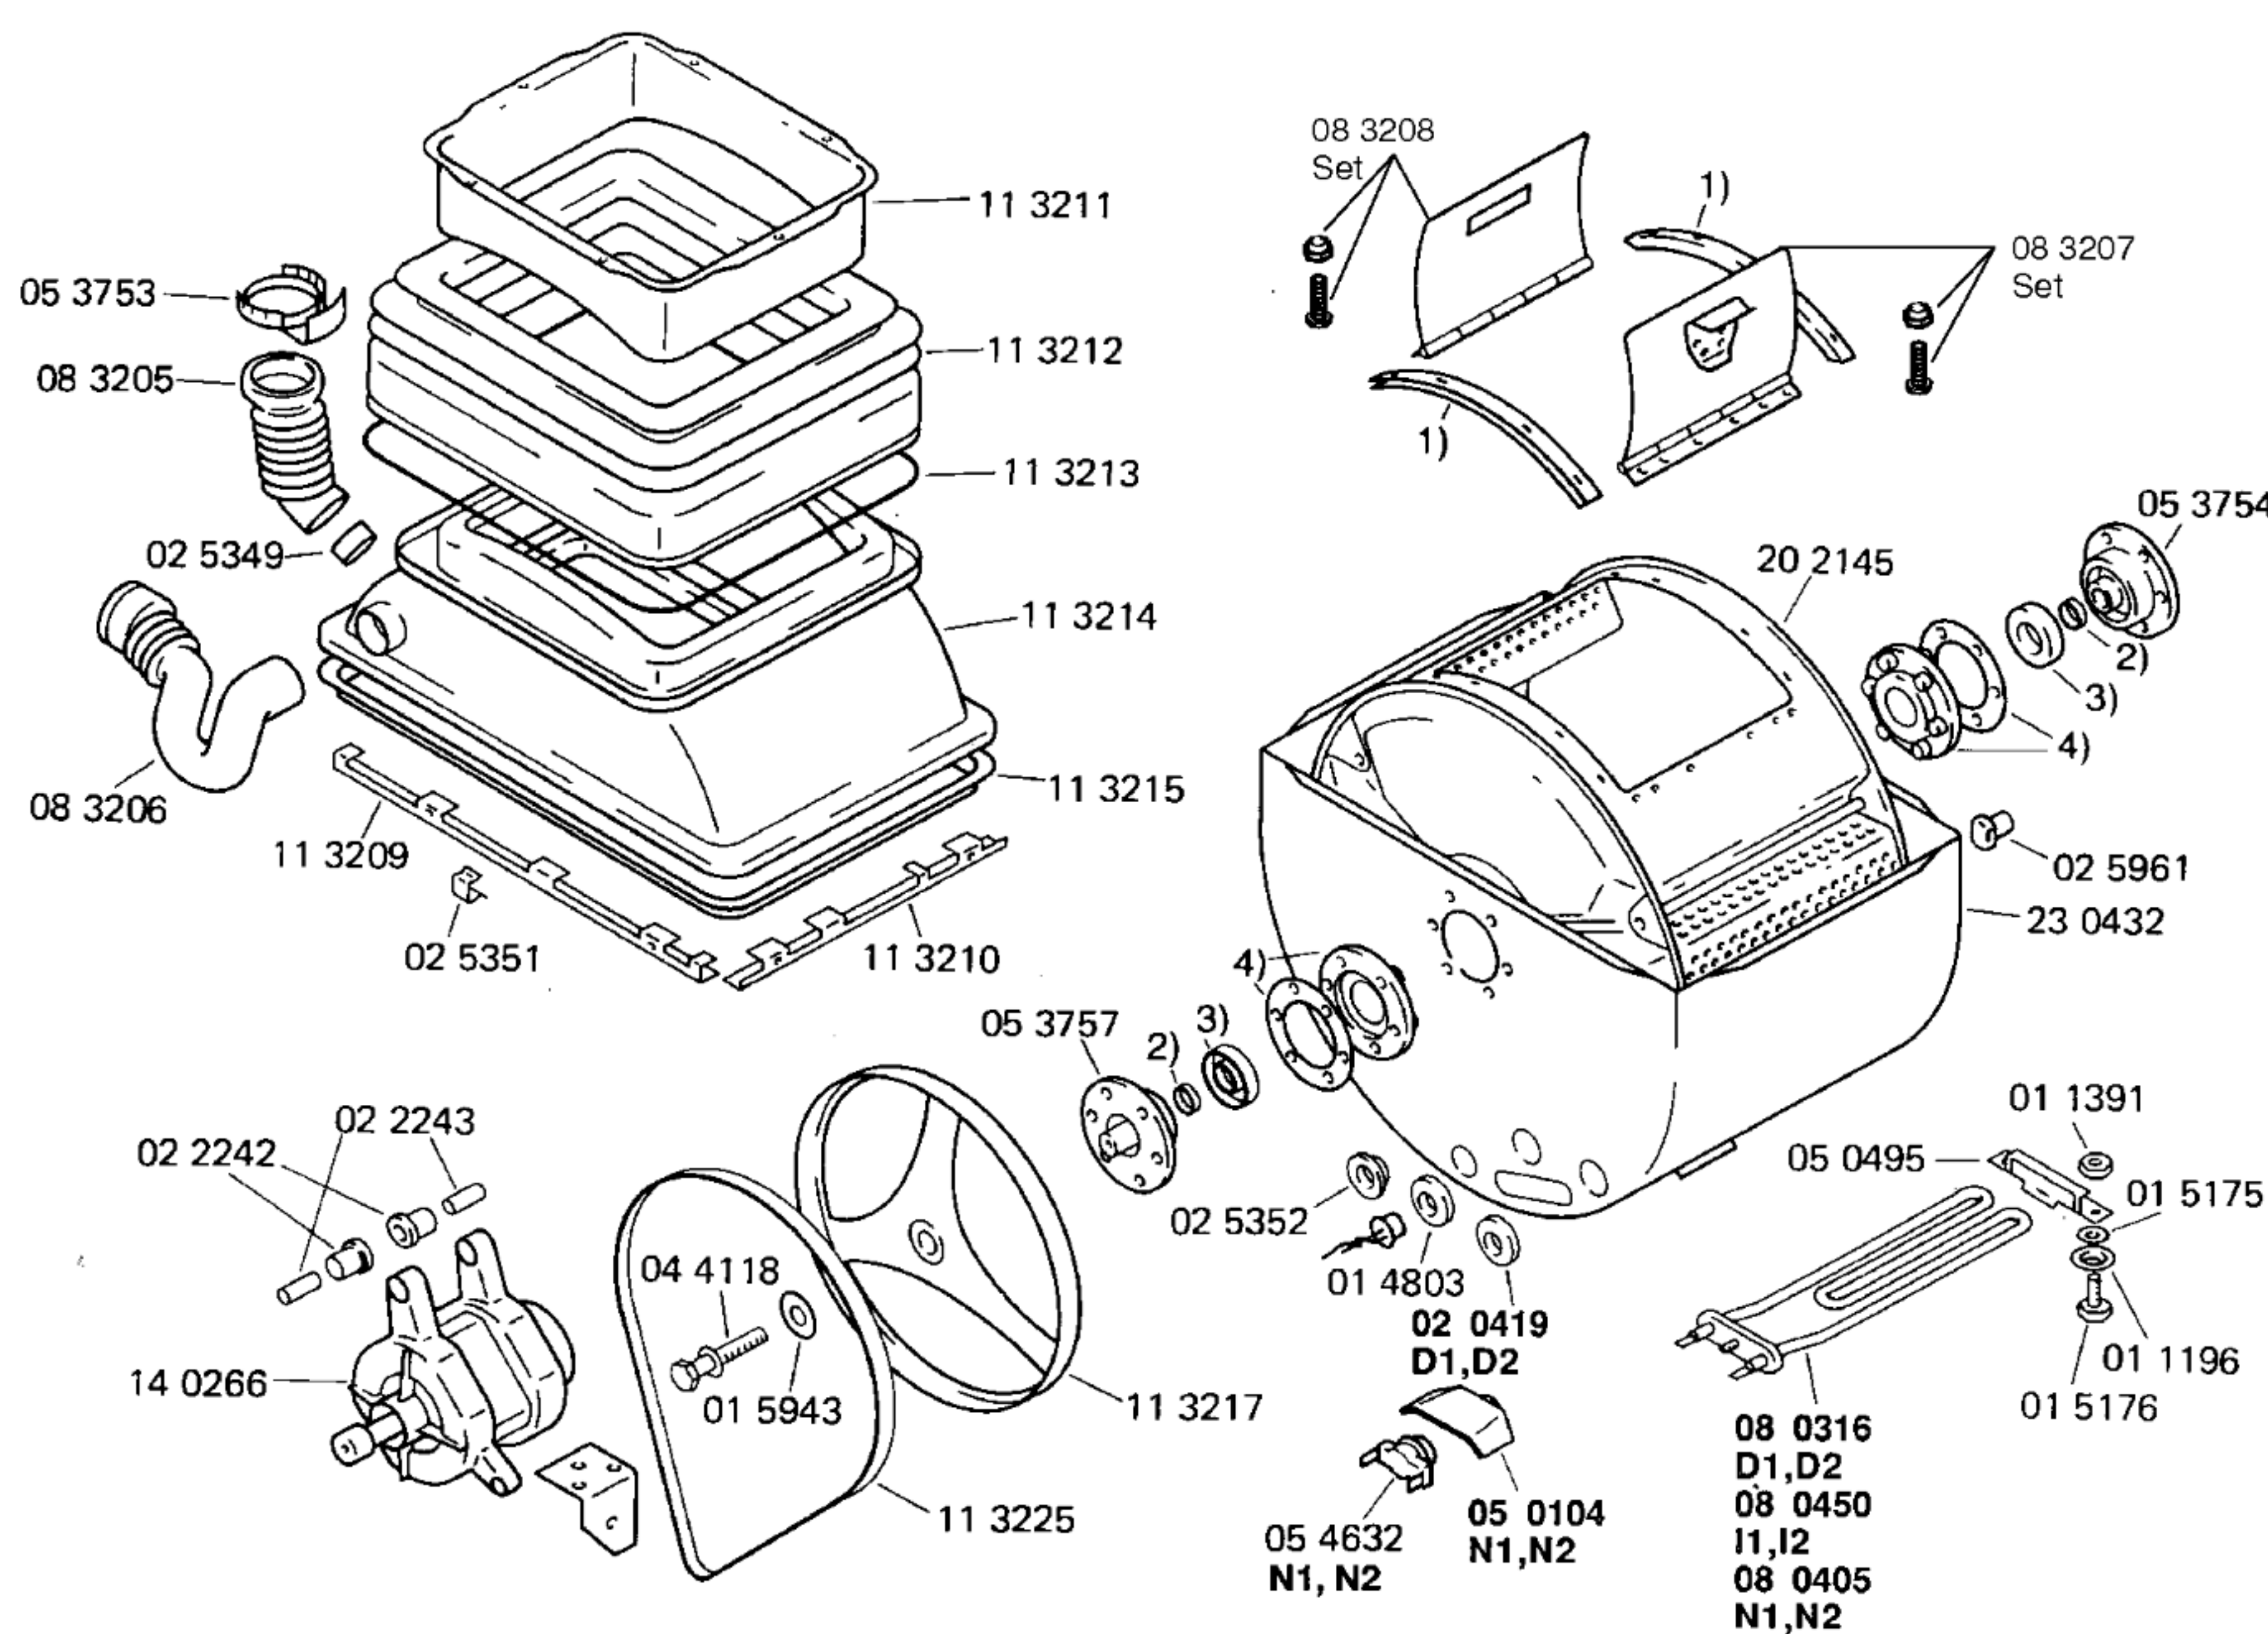

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 7022

