 


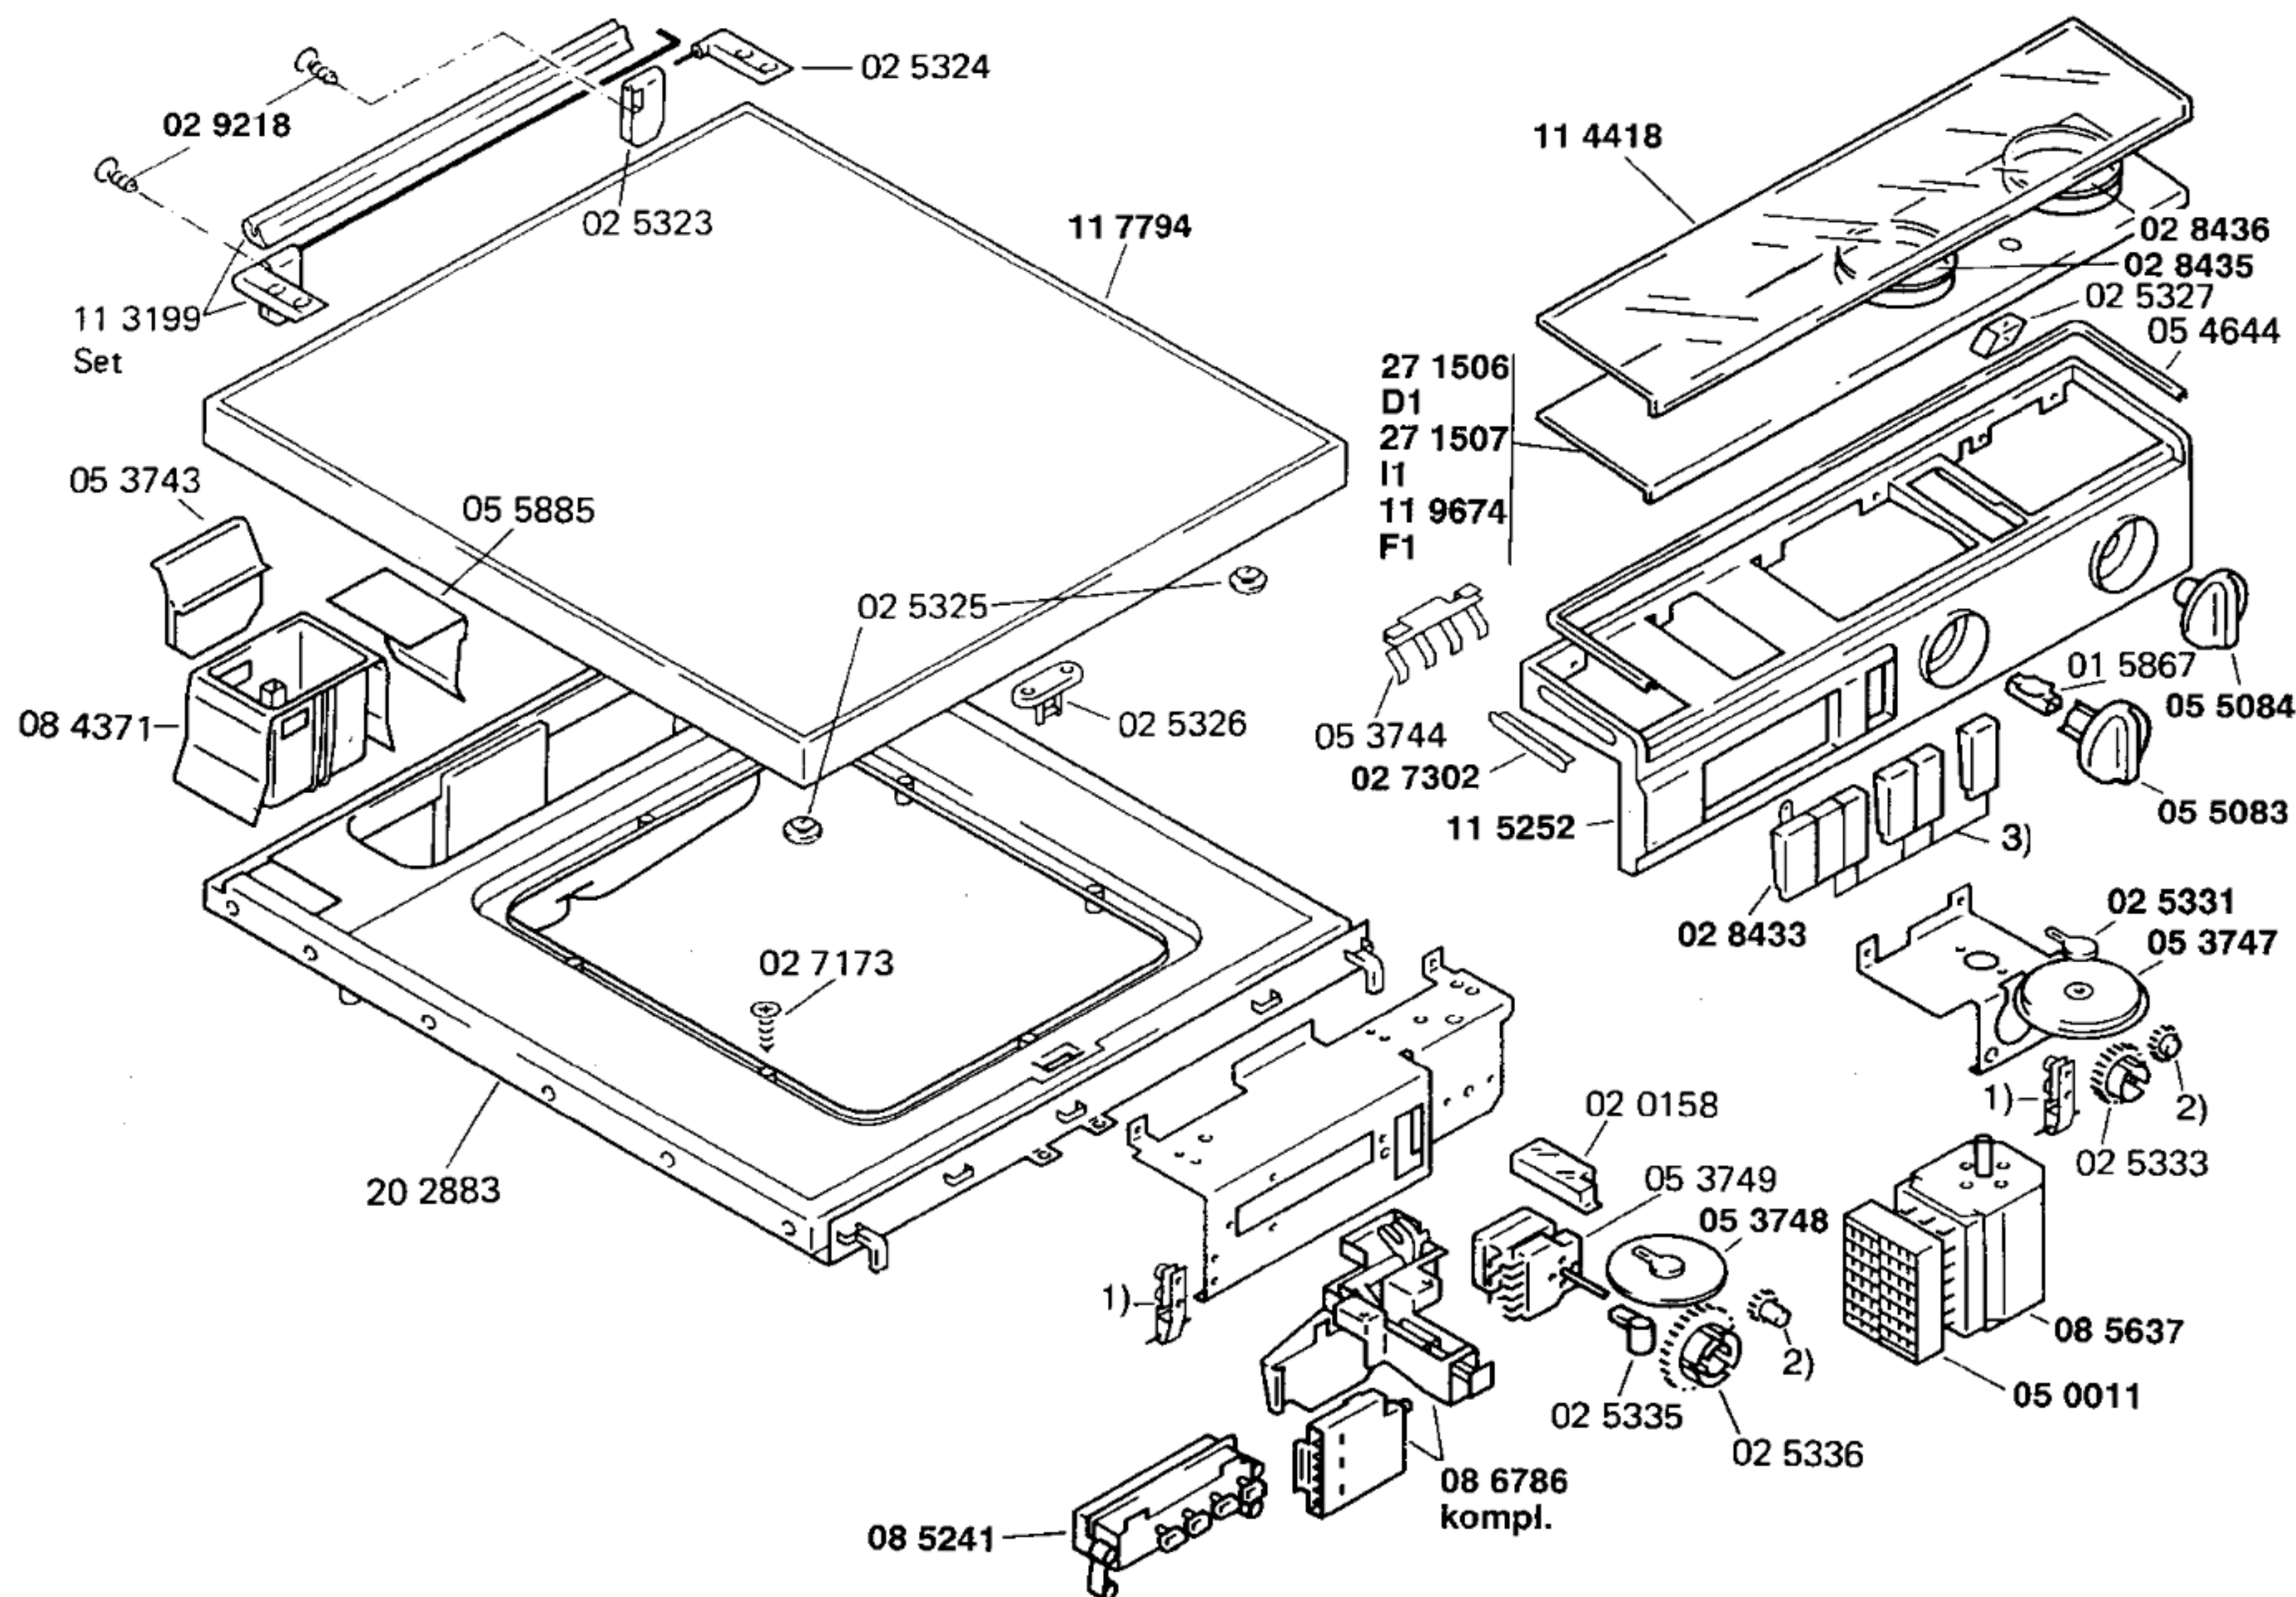

- 1) 02 5334
- 2) 02 5332
- 3) 03 1332 Set, D1
03 1331 Set, I1
03 0231 Set, F1

Aufstellanweisung

 
51 3182
(D,GB,F,I,NL,E)
51 4257

Gebrauchsanweisung


51 4262
(D)
51 4260
(I)
51 3772
(F)


Programmtabelle

51 4263
(D)
51 4261
(I)
51 3759
(F)

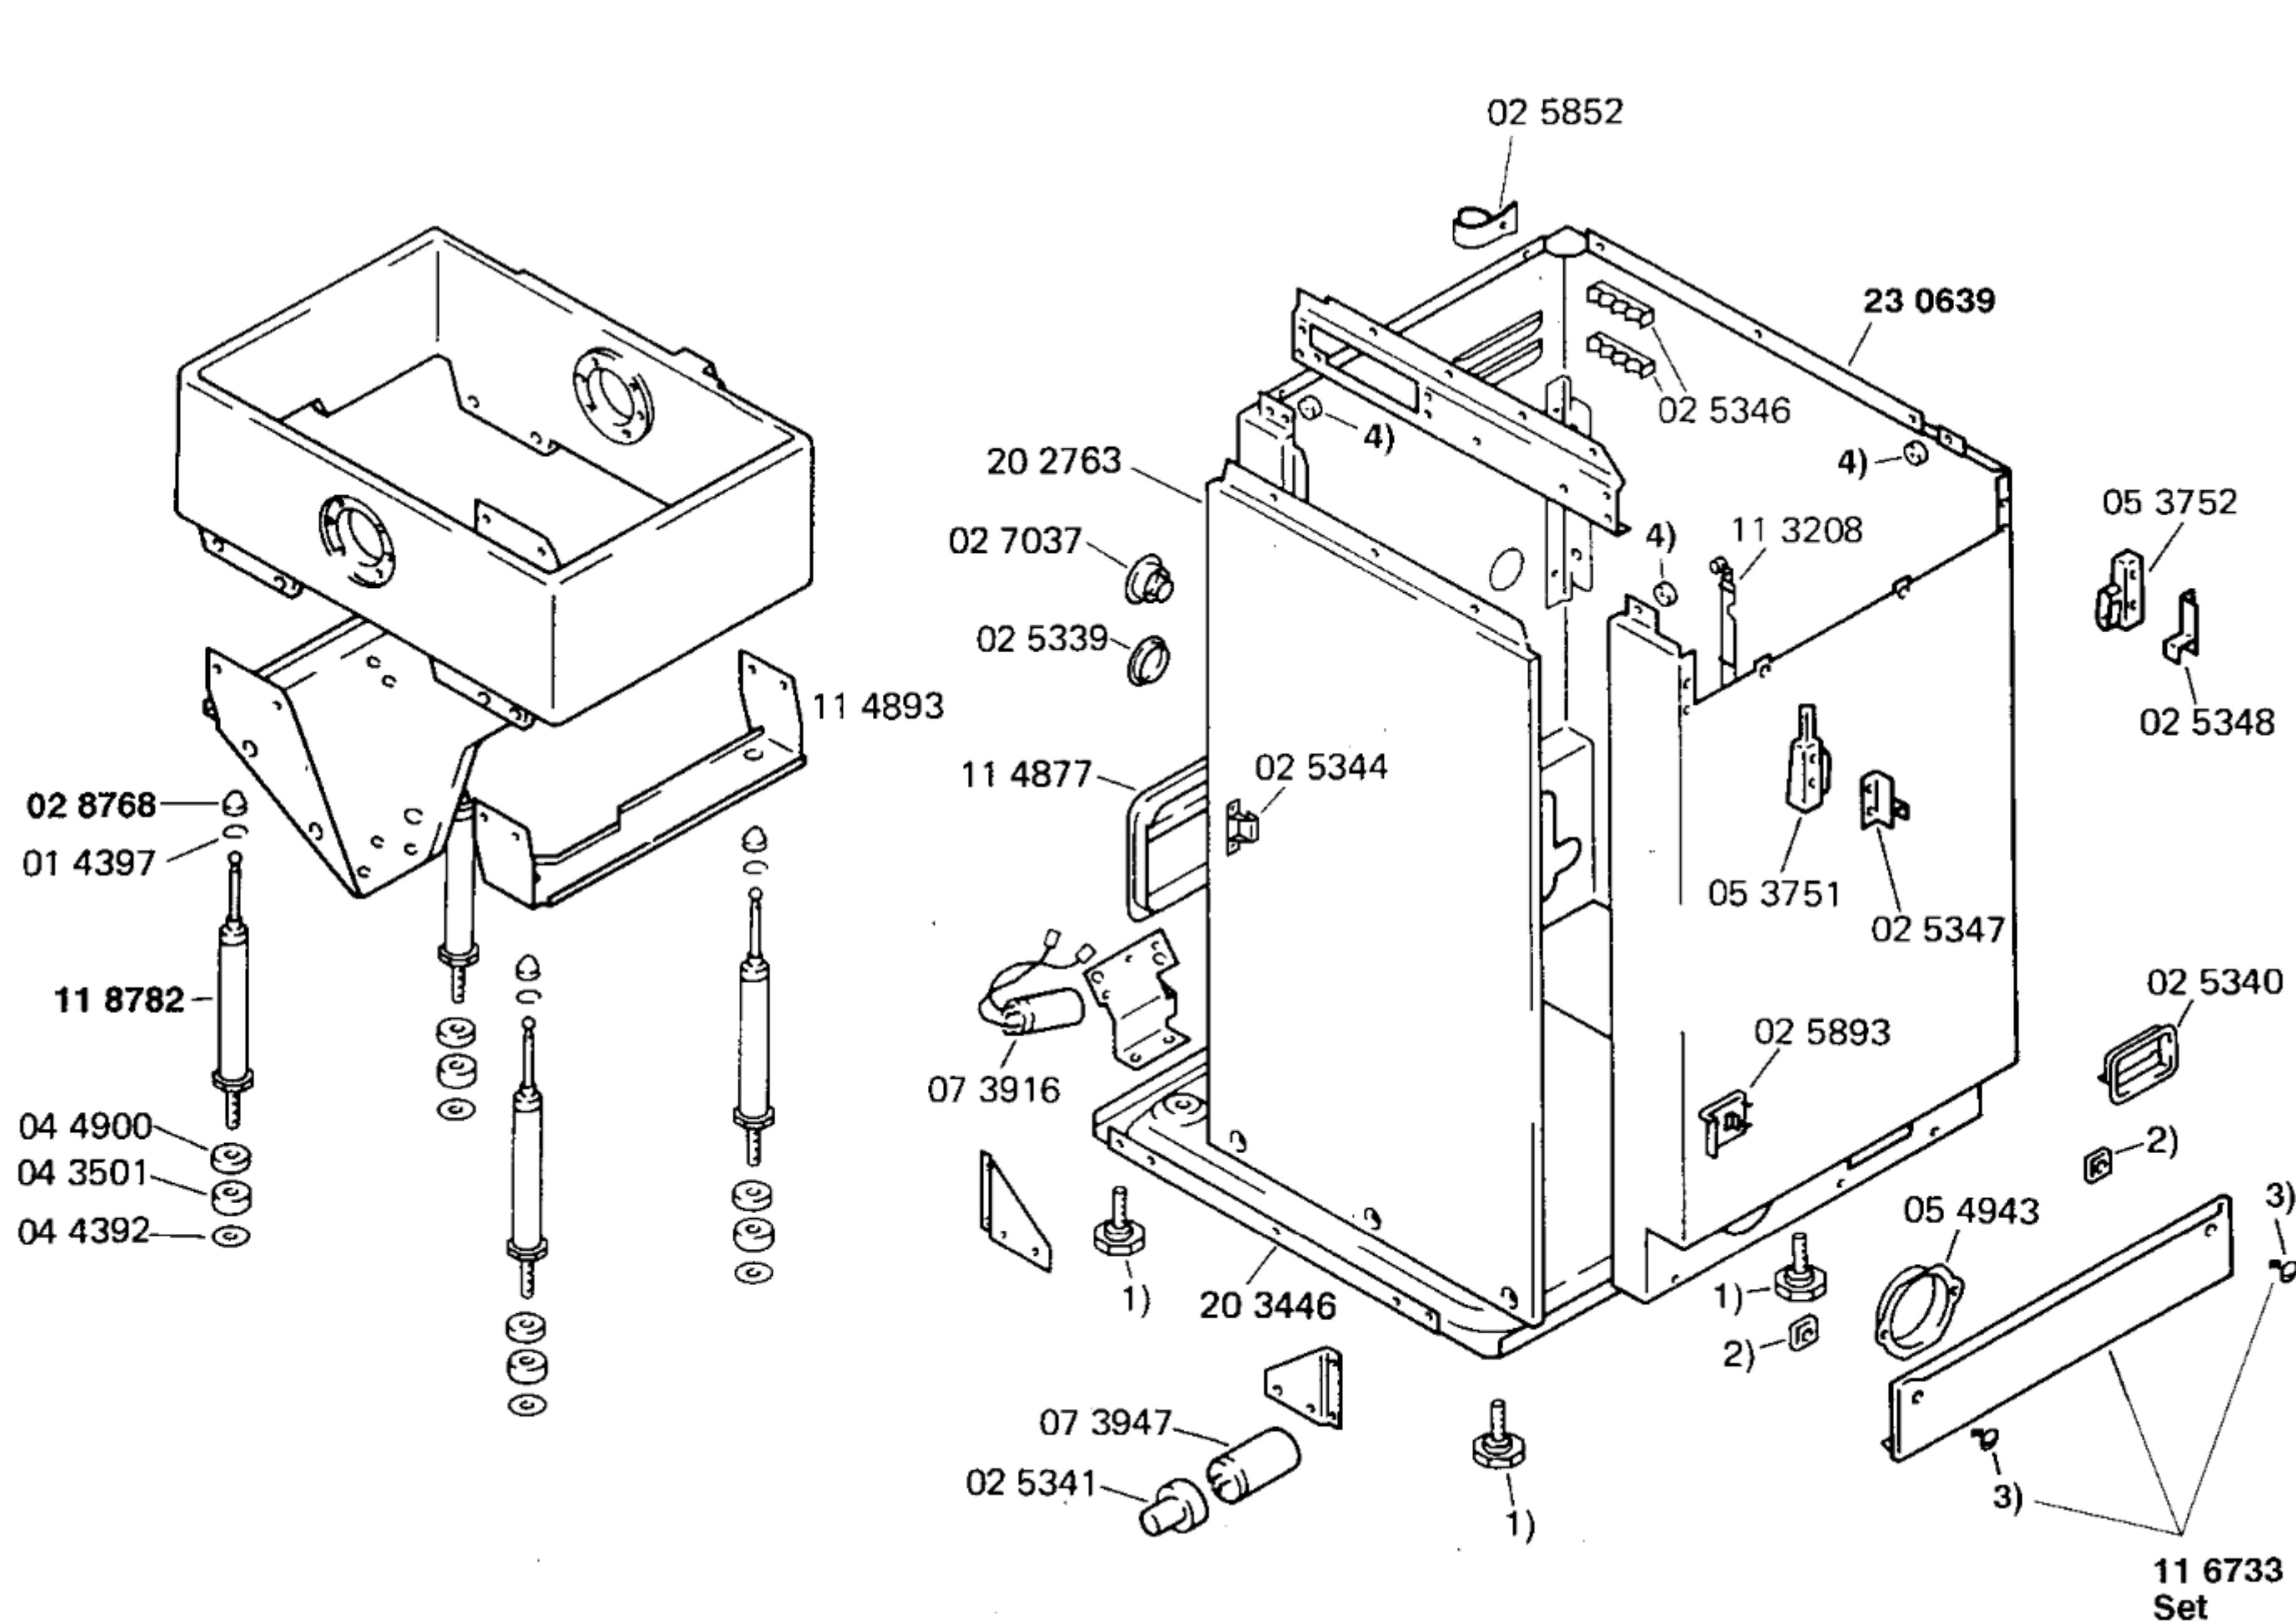

  - 1) 04 5561
- 2) 01 4687
- 3) 02 8340
- 4) 02 5345

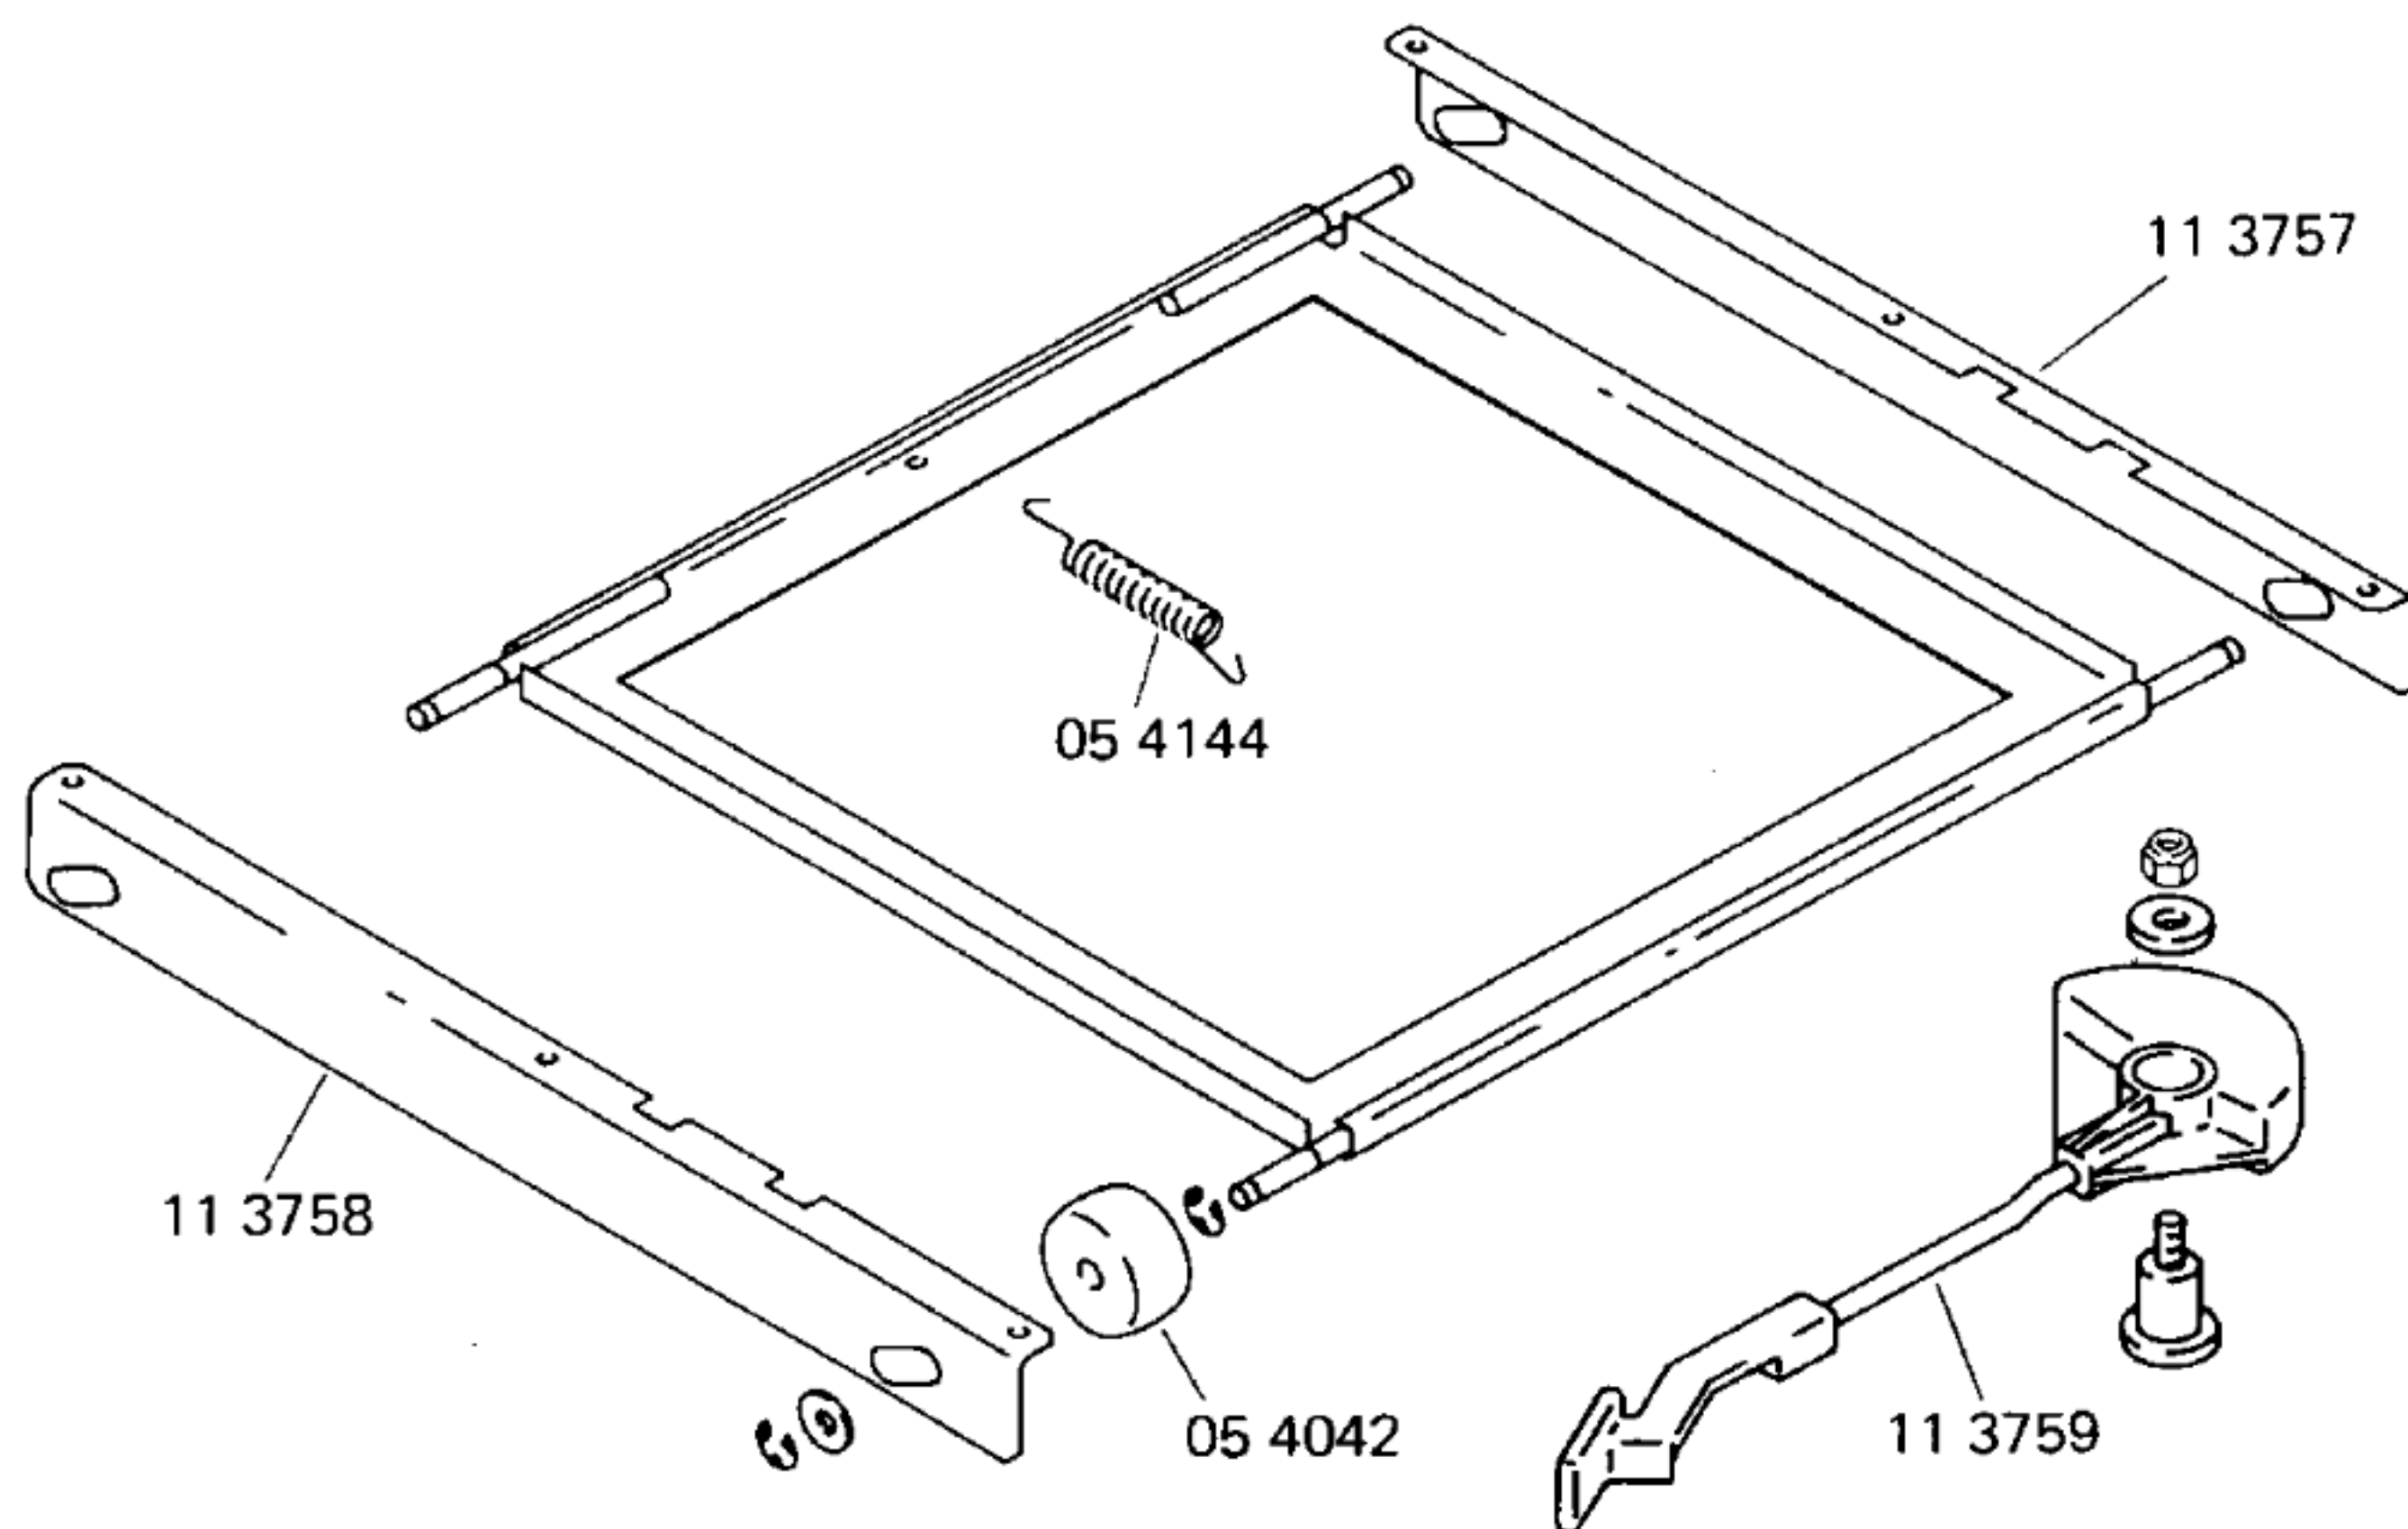

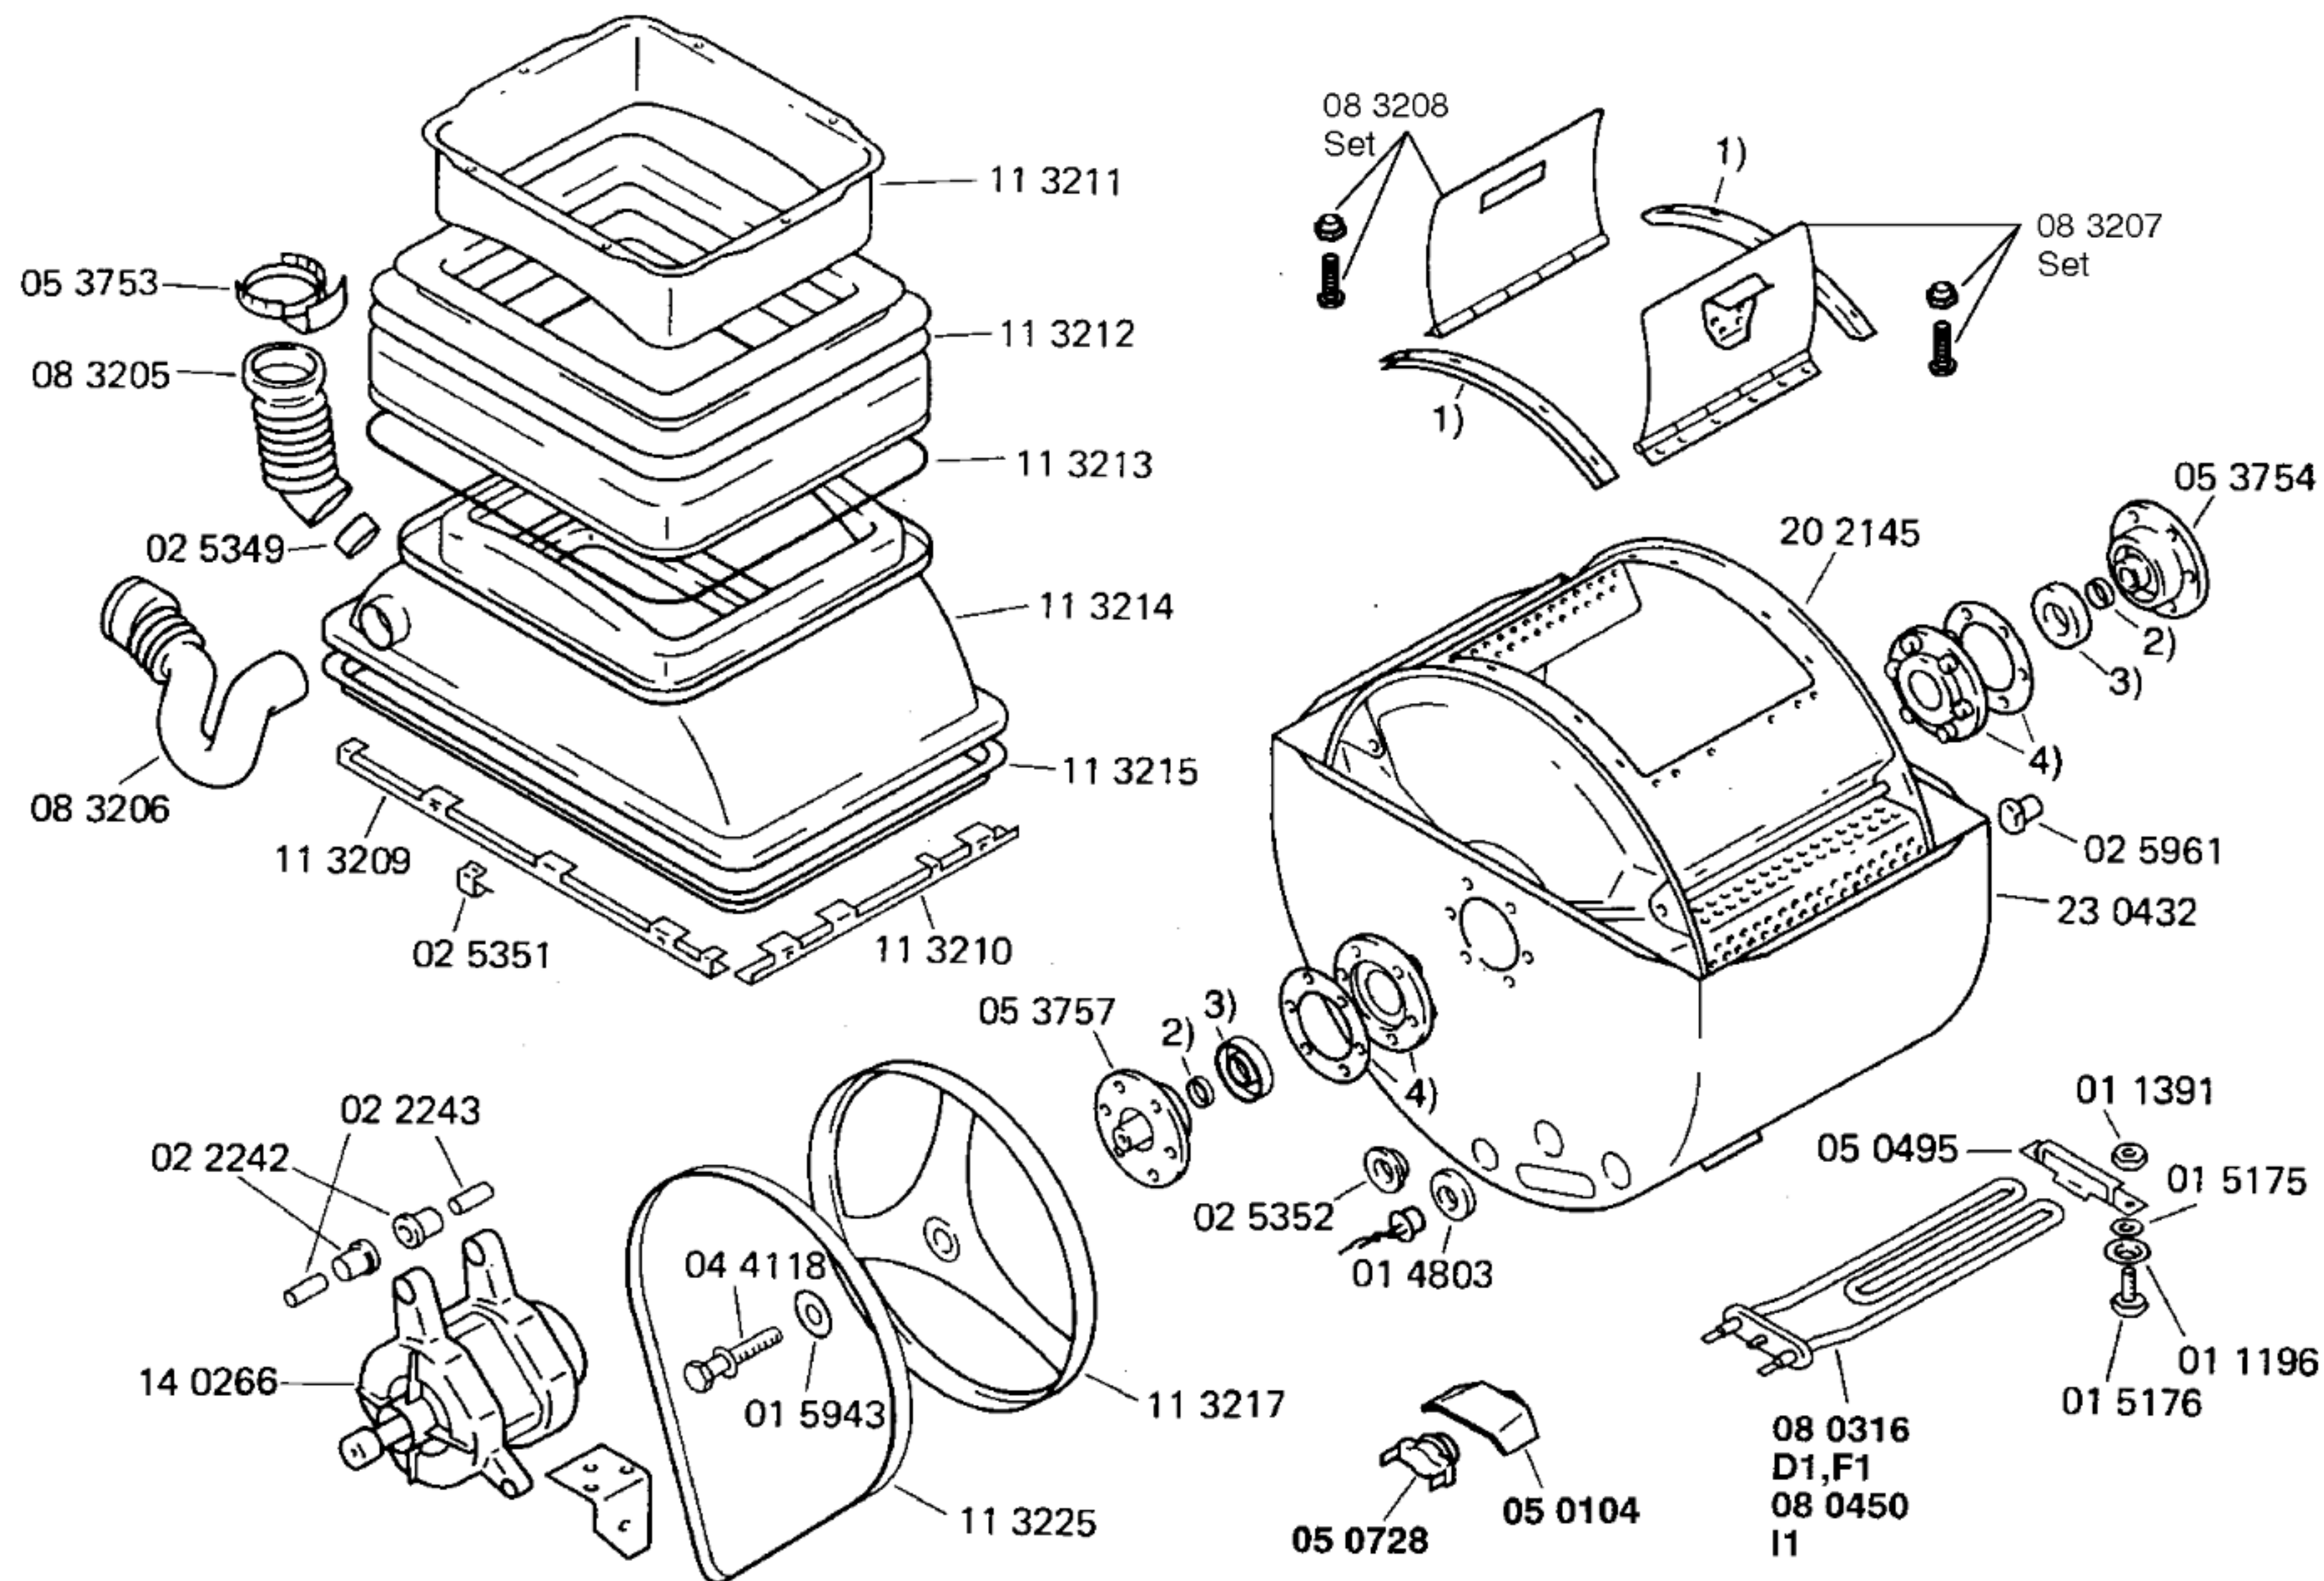

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 7022

