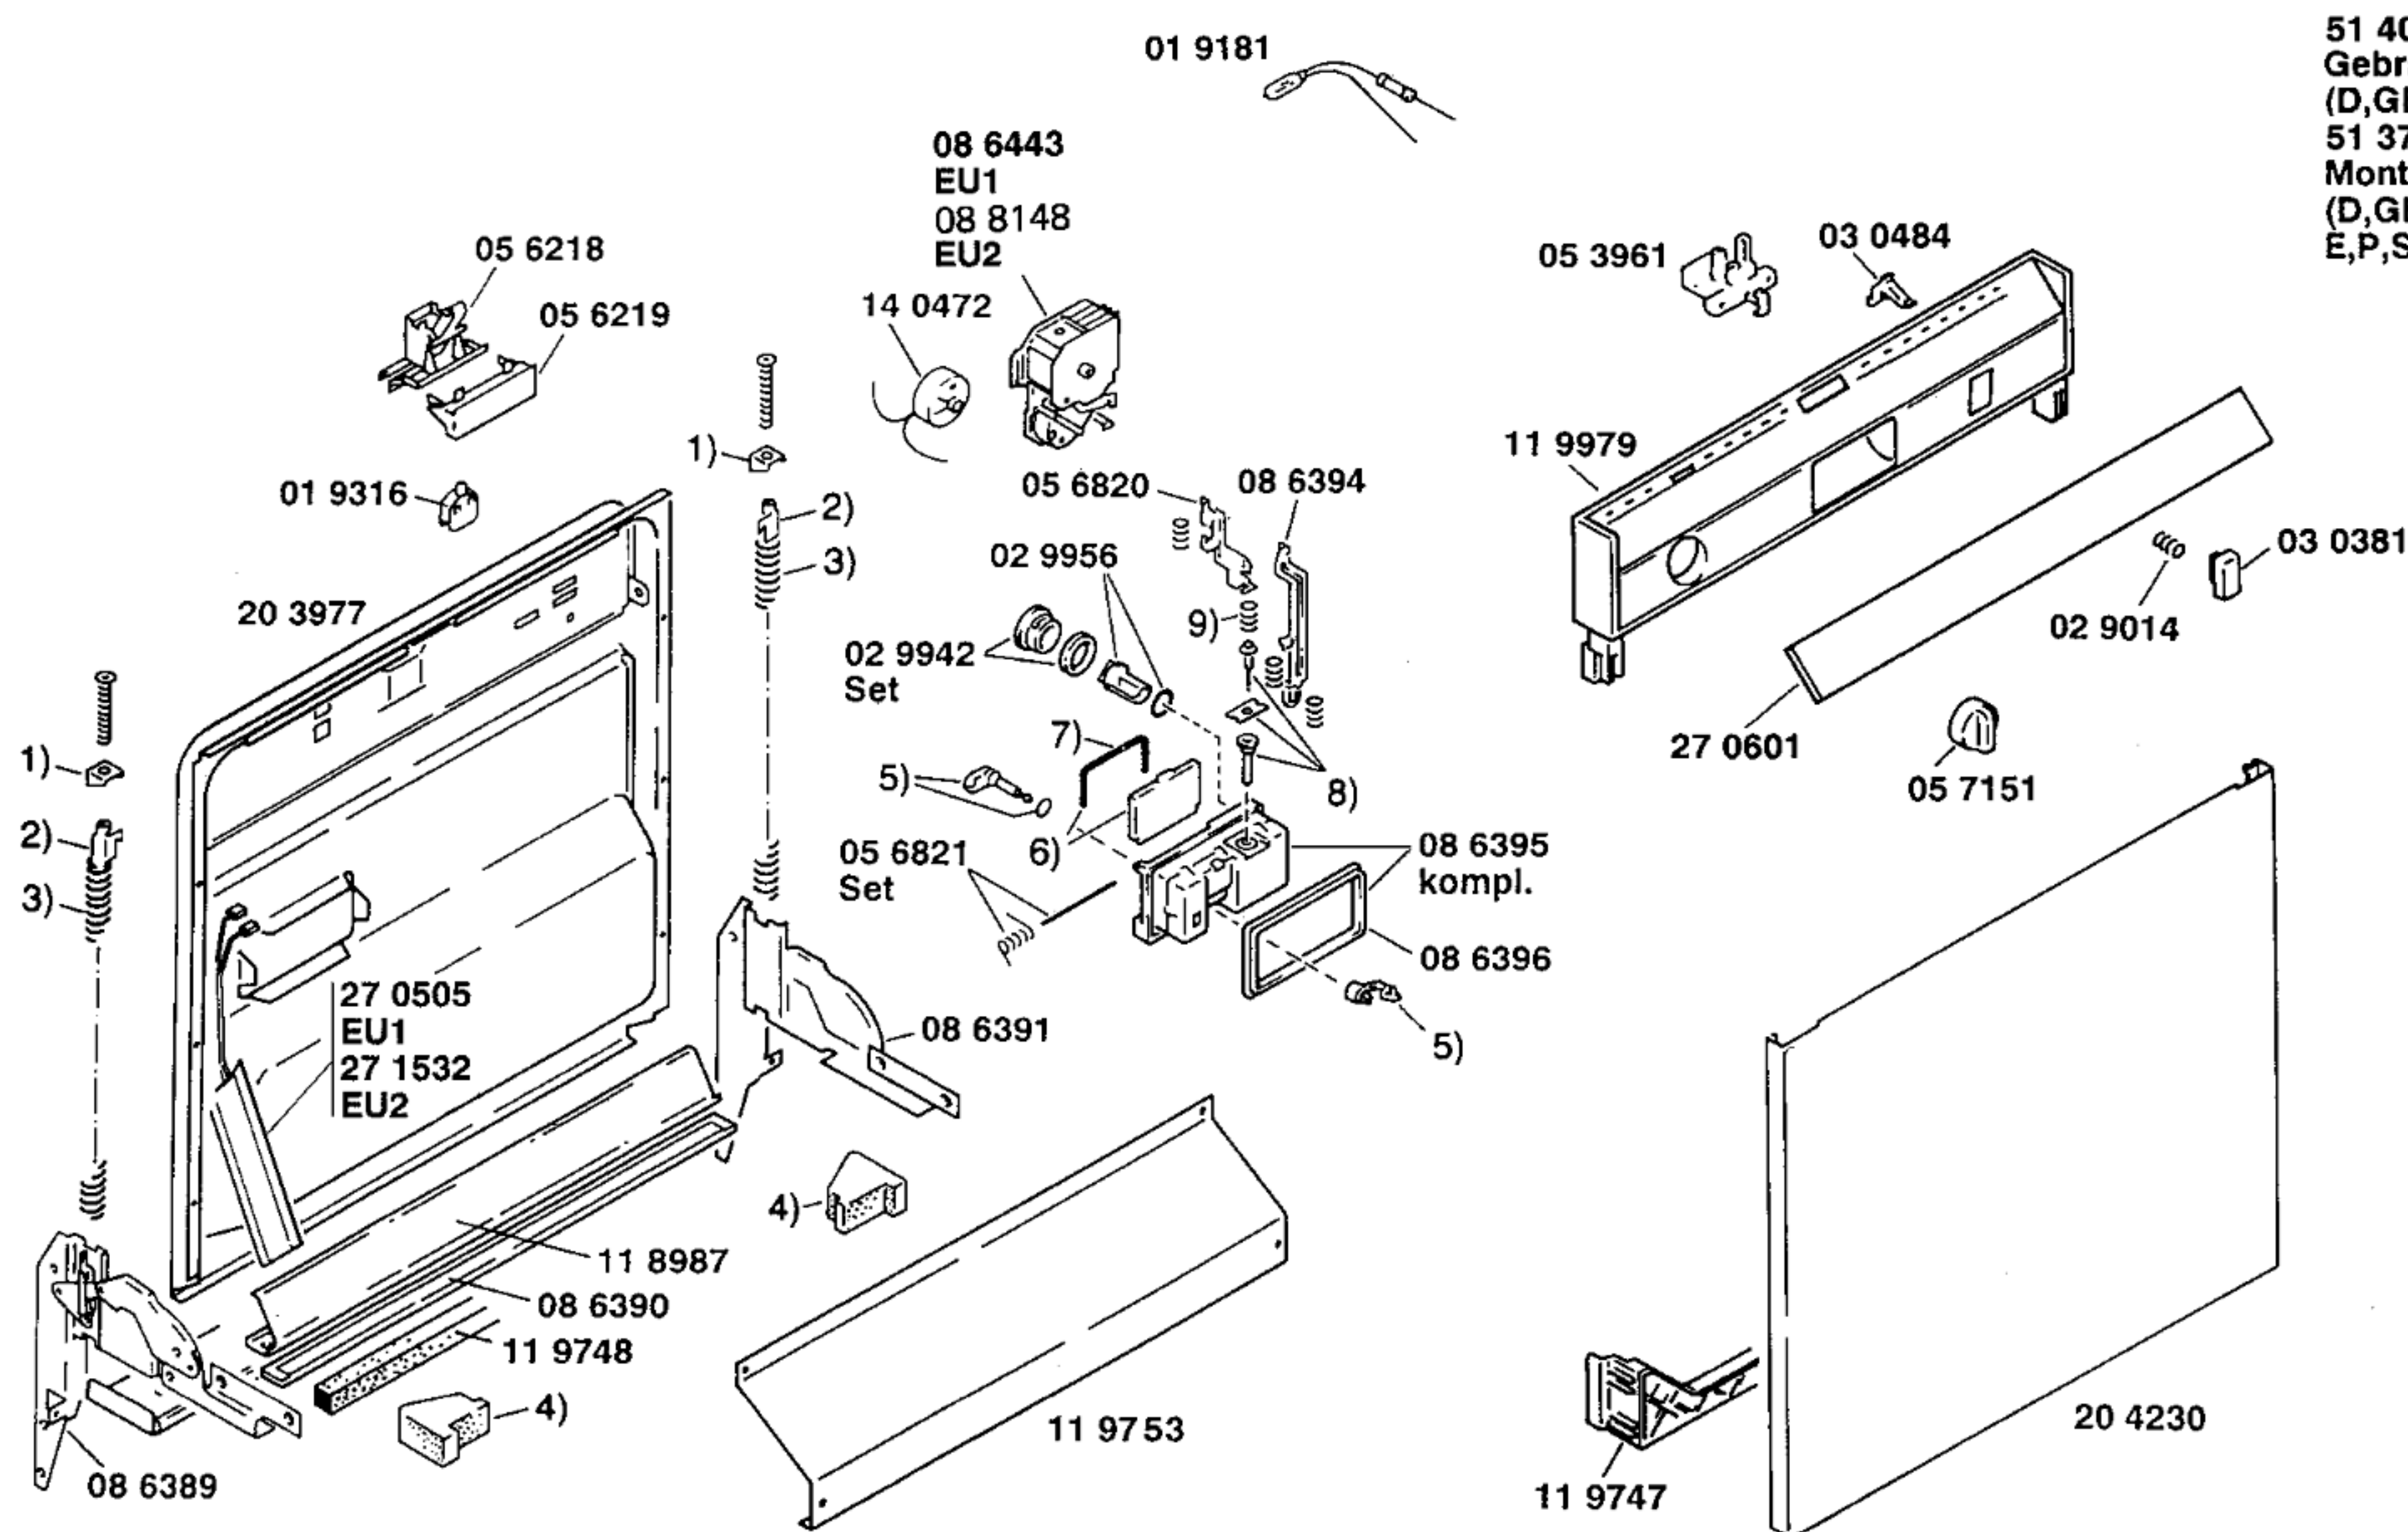
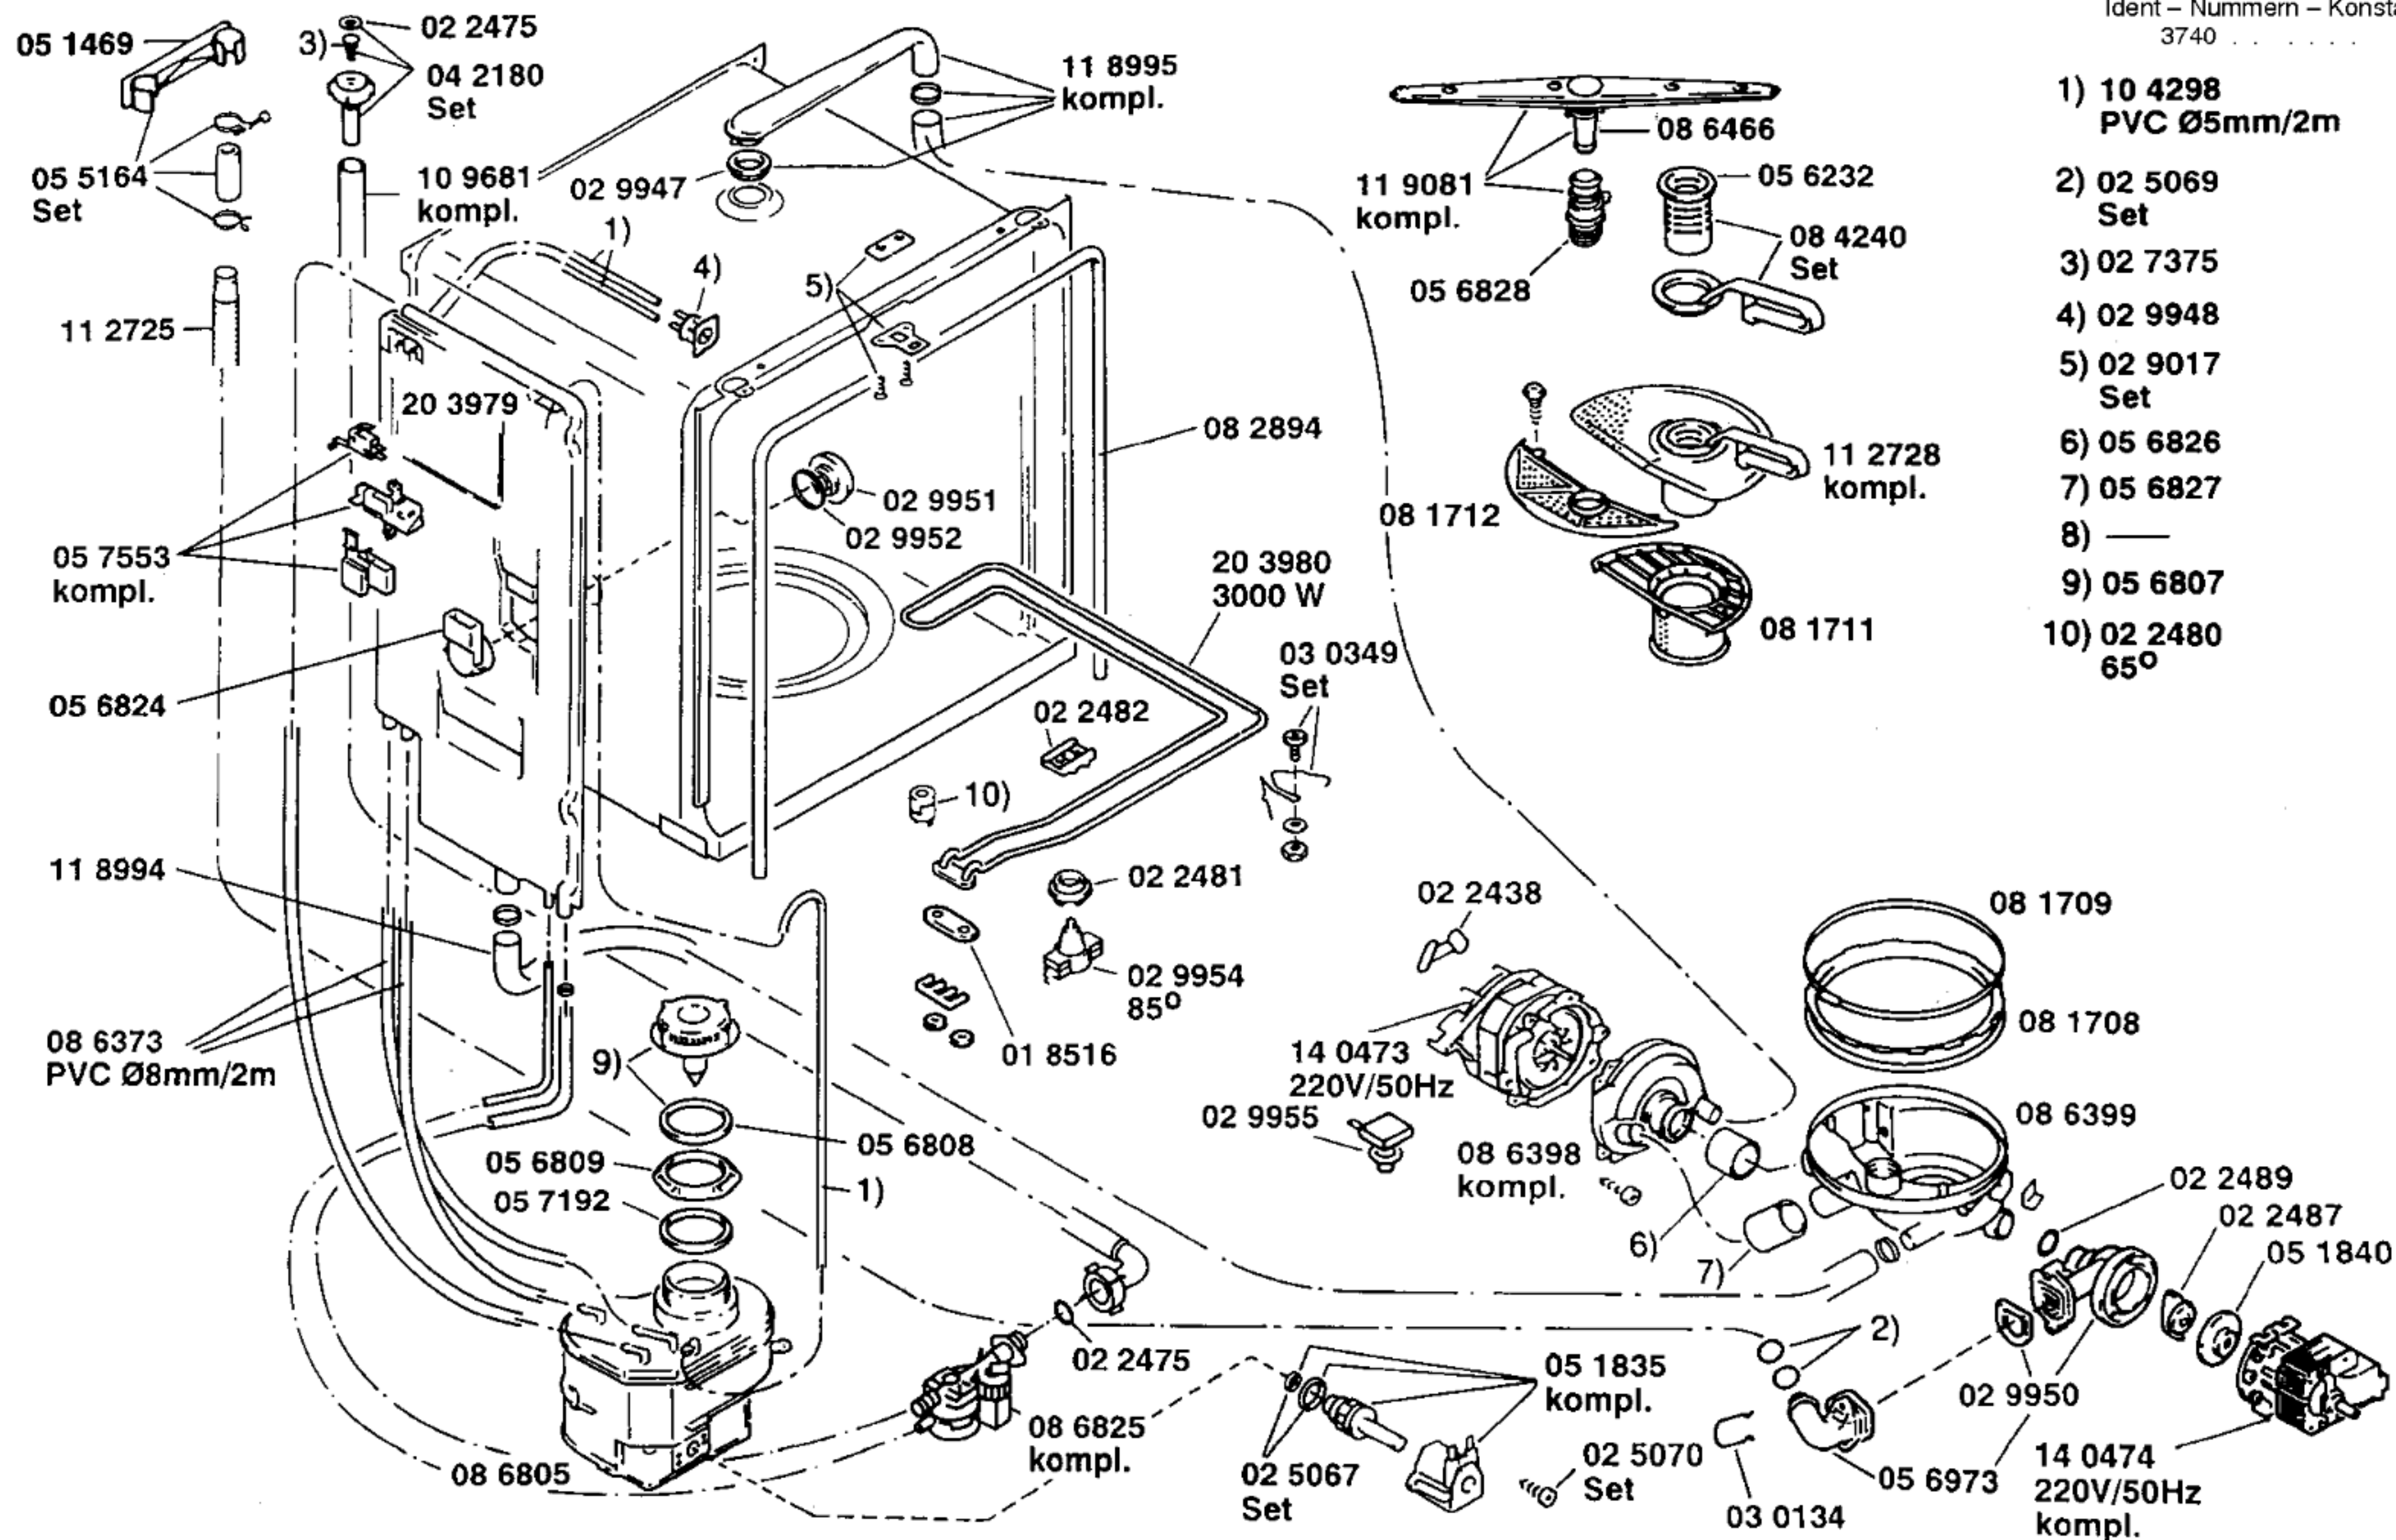
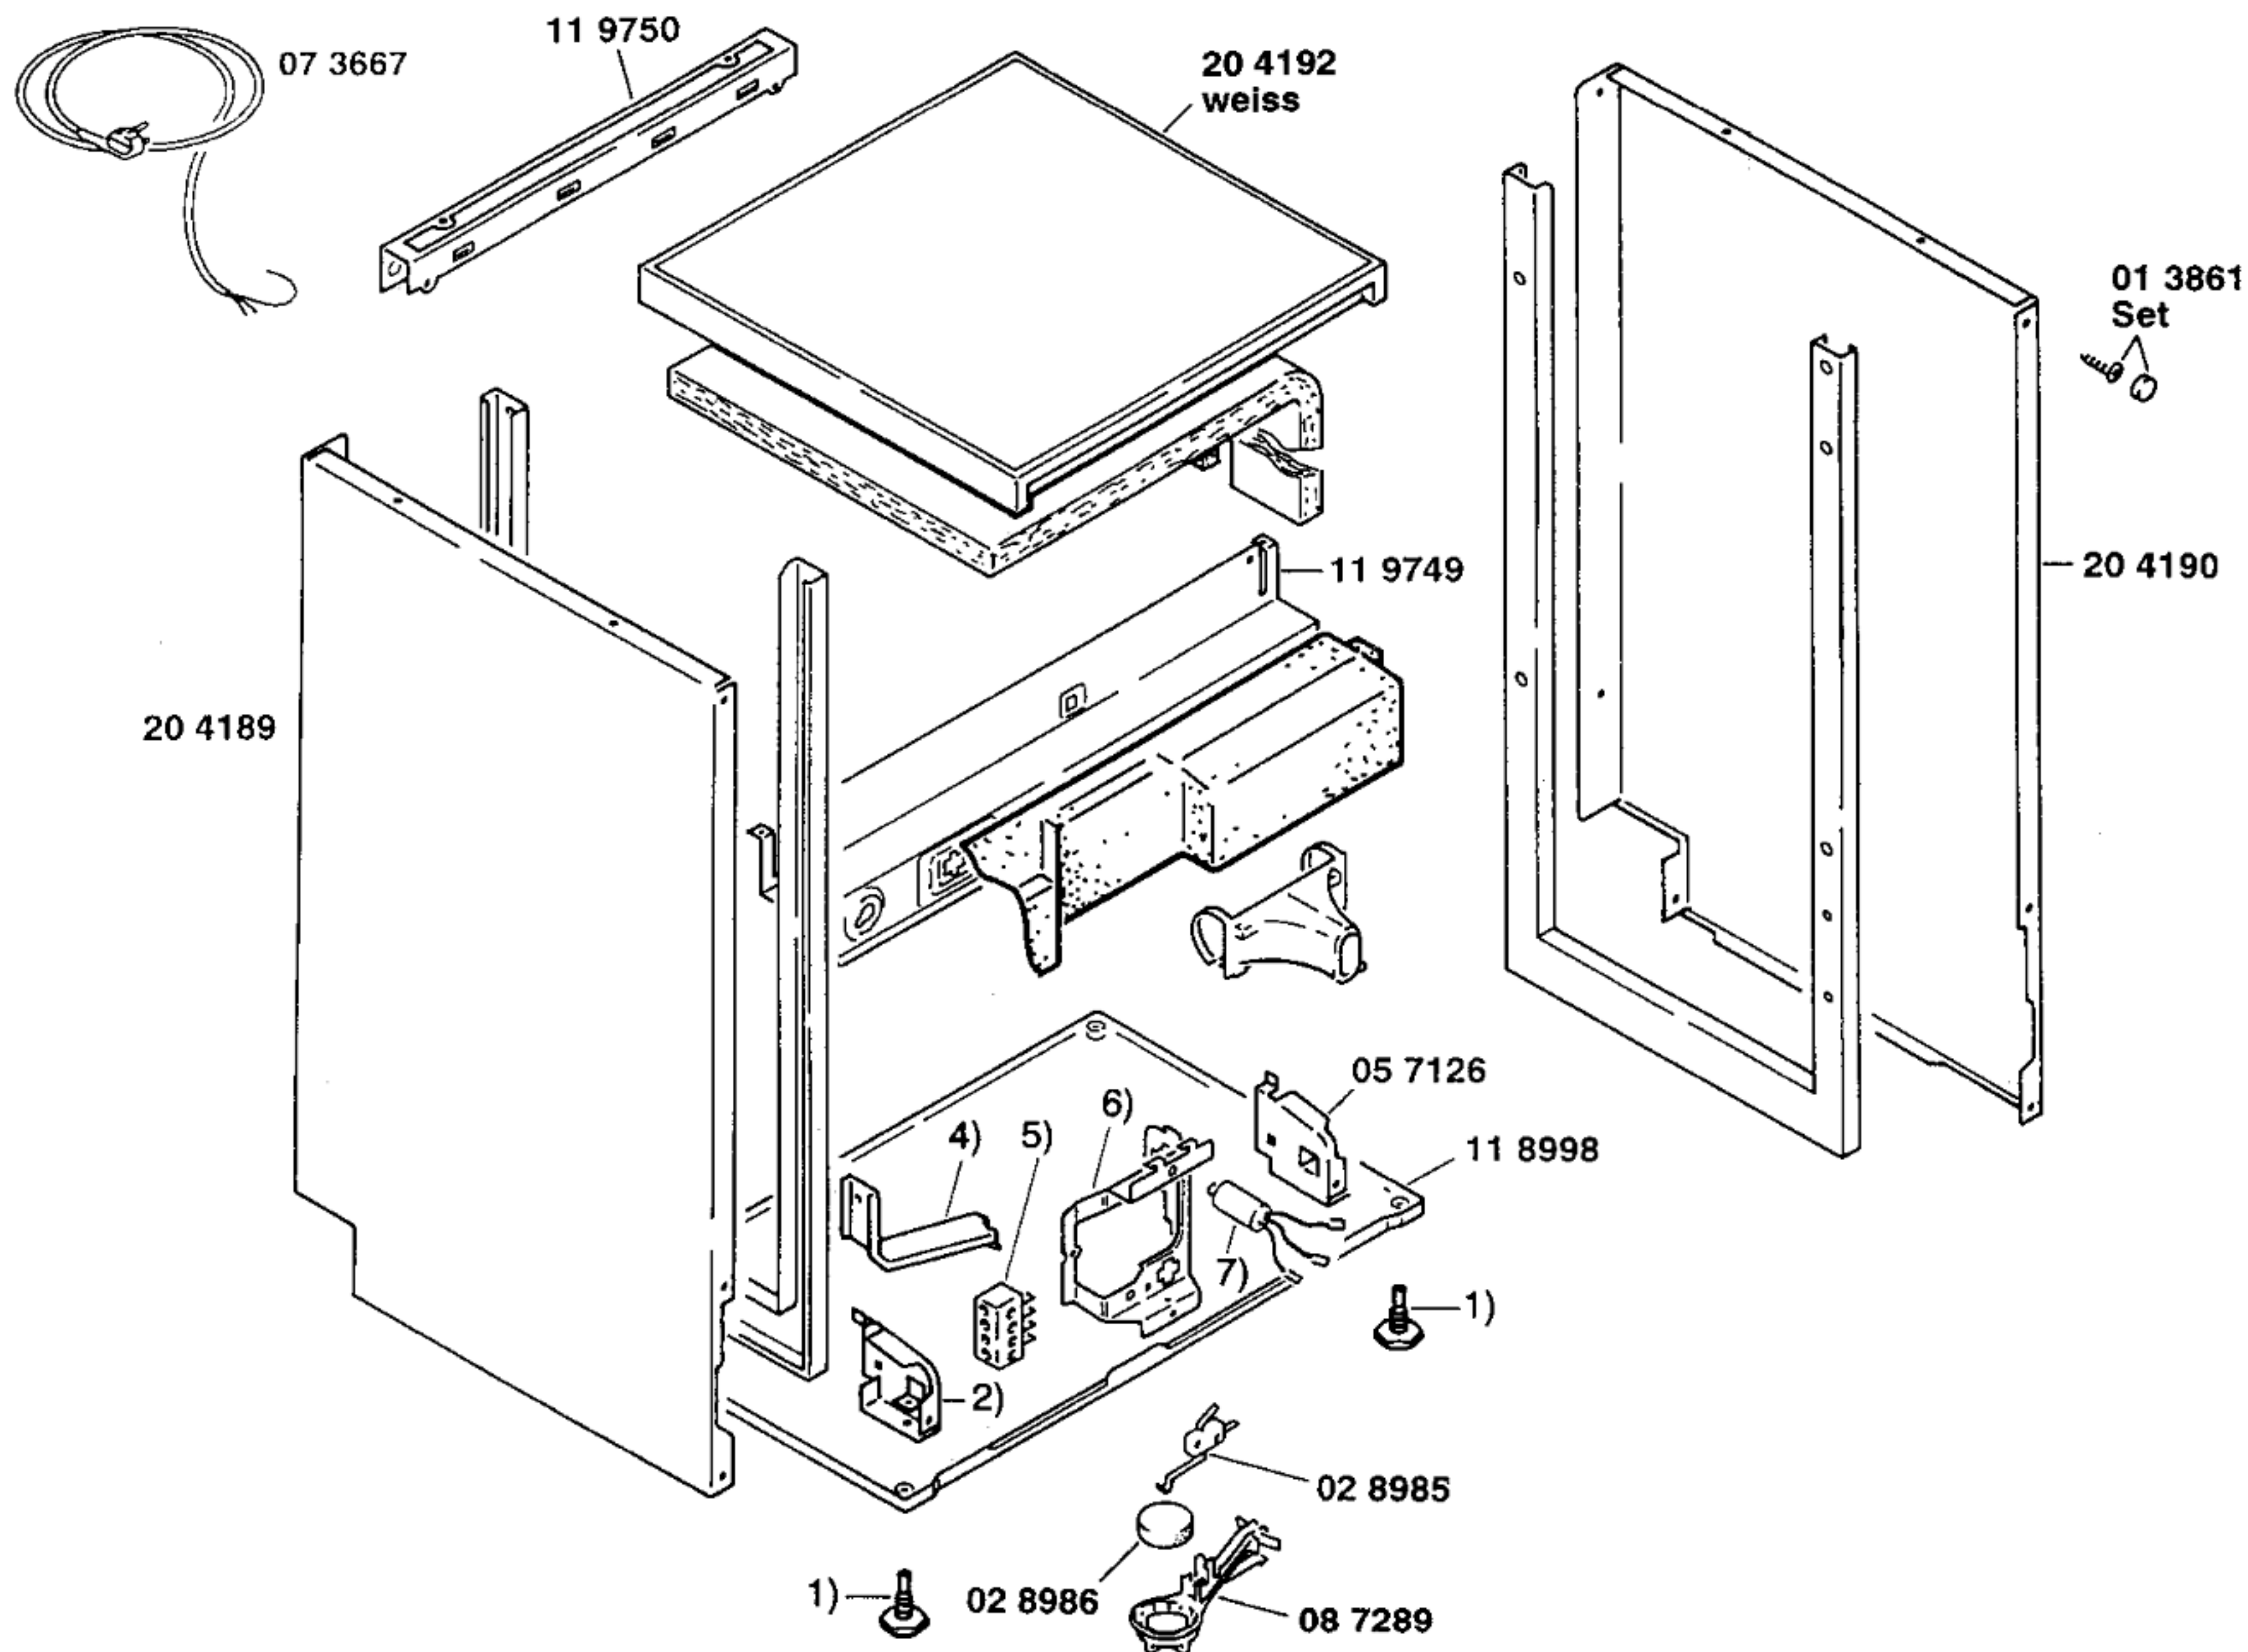


**BOSCH**SMS1012/01-EU1
SMS1012/03-EU2GESCHIRRSPÜLGERÄTE
StandgeräteIdent - Nummern - Konstante
3740


51 4010
Gebrauchsanweisung
 (D,GB,F,I,NL,E,P)
51 3779
Montageanweisung
 (D,GB,F,I,NL,DK,
 E,P,S,N,SF,GR,TR)

- 1) 02 9941
- 2) 02 9029
- 3) 11 9795
- 4) 05 6860
- 5) 02 9944 Set
- 6) 05 6822
- 7) 02 9943
- 8) 02 9945 Set
- 9) 02 9002 Set

**BOSCH**SMS1012/01-EU1
SMS1012/03-EU2GESCHIRRSPÜLGERÄTE
StandgeräteIdent - Nummern - Konstante
3740

**BOSCH**SMS1012/01-EU1
SMS1012/03-EU2GESCHIRRSPÜLGERÄTE
StandgeräteIdent – Nummern – Konstante
3740

- 1) 02 9020
- 2) 05 7127
- 3) —
- 4) 08 6400
- 5) 02 7385
- 6) 08 6970
- 7) 04 3889

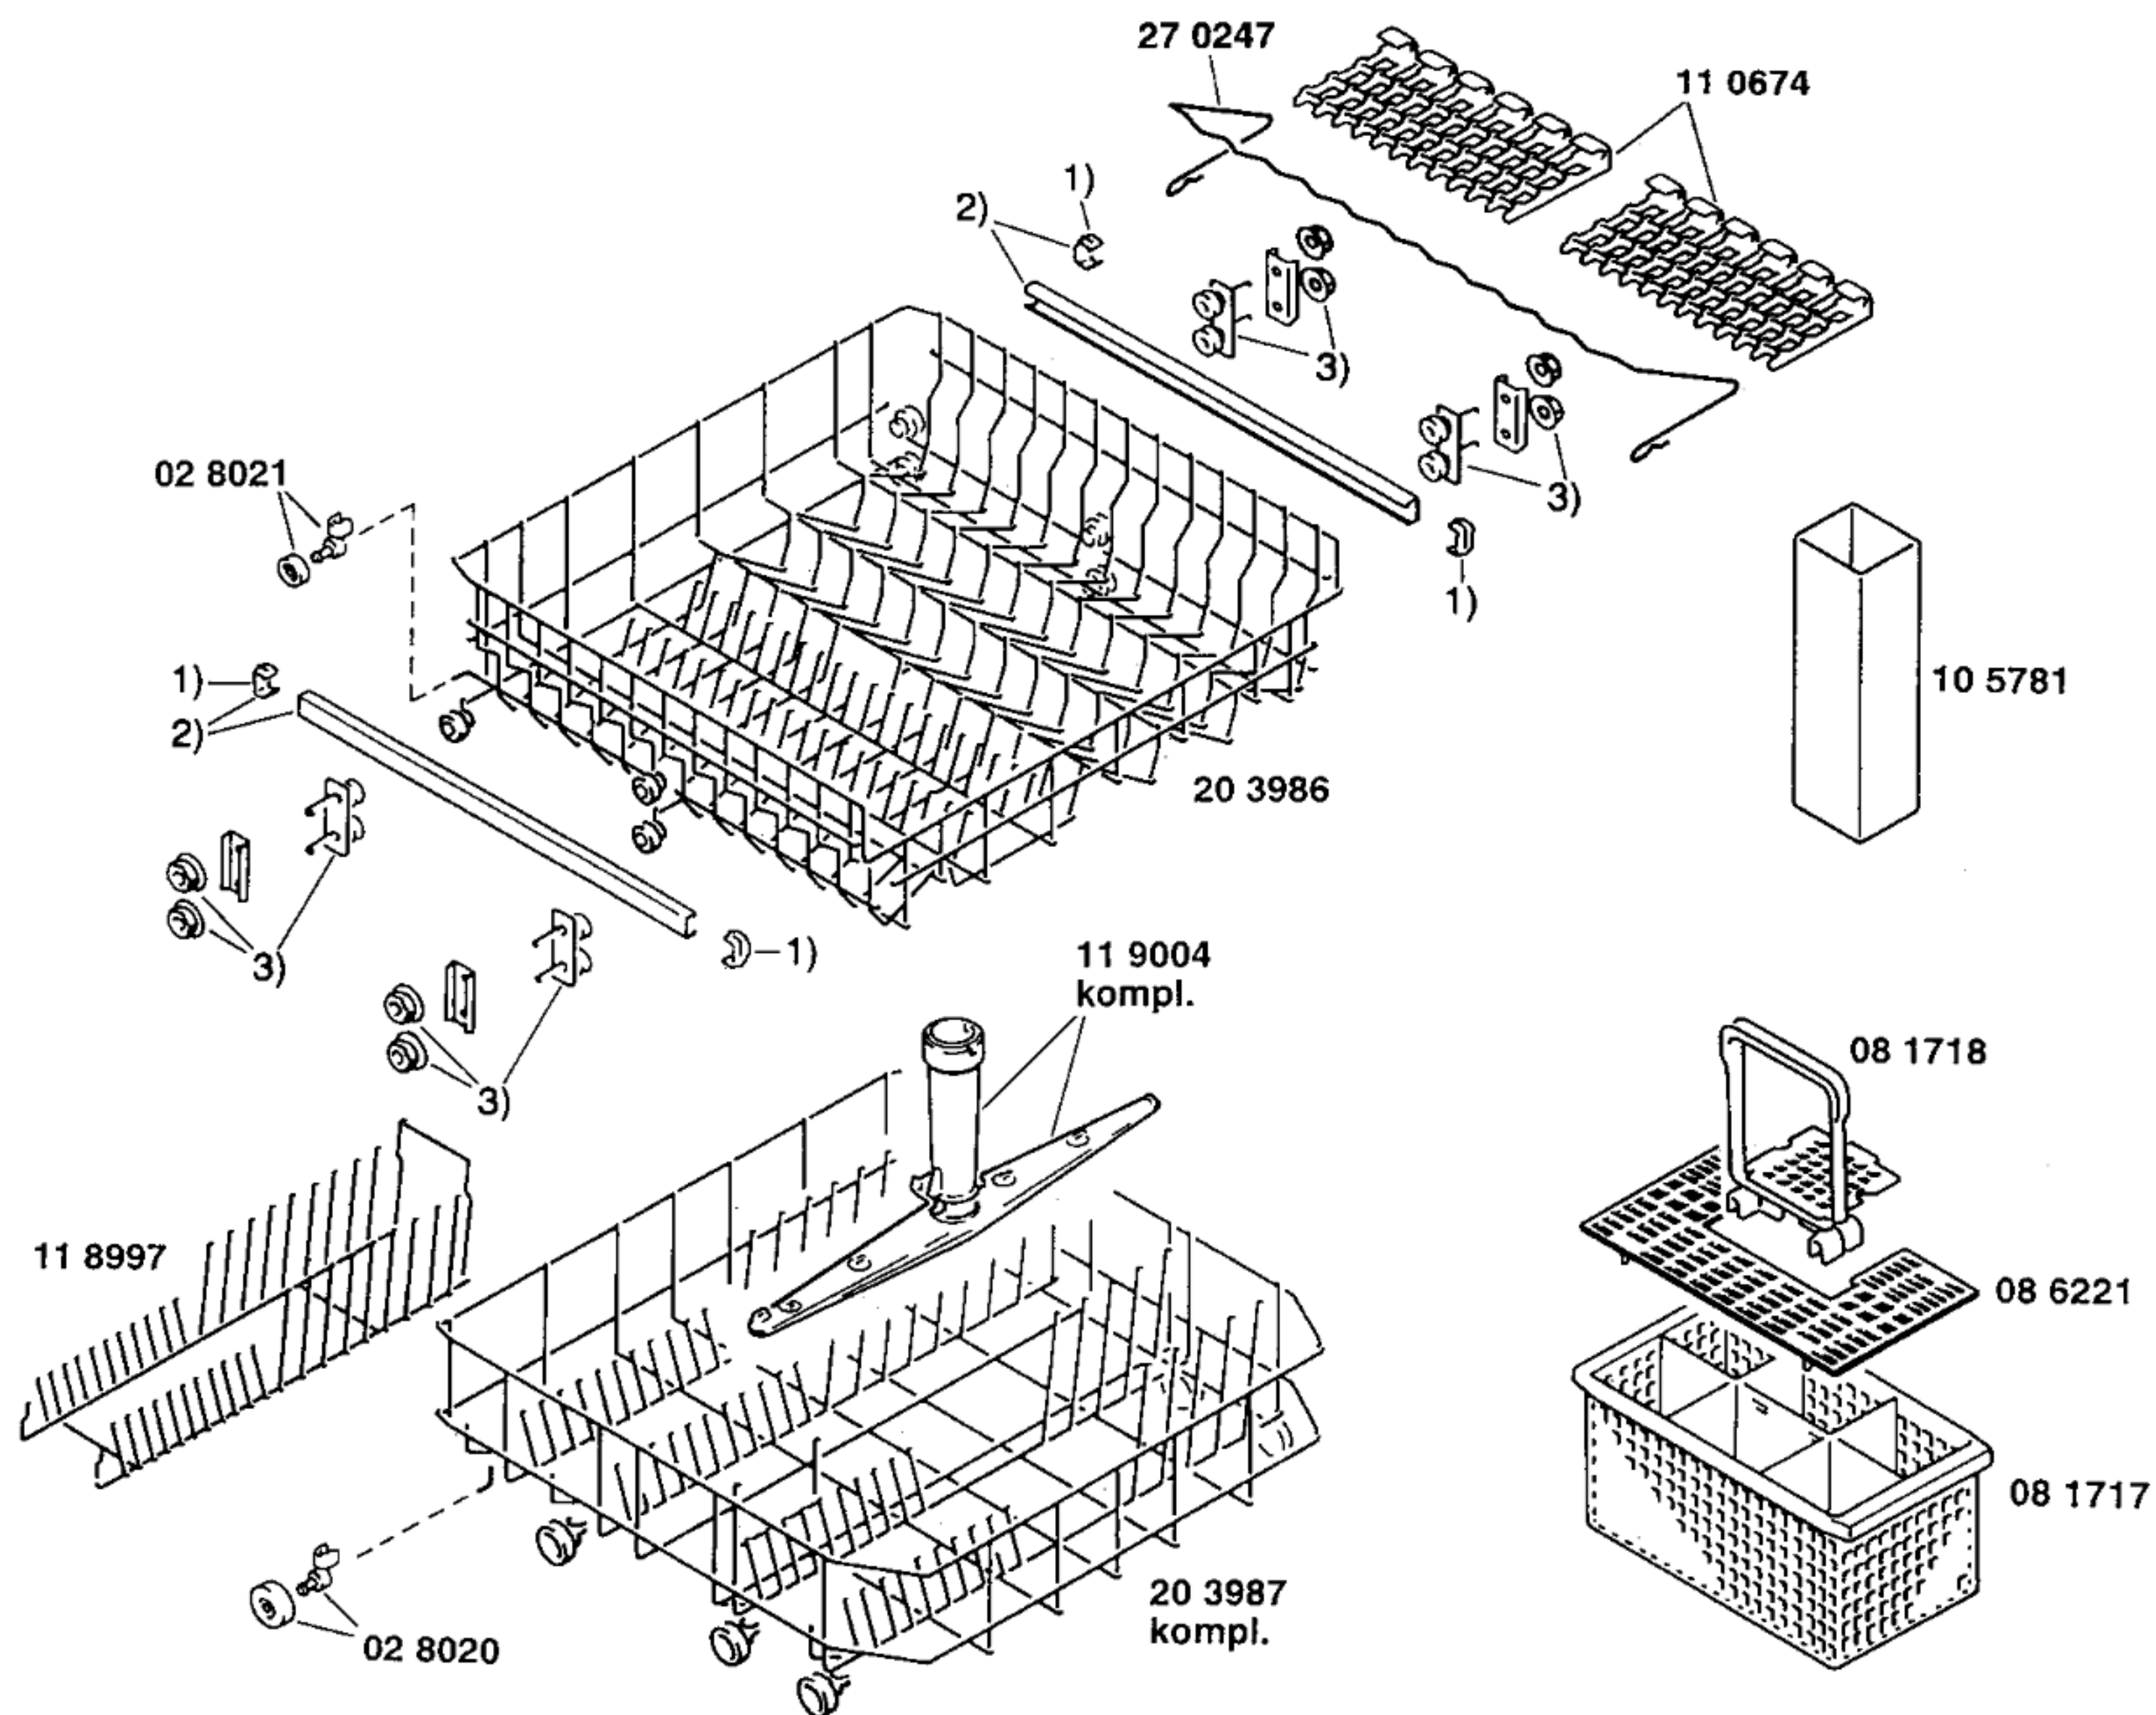Ident – Nummern – Konstante
3740

- 1) 01 9202
2) 11 0668
3) 05 6247