 
 
 


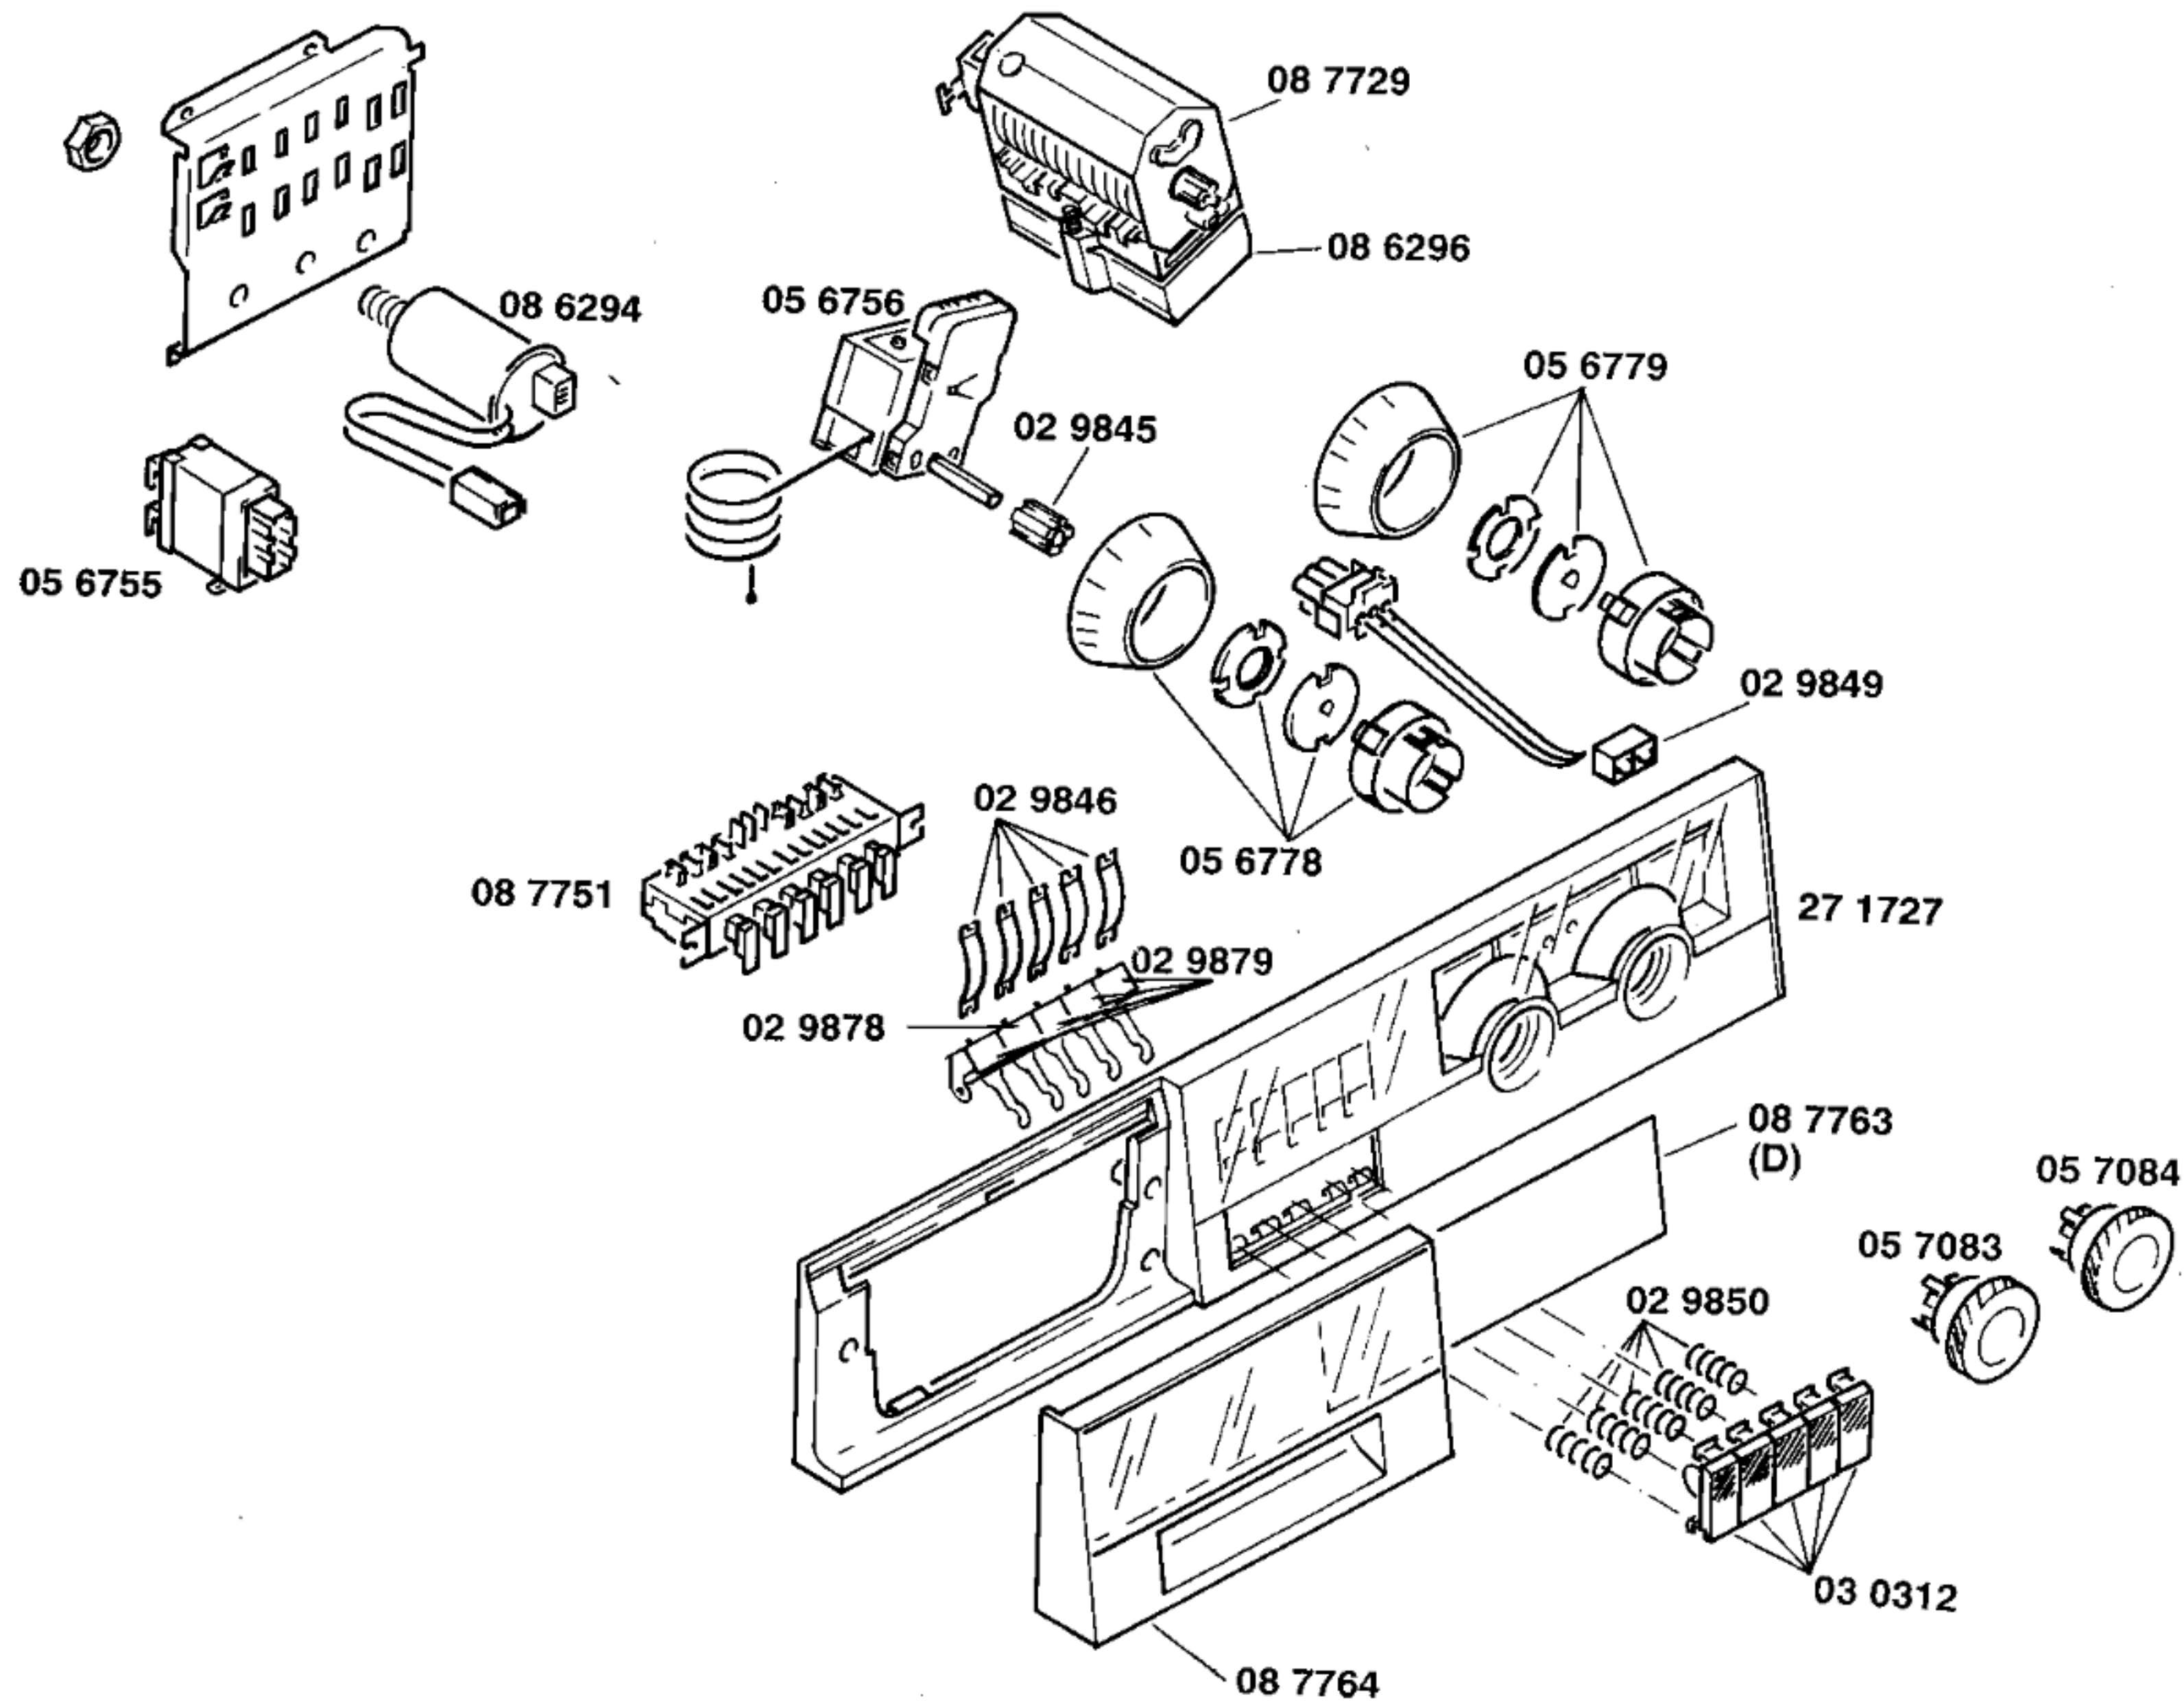

Gebrauchsanweisung
 51 4348
 (D)
 Programmtabelle
 51 3940
 (D)
 Aufstellanweisungen:
 51 3556
 (D,I,S,N,SF)
 51 3557
 (S,DK)
 51 3558
 (NL,F,E,GB)

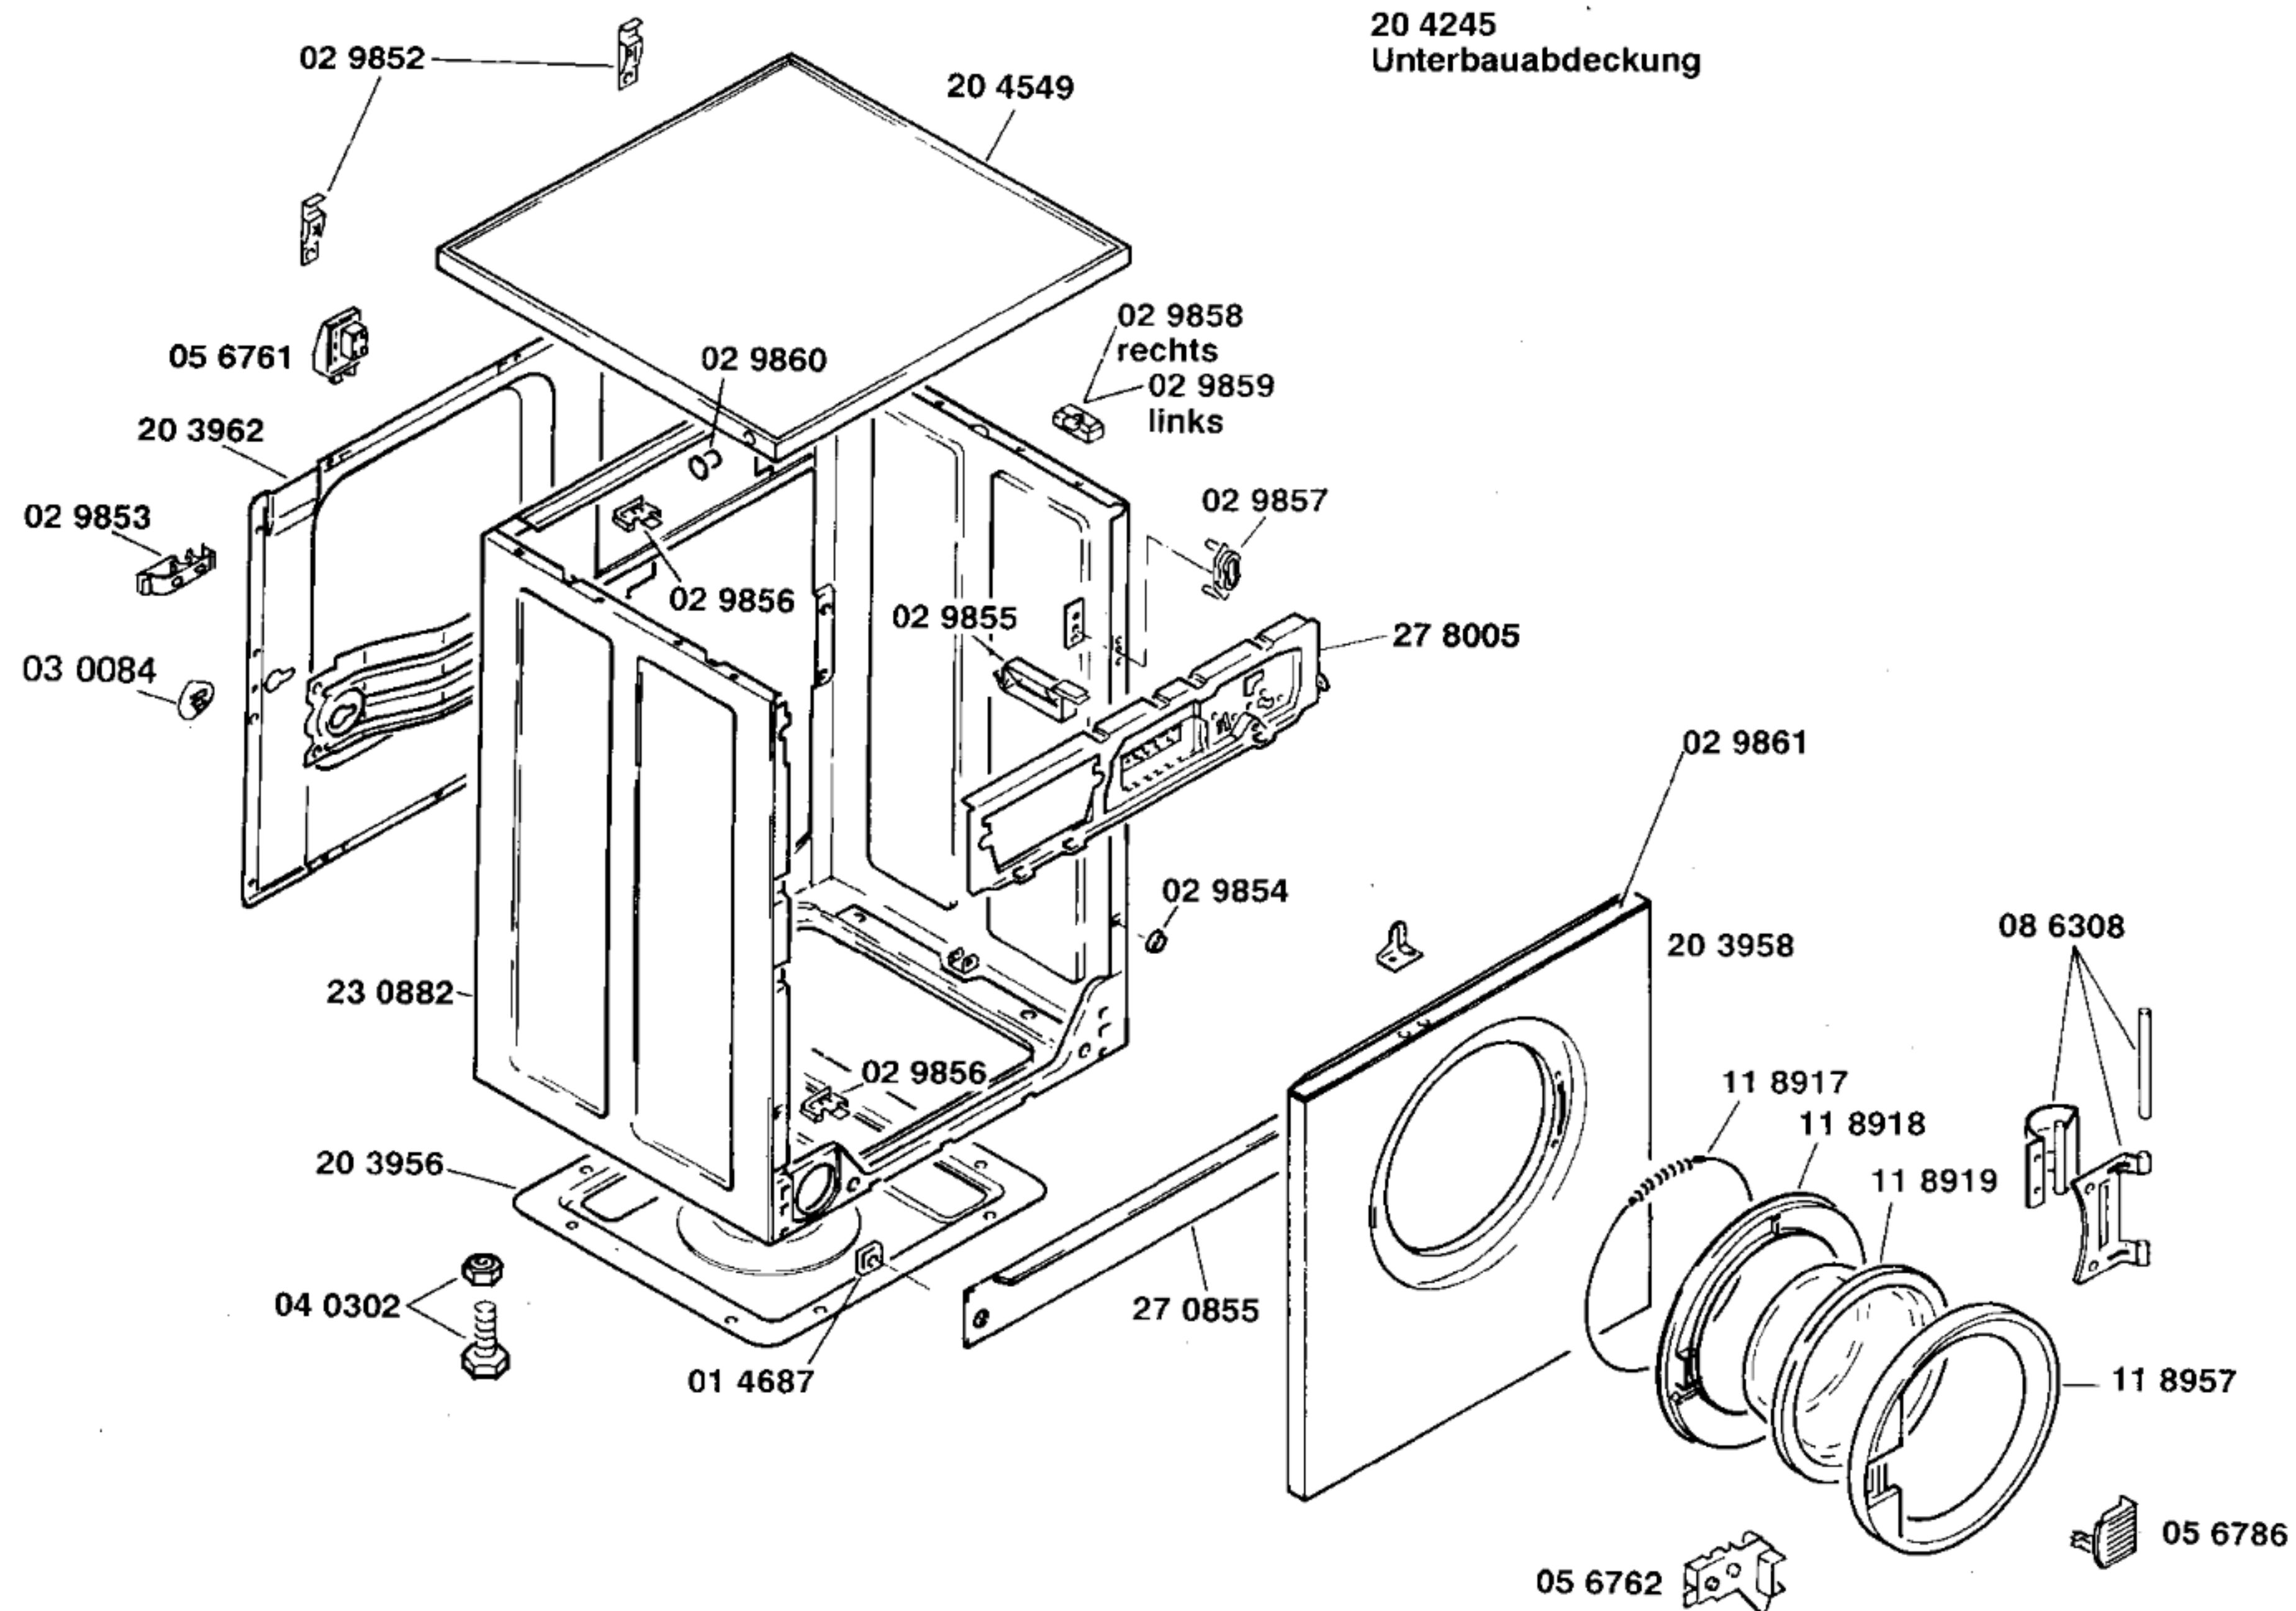

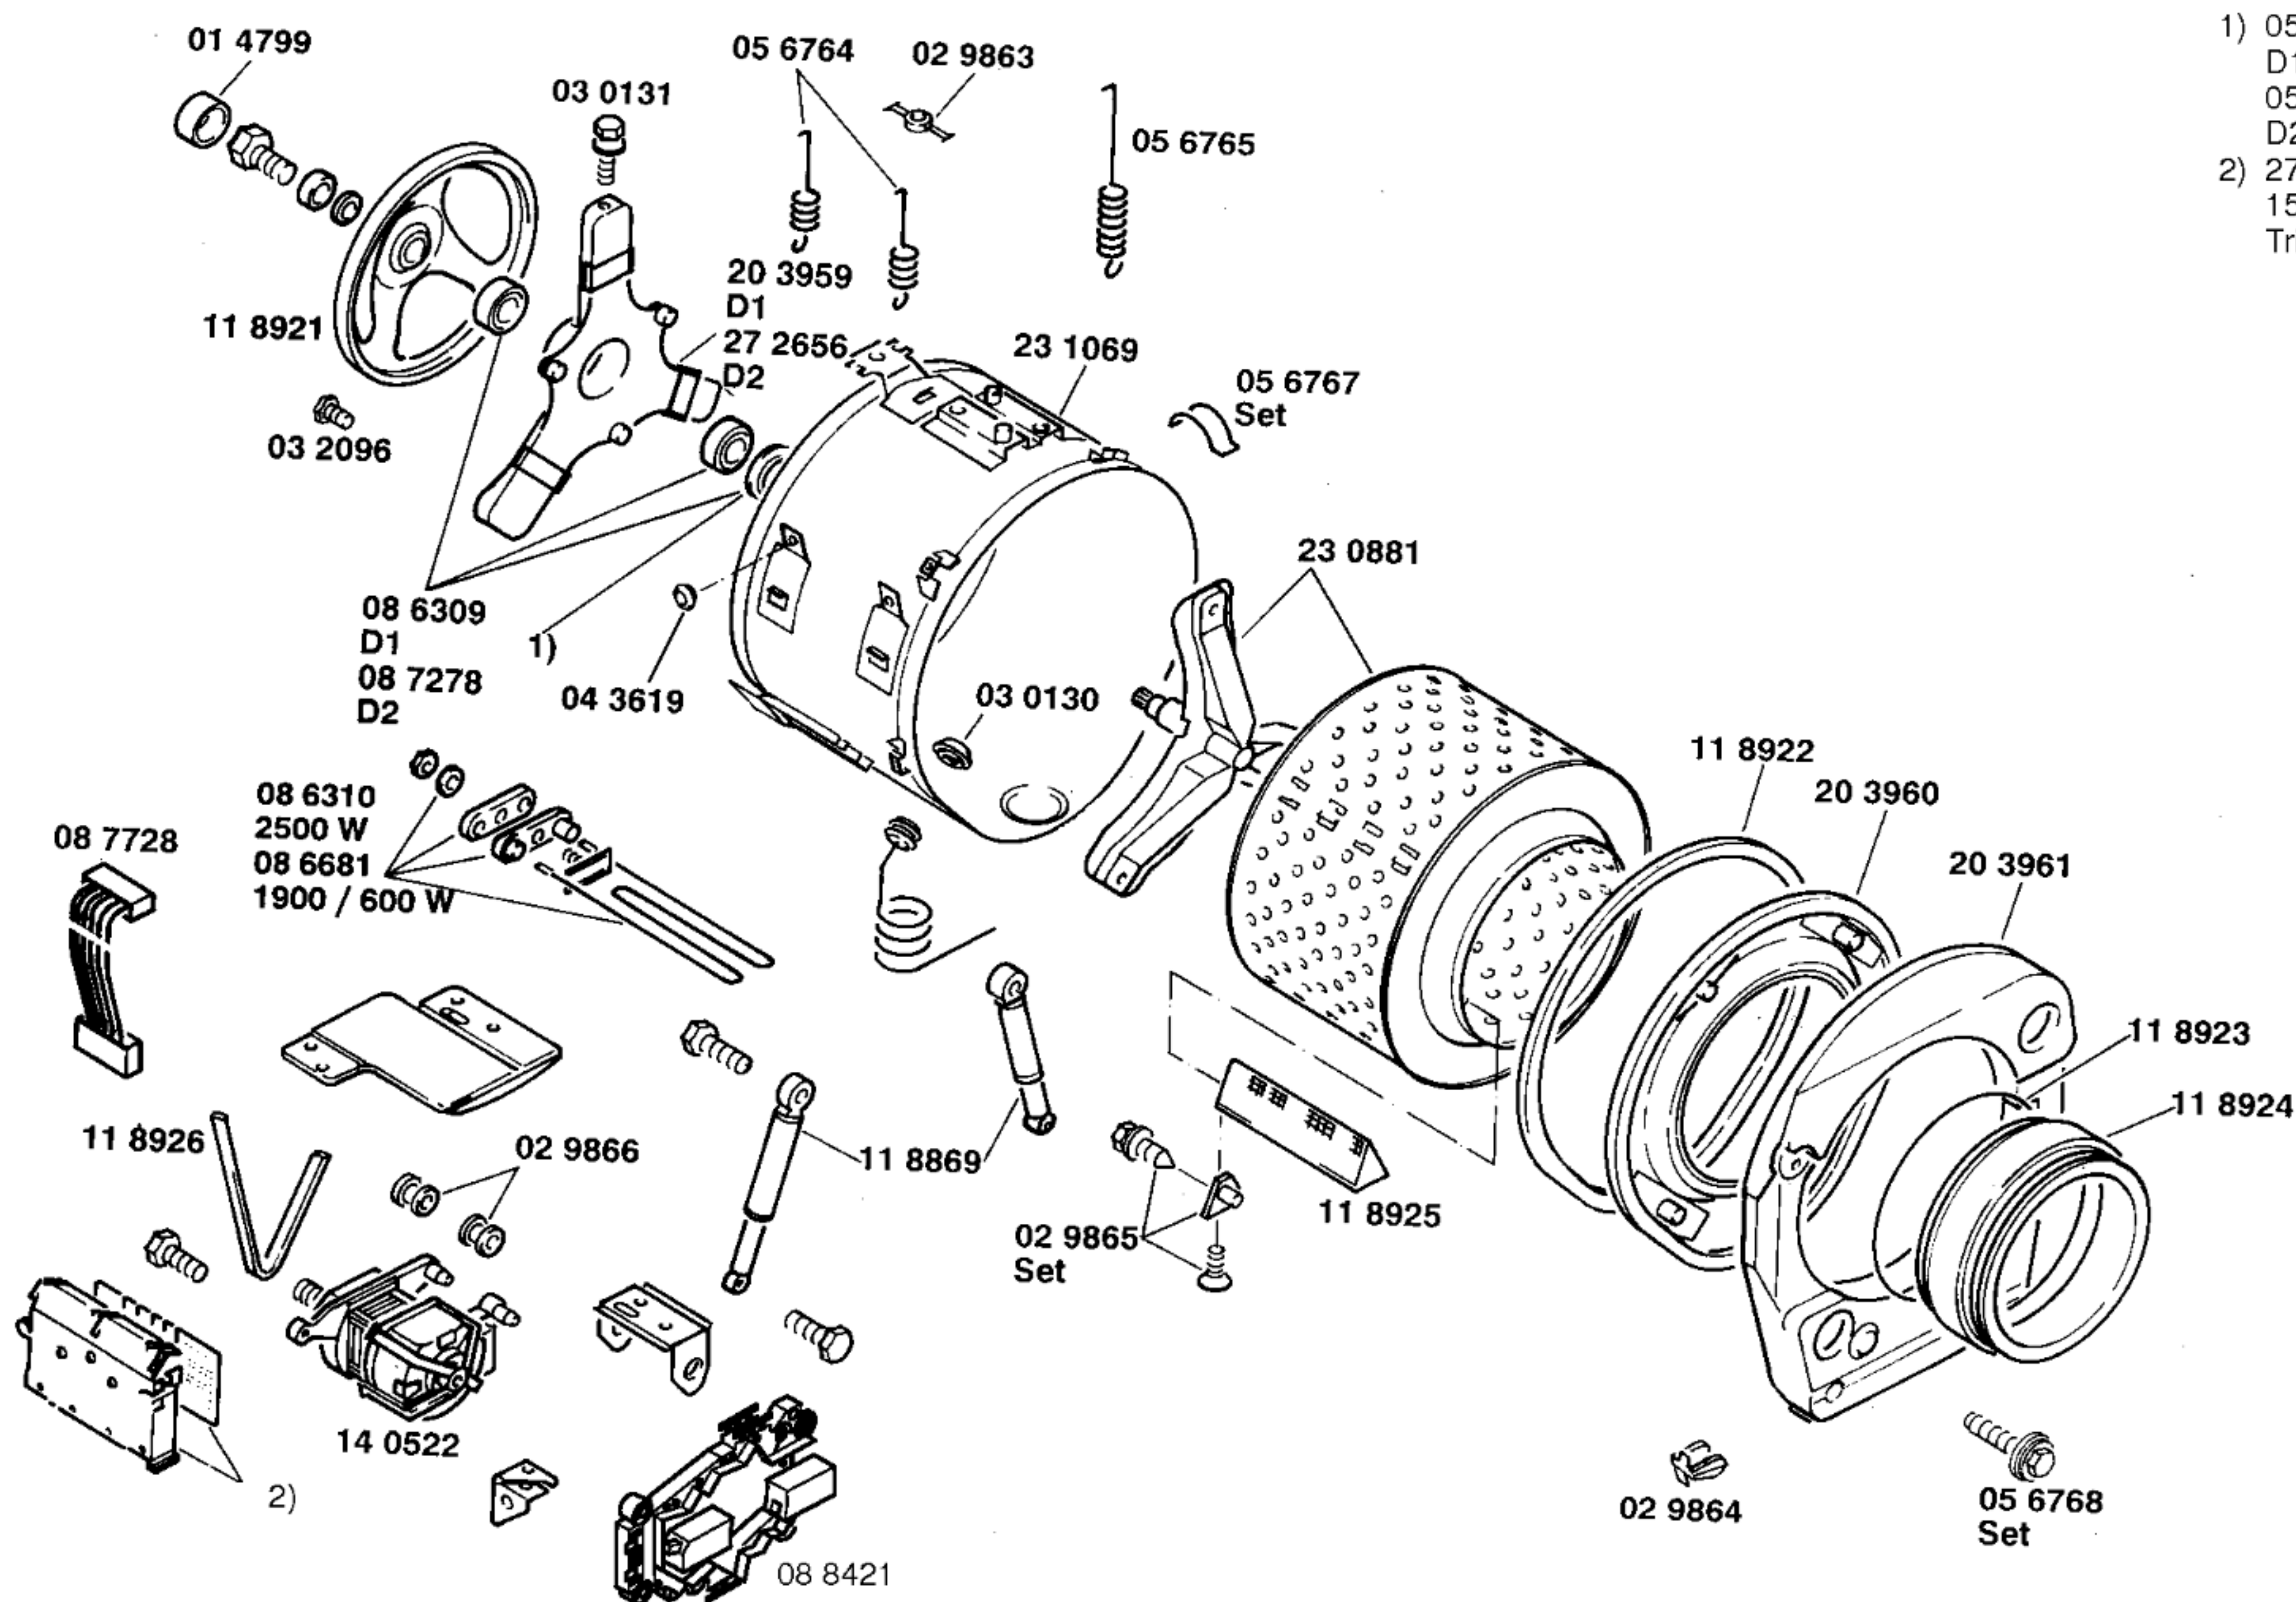

- 1) 05 6766
D1
05 8436
D2
- 2) 27 1715
15 5272
Triac-Motorleistung

