


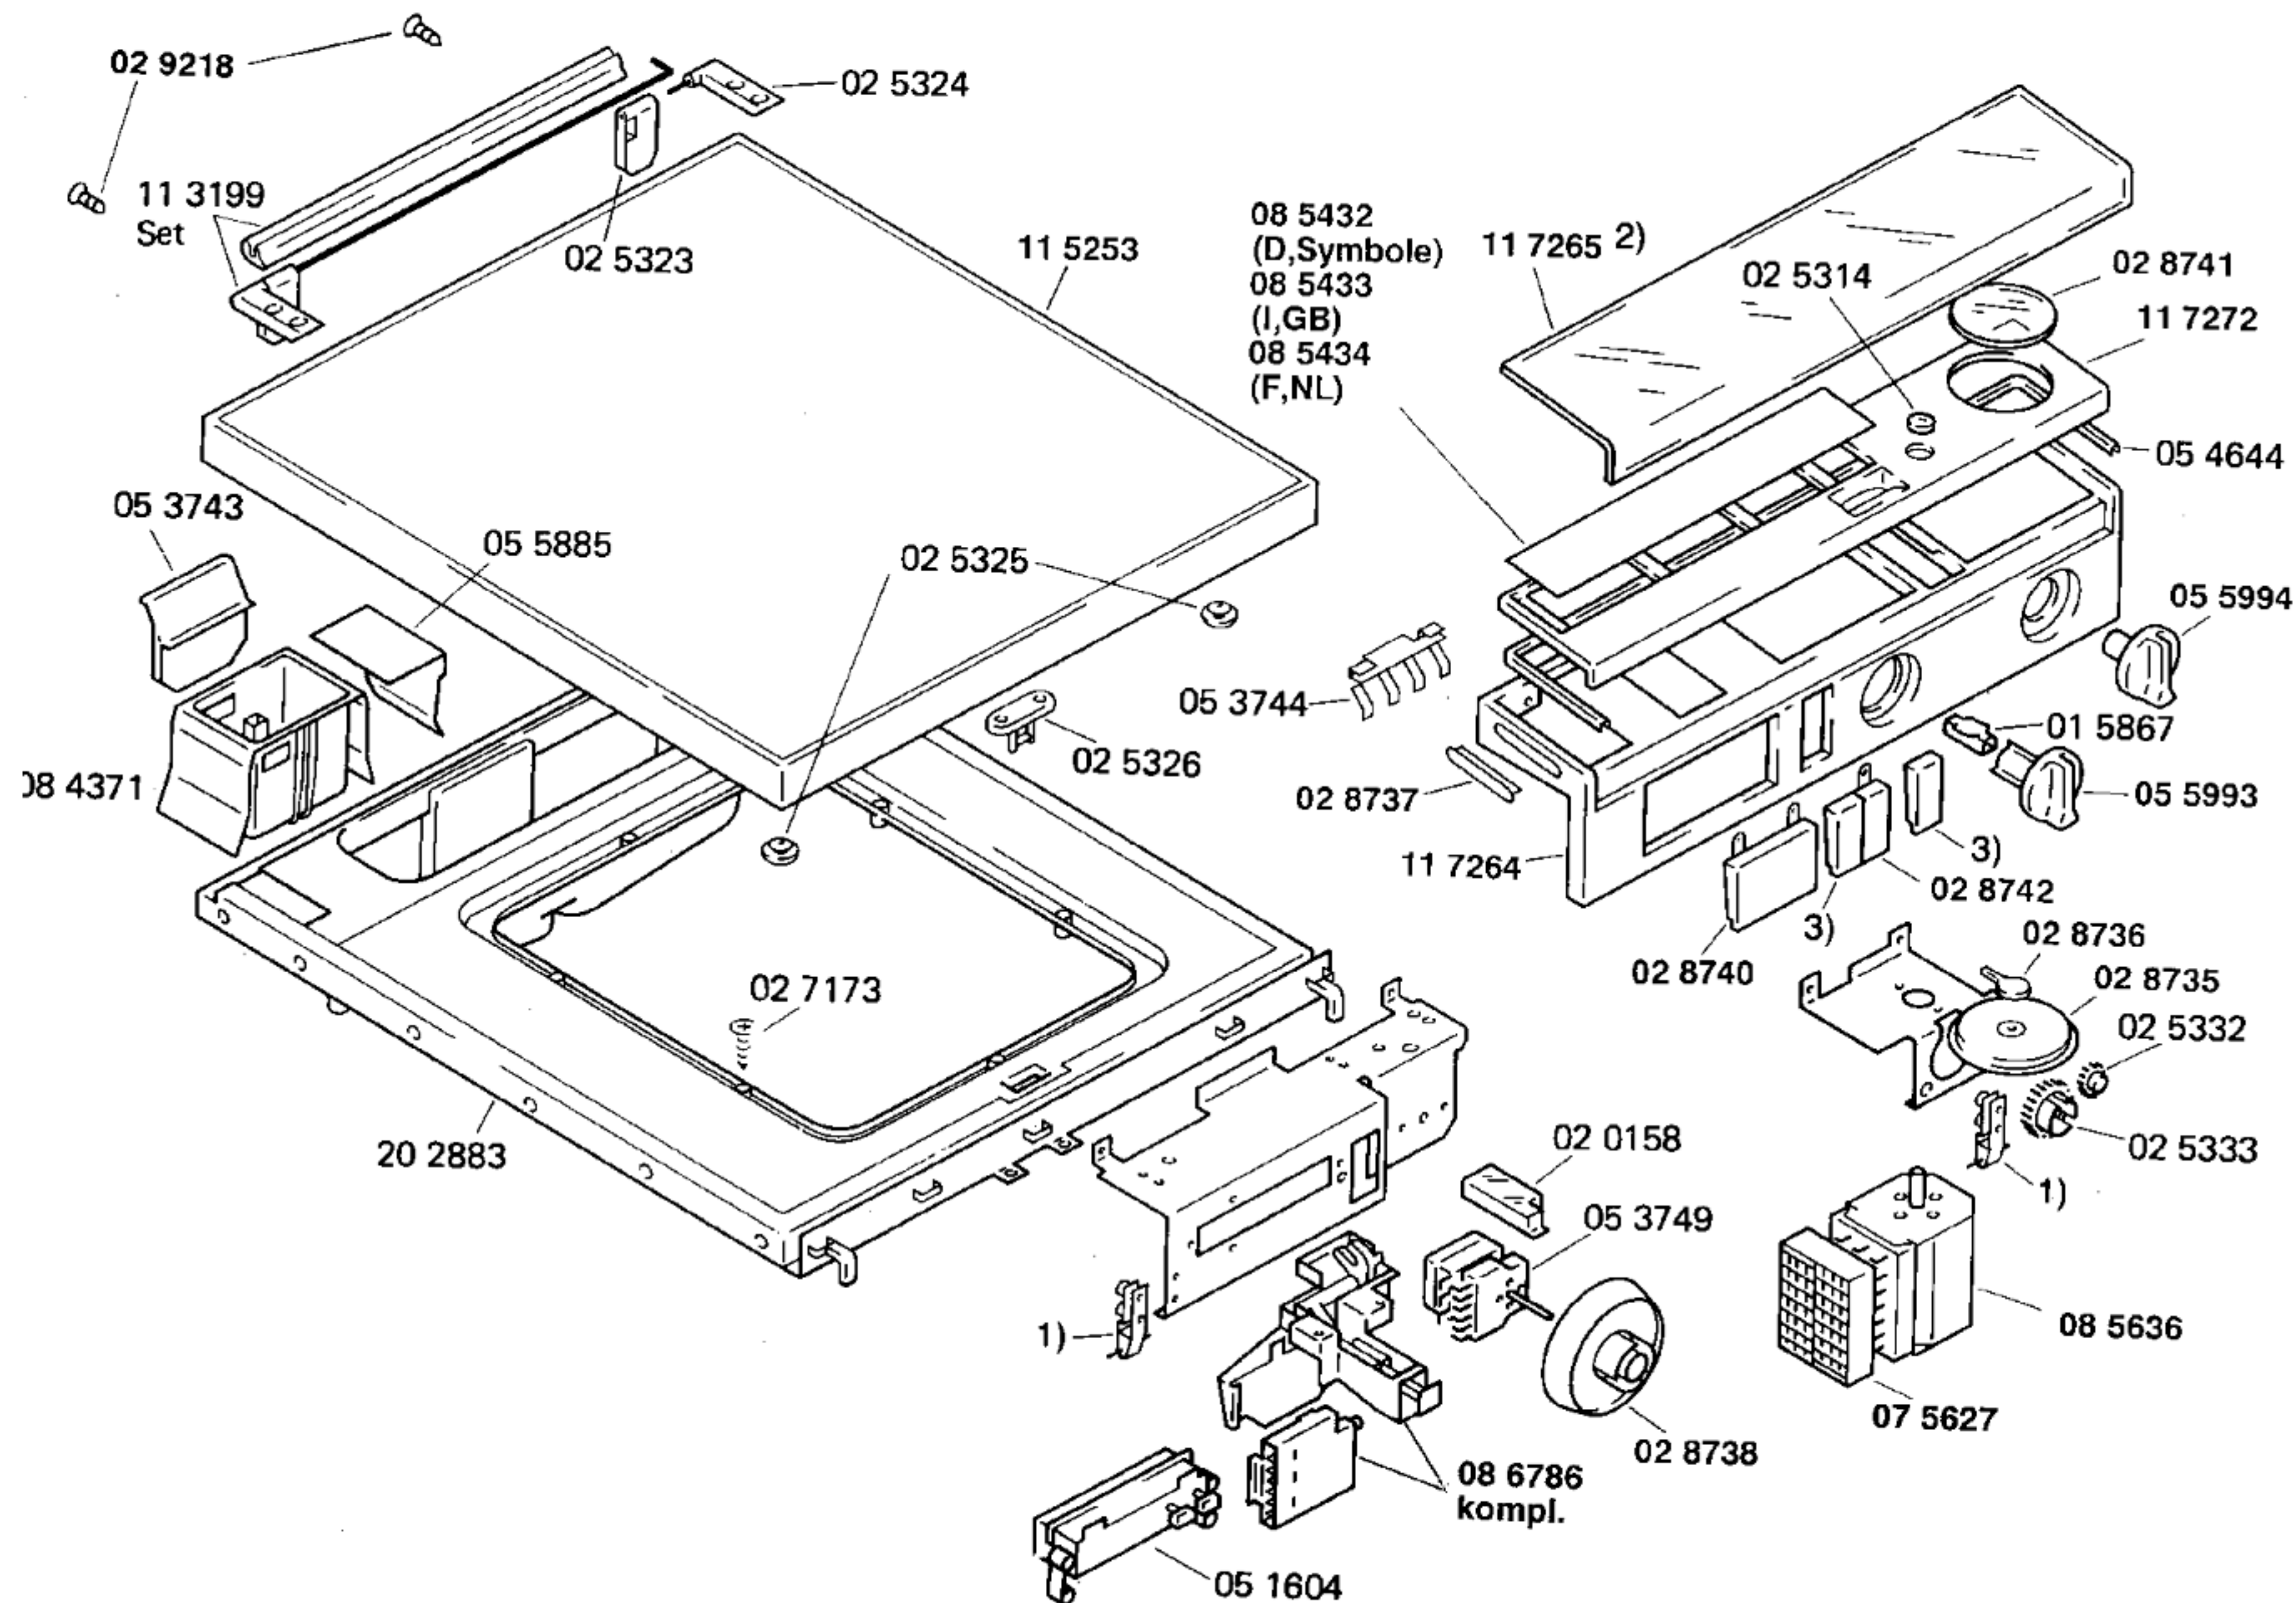

51 1497
Aufstellanweisung
(D,GB,F,I,NL)

51 3020
Gebrauchsanweisung
(D,GB,F,I,NL)

Programmtabelle
51 2841
(D)
51 2680
(D,GB,F,I,NL,SF)

1) 02 5334

2) einschl. 05 4644

3) 02 8739


Ident – Nummern – Konstante
3740

1) 04 5561

2) 01 4687

3) 02 8437

4) 02 5345

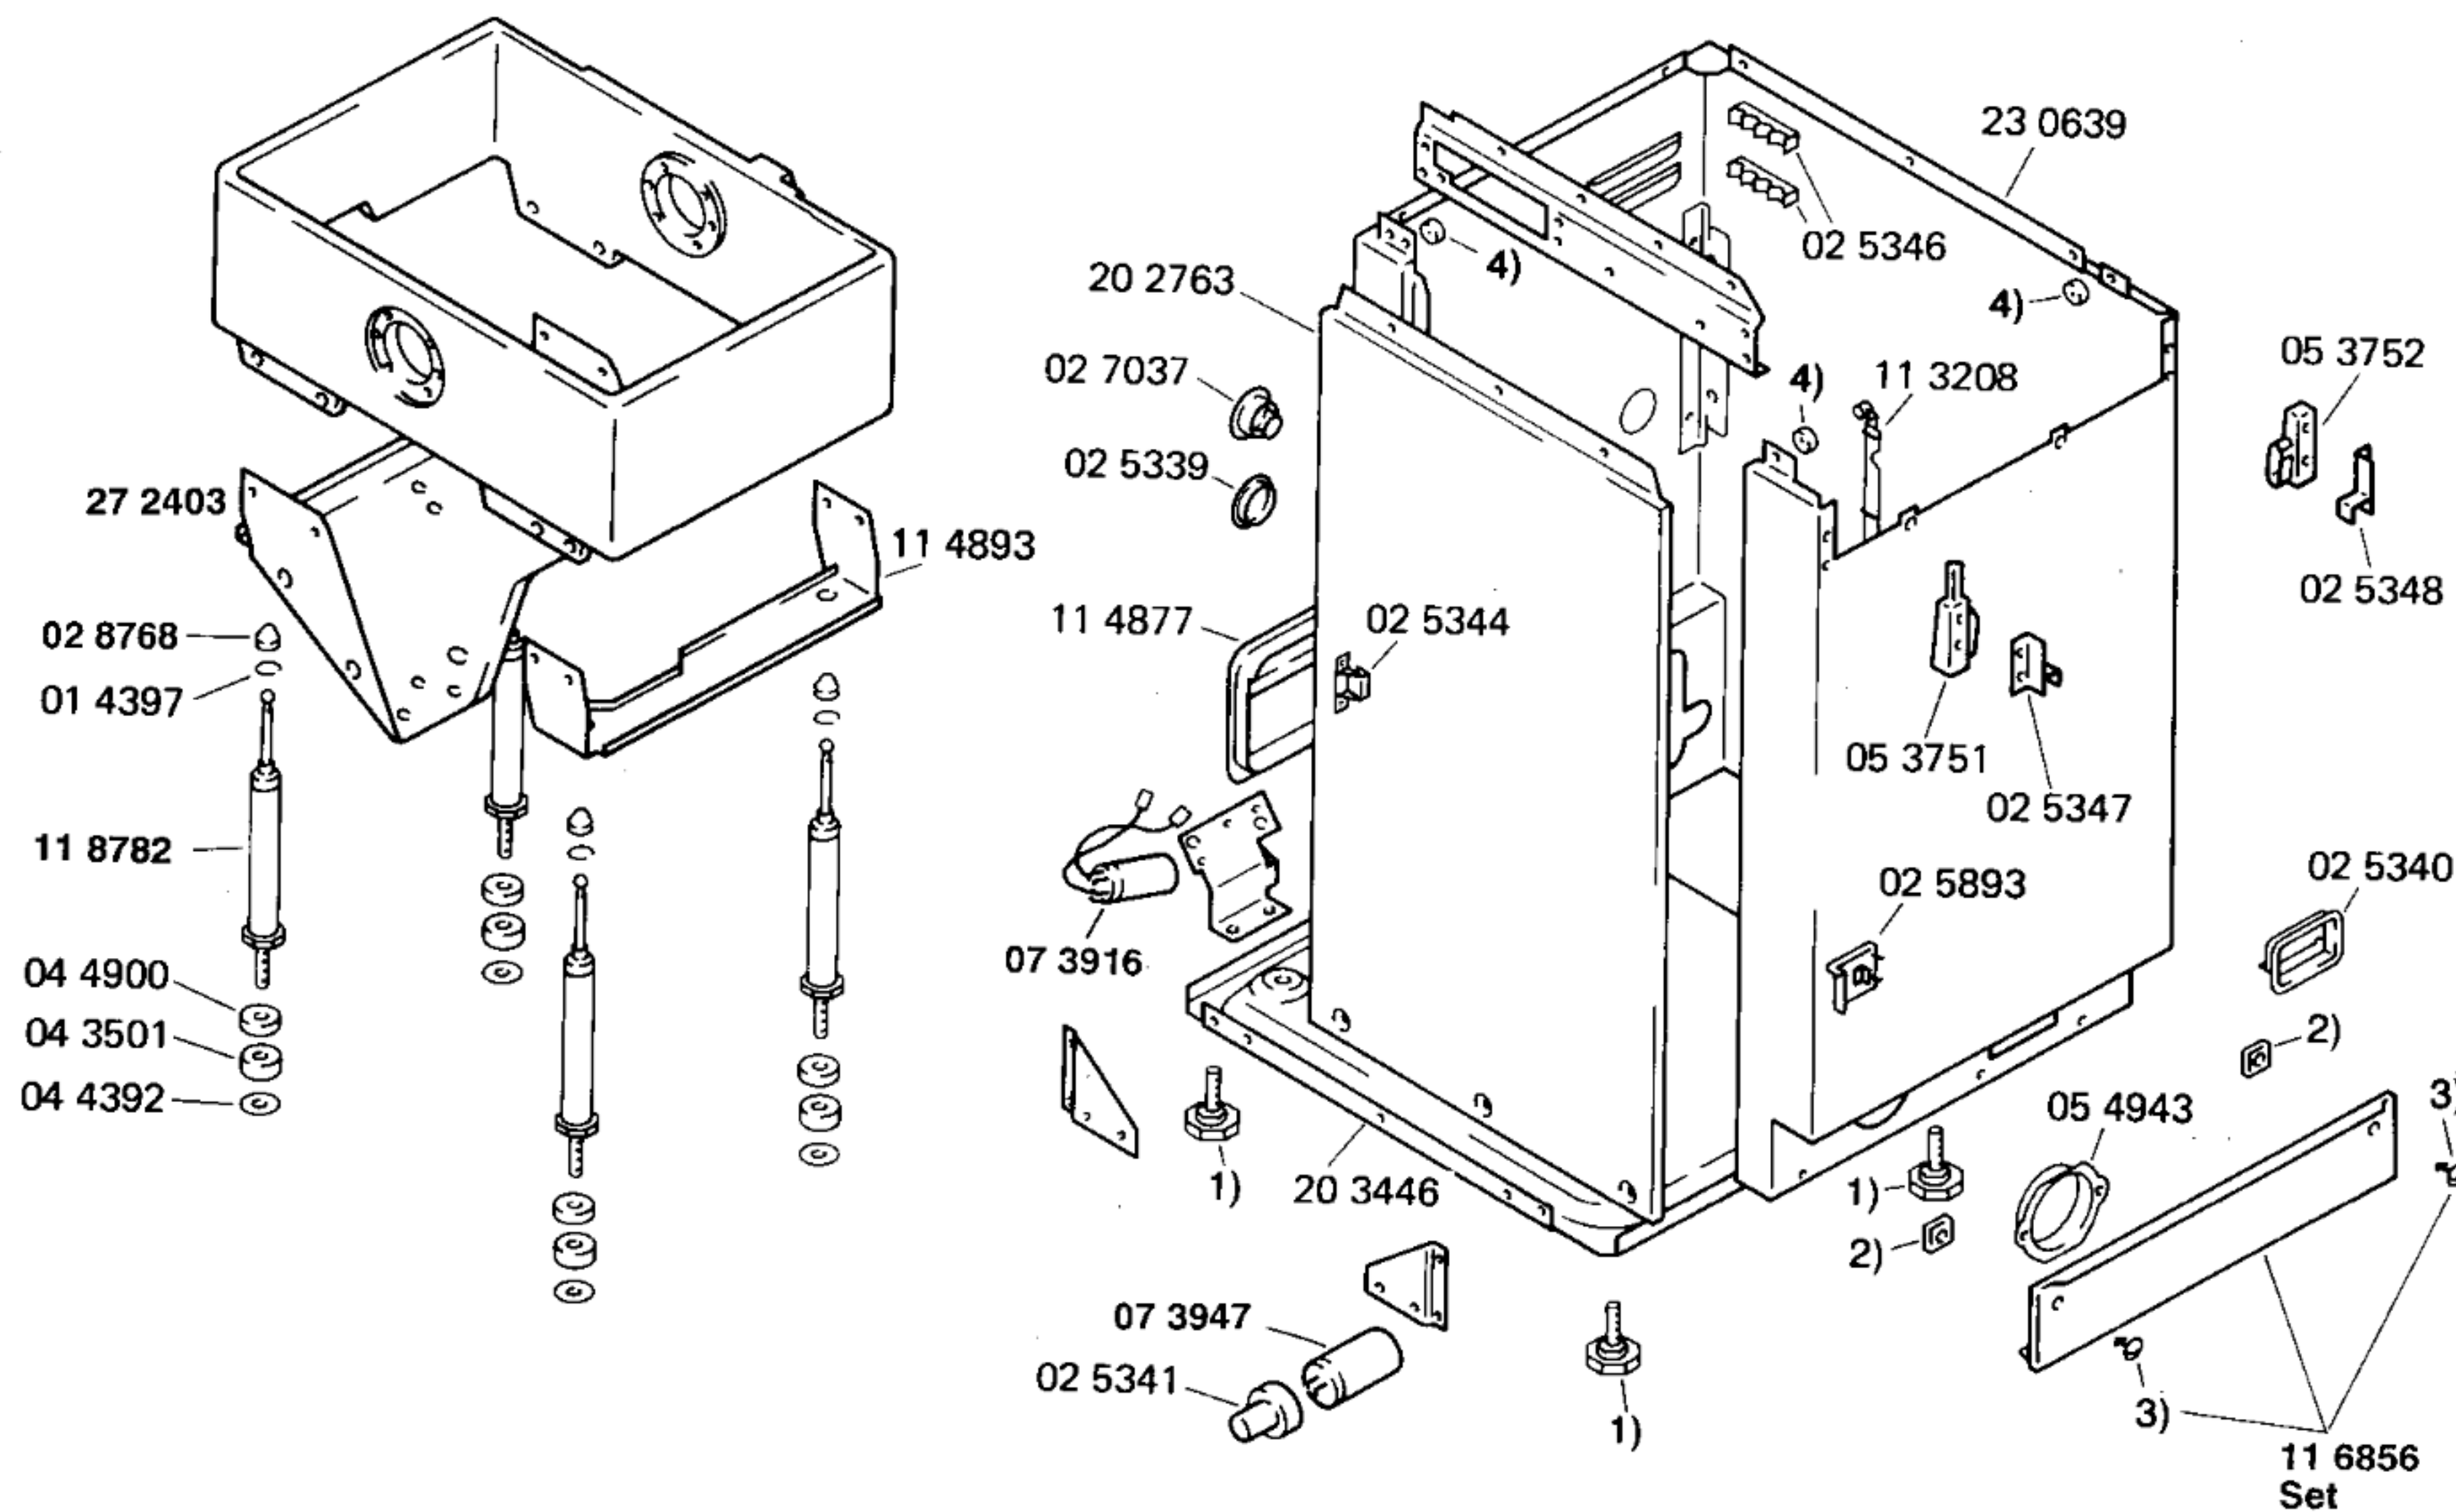


**BOSCH**

V336-V3365/03-D1
 V336-V336534/03-Exp.1
 V336-V3365/04-D2
 V336-V336534/04-Exp.2

WASCHGERÄTE
 Waschvollautomaten

Ident – Nummern – Konstante
 3740

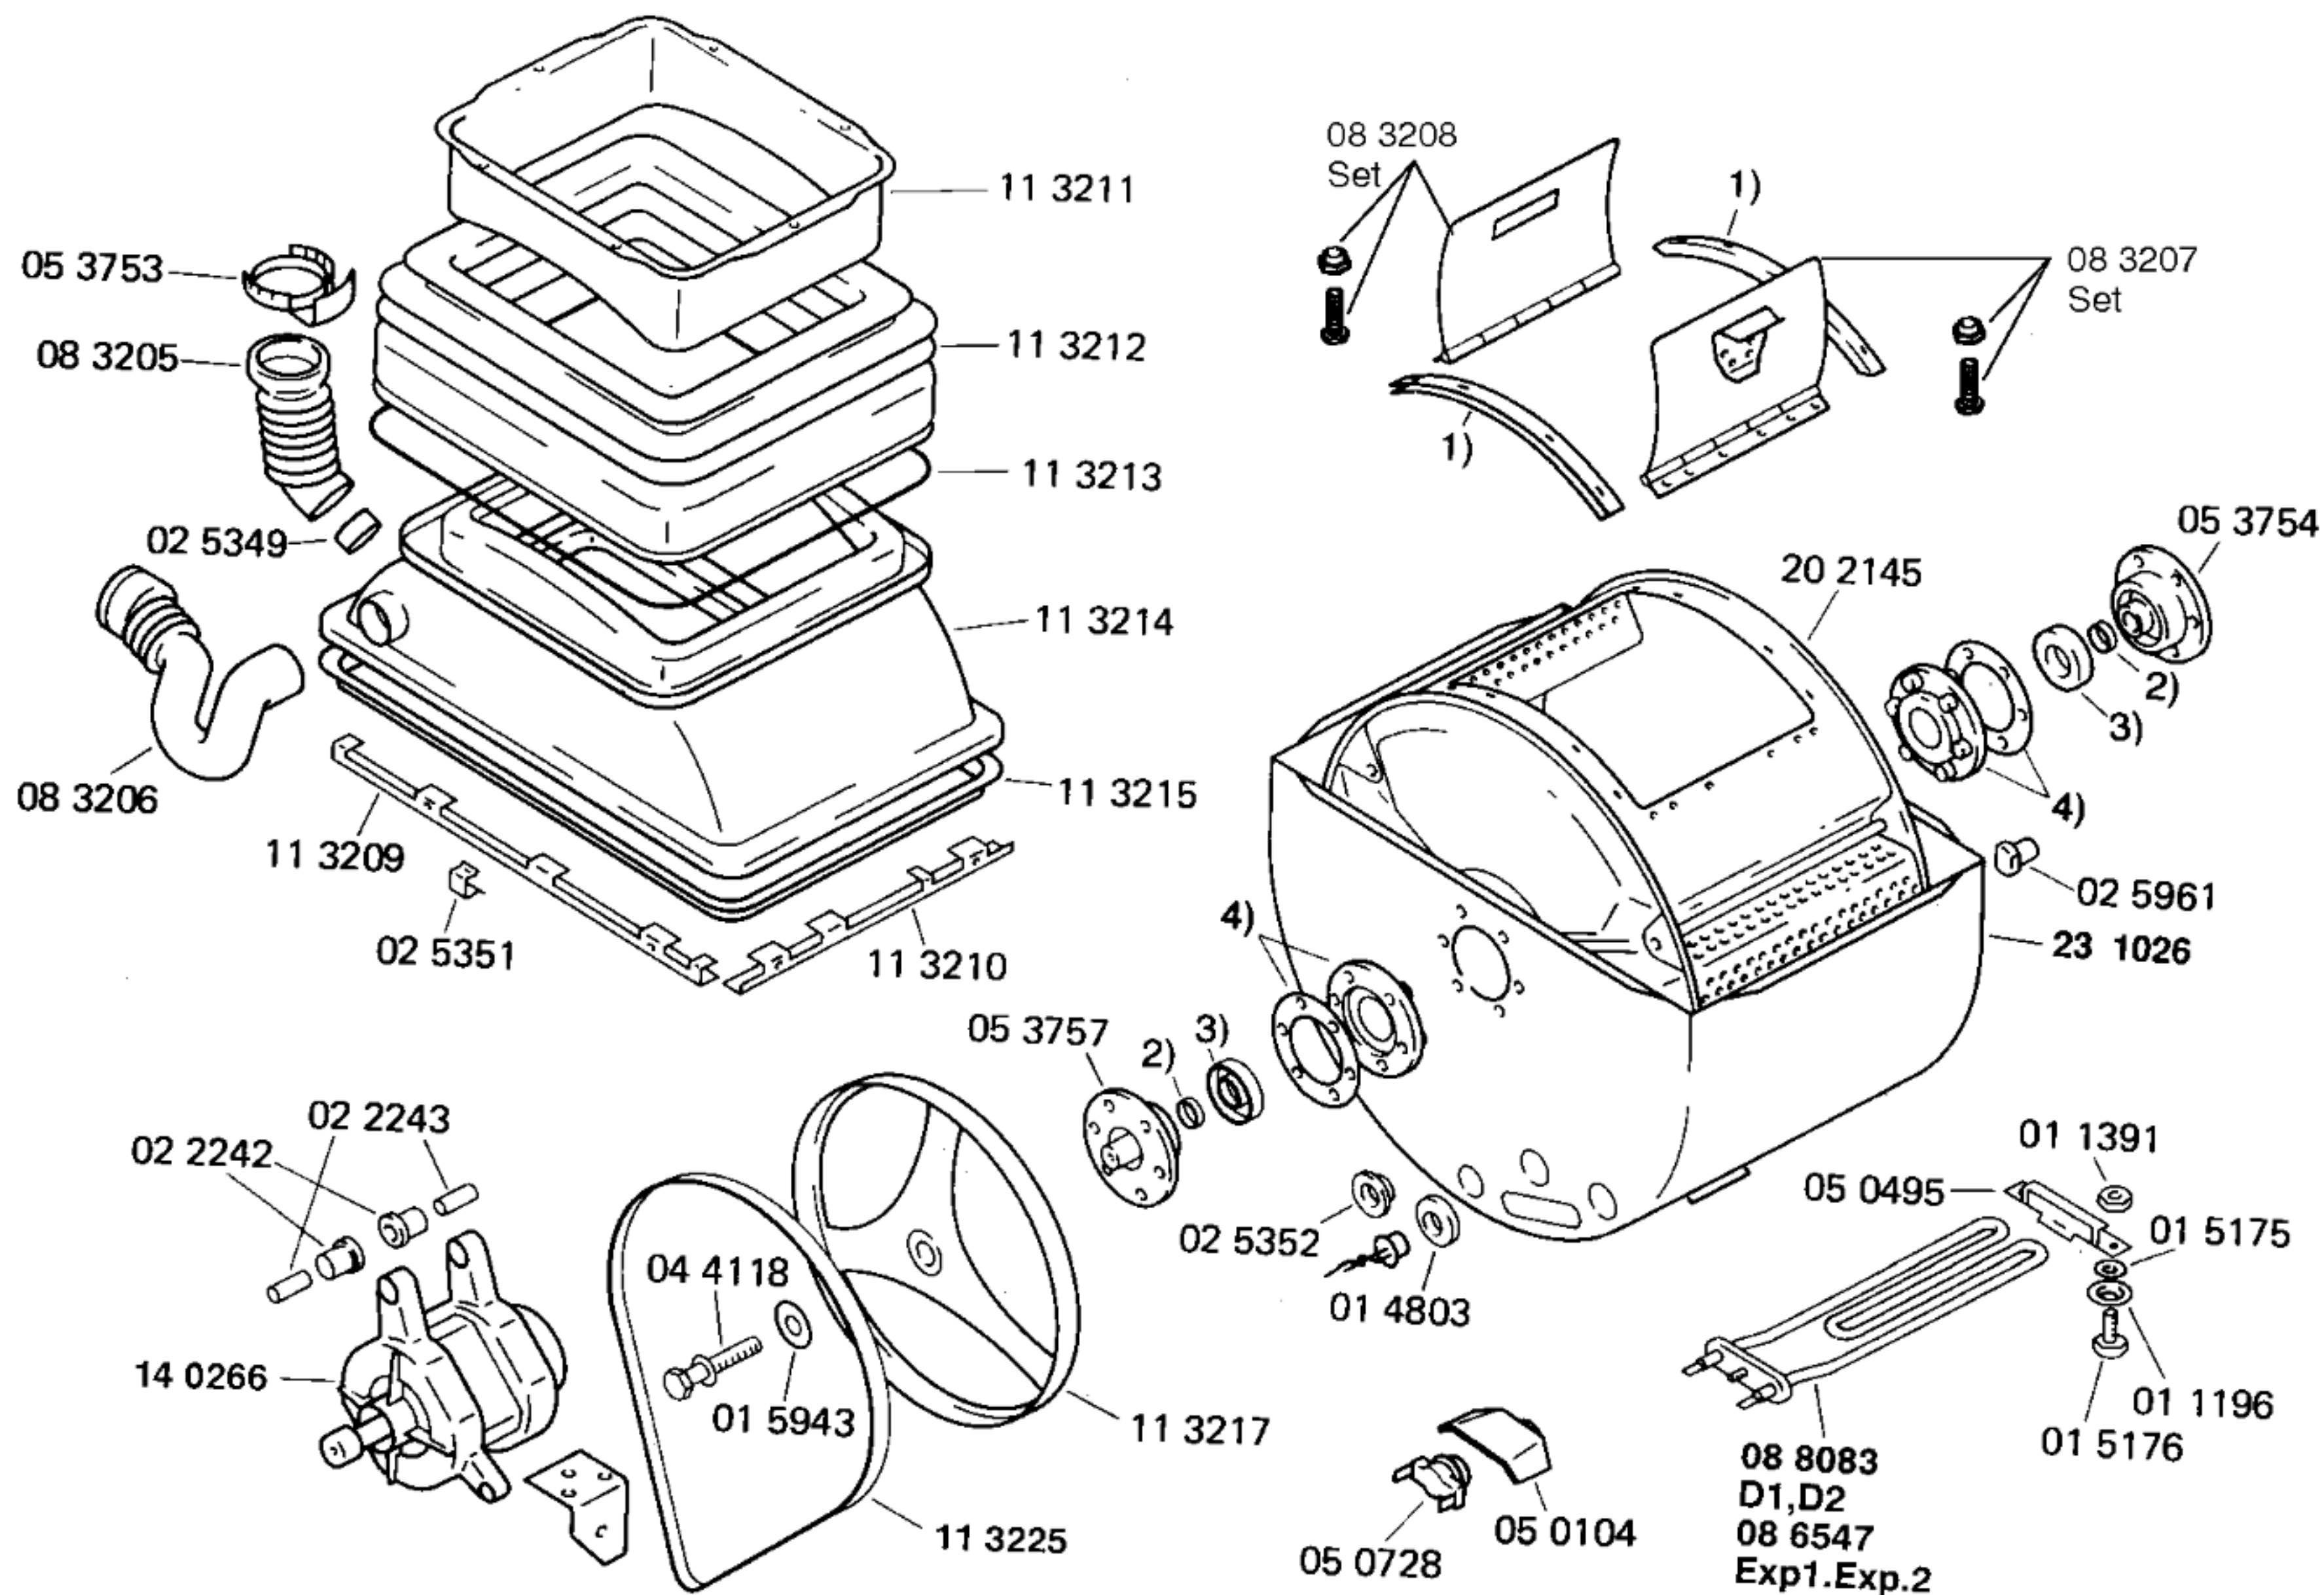

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 7022

**BOSCH**

V336-V3365/03-D1
V336-V336534/03-Exp.1
V336-V3365/04-D2
V336-V336534/04-Exp.2

WASCHGERÄTE
Waschvollautomaten

Ident – Nummern – Konstante
3740

