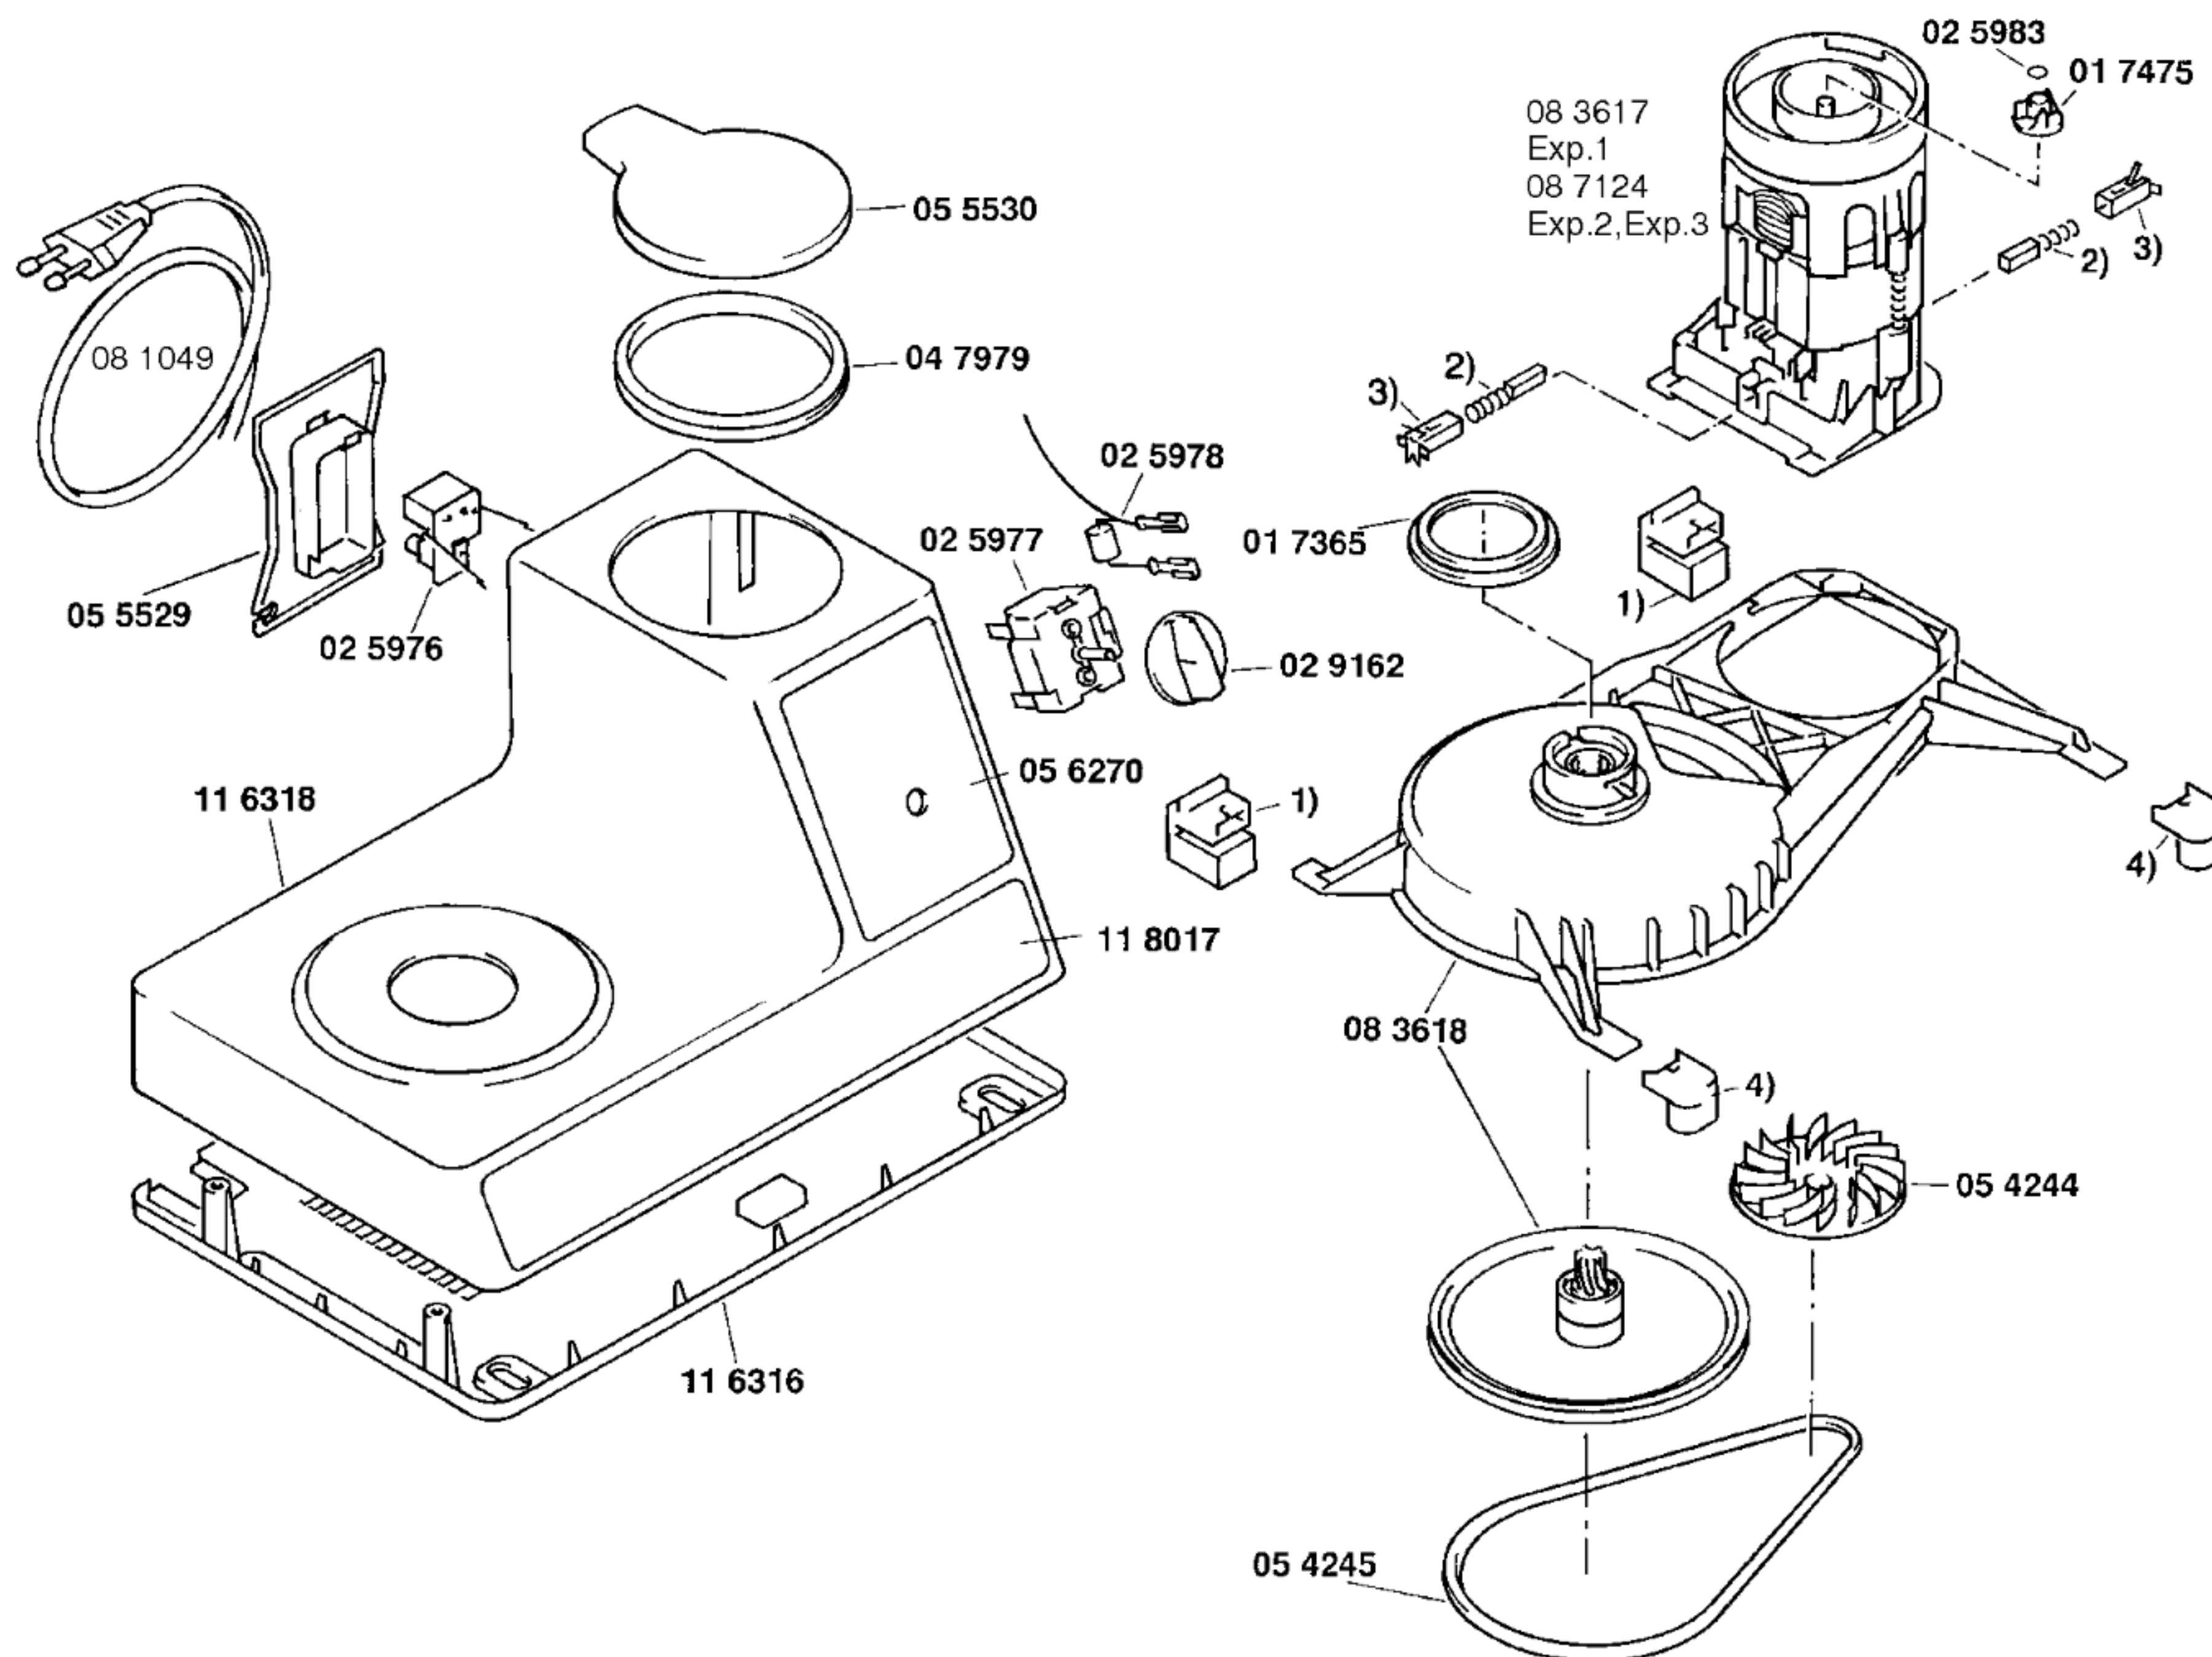


**BOSCH**

MUM600246/00-Exp.1

MUM600246/01-Exp.2

MUM600246/02-Exp.3

KLEINE HAUSGERÄTE
KüchenmaschinenIdent – Nummern – Konstante
3740Gebrauchsanweisung
51 1725
(D,GB,F,I,NL,DK,N,S,SF)

- 1) 02 5980
- 2) 02 5981
Exp.1
03 0881
Exp.2,Exp.3
- 3) 02 5982
Exp.1
- 4) 02 5984



BOSCH

MUM600246/00-Exp.1
MUM600246/01-Exp.2
MUM600246/02-Exp.3

KLEINE HAUSGERÄTE
Küchenmaschinen

Ident – Nummern – Konstante
3740

1) 04 9607

