


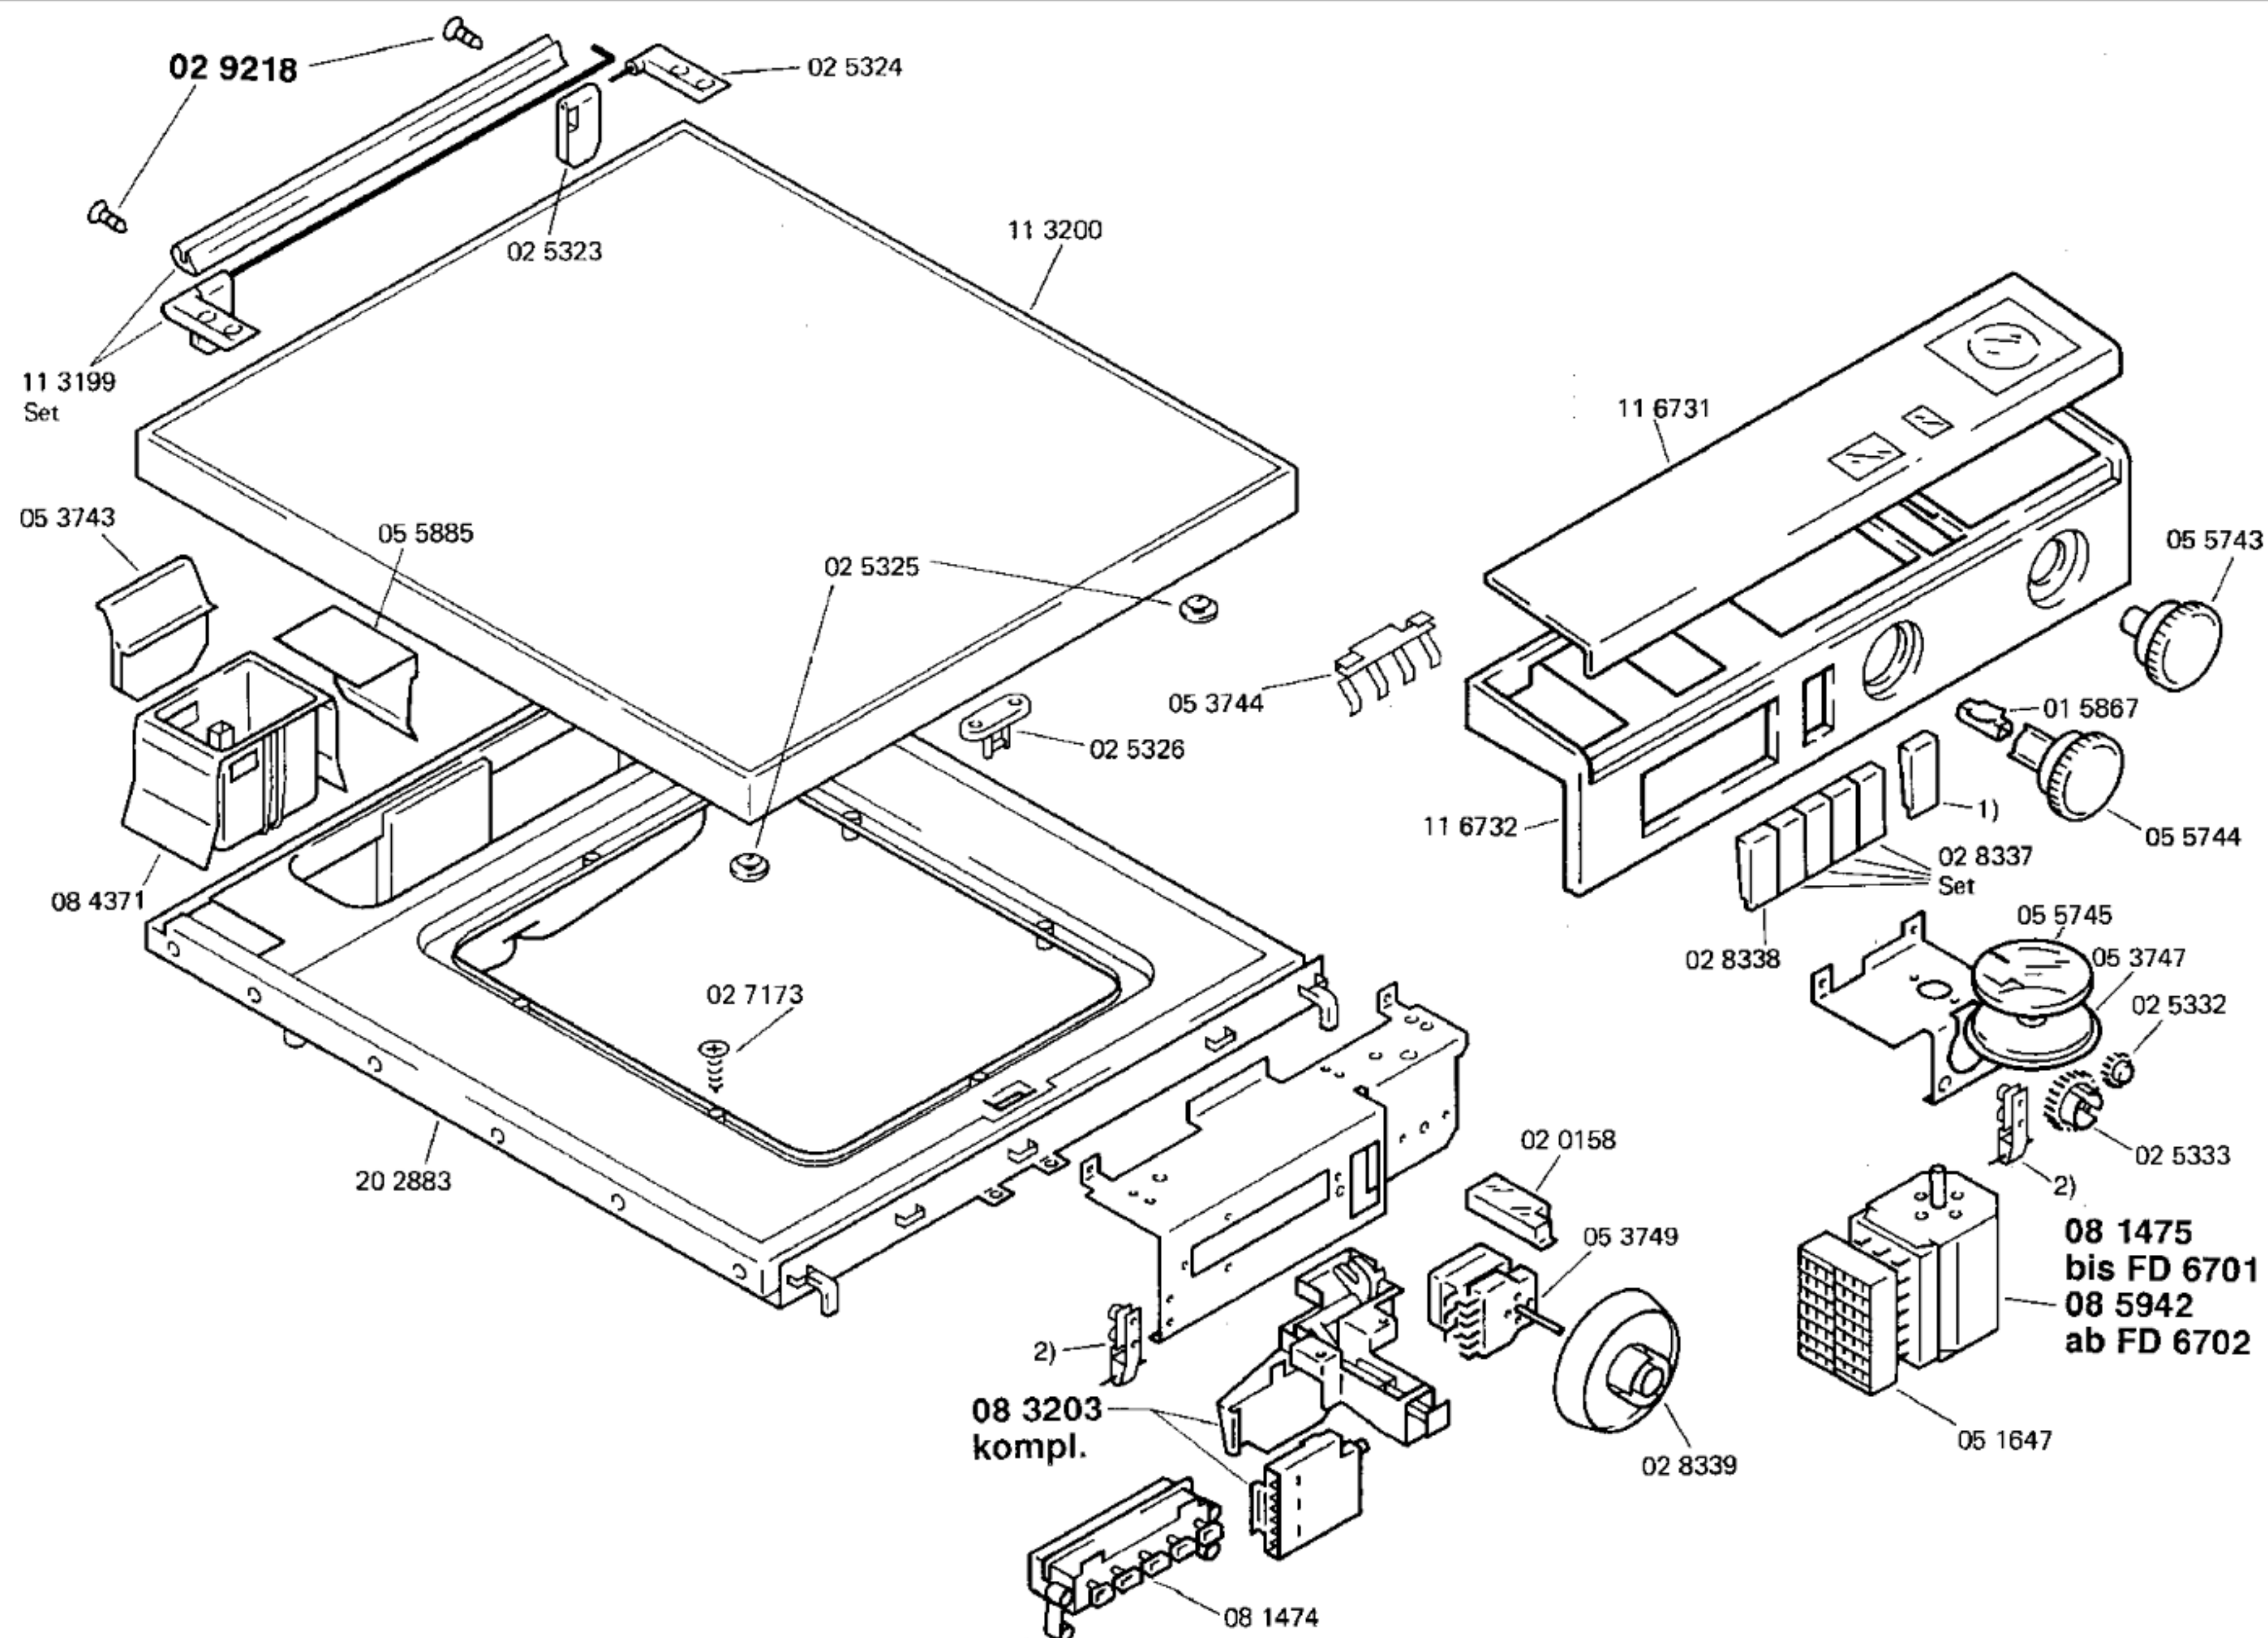


1) 02 8336

2) 02 5334

 51 1497  
Aufstellanweisung  
(D, GB, F, I, NL)


 51 2812  
Gebrauchsanweisung  
(D)

 51 1766  
Programmtabelle  
(D)

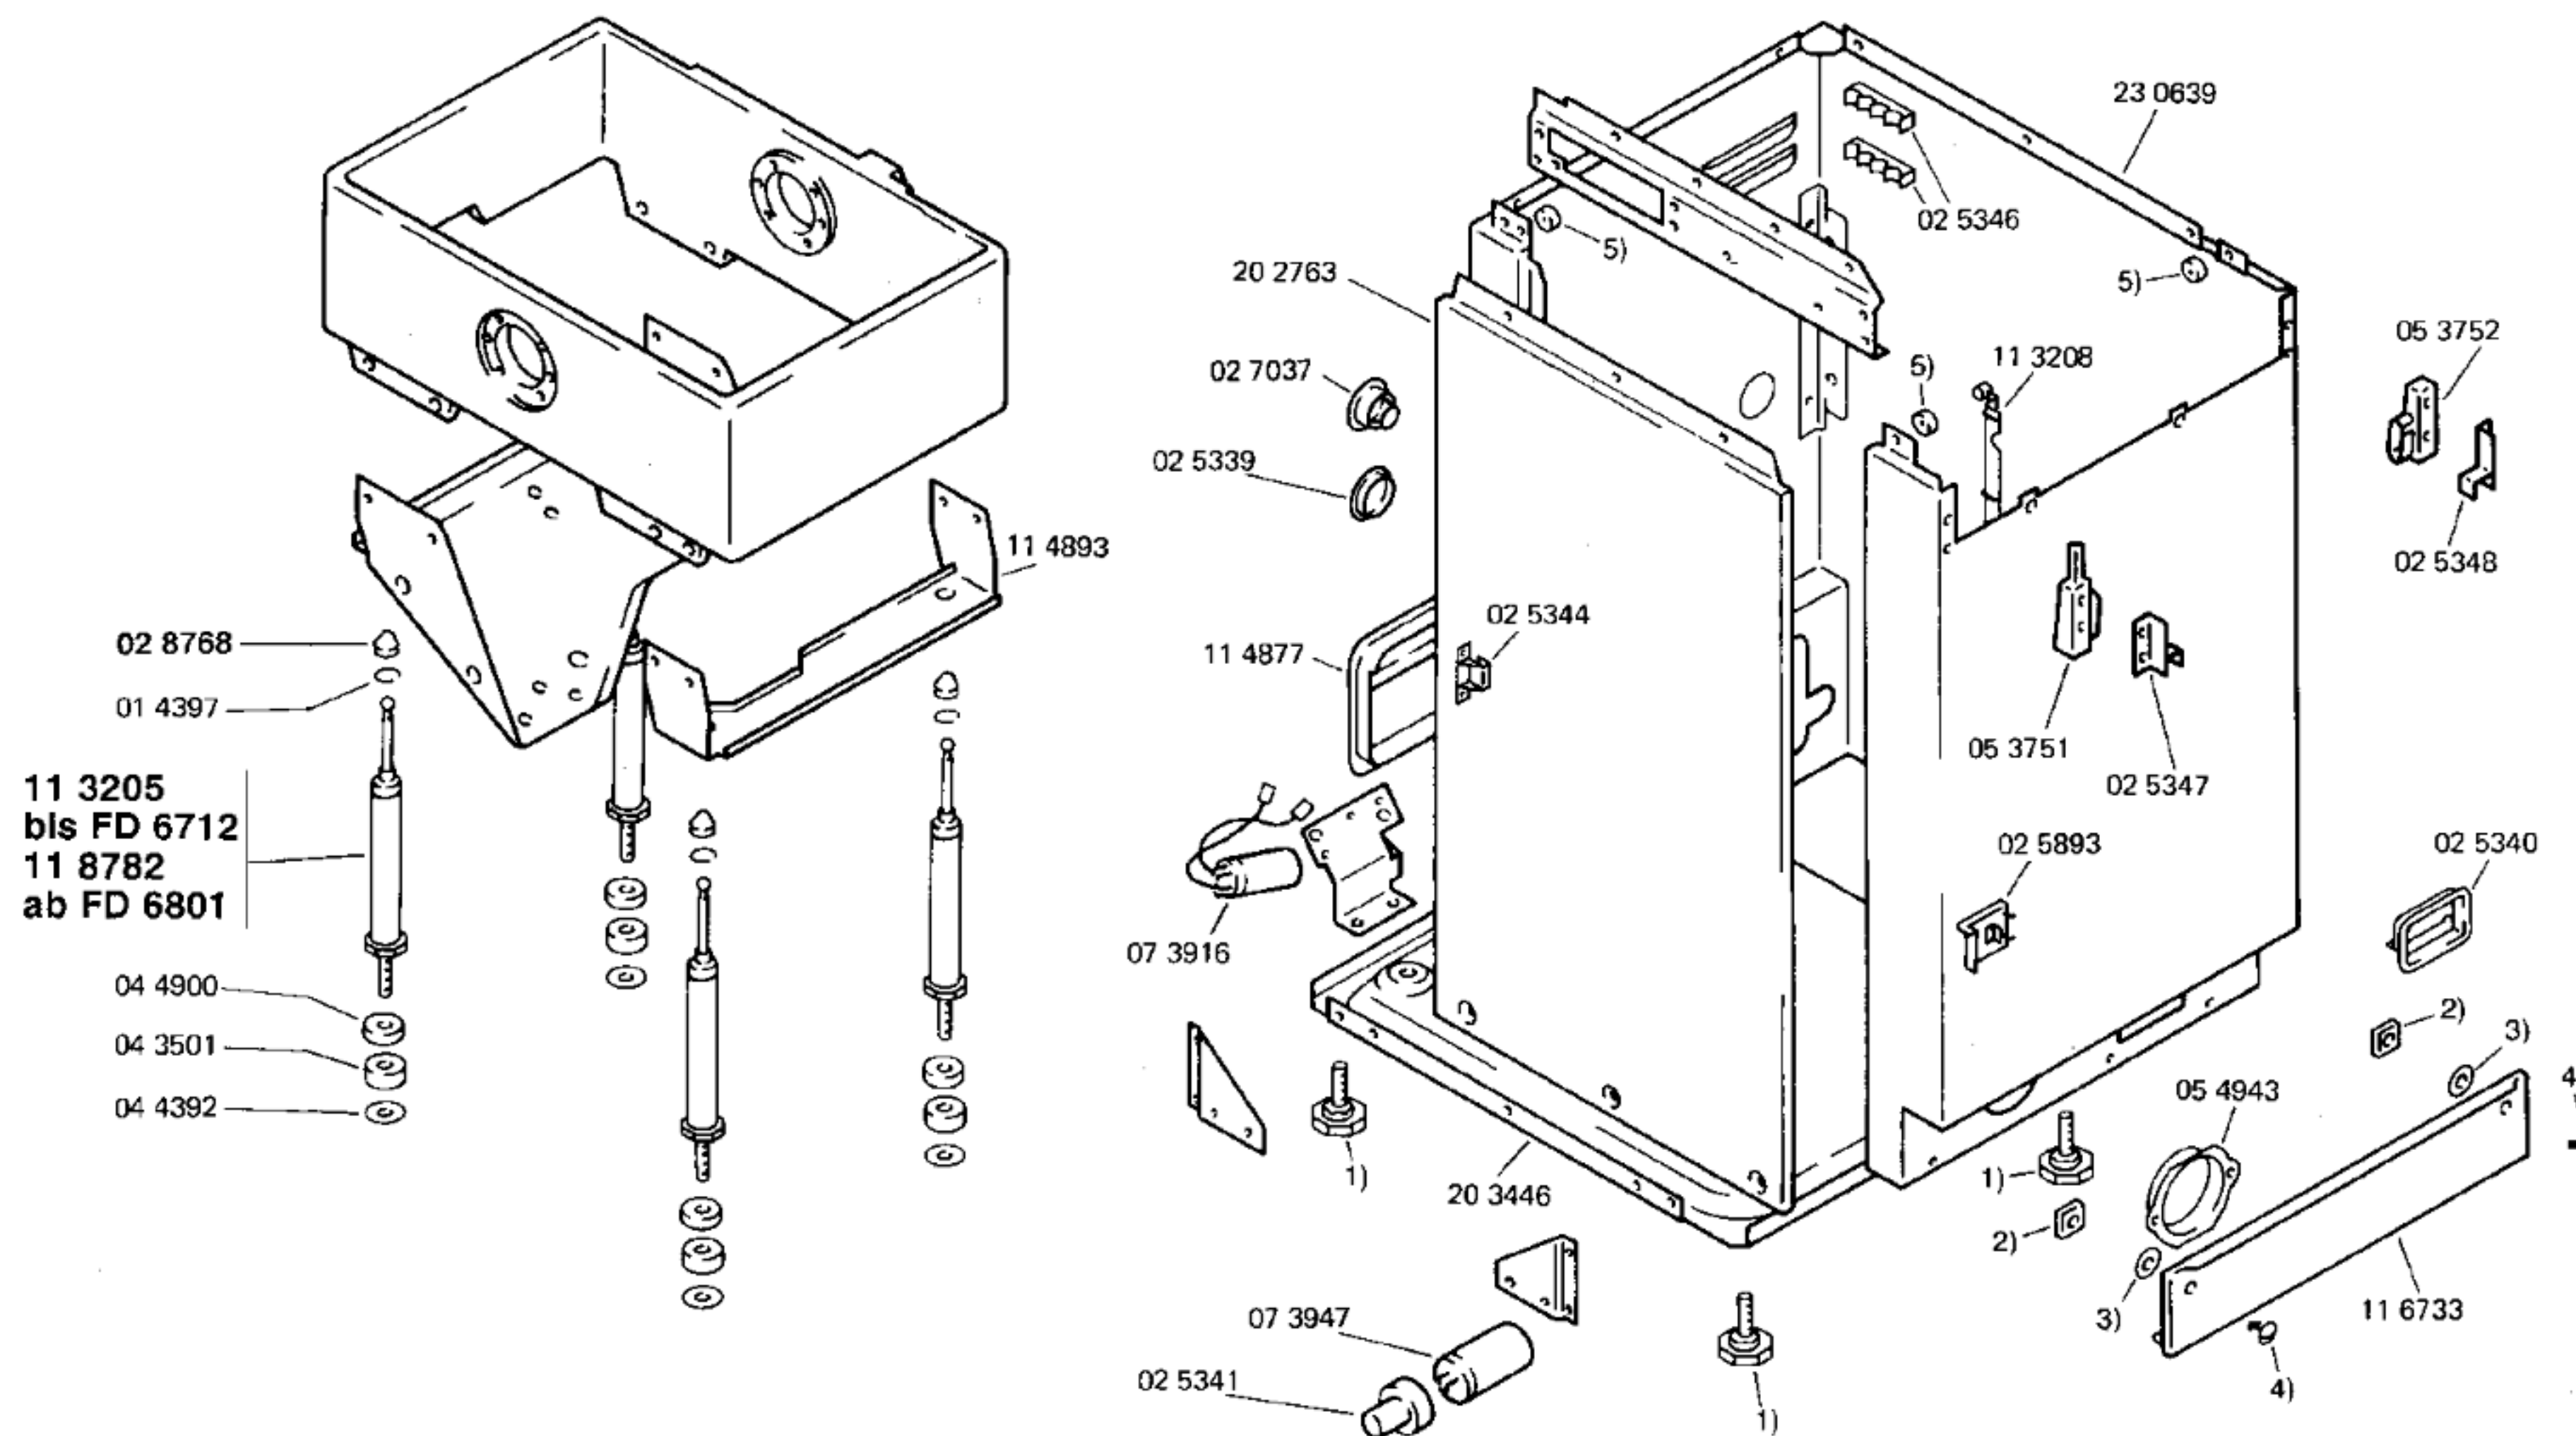

- 1) 04 5561
- 2) 01 4687
- 3) 02 5342
- 4) 02 8340
- 5) 02 5345



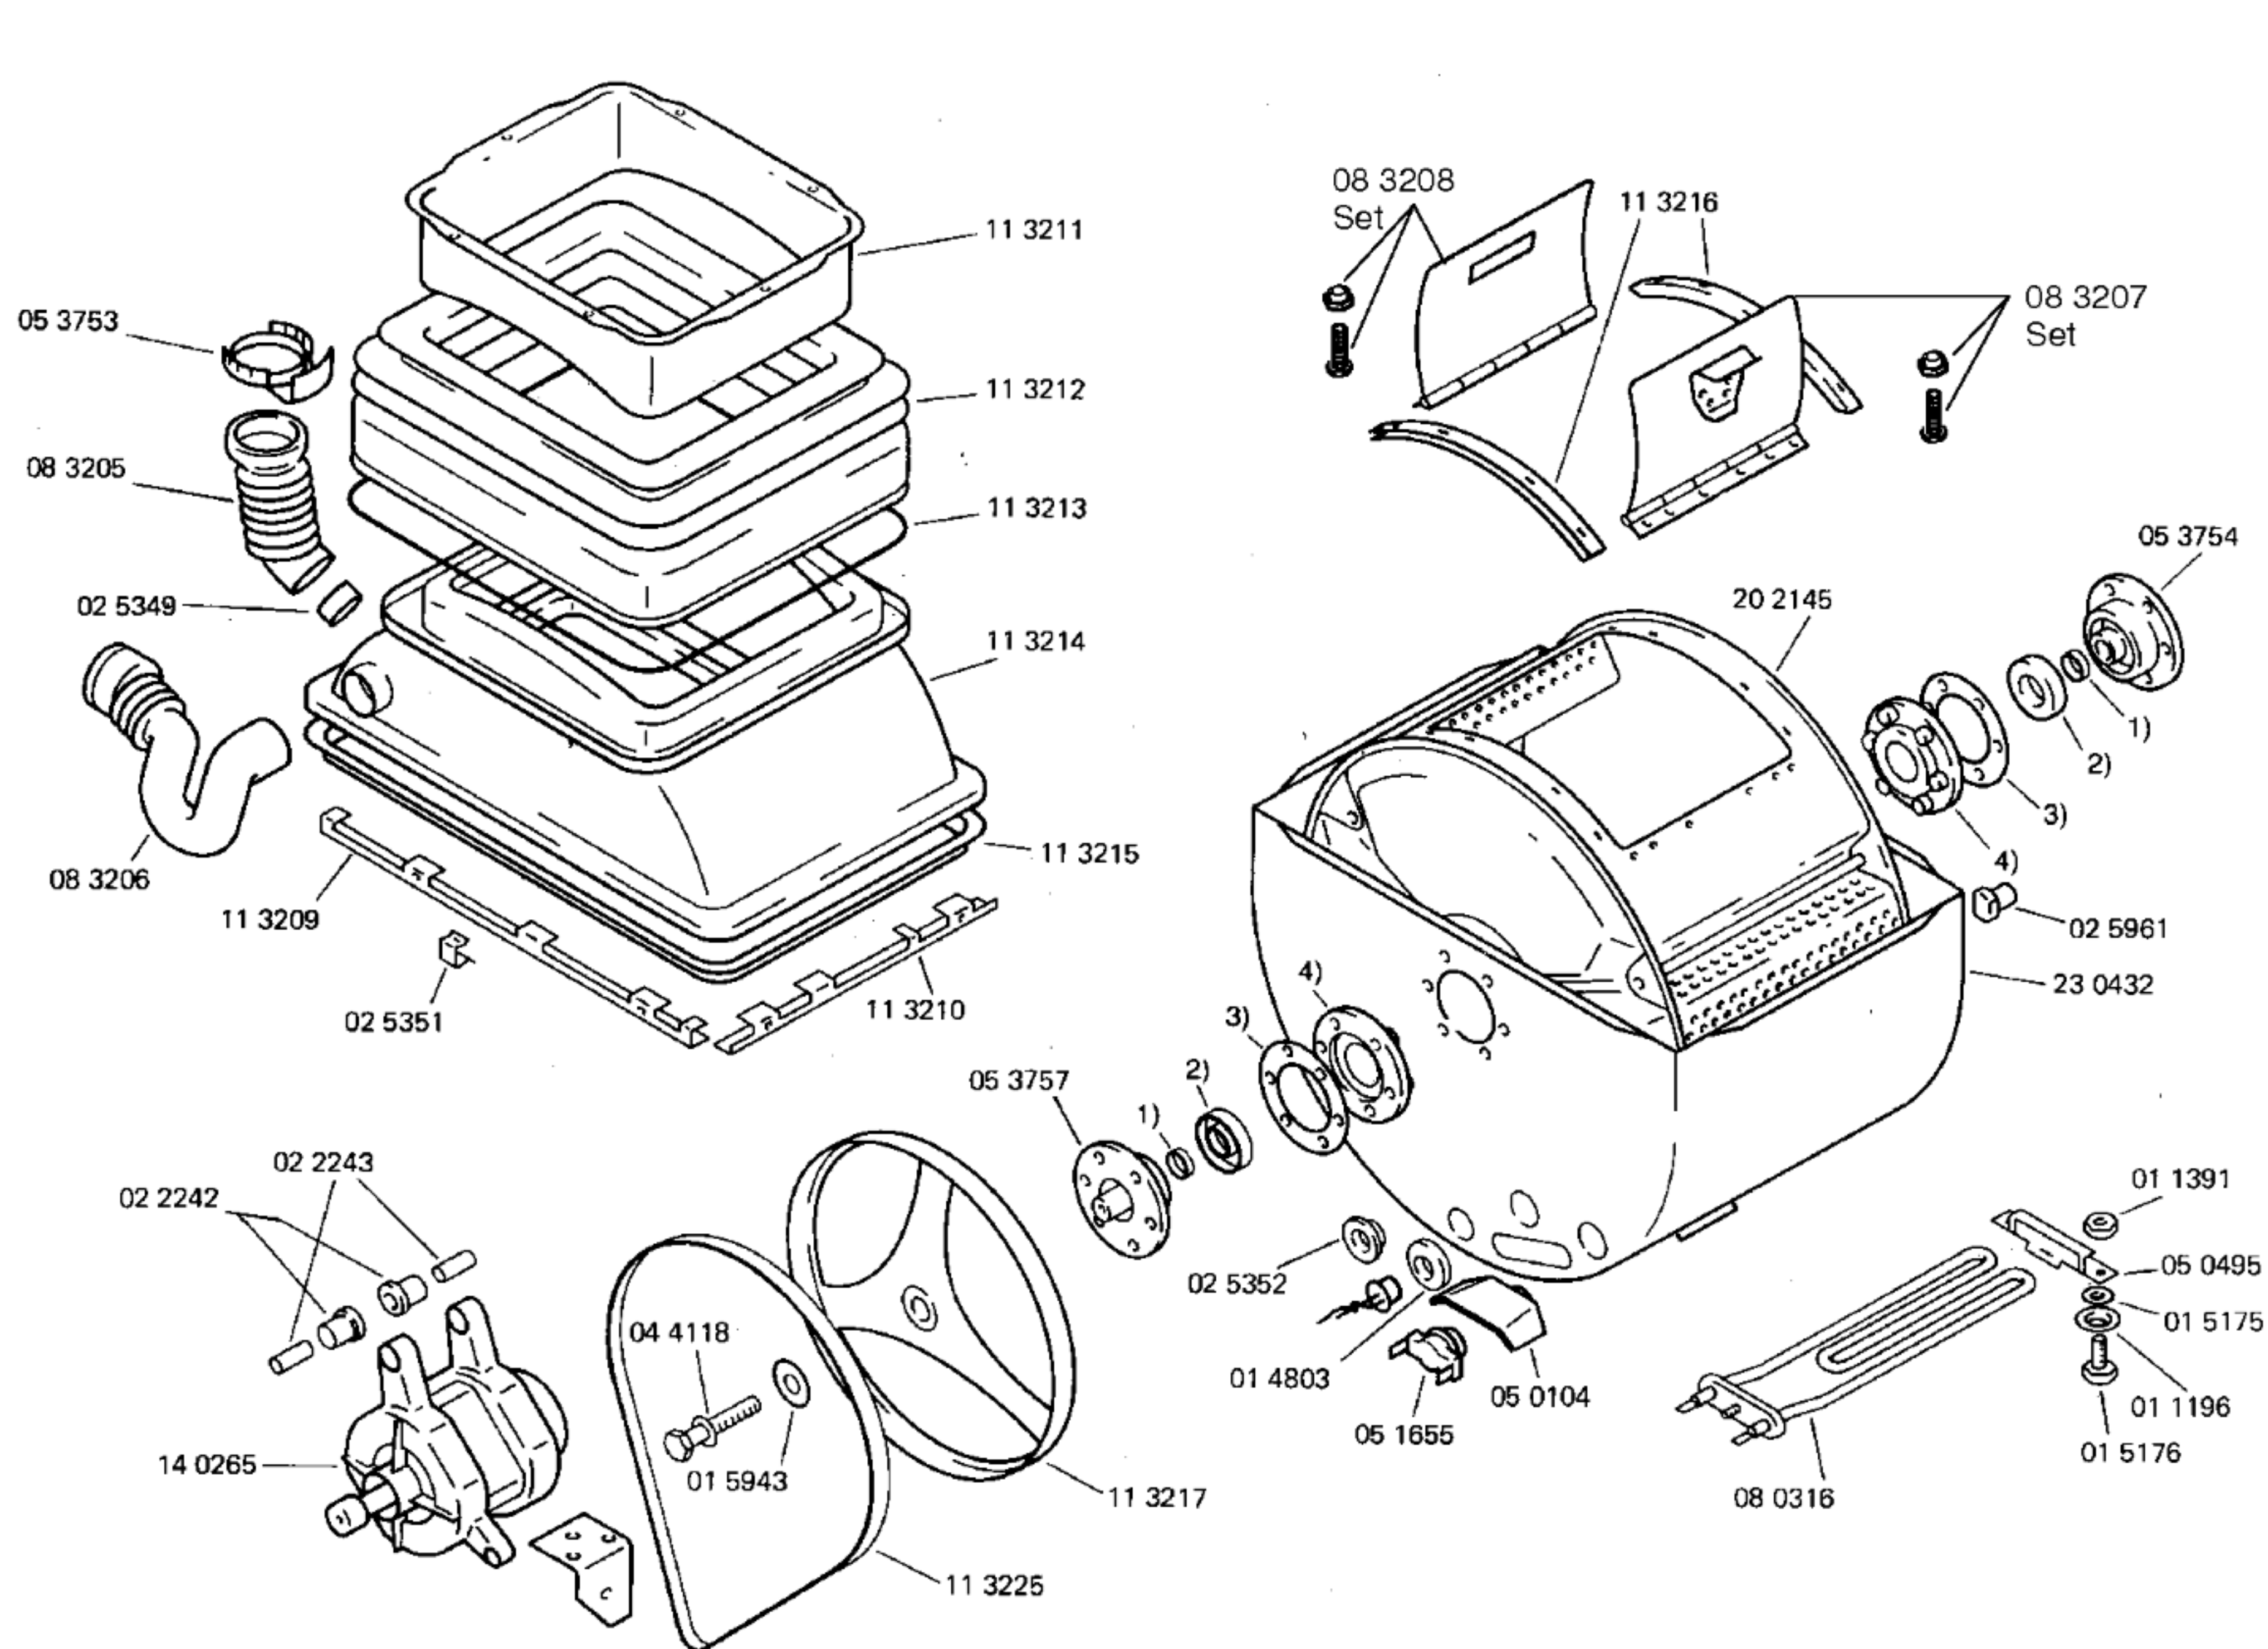

- 1) 04 2309
- 2) 02 5350
- 3) 05 3755
- 4) 05 3756

