




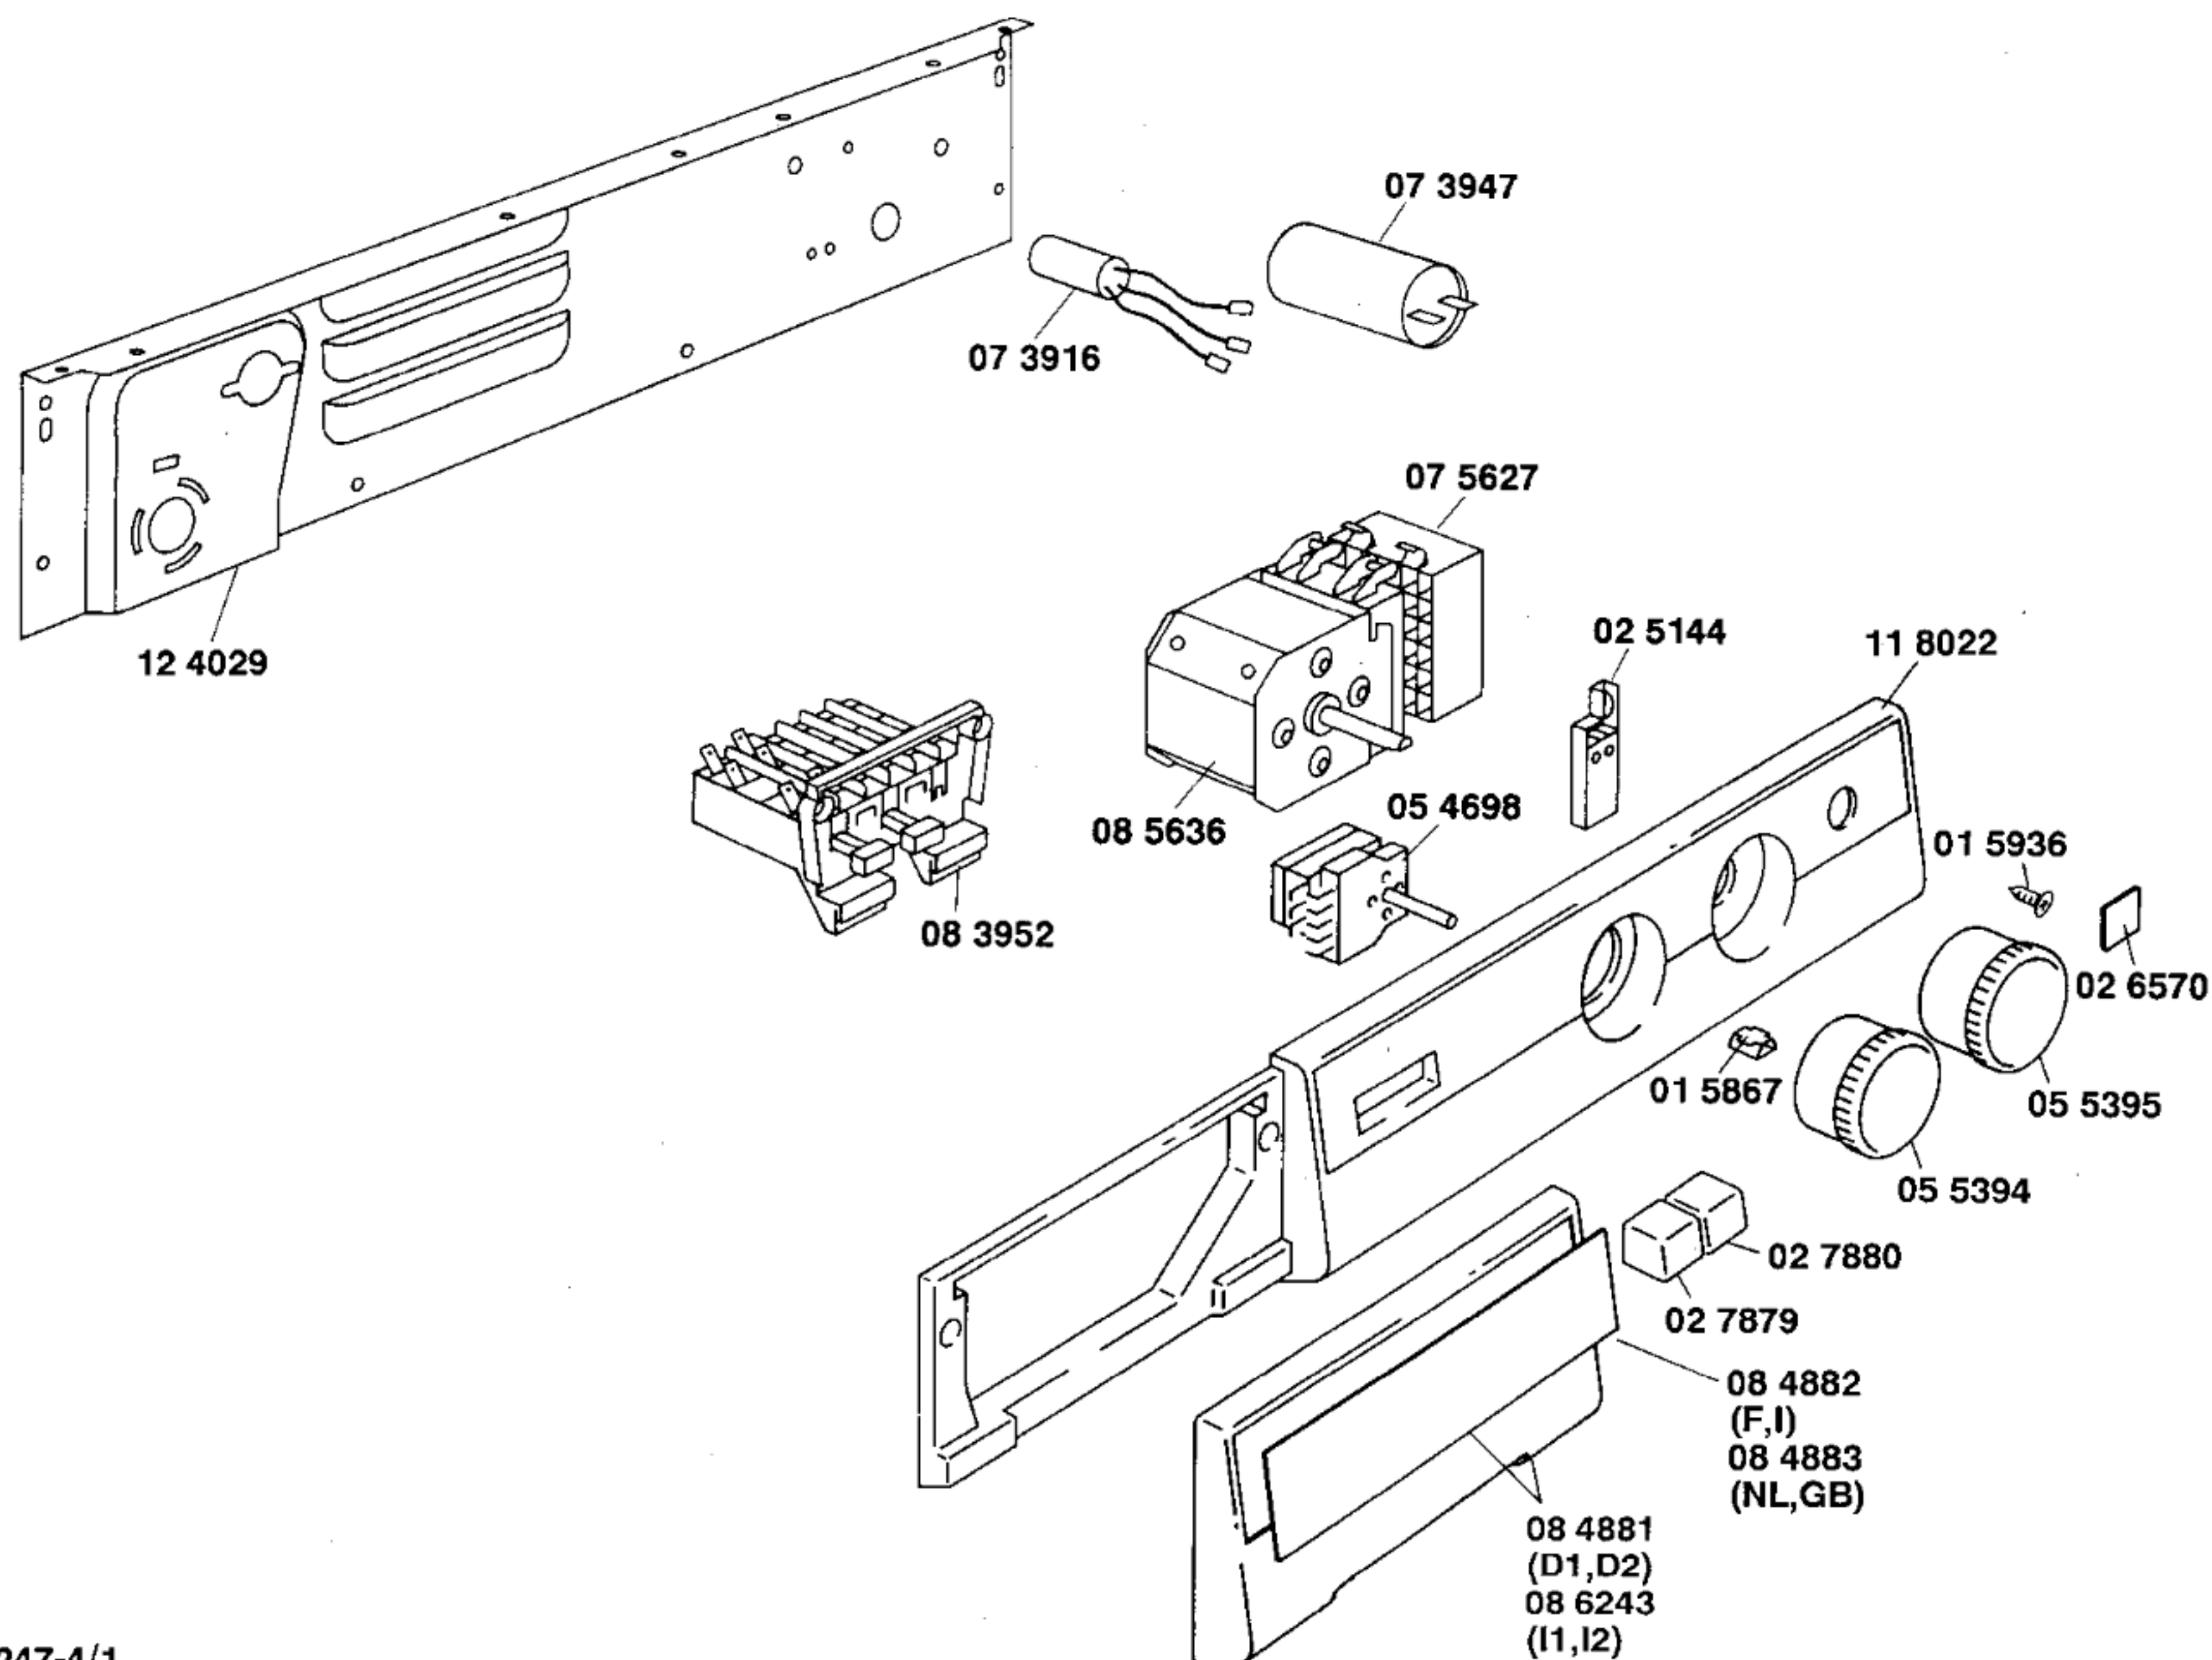


51 1820
 Aufstellanweisung
 (D,GB,F,I,NL,E,P)
 51 3174
 Gebrauchsanweisung
 (D,GB,F,I,NL,E)
 51 2945
 Programmtabelle
 (D,GB,F,I,NL,E)
 51 3164
 (TR,YU,GR,E)

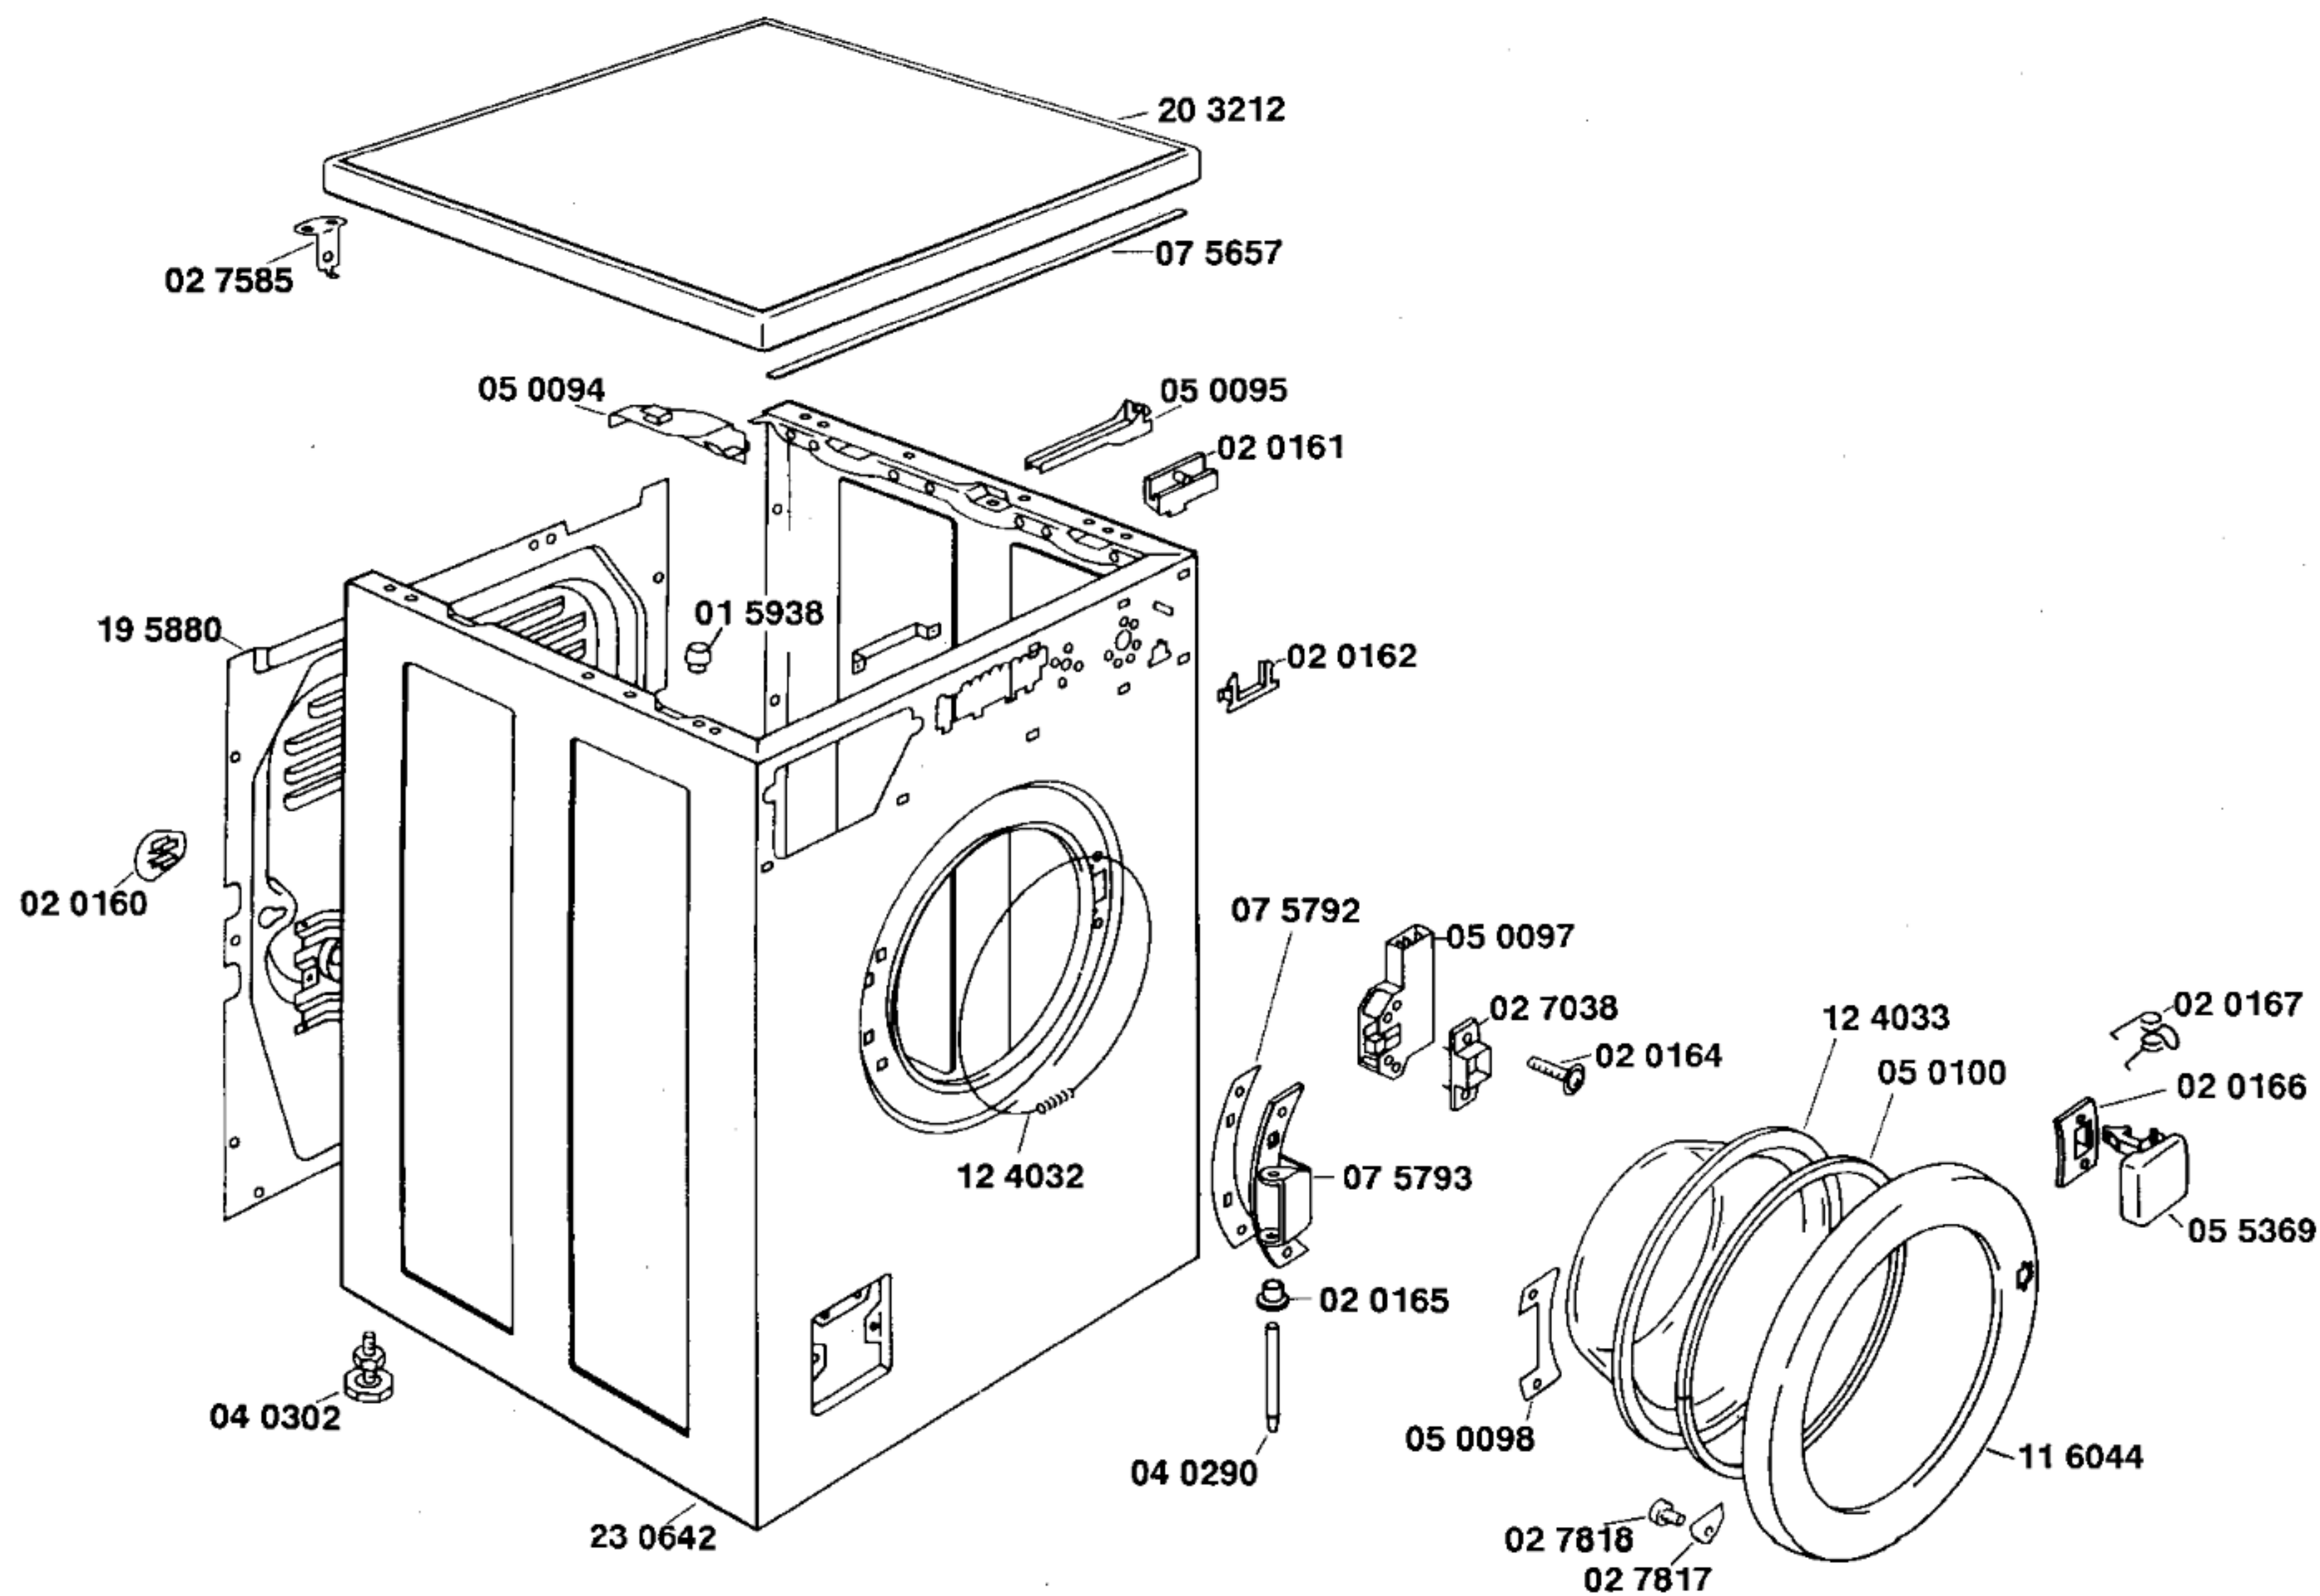

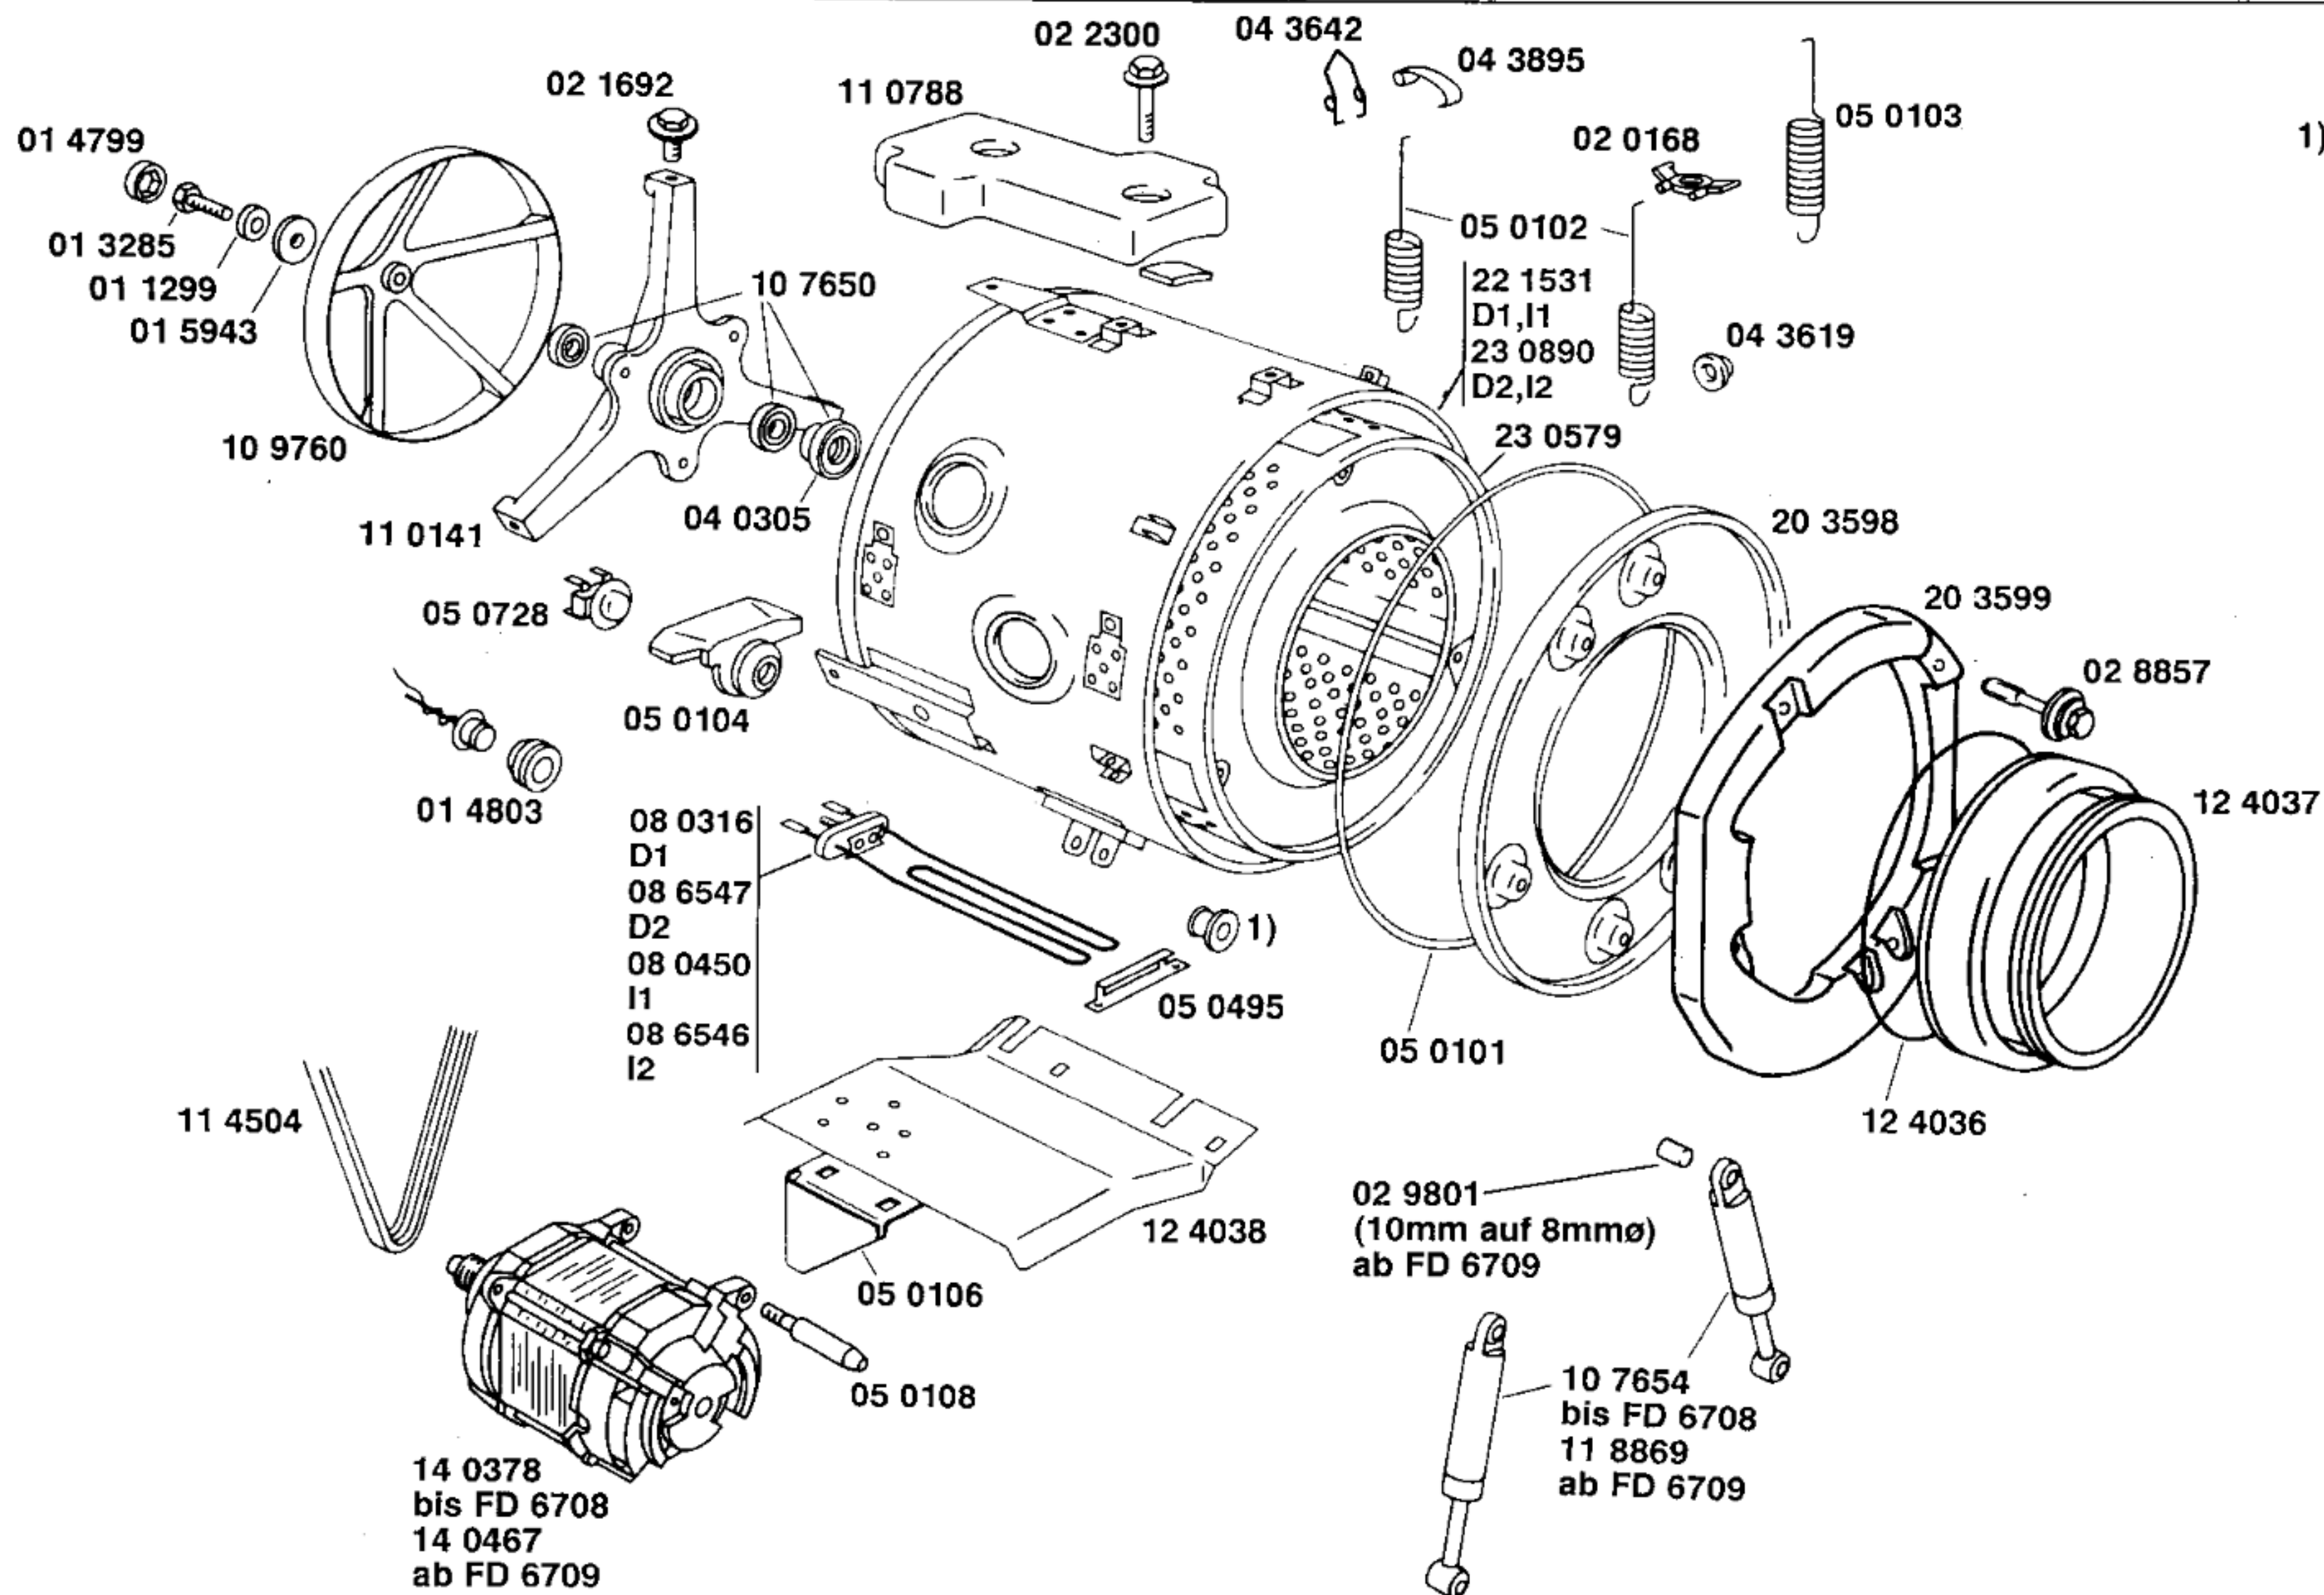

1) 01 5946
bis FD 6708
02 9802
ab FD 6709

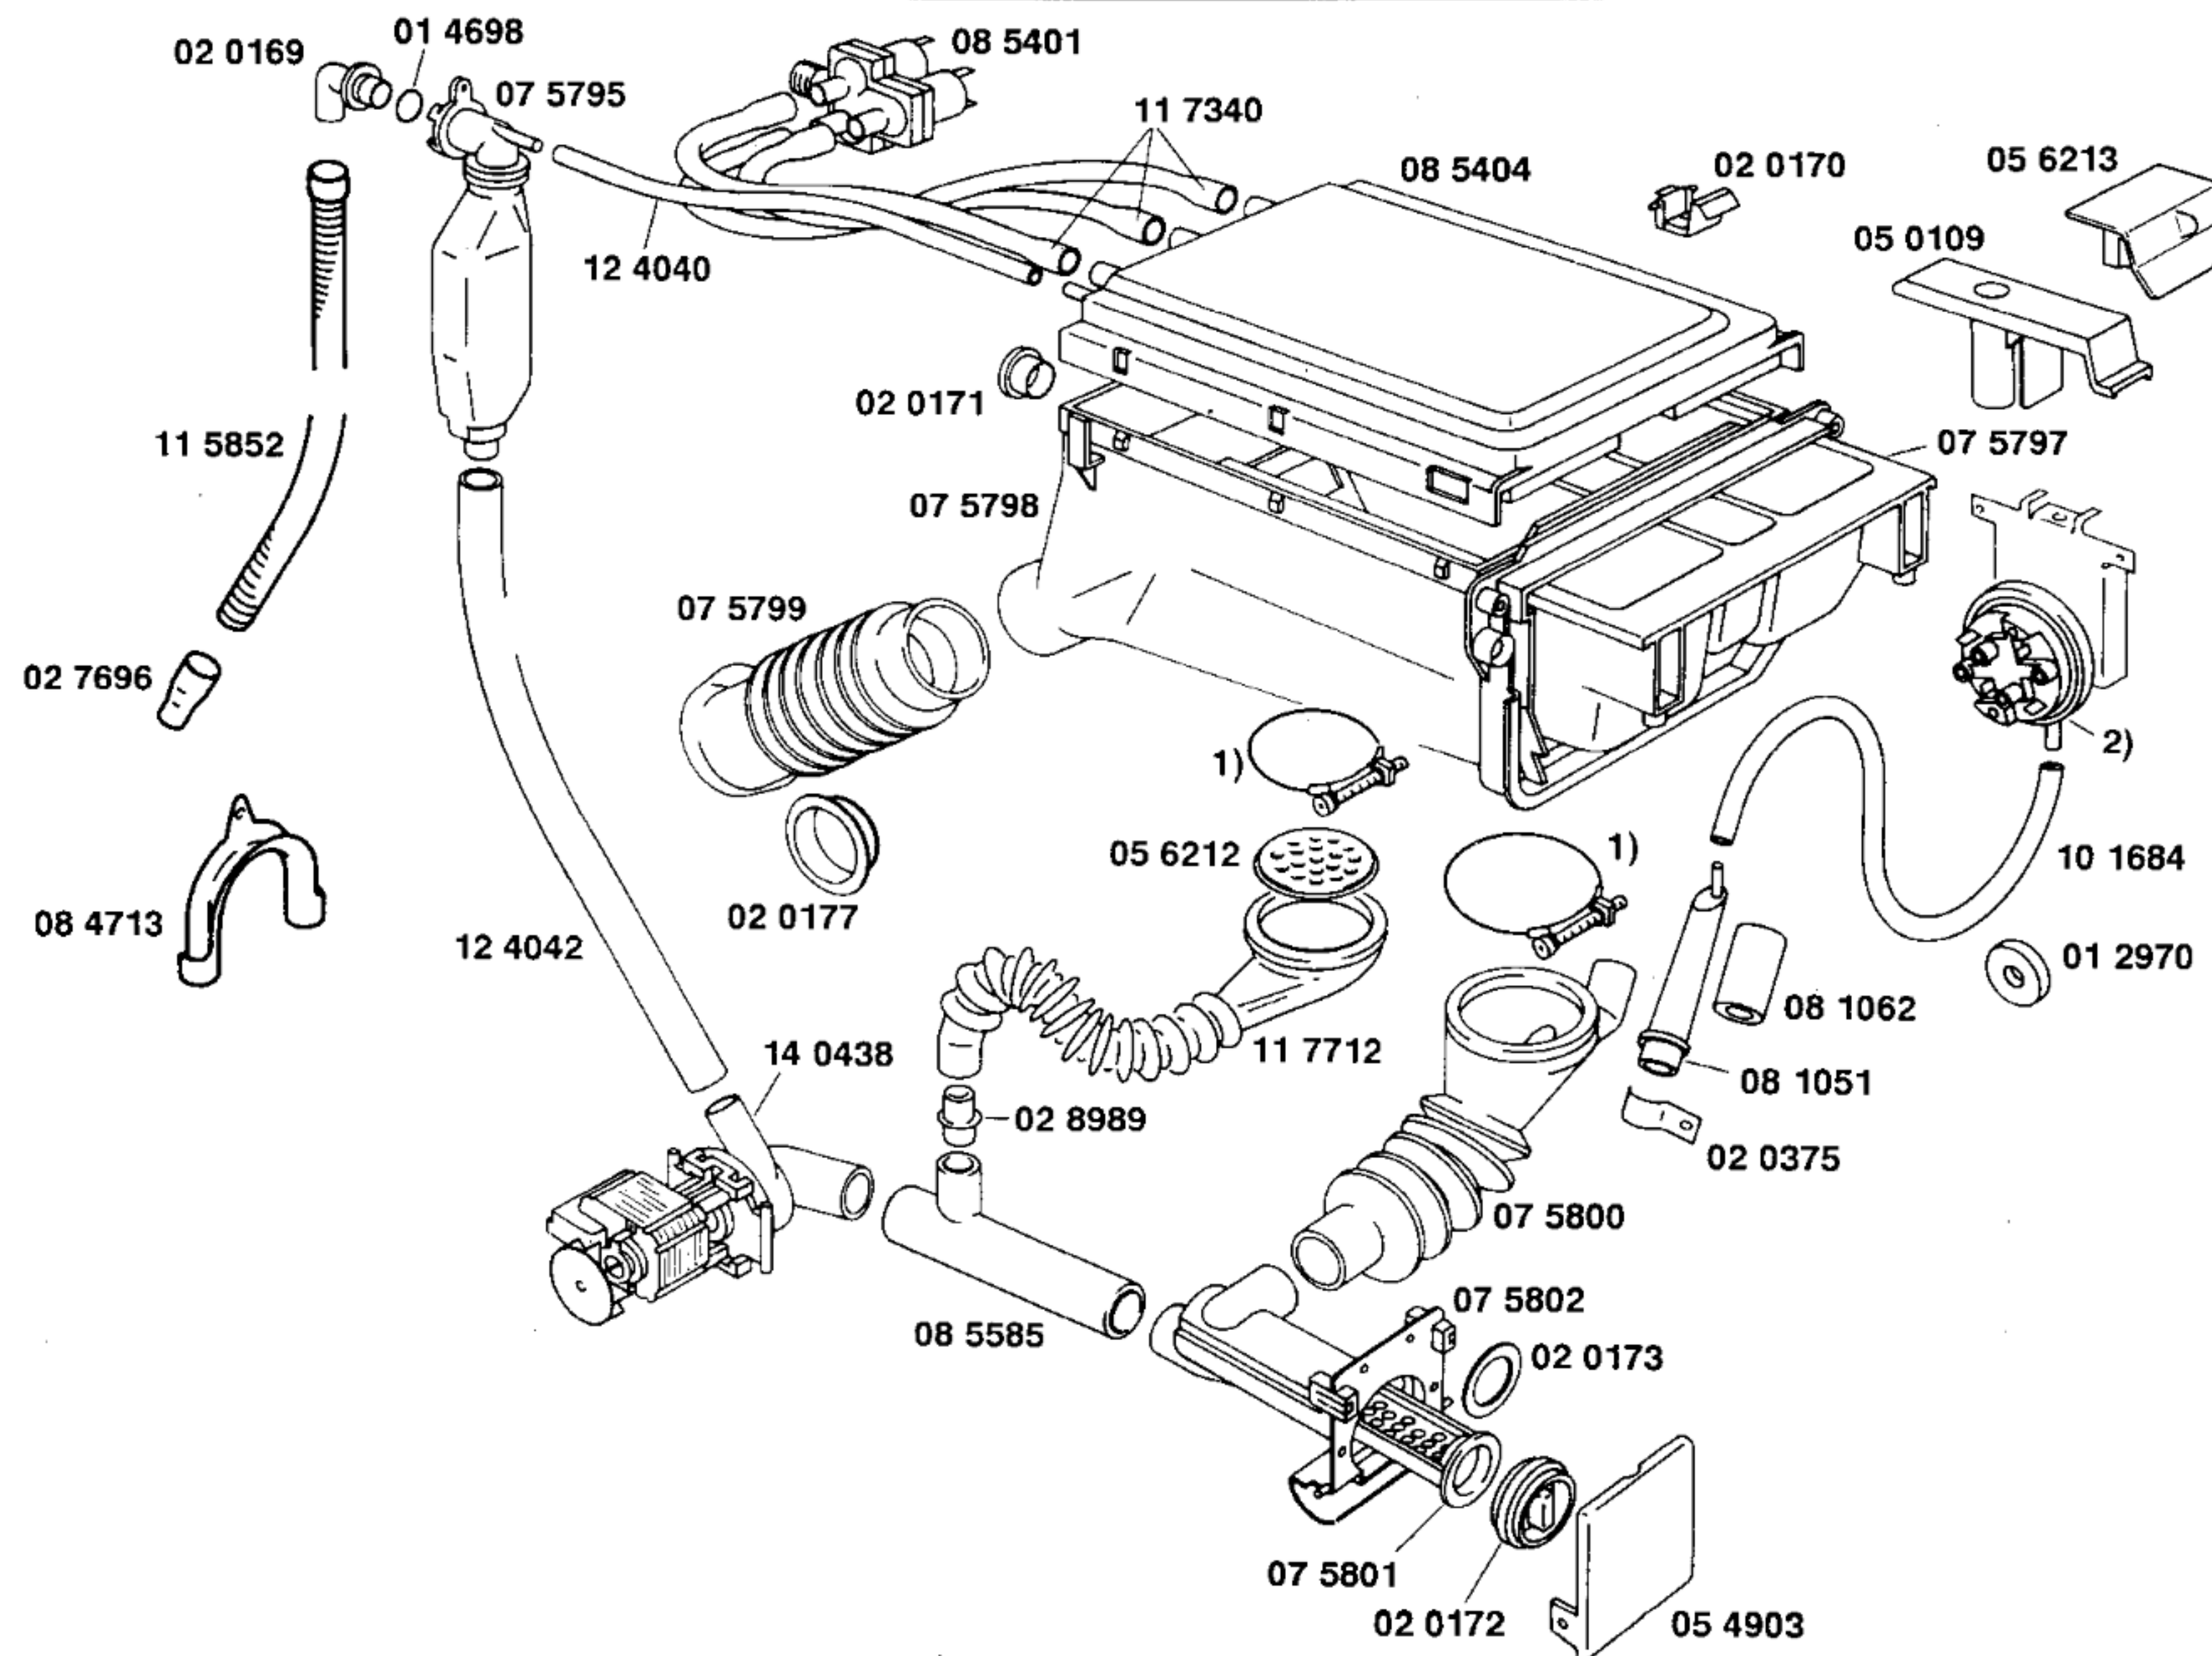

- 1) 04 5844
- 2) 05 4656
bis FD 6709
05 6721
ab FD 6710