


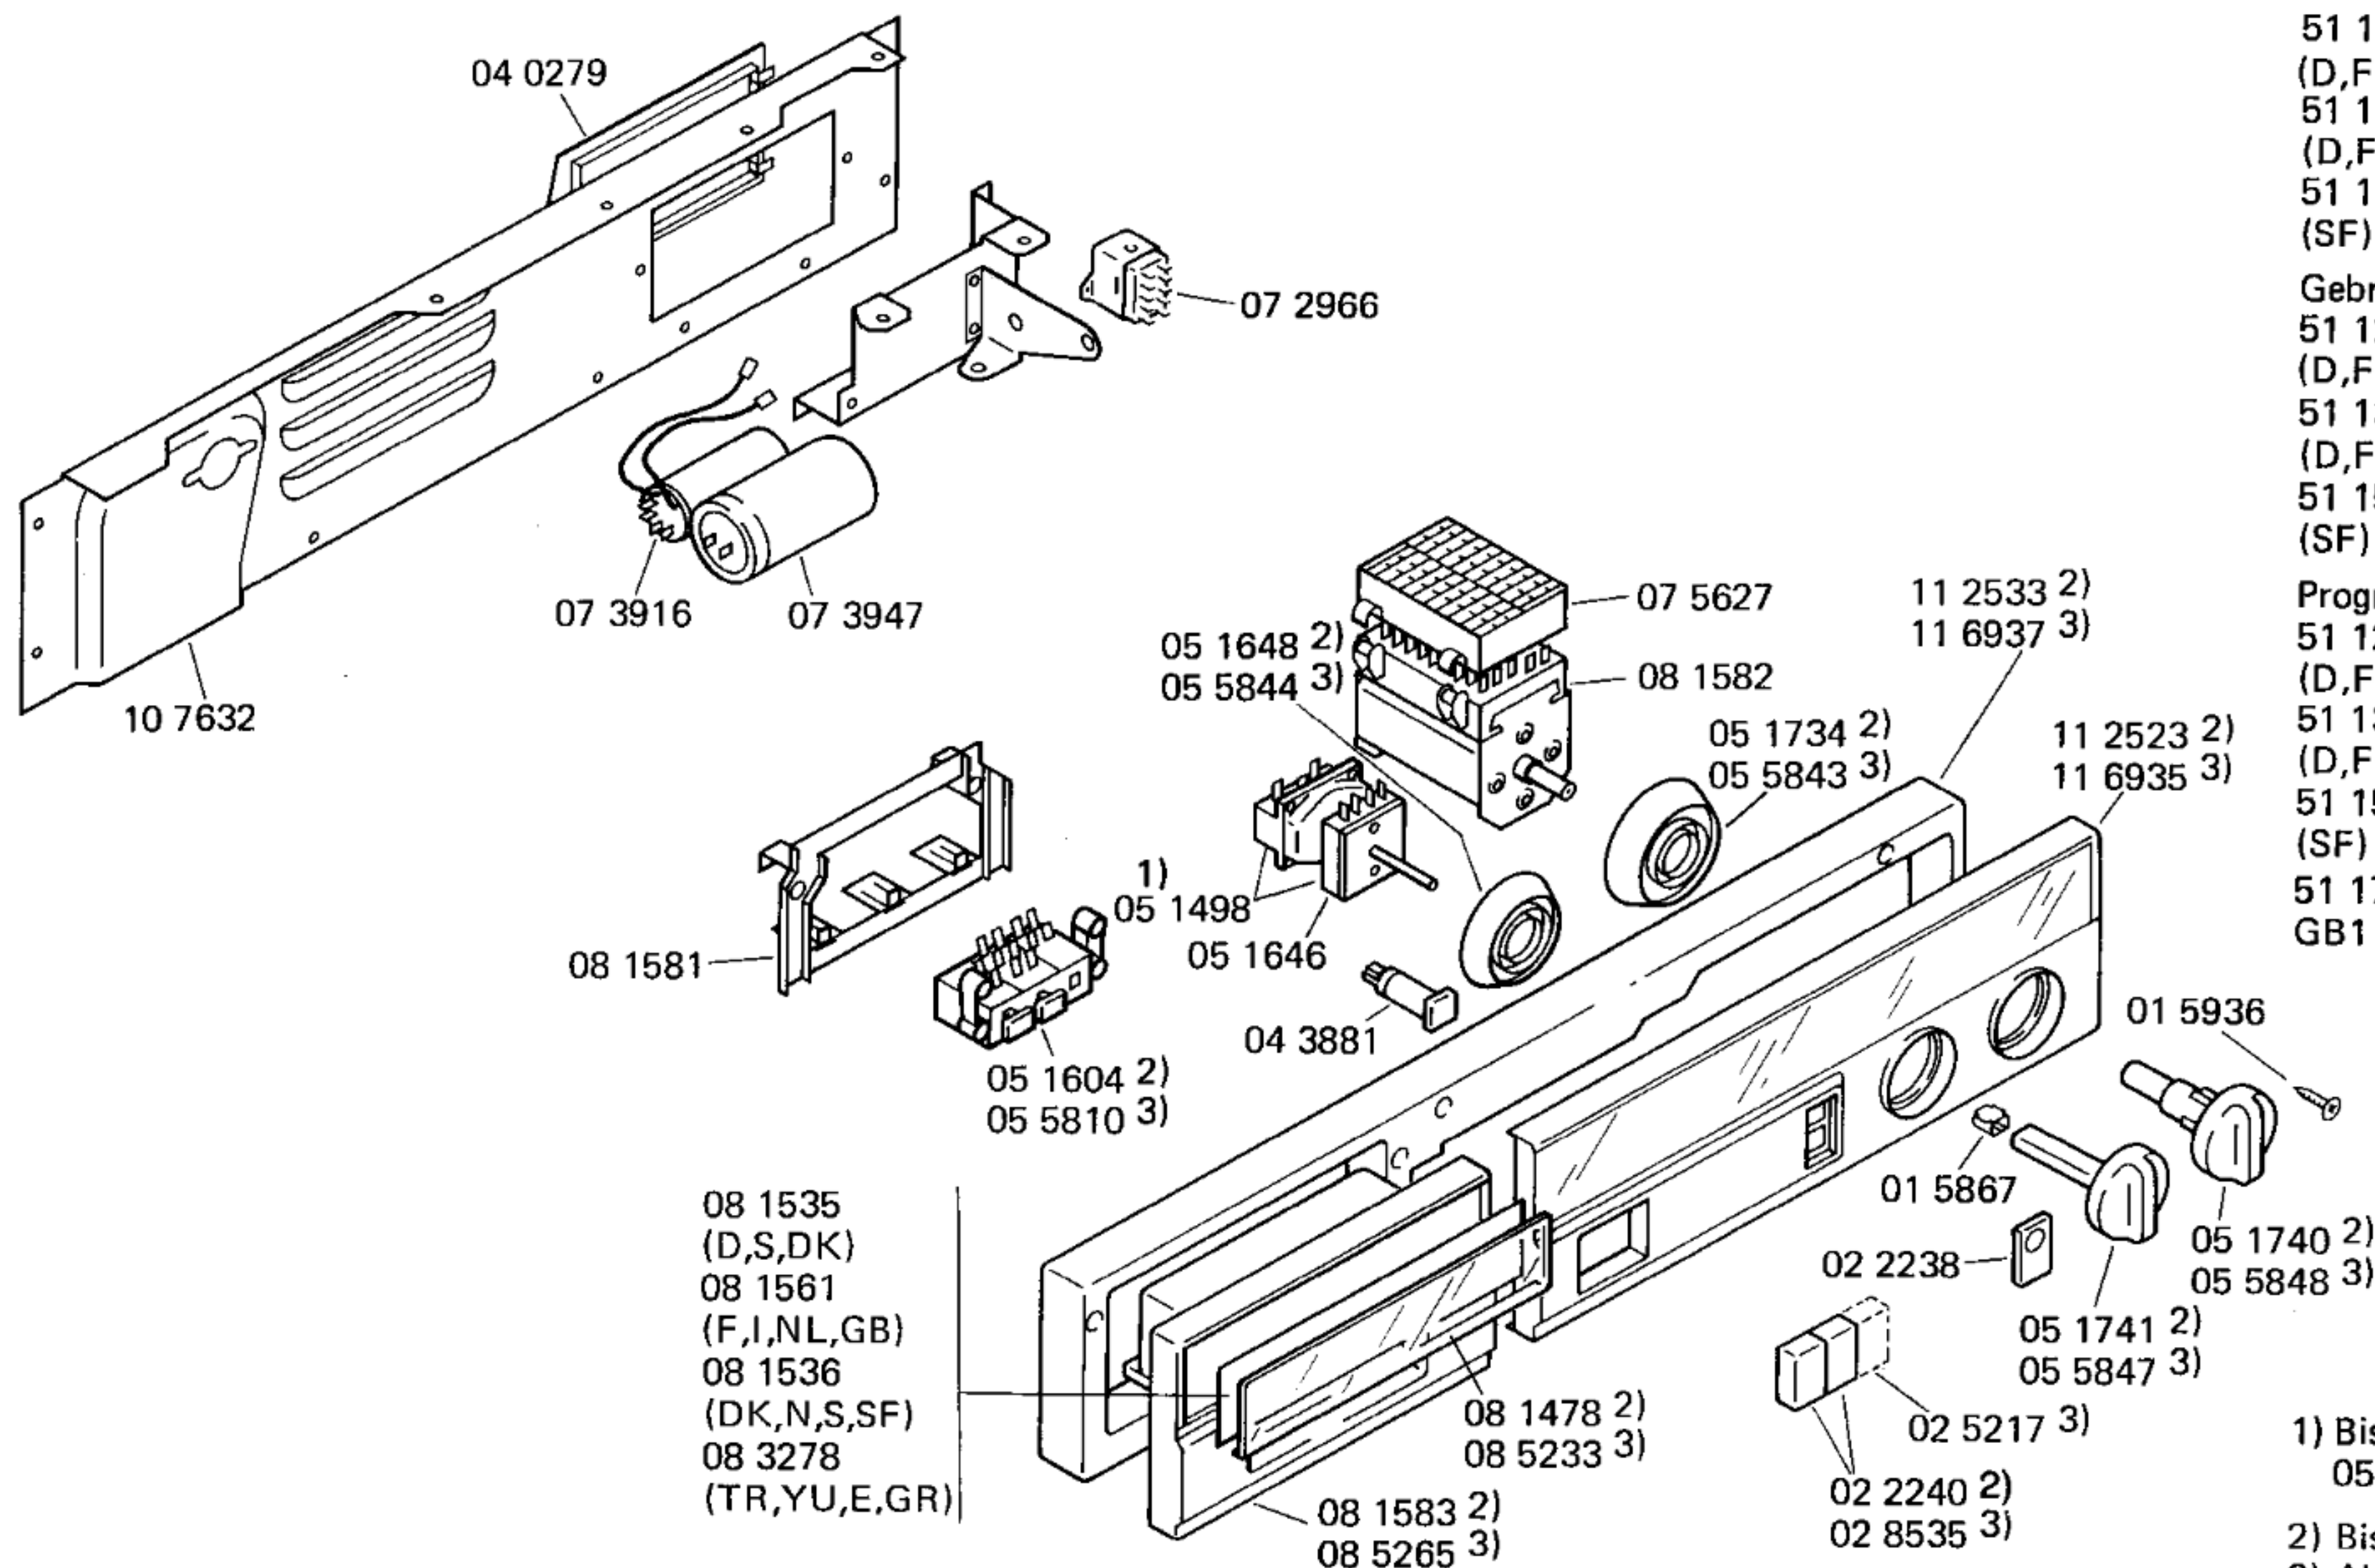

Aufstellanweisungen:

51 1221
 (D,F,I,NL,GB,E)
 51 1337
 (D,F,I,S,DK,N)
 51 1575
 (SF)

Gebrauchsanweisungen:



51 1255
 (D,F,I,NL,GB,E)
 51 1340
 (D,F,I,S,DK,N)
 51 1576
 (SF)


Programmtabellen:


51 1256
 (D,F,I,NL,GB,E)
 51 1339
 (D,F,I,S,DK,N)
 51 1578
 (SF)
 51 1719
 GB1

1) Bis FD 6301
 05 1648 mitbestellen

2) Bis FD 6604
 3) Ab FD 6605

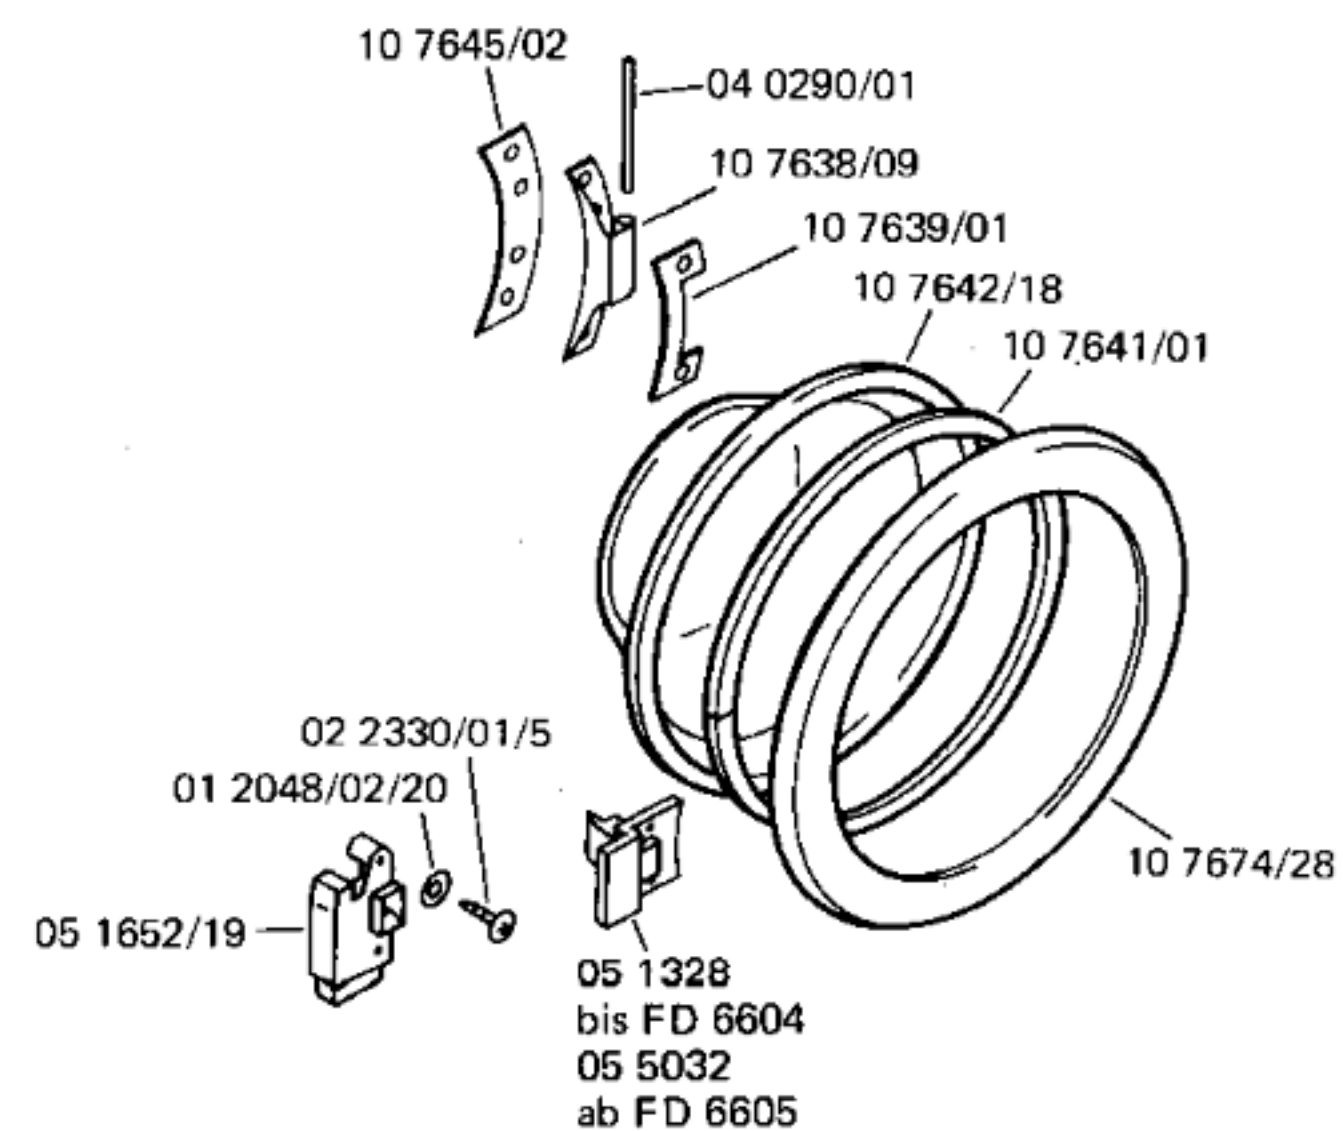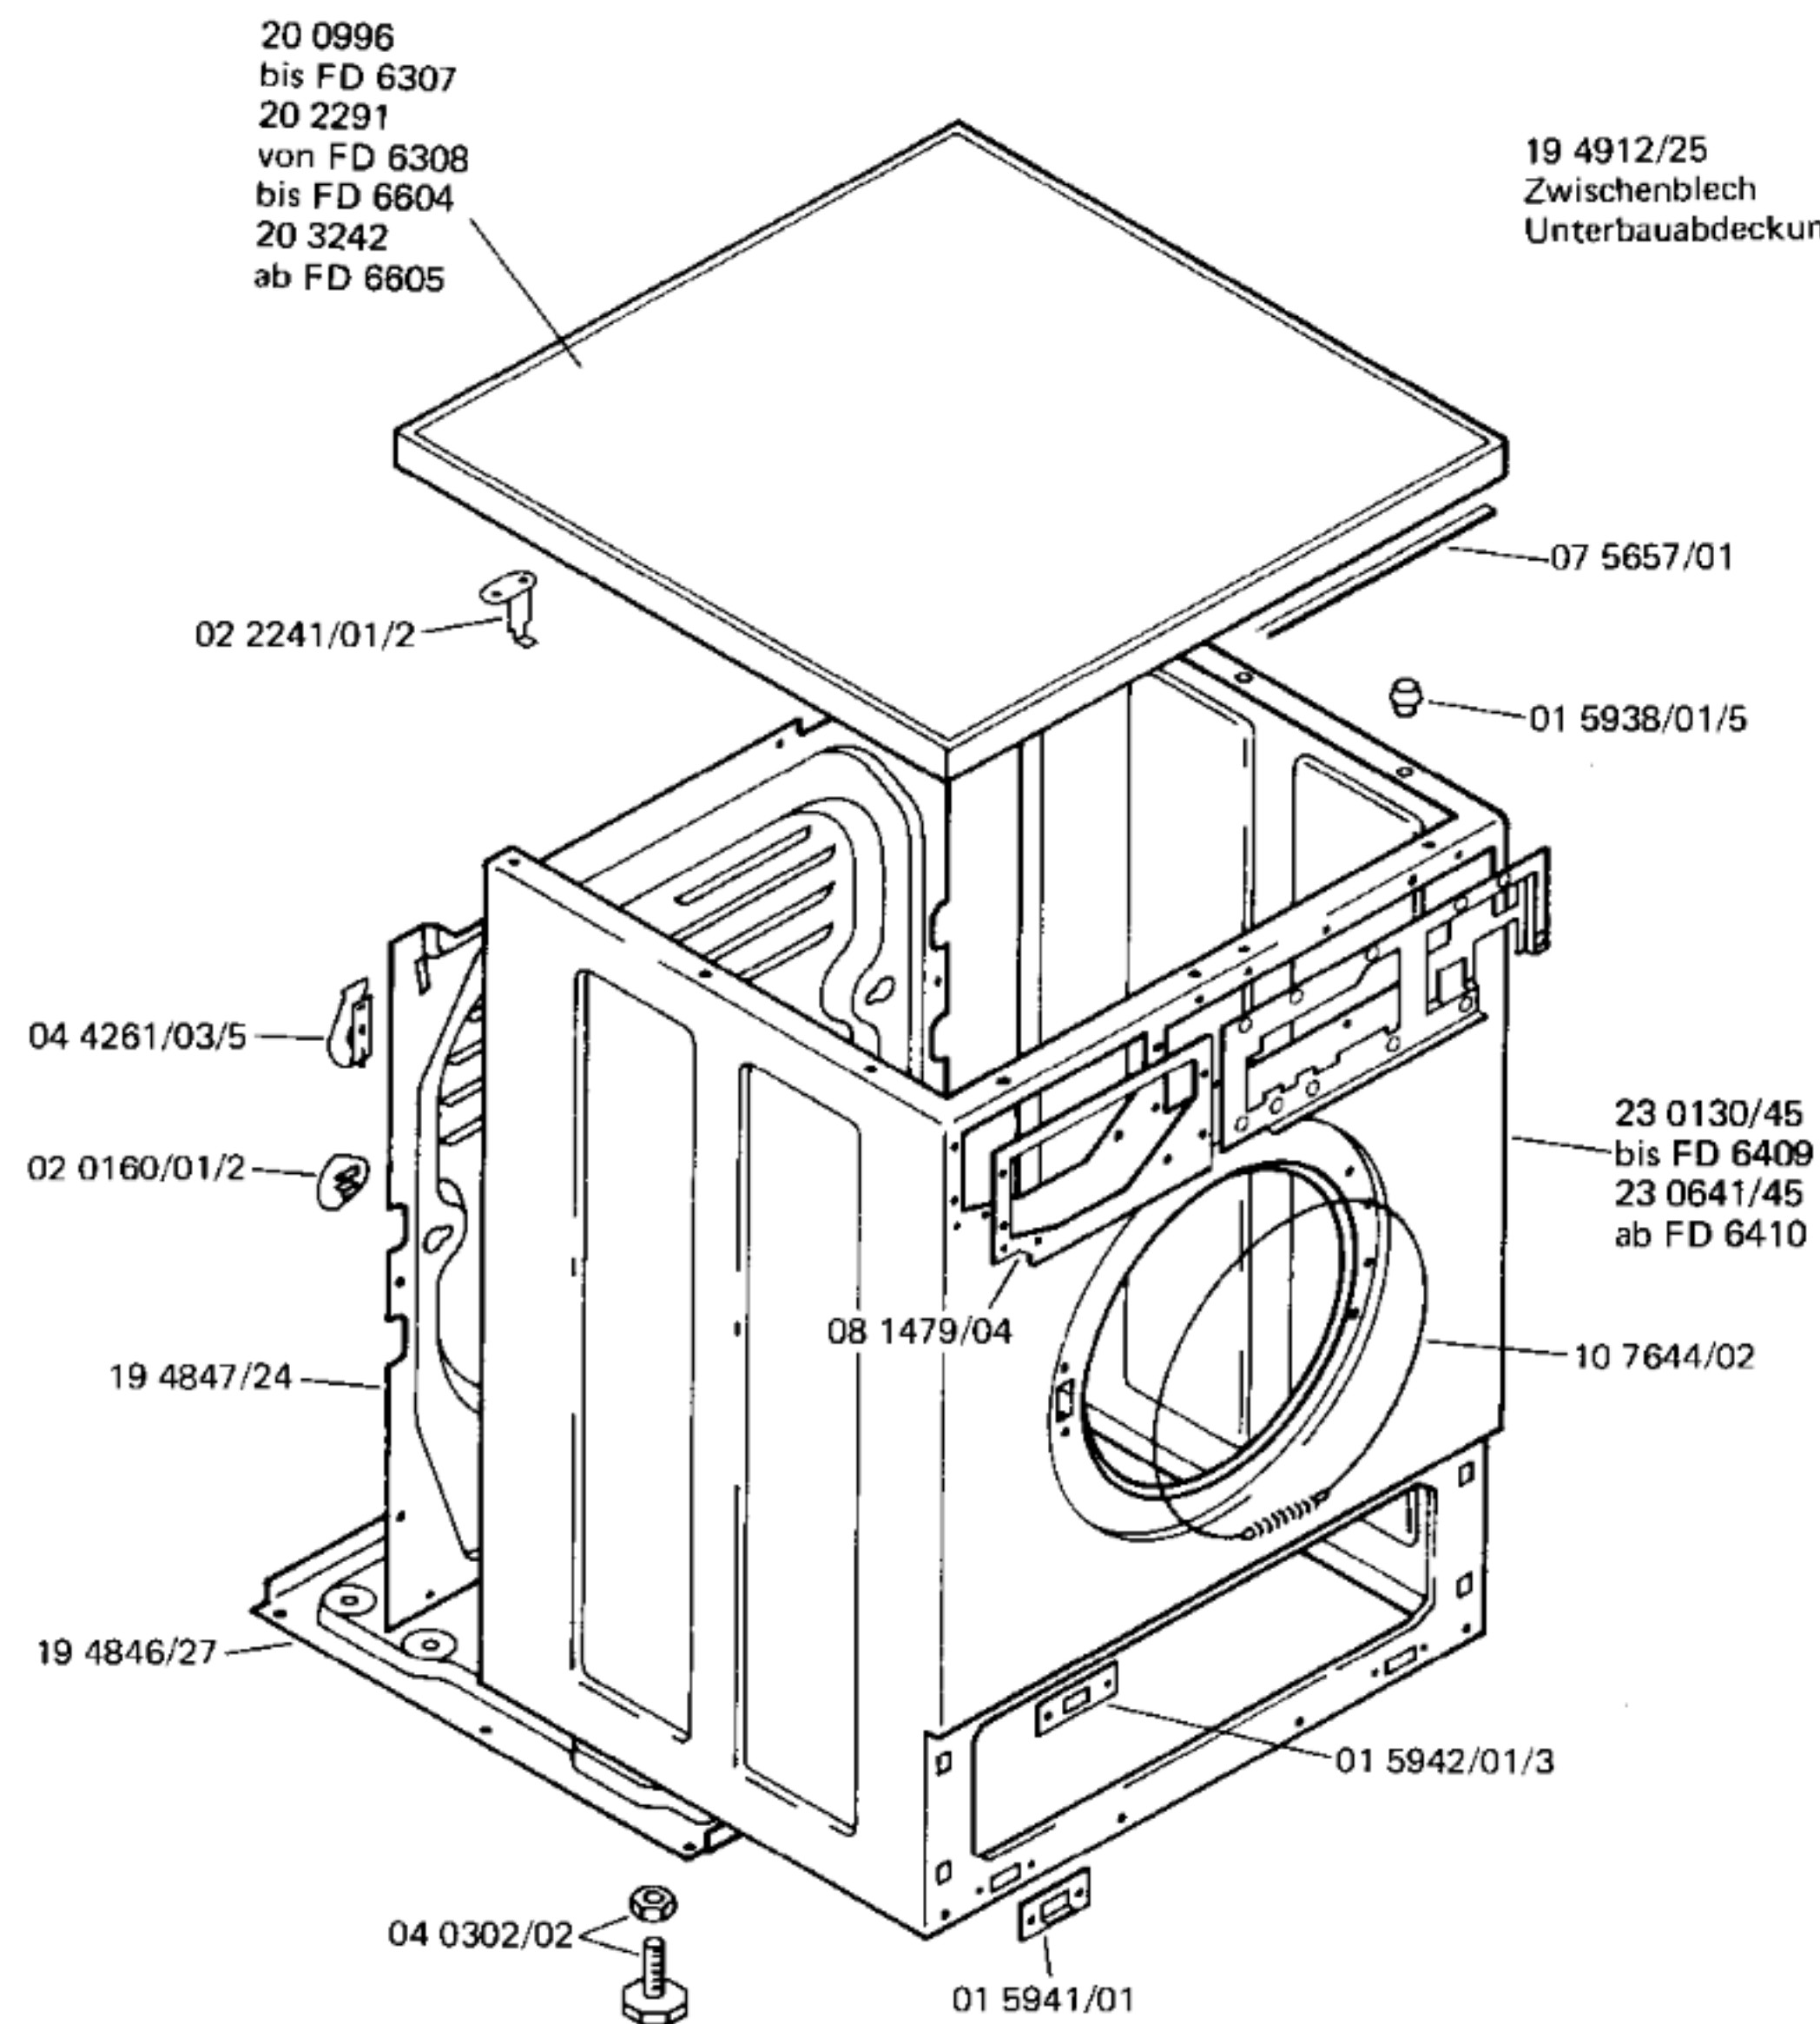

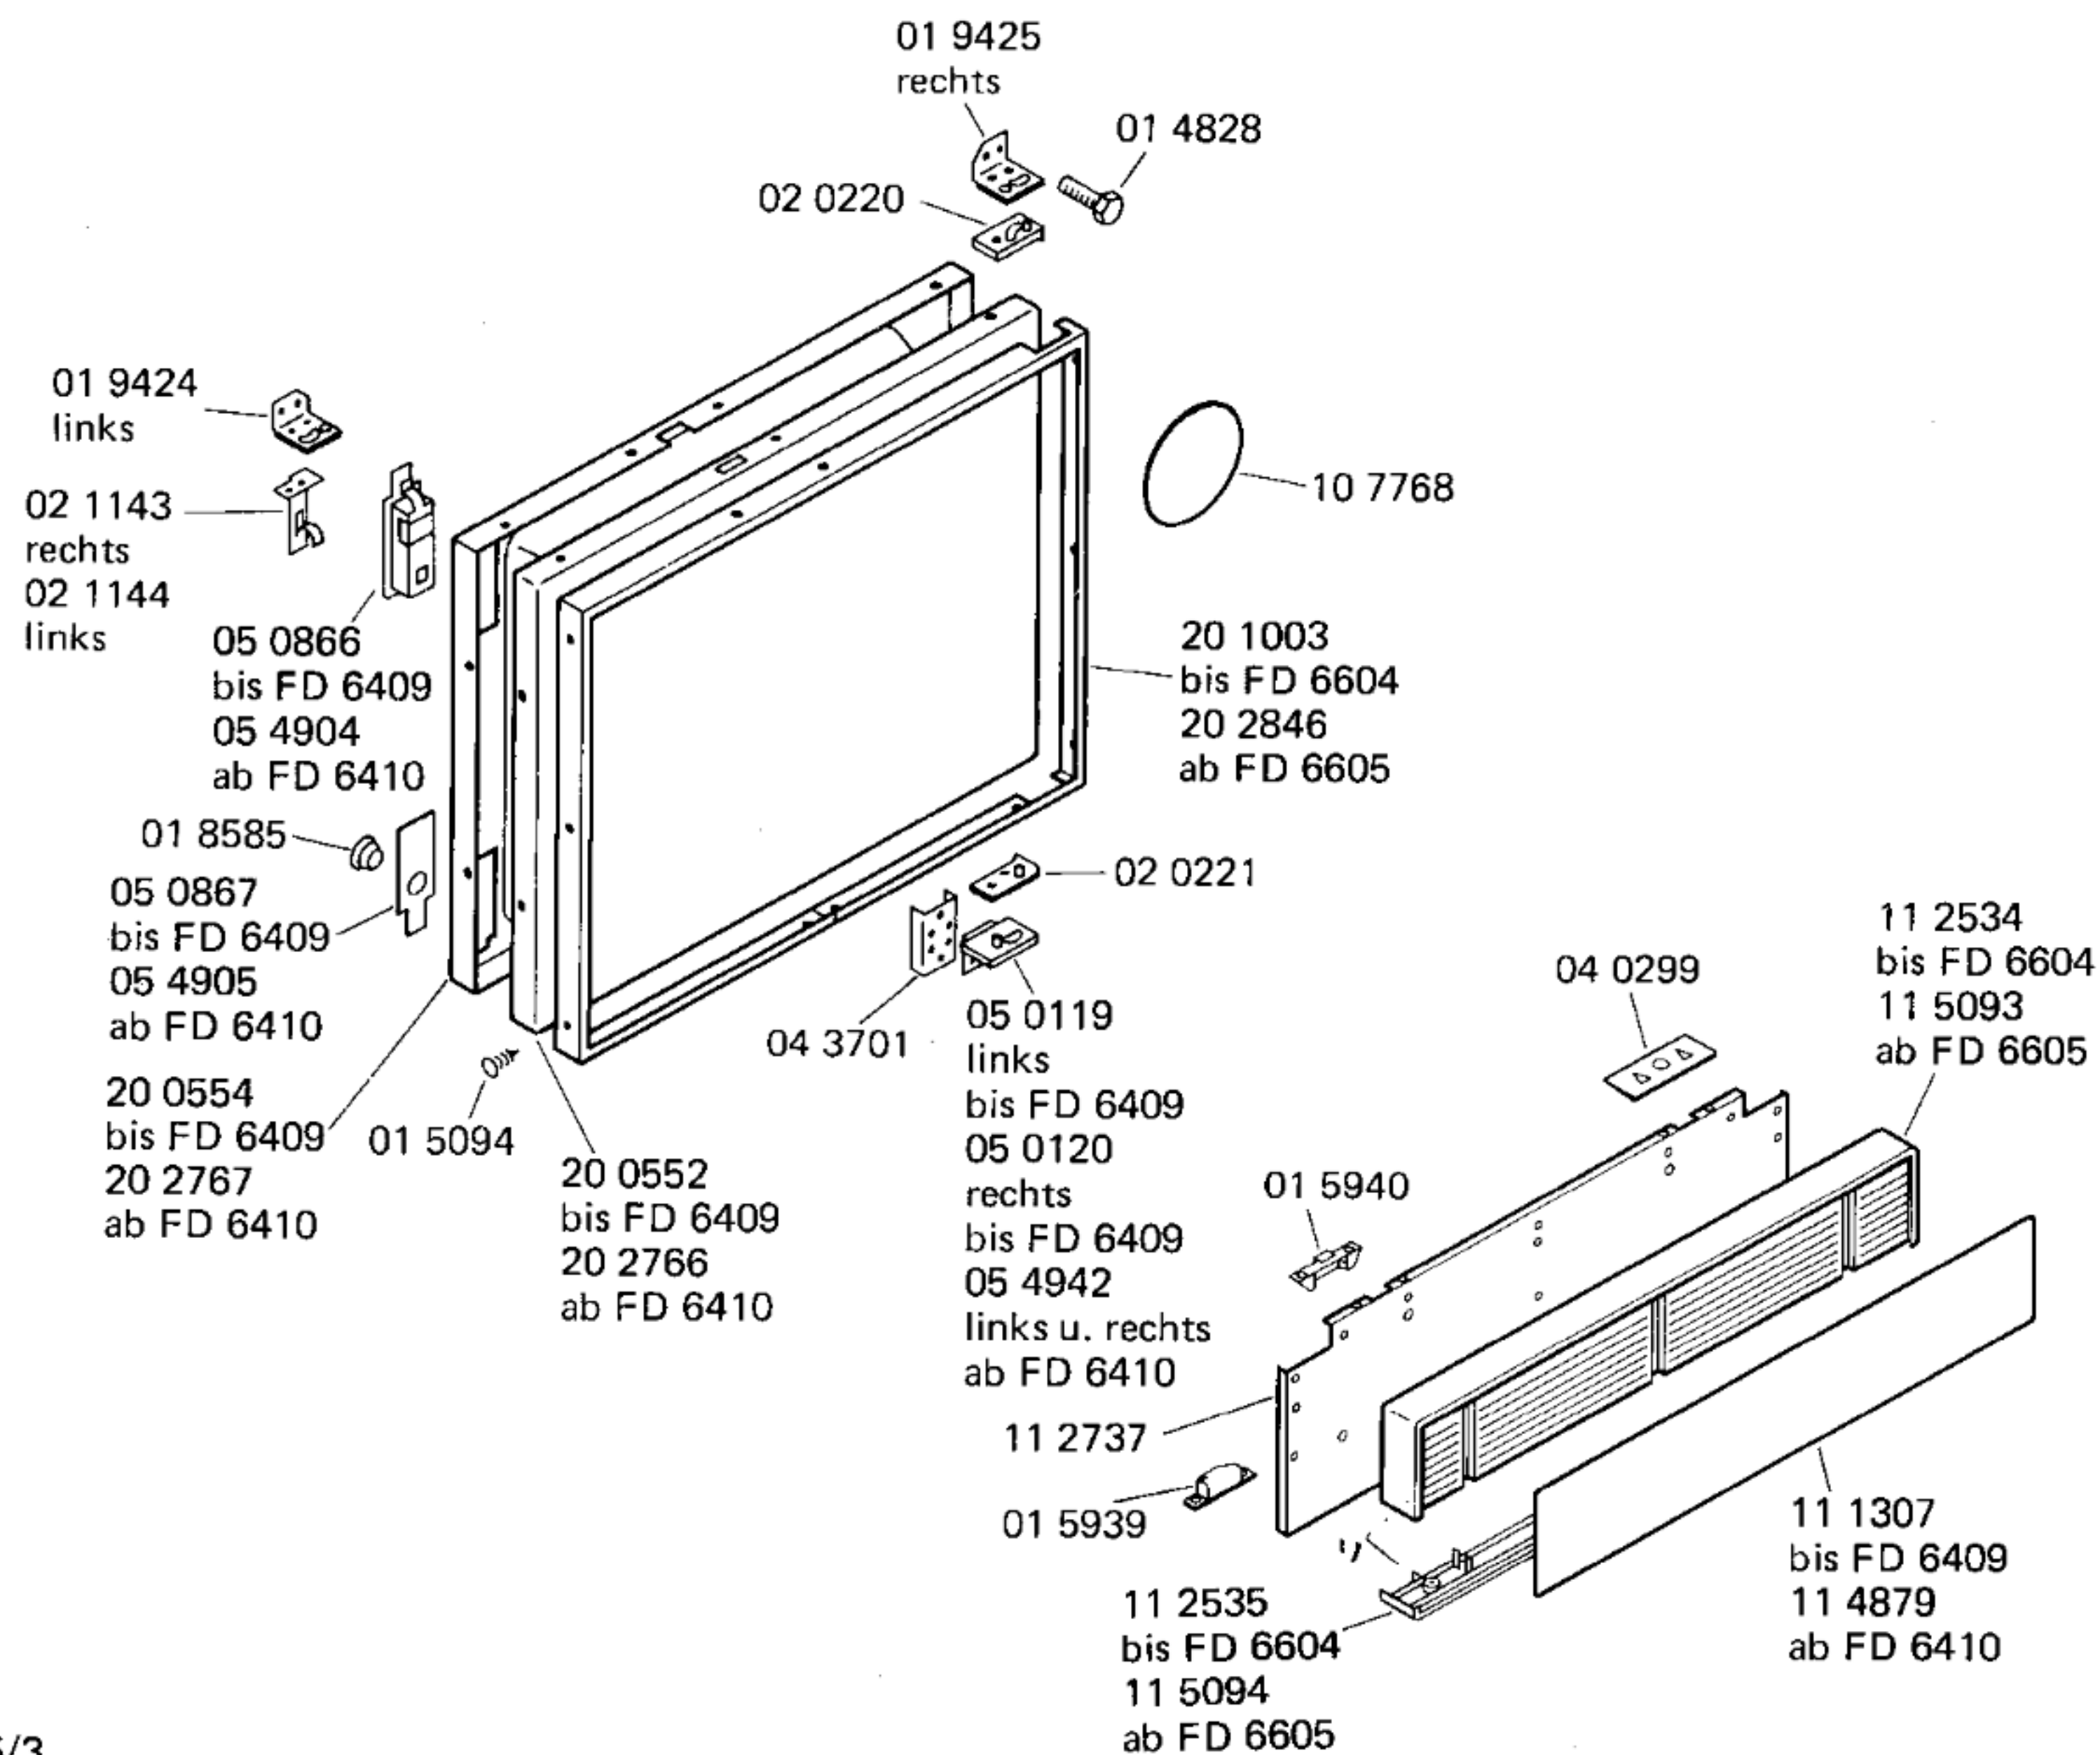

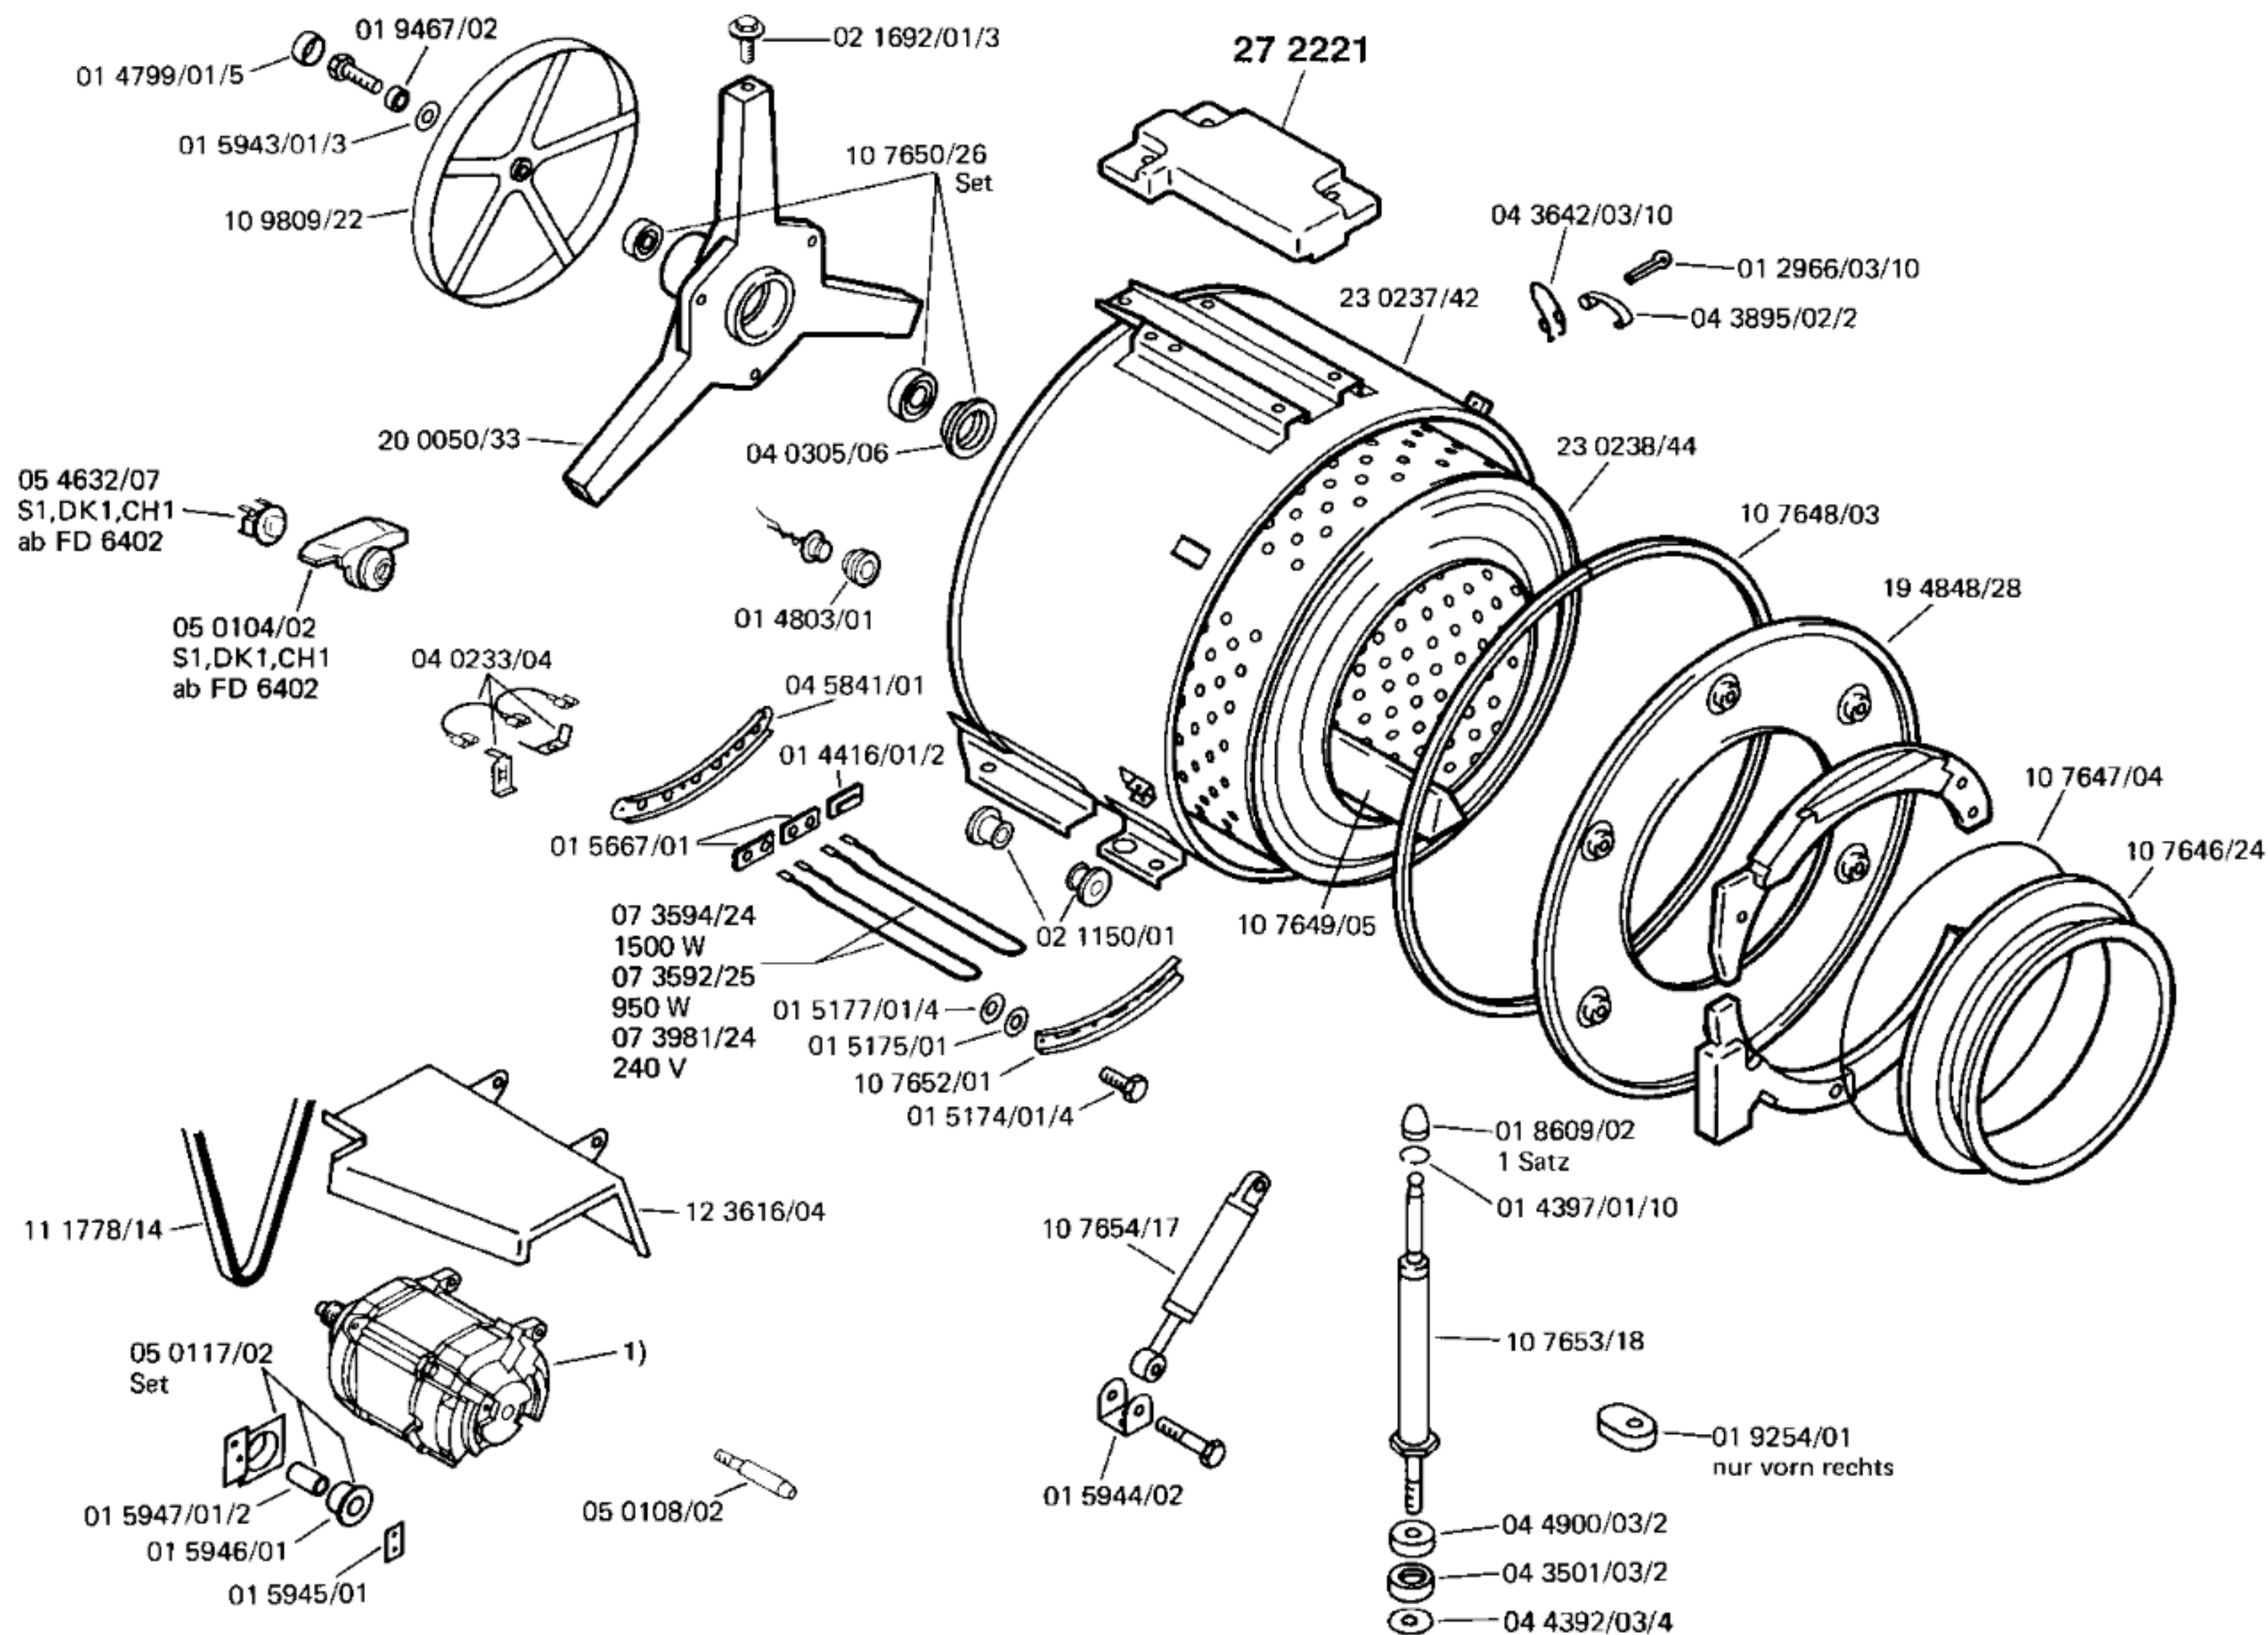

1) 14 0112/44*
 bis FD 6510
 I1,N1,SF1,DK1,CH1
 14 0372/44
 ab FD 6511
 I1,N1,SF1,DK1,CH1
 14 0293/44*
 bis FD 6510
 GB1
 14 0377/44
 ab FD 6511
 GB1
 *05 0117/02
 bis FD 6409
 mitbestellen

