 


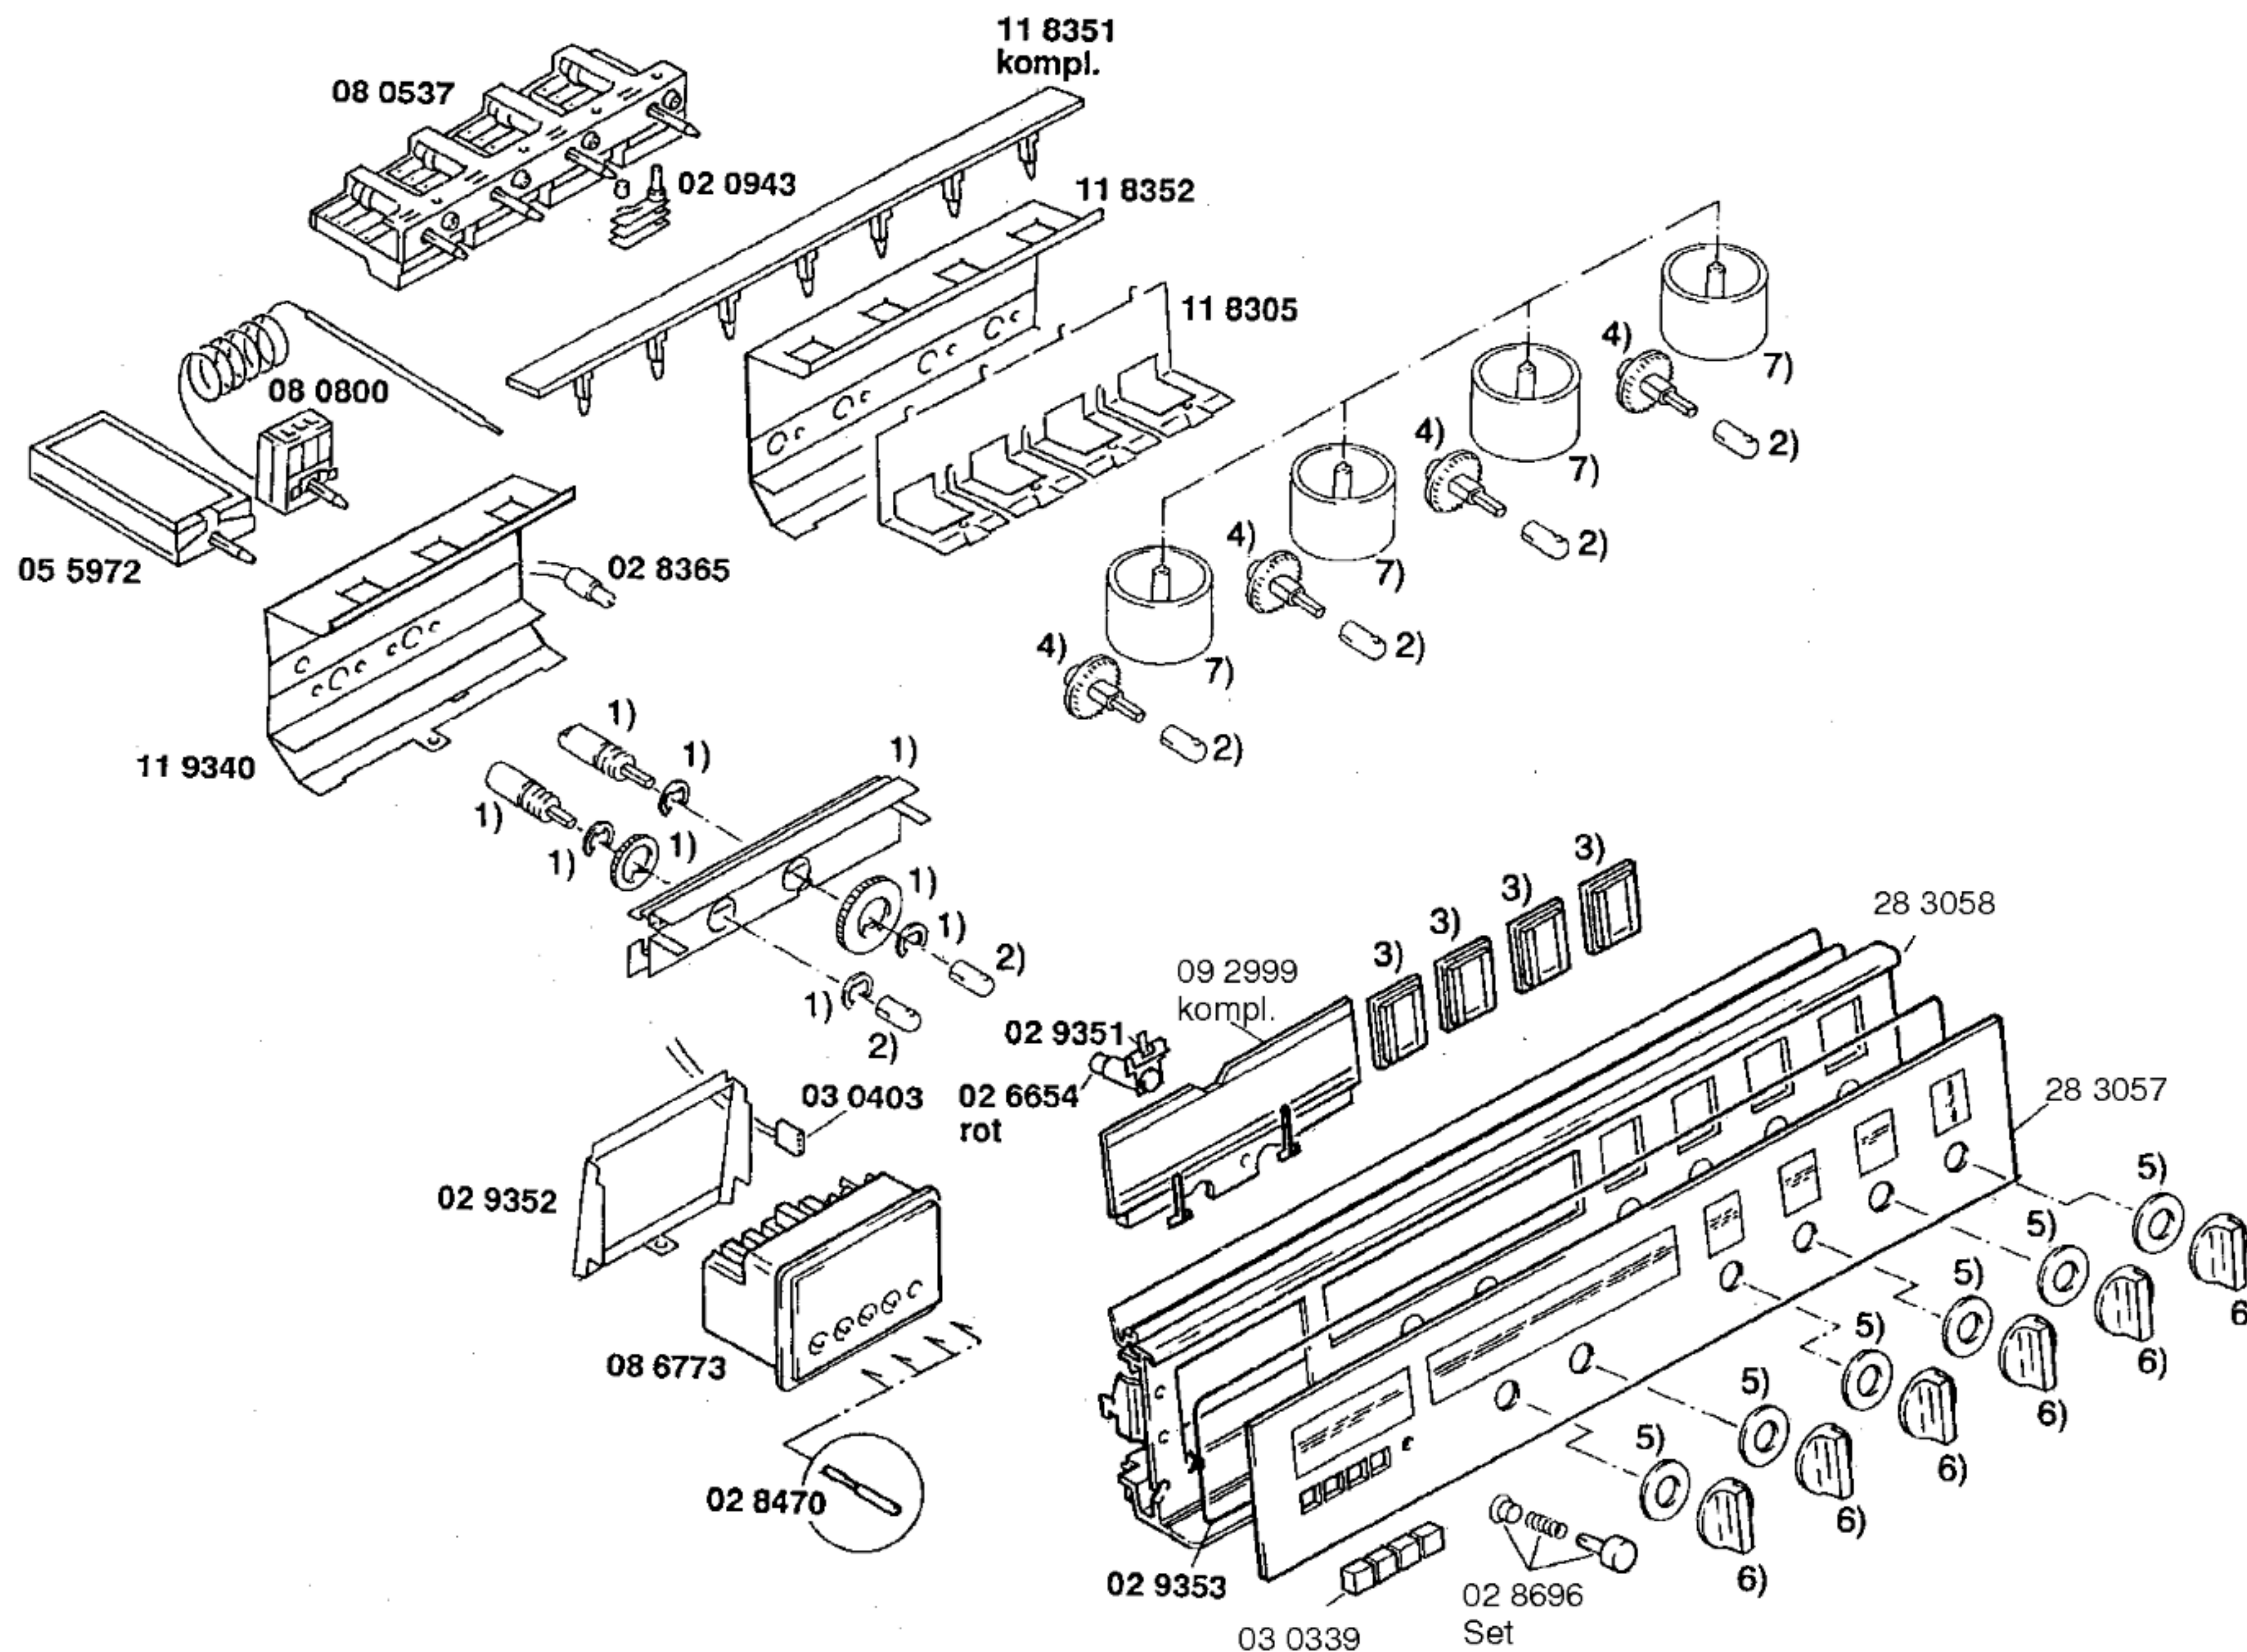

Gebrauchsanweisung

51 5526

(D)

Tips und Rezepte

51 3804

(D)

Bratautomatik—

Wählscheibe

51 3359

(D,F,GB,I,NL)

1) 08 5973

2) 03 0539

3) 02 9422

4) 05 6432

5) 03 0301

6) 02 9816

7) 05 8648

Zubehör:

Bratpfanne

HZ8042

Universalpfanne

HZ8057

Backblech Emaille

HZ8086

Backblech Alu


HZ8043

Spritzschutz

HZ8044

Glasbräter

 HZ9150

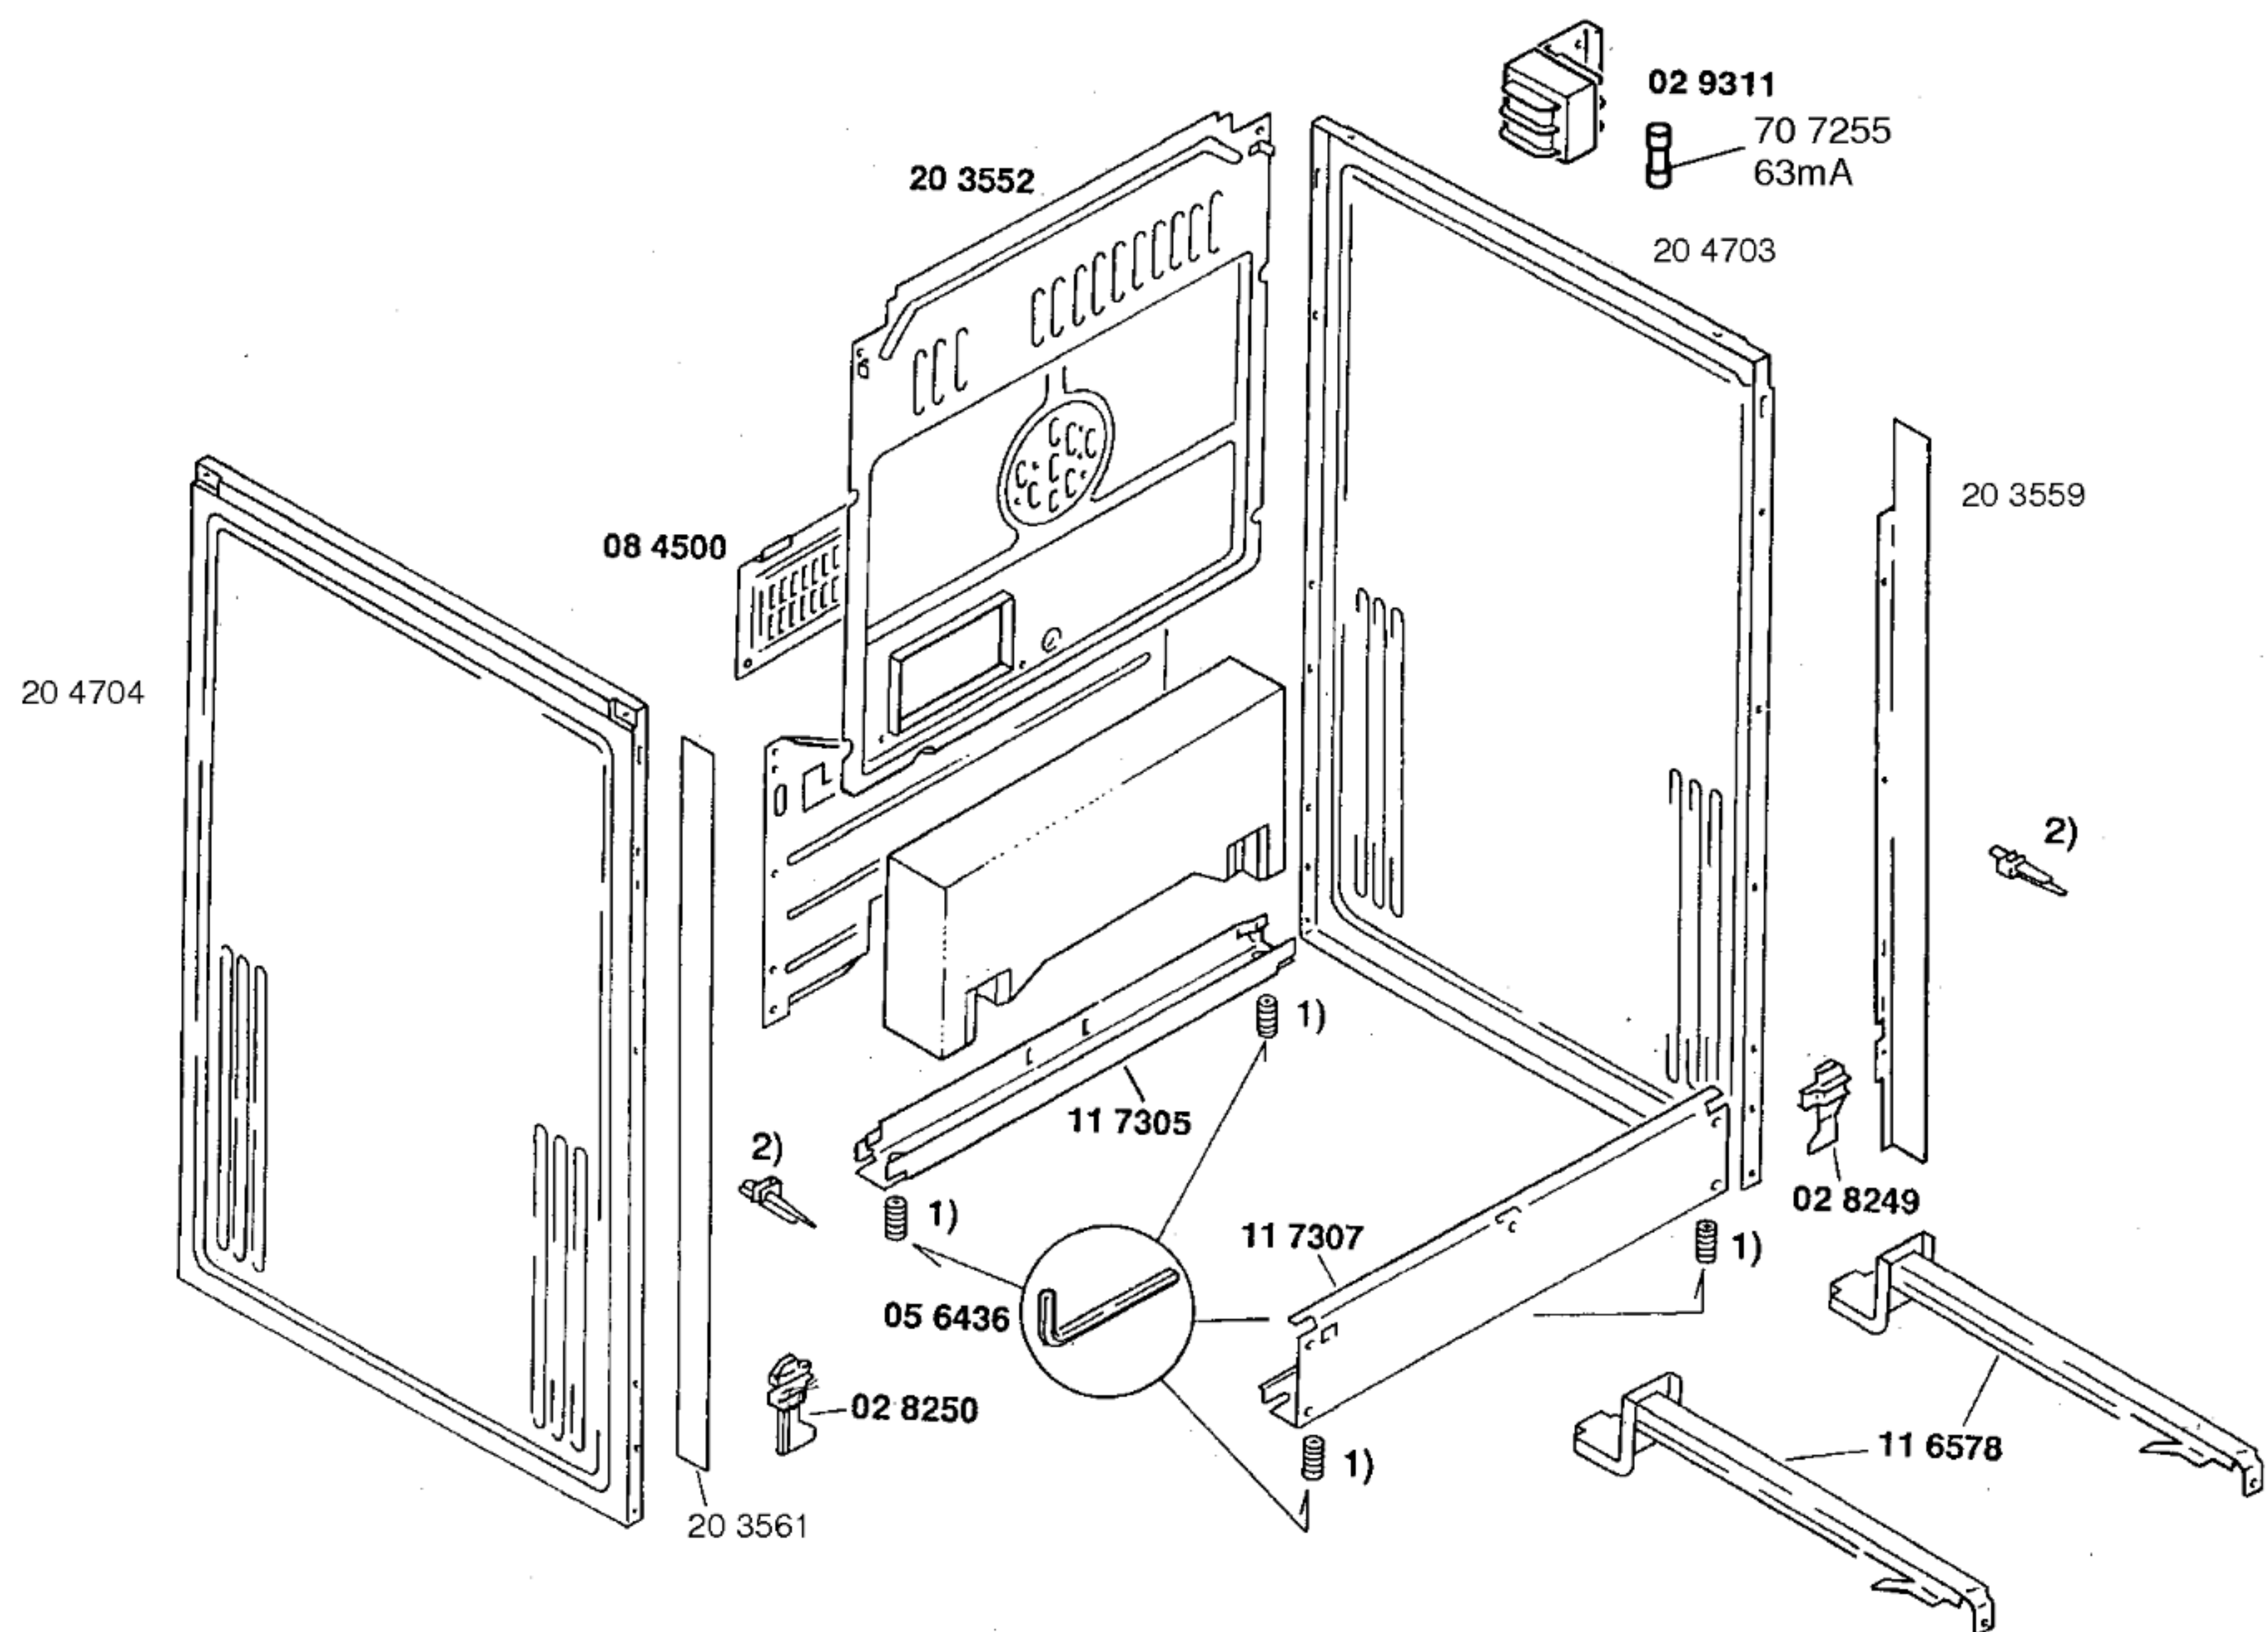

- 1) 04 4473
- 2) 02 8895

