


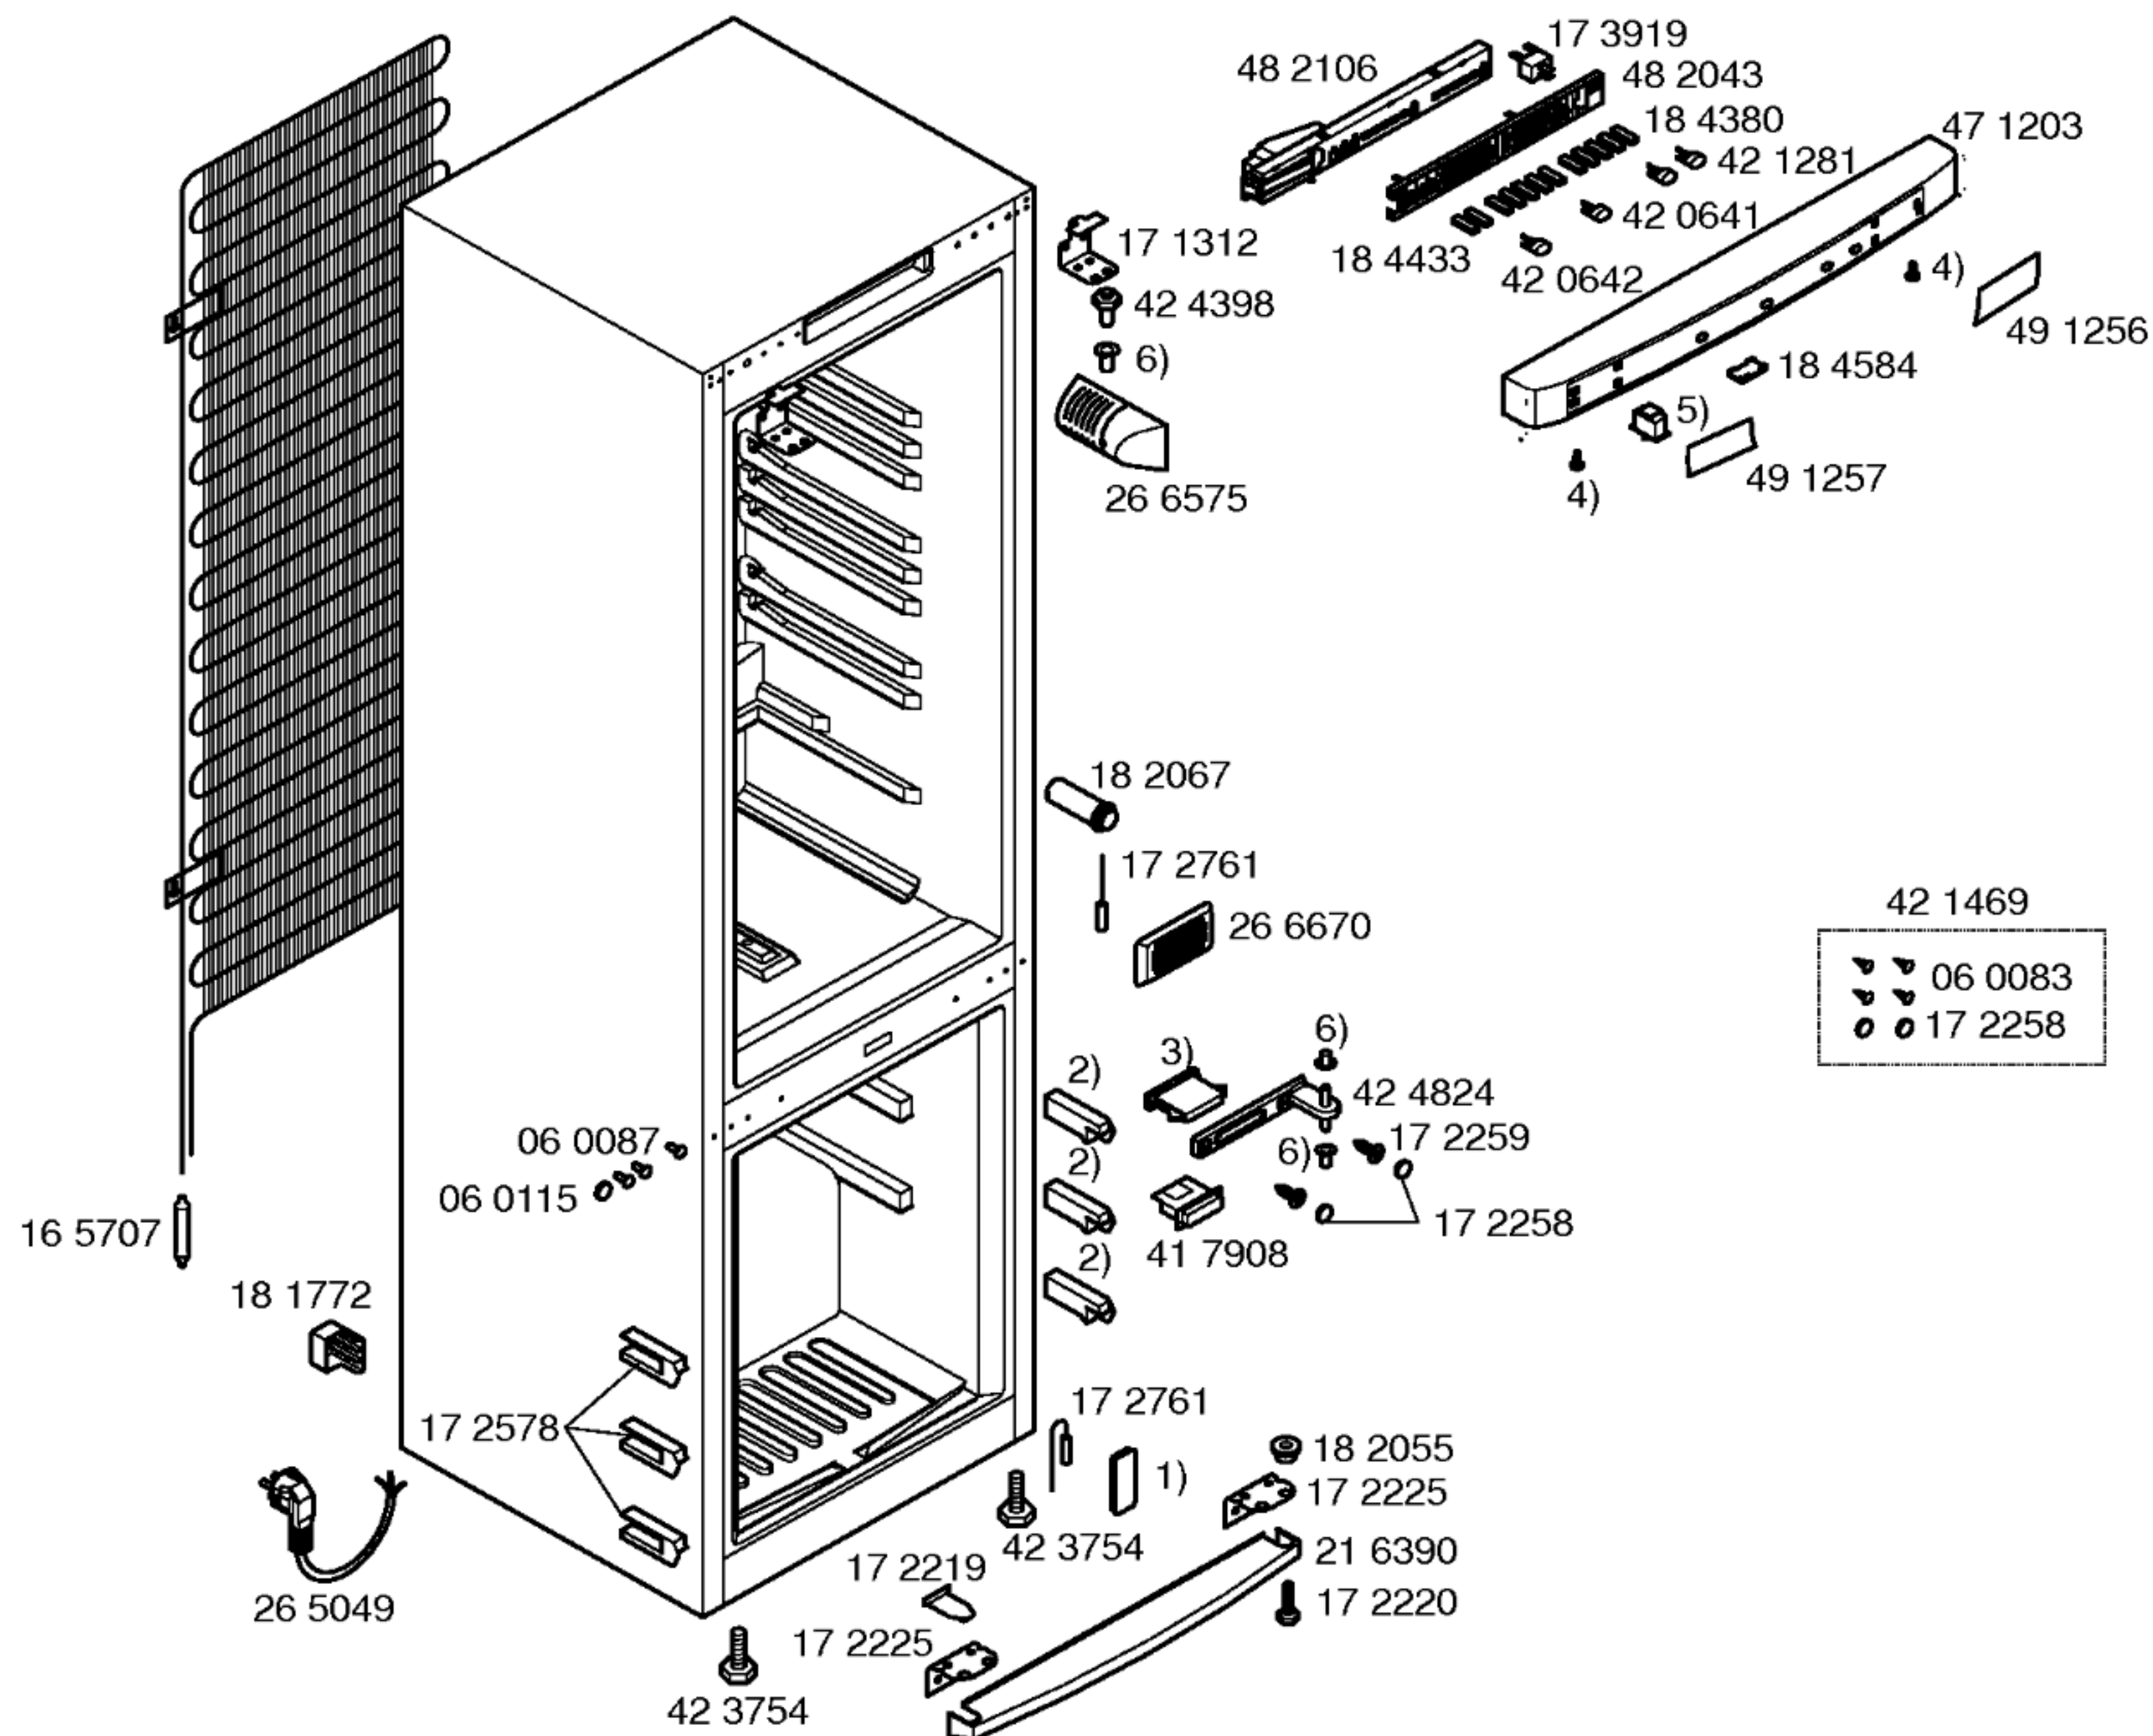

Gebrauchsanweisung

58 7334

(el,en)

1) 17 2762


2) 17 2579

3) 41 8128


4) 06 0087


5) 18 4027

6) 42 3890

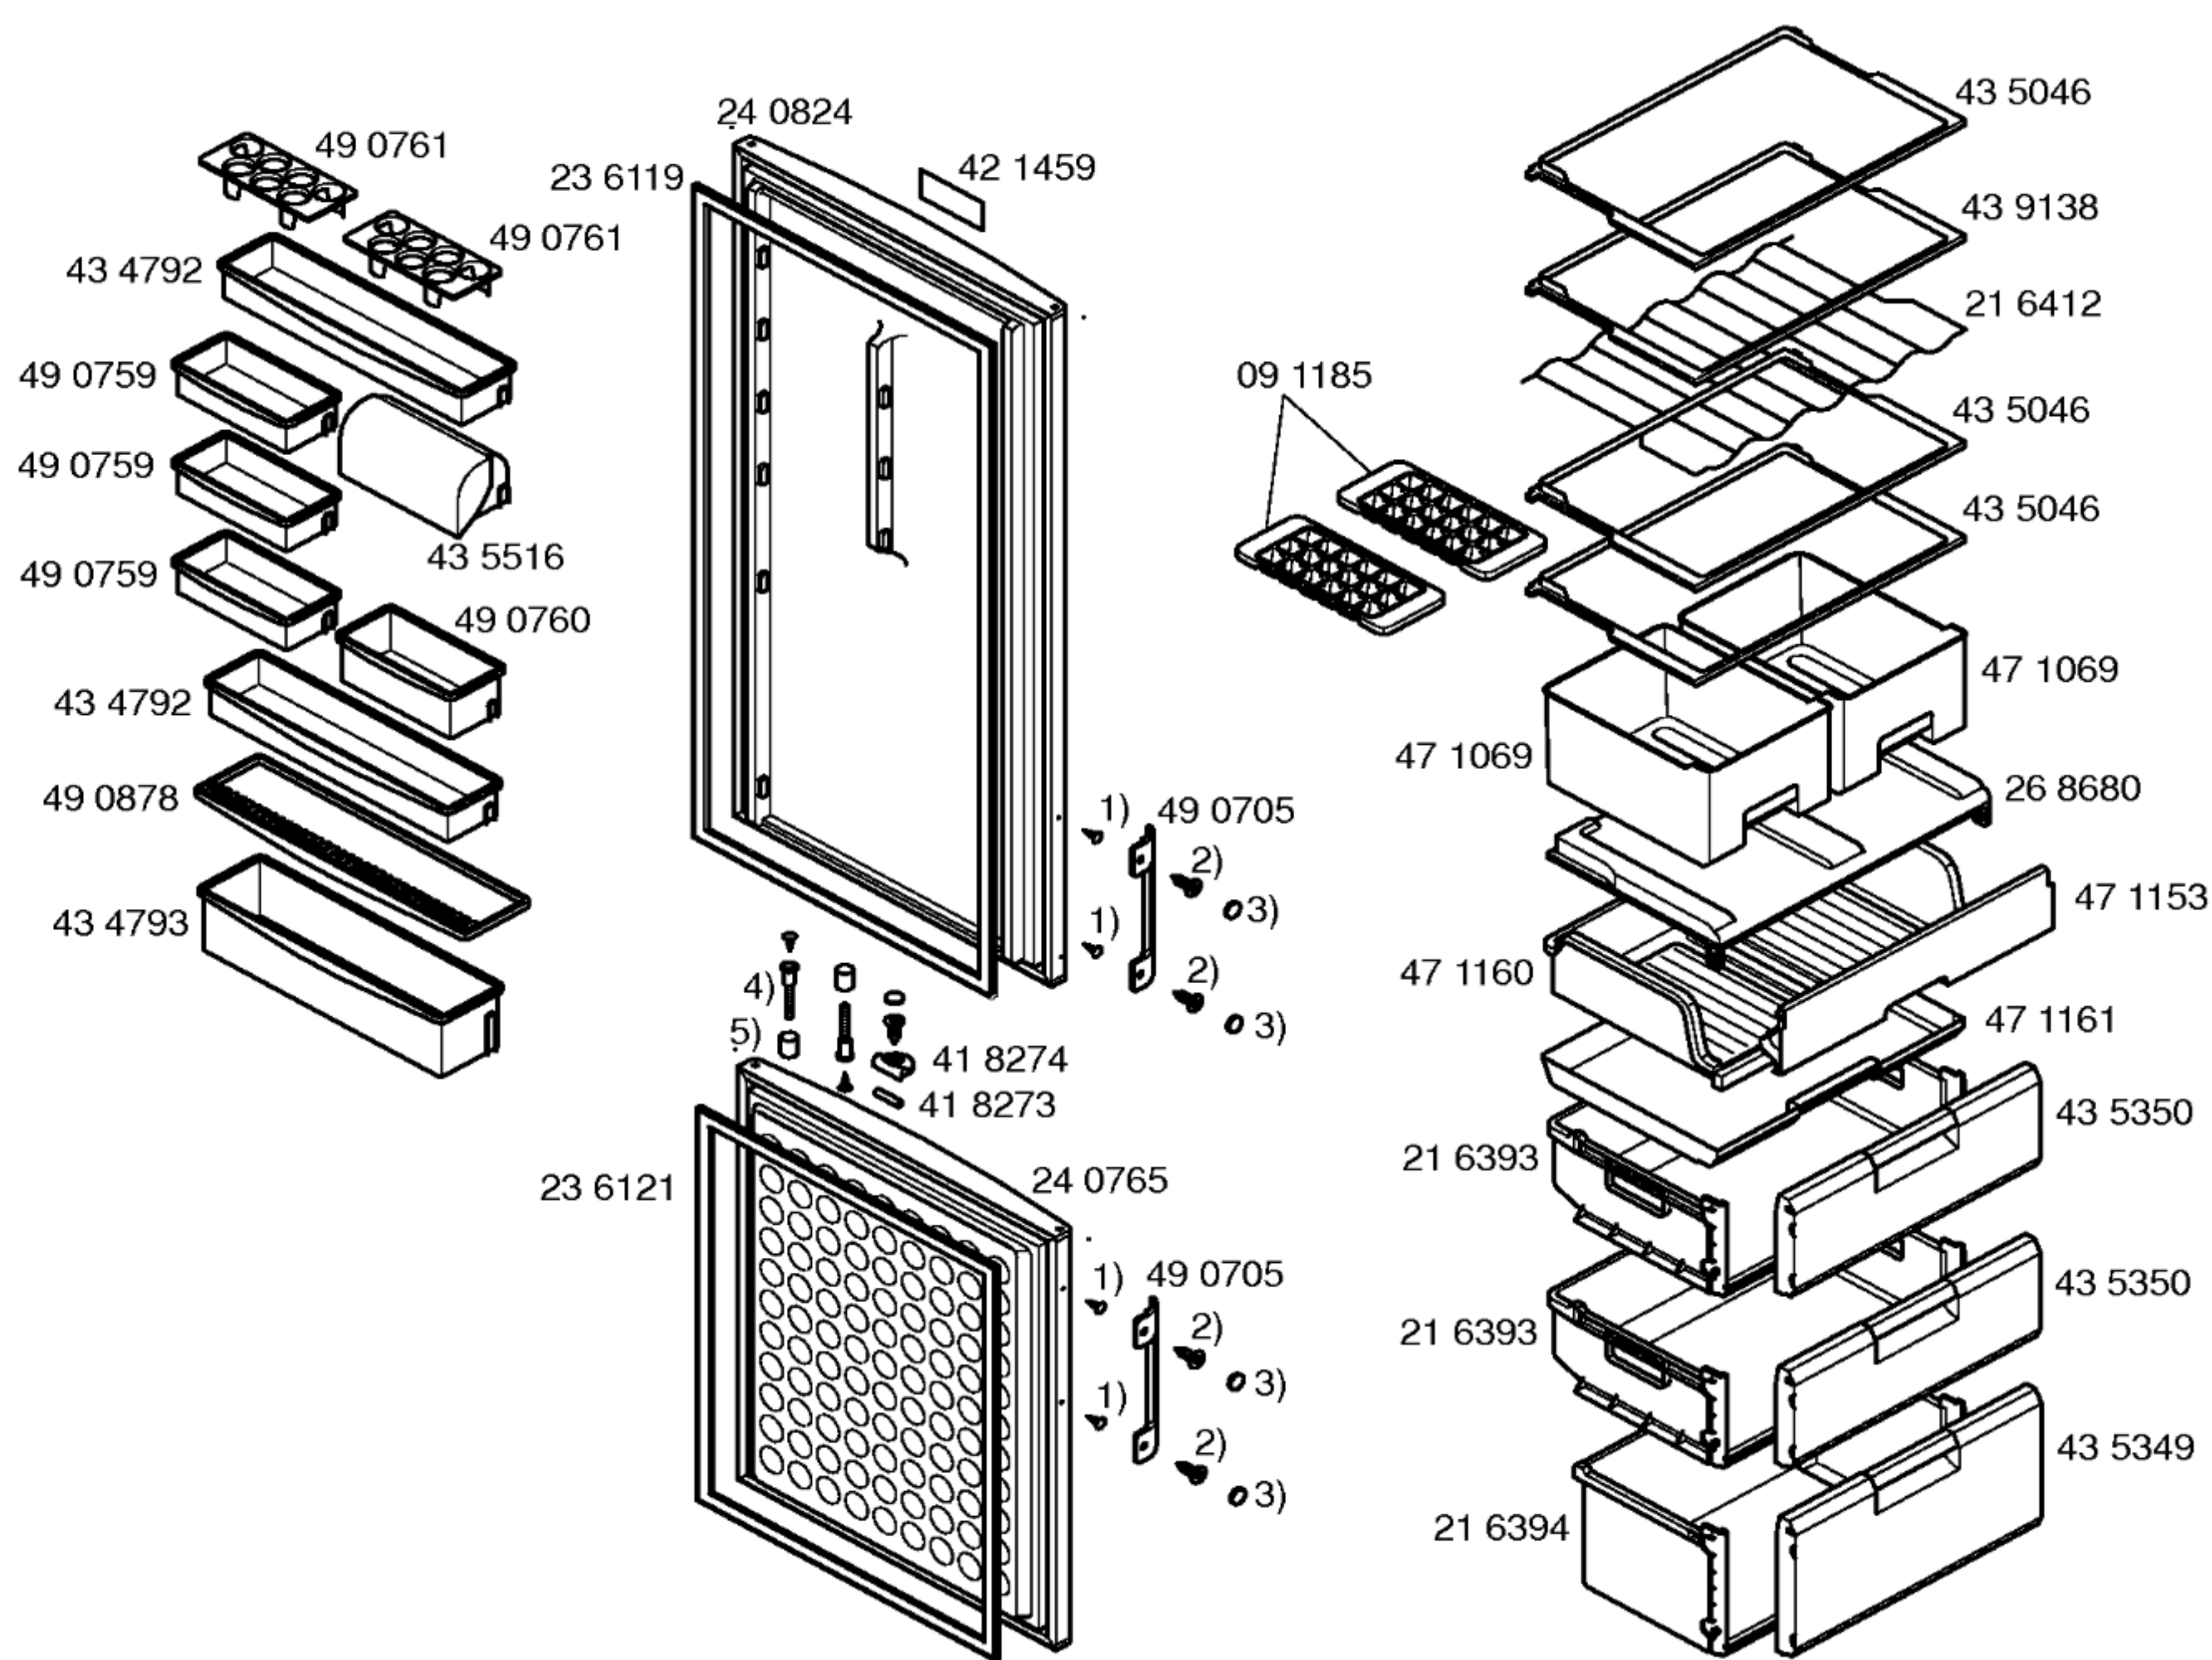

- 1) 06 0083
- 2) 17 2274
- 3) 06 0115
- 4) 18 8194
- 5) 18 8188

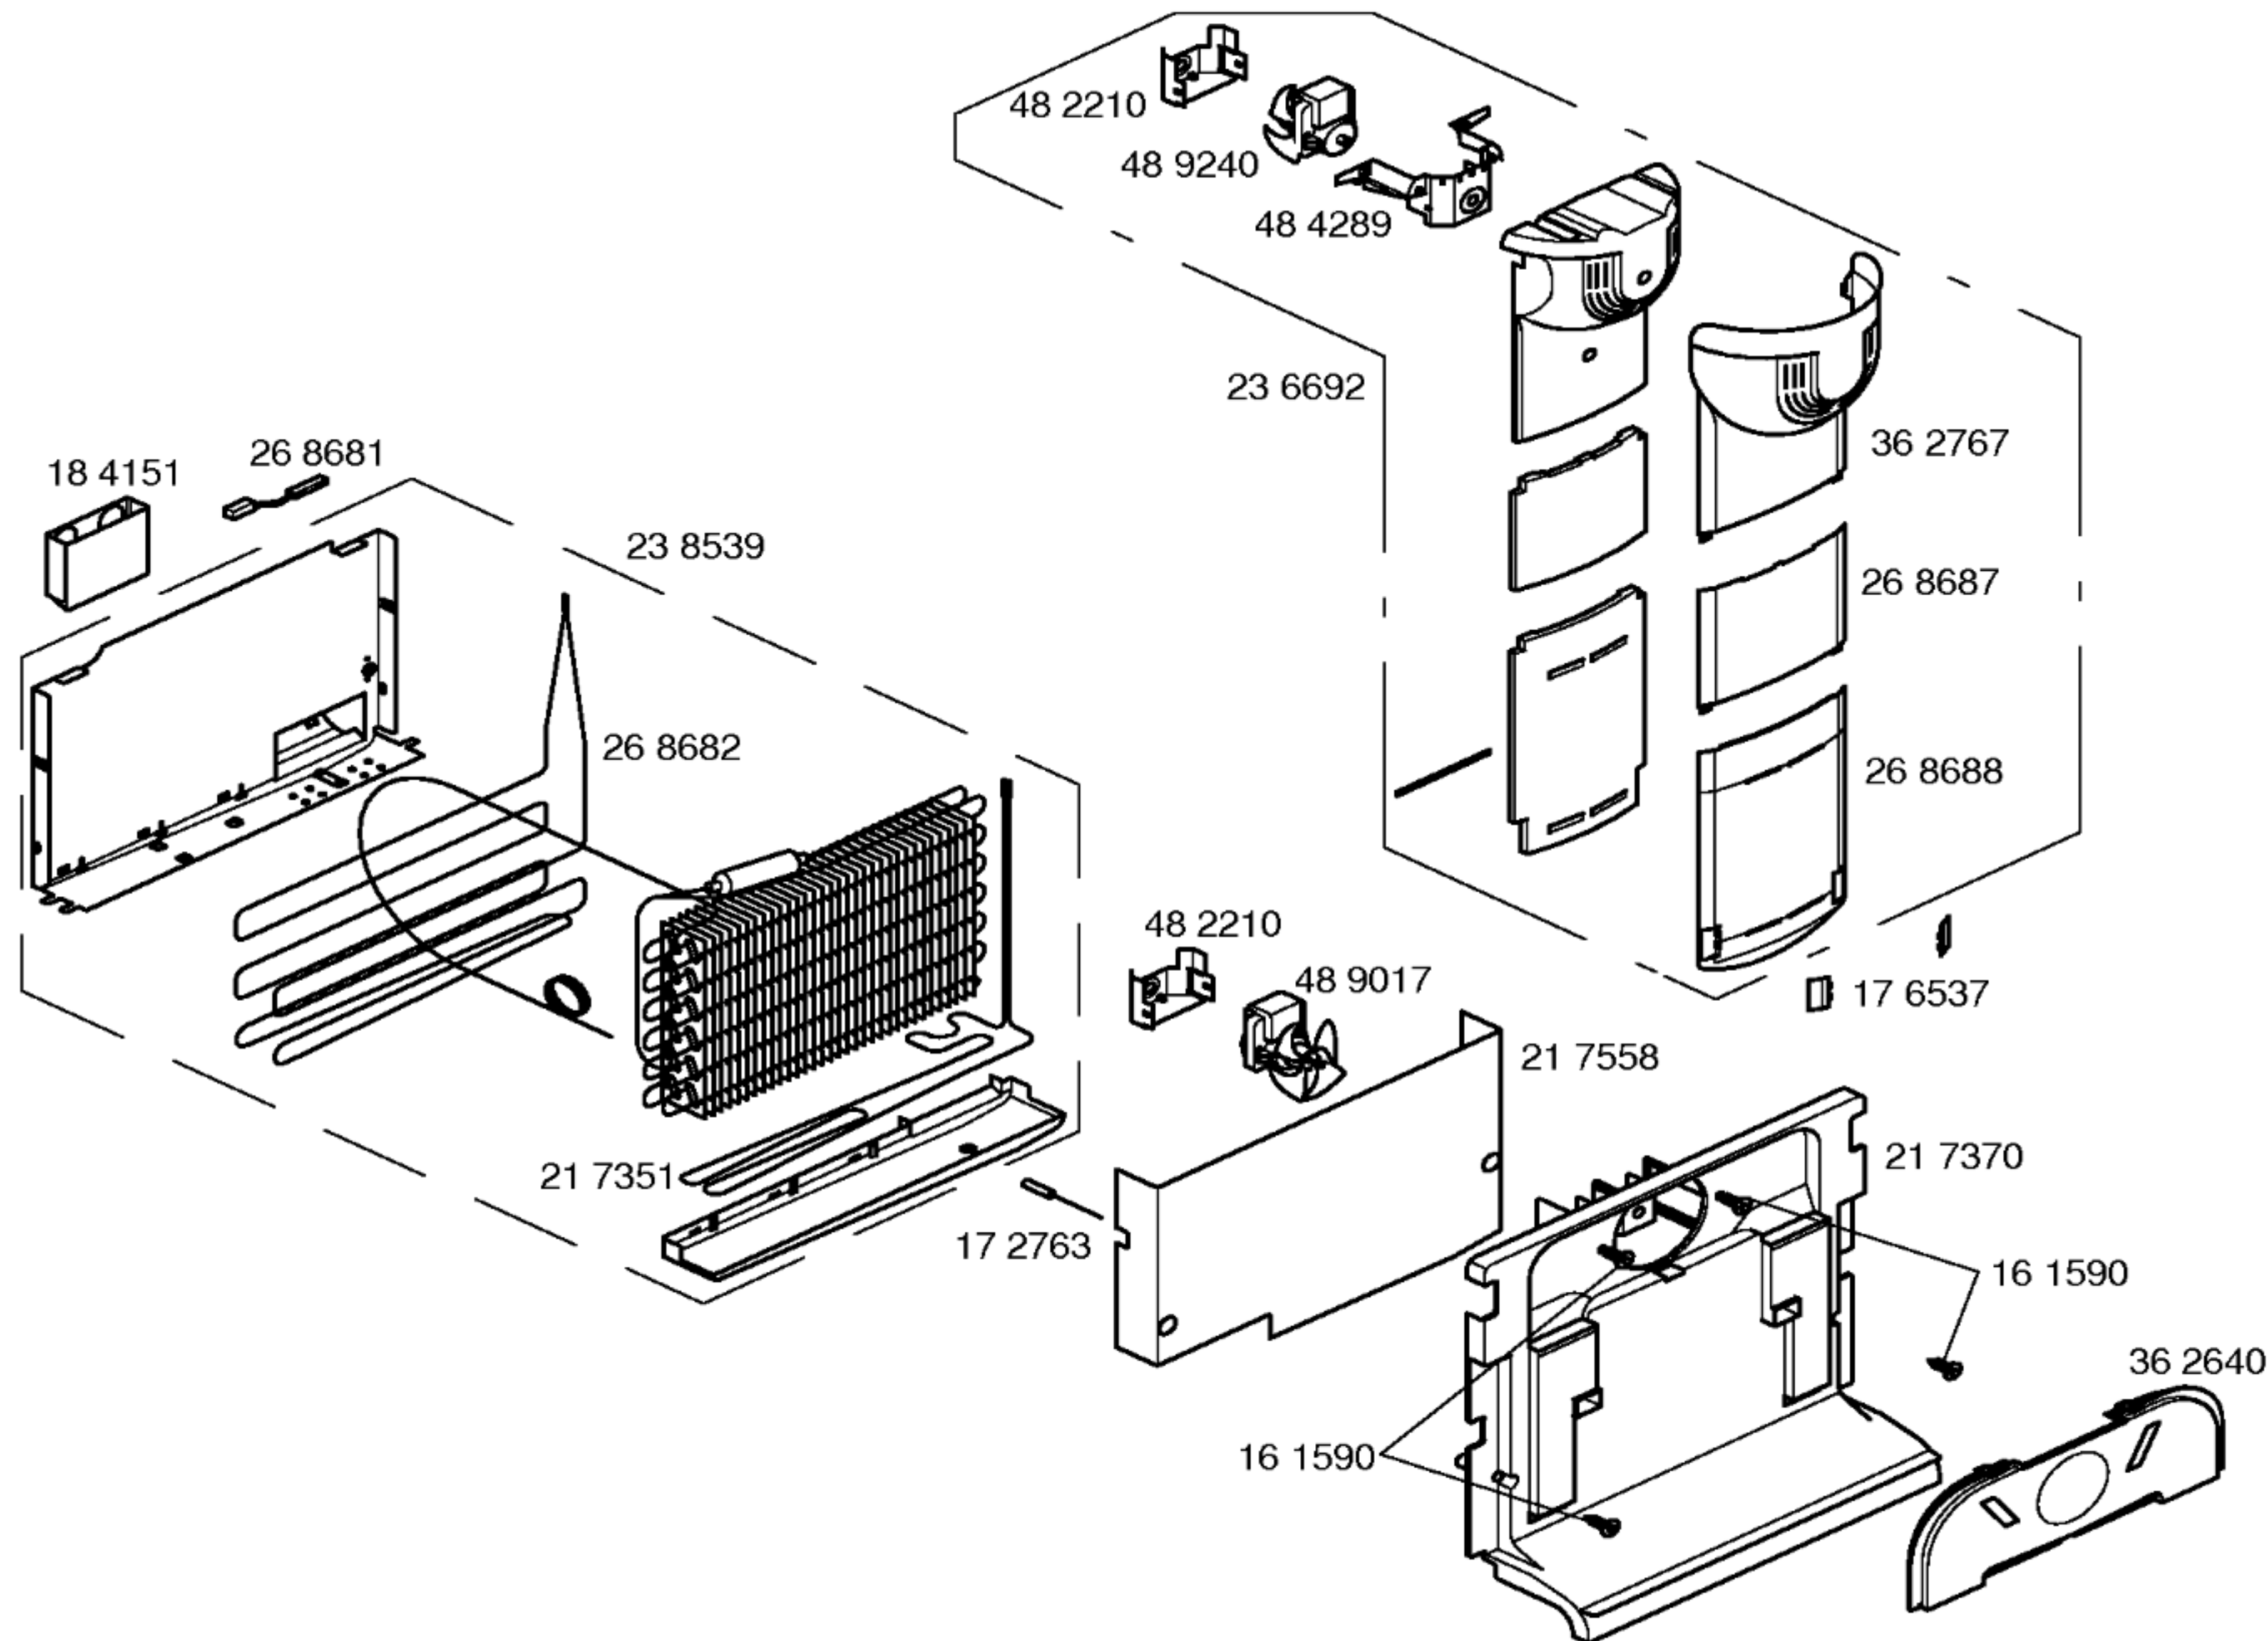

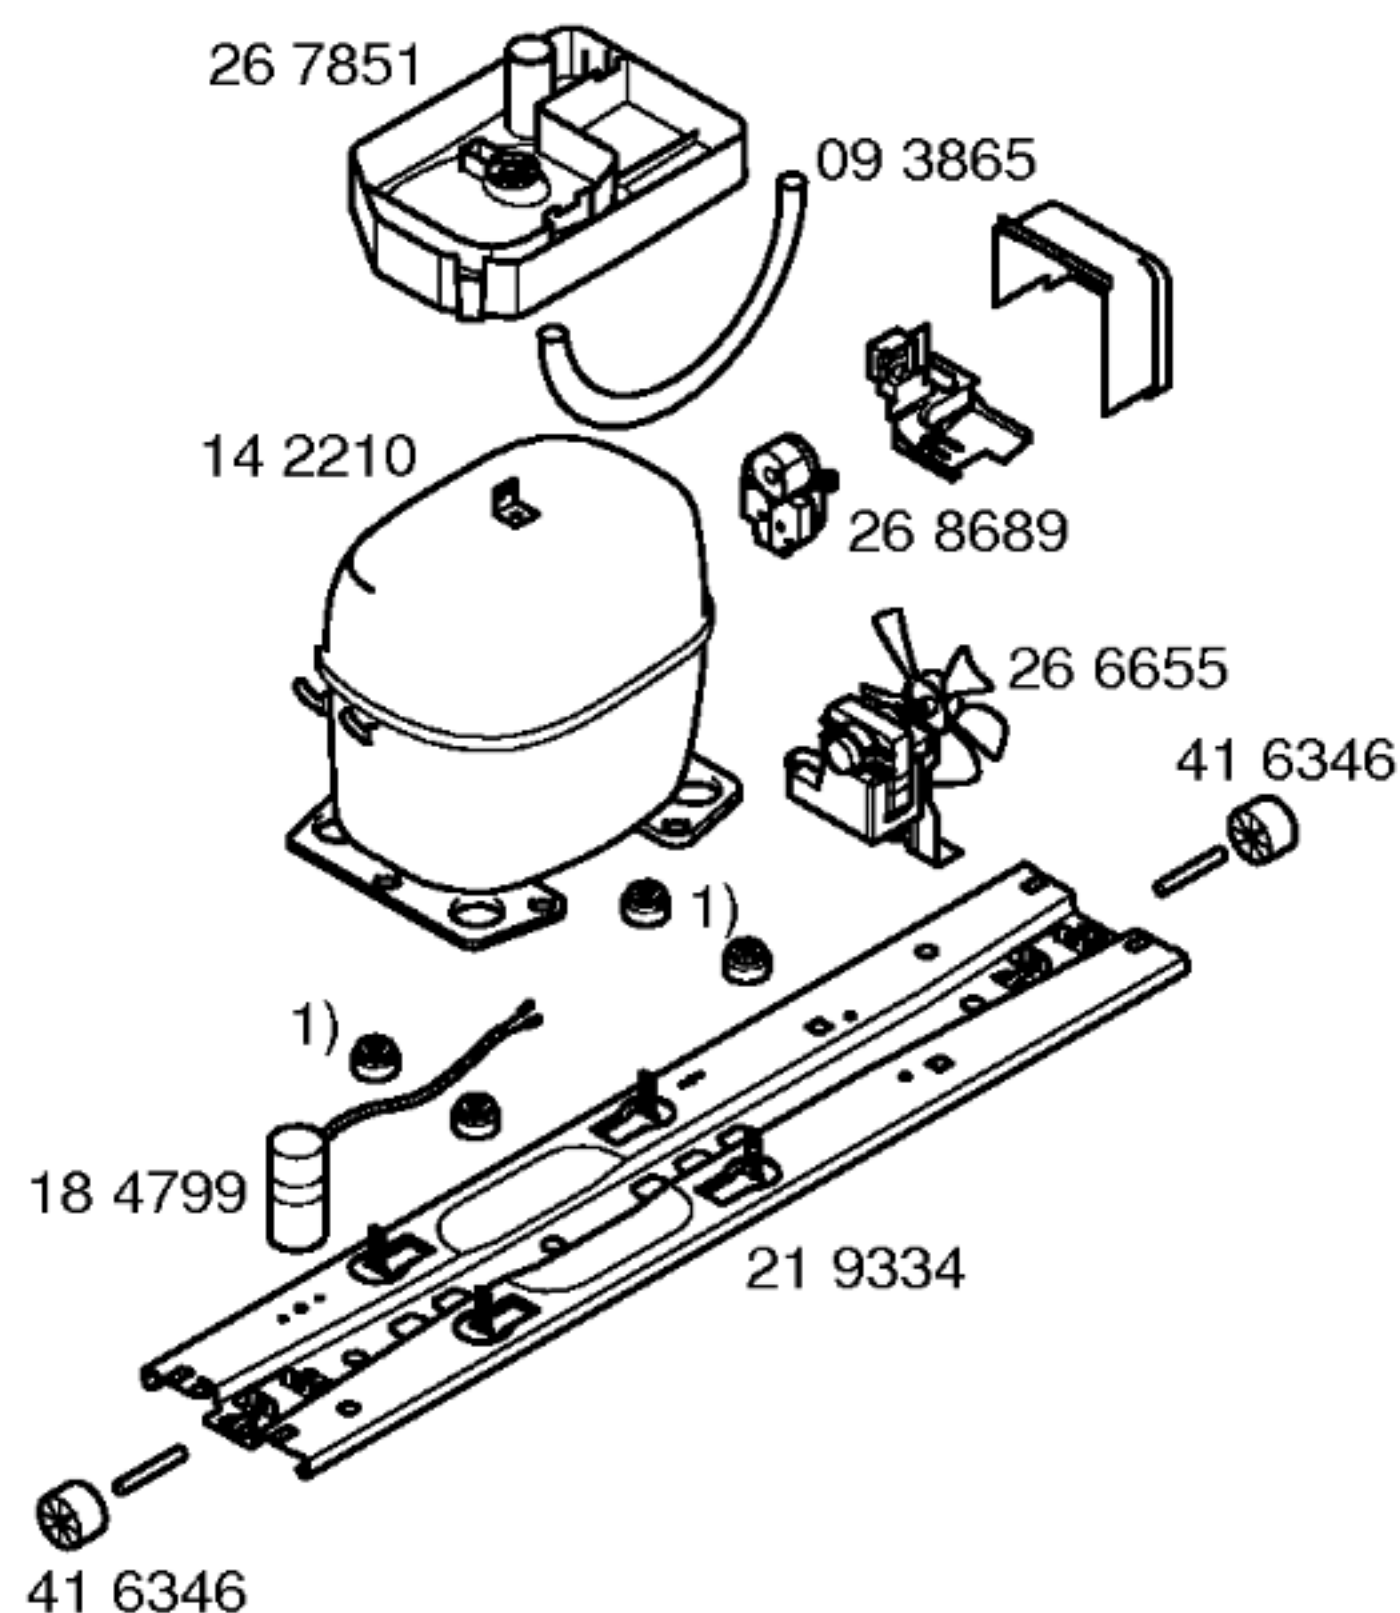

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS

Verdichter/Compressor/Compresseur/Compresor	ASPERA		
Typ/Type/Tipo	NBU 1118Y		
Förderleistung/Delivery/Debit/Aspiración l/h			
Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A	–		
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm	13.6		
Hi/aux.	14.7		
Klape Therm./Thermostat/Termostat			
Typ/Type/Tipo			
Reglerstellung/Position/Conexión	kalt	warm	
Schaltwerte/Switching values/	..ein/conex. °C		
Valeurs de commutation/Desconex.	..aus"/descon.		
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantily/Charge/Carga R600	g	45	
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W	150	
Heizung/Heater/Chauflage/Resistenc.descong.	KW	Verdampfer	
Widerstand/Resistance/Resistencia	W	0.375	
Leistung/Power/Puissance/Potencia		145/230V	
Ventilator/Blower/Ventilateur/Ventilador	Verdichter	Verdampfer	
Widerstand/Resistance/Resistencia	KF 0.57	GF 0.47	

1) 06 0182