



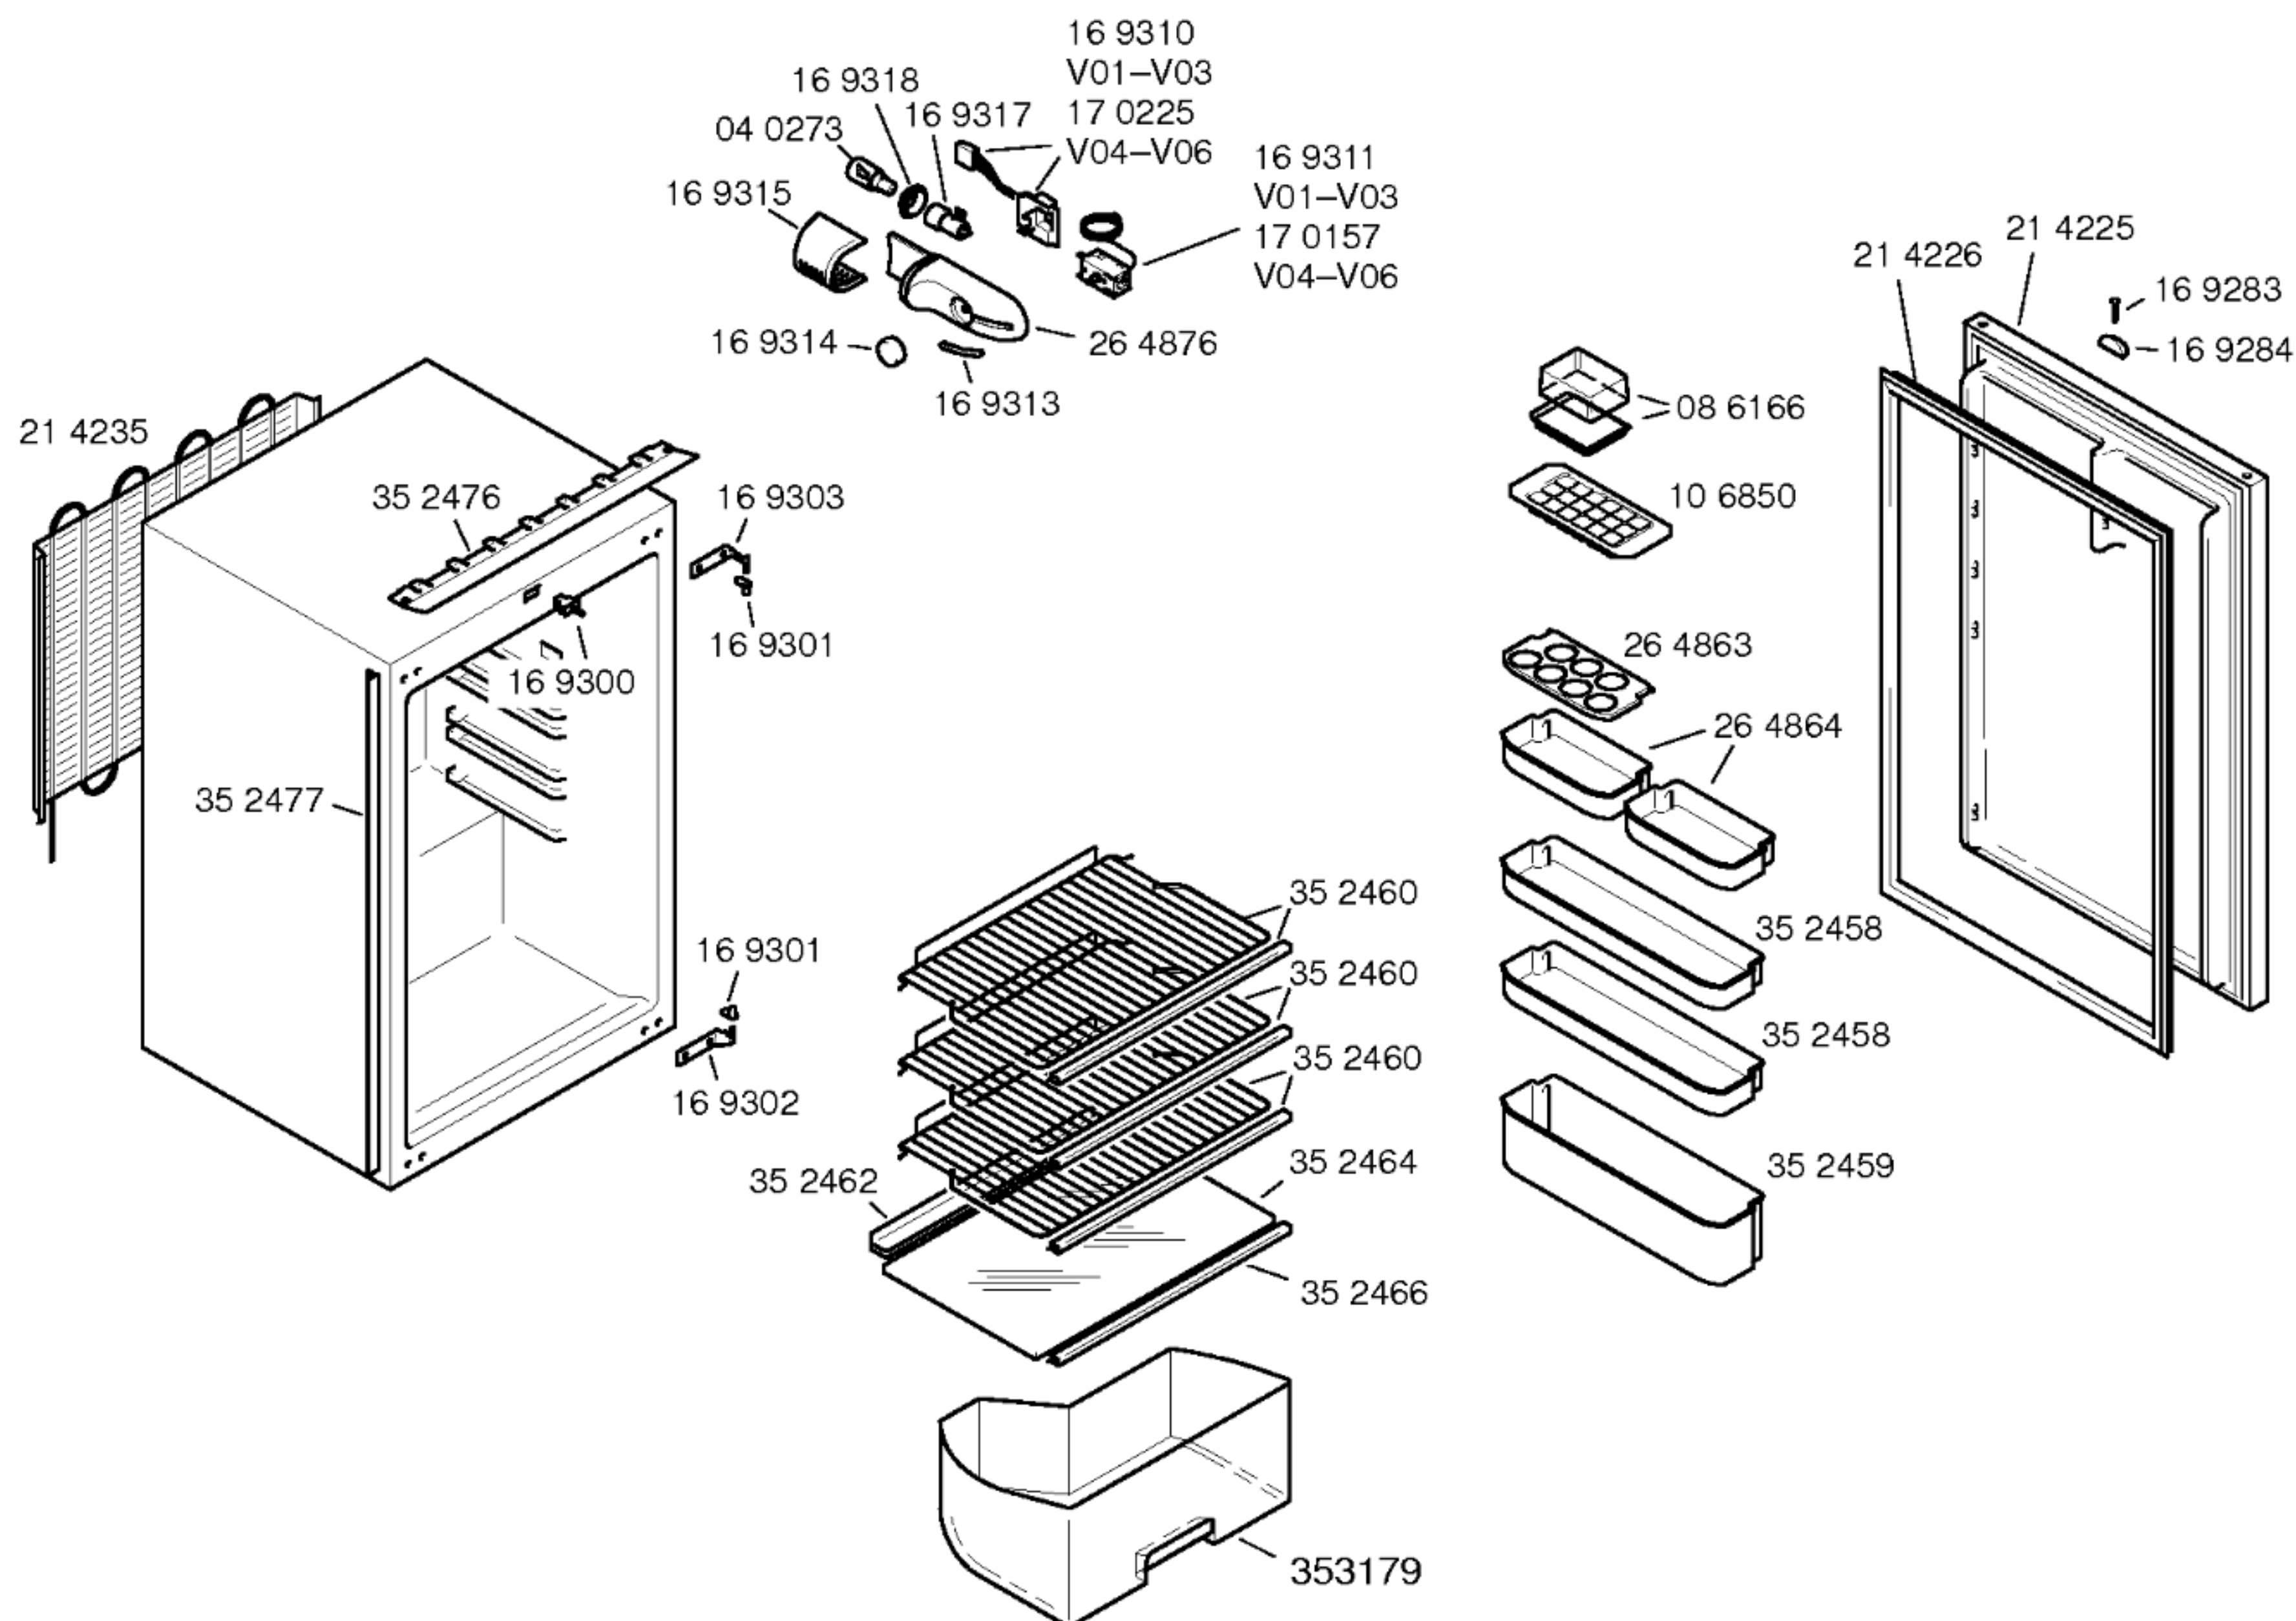

Gebrauchsanweisung
52 1930

Montageanleitung
52 1893

Befestigungssatz
26 4862

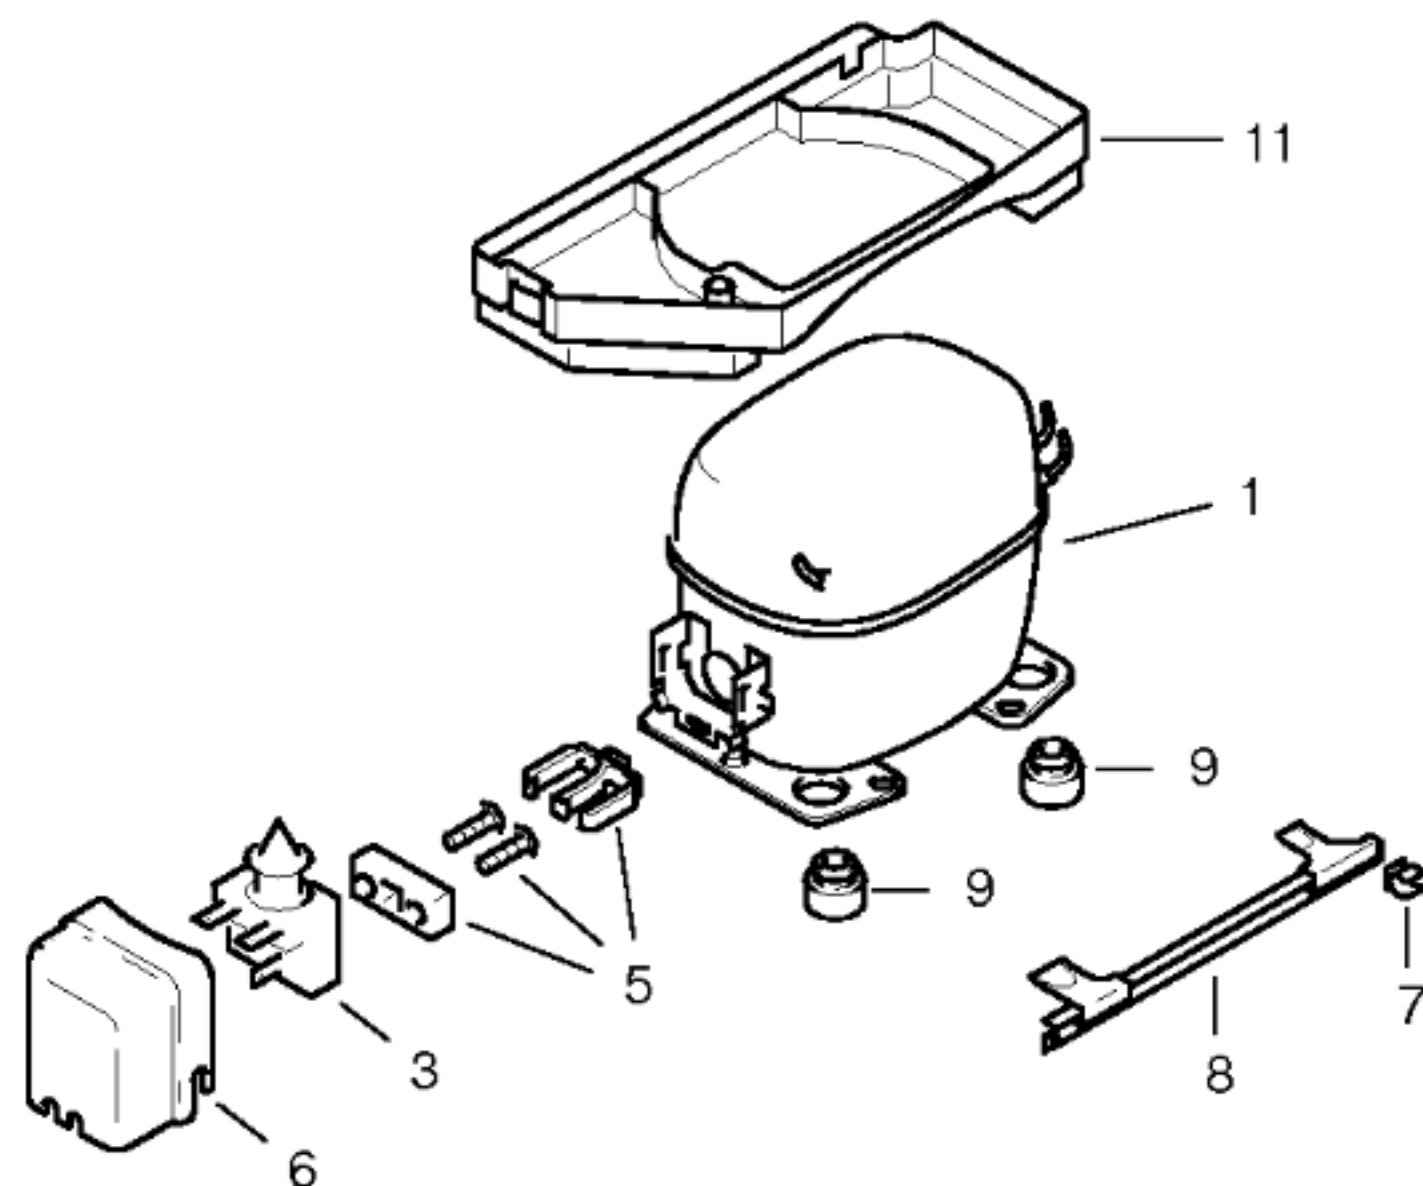

	V01-V03	V04-V06	
Pos.	Danfoss D88	Danfoss DF2	
	TLES 4 K	TLES 4 K	
1	14 1149	14 1928	
2			
3	15 1055	15 1055	
4			
5	15 0760	15 0760	
6	15 1072	15 1072	
7	16 9319	16 9319	
8	26 4879	26 4879	
9	05 0166	05 0166	
10			
11	26 4878	26 4878	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES 4 K		
Förderleistung/Delivery/Débit	l/h	695		
Anlaufstrom/Starting current/Cour de démarrage	A	6,9		
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	29,0		
	Hi/aux Ω	19,0		
Temp.-Regler/Thermostat		Ranco		
Typ/Type		K59		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+5,2	+5,2	
Valeurs de commutation	„aus“	-31,0	-13,5	
	(„abtauen“ od.) „alarm“			
Füllmenge/Fill.quantity/Charge	R600a	g	*	
Anschlußwert/Conn.load/Puiss. connectée	W			
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild