



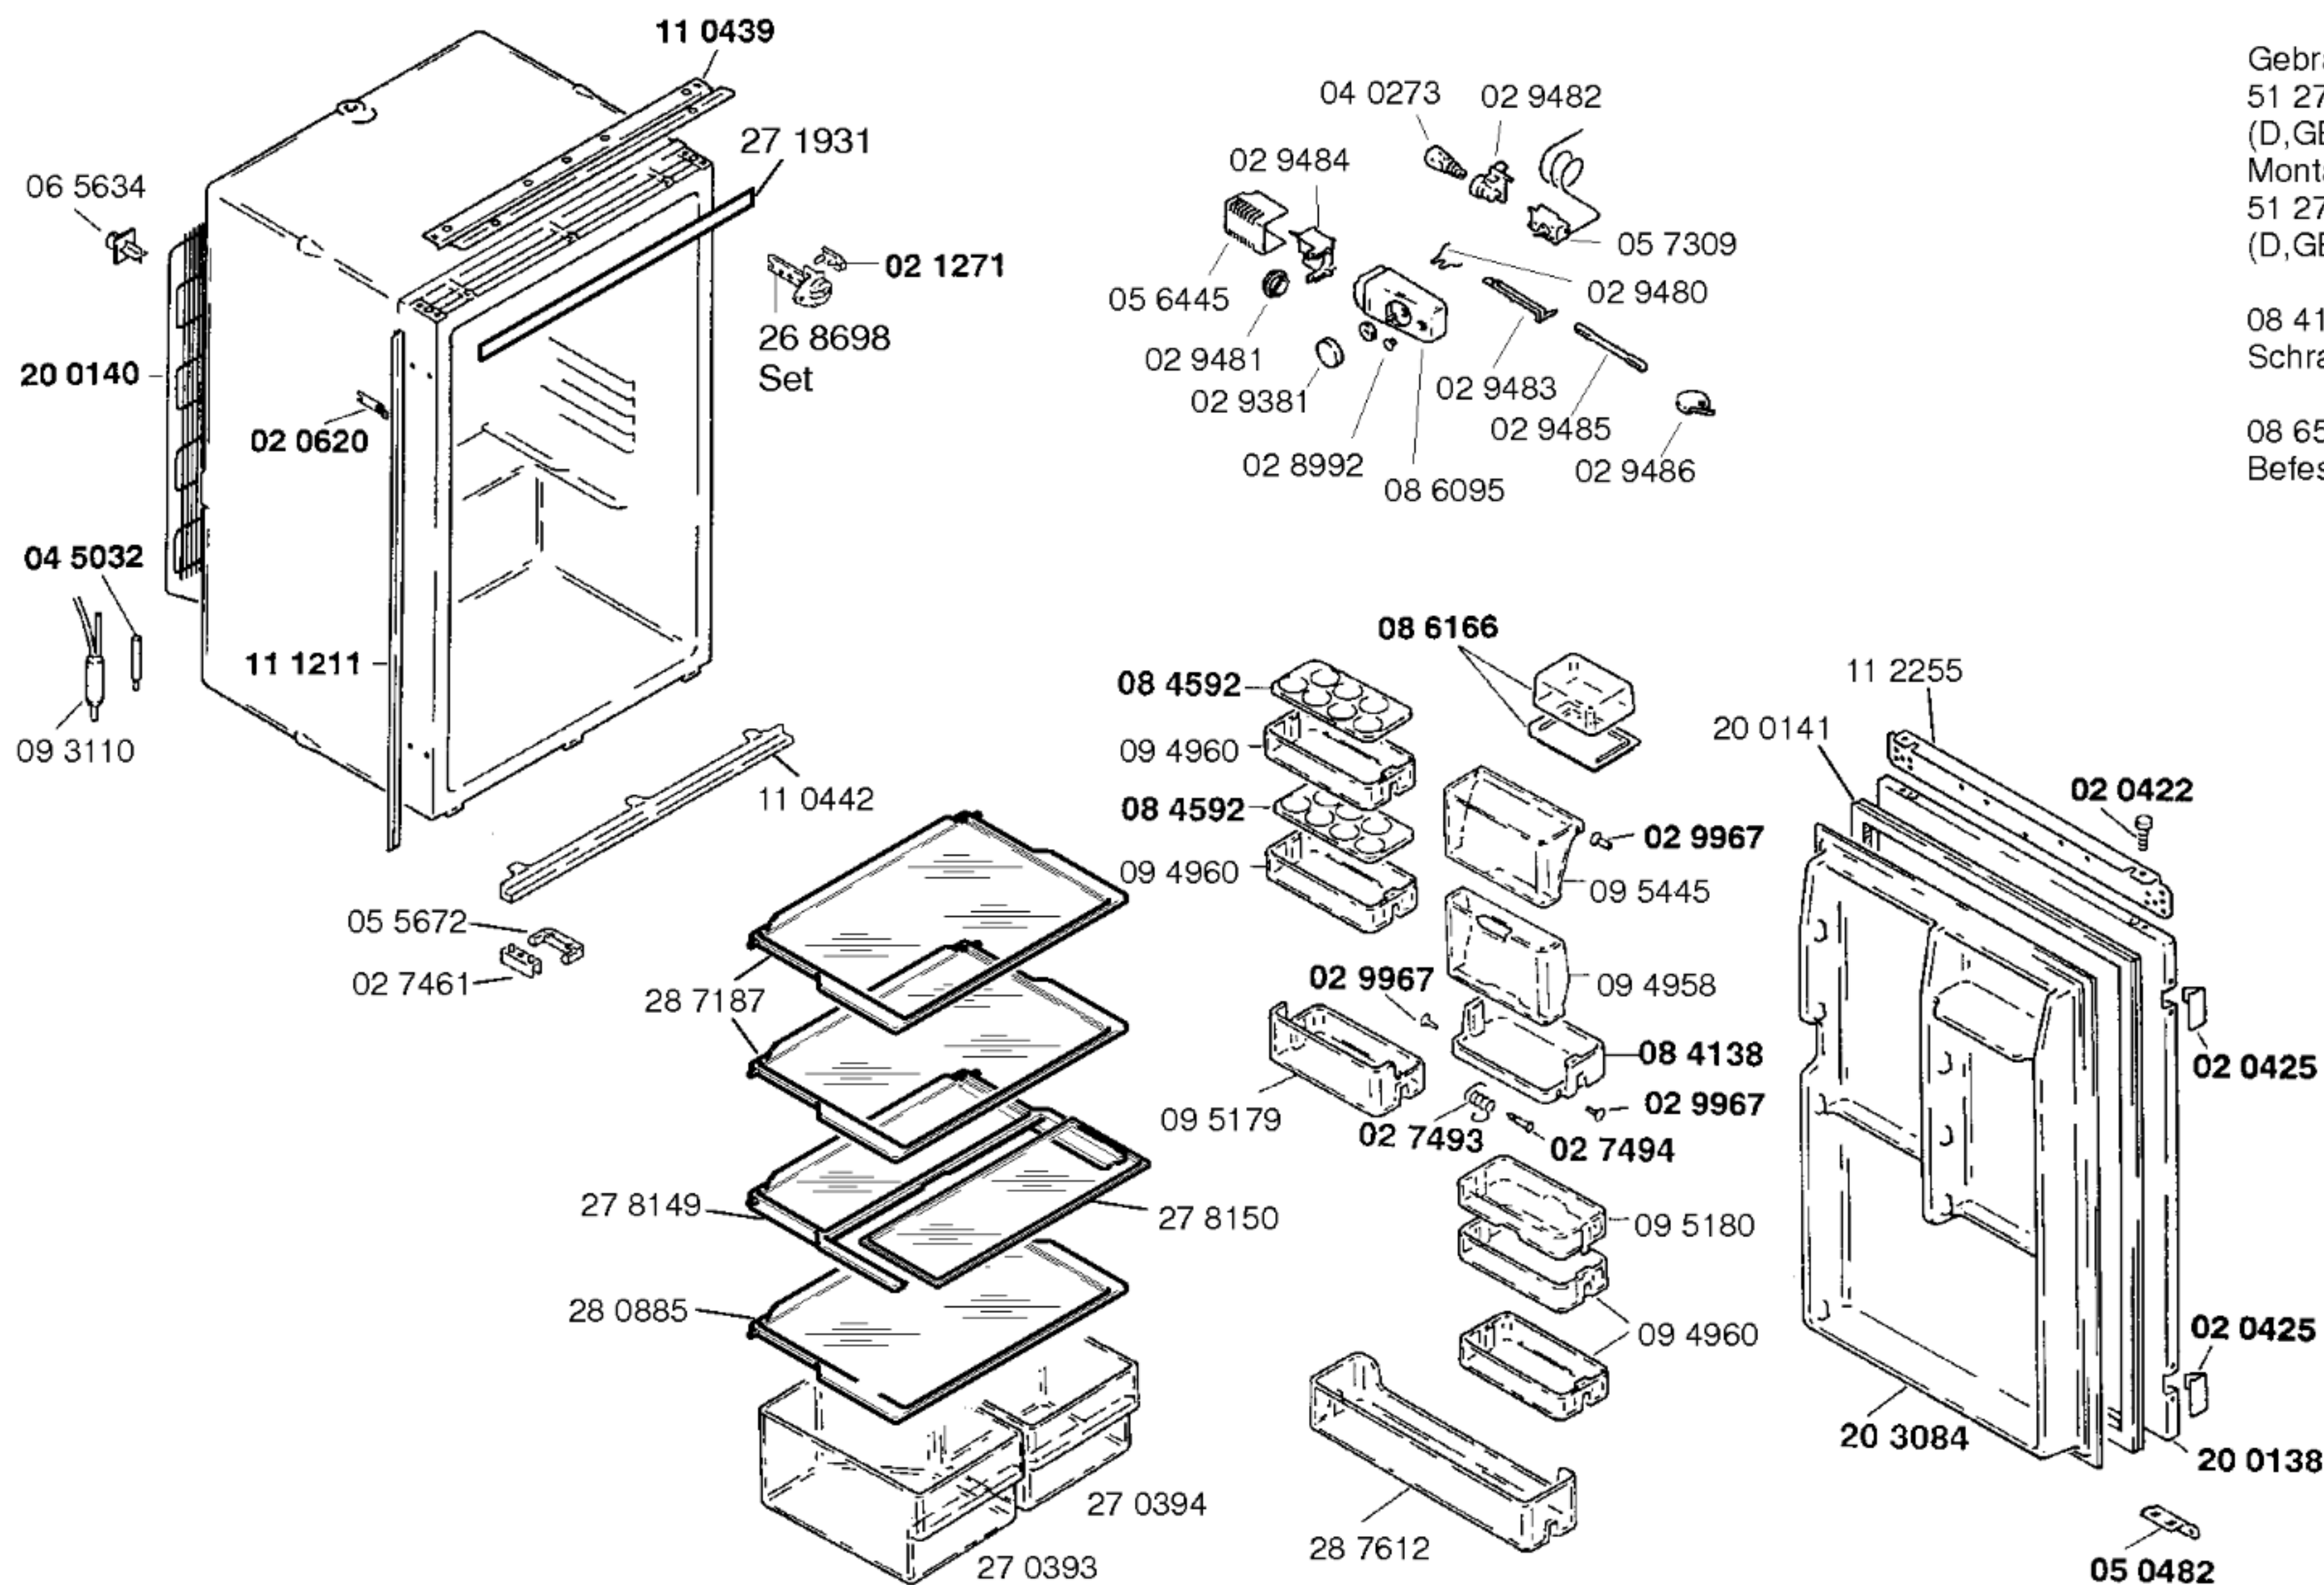

Gebrauchsanweisung
51 2718
(D,GB,F,I,NL,DK,N,S,SF,E)
Montageanweisung
51 2737
(D,GB,F,I,NL,DK,N,S,SF,E)

08 4136
Schraubensatz

08 6512
Befestigungssatz

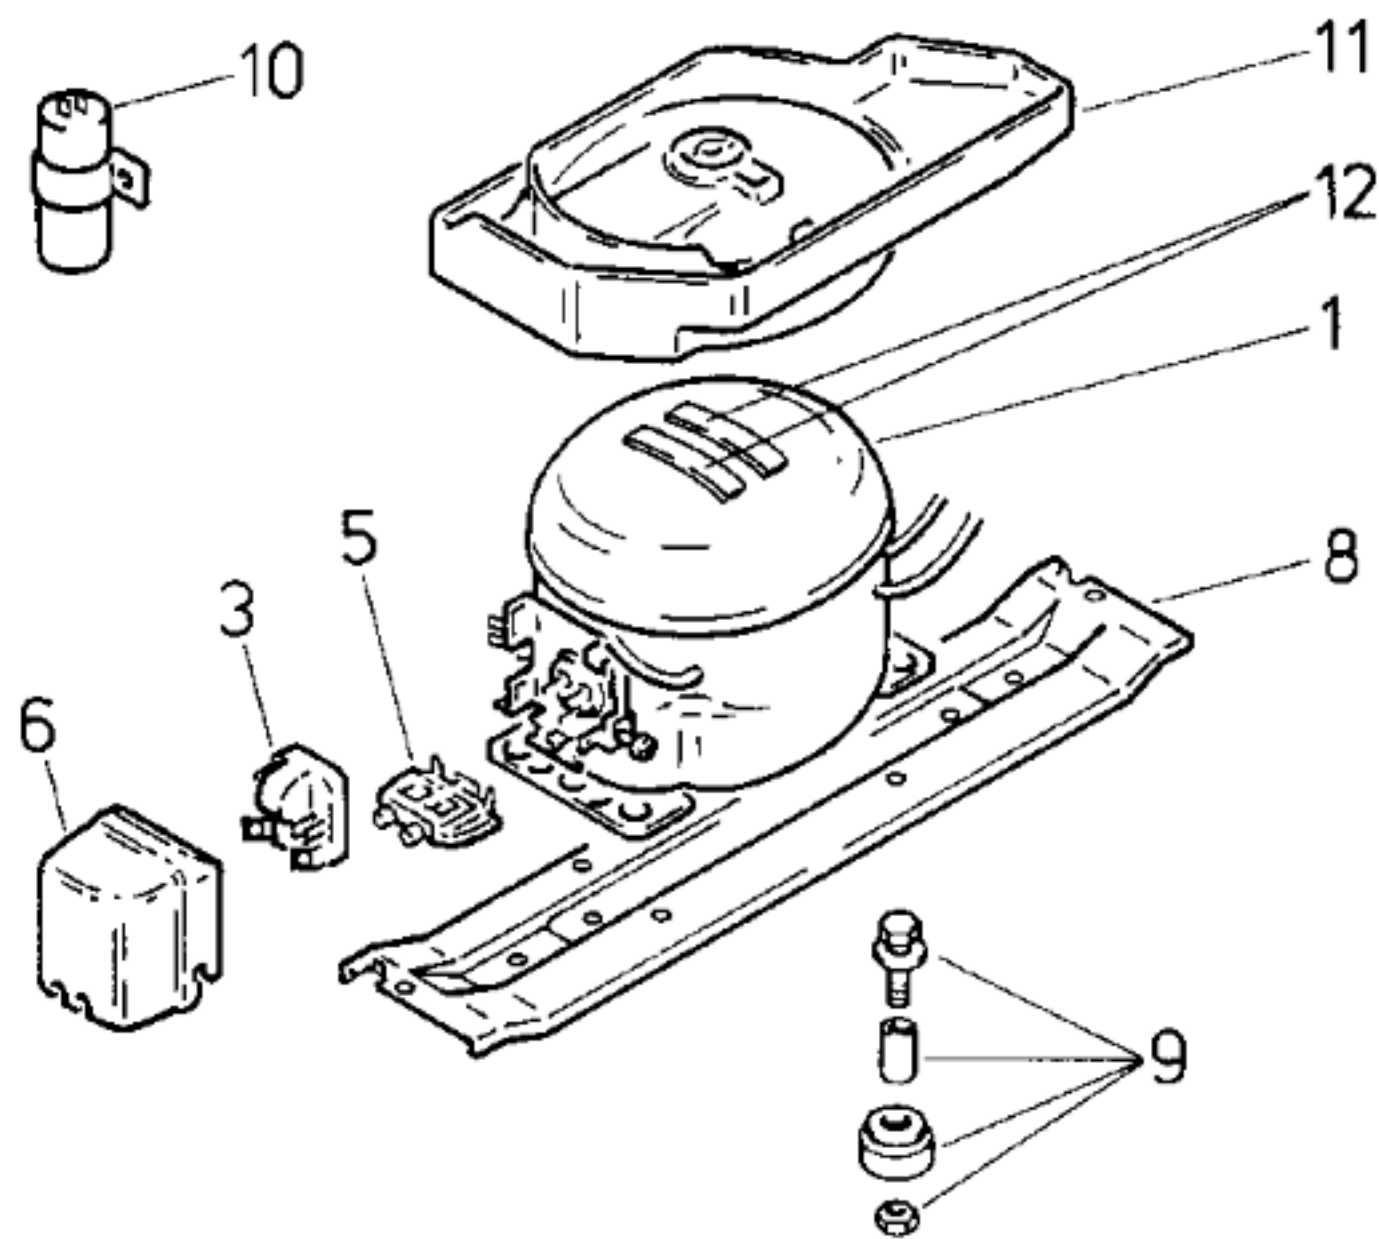

Pos.	Danfoss		
	TLES 6 K		
1	14 1306		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	27 8207		
9	05 0166		
10			
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		TLES 6 K	
Förderleistung/Delivery/Débit	l/h	1026	
Anlaufstrom/Starting current/Cour de démarrage	A	4,0	
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	18,9	
	Hi/aux Ω	15,3	
Temp.-Regler/Thermostat		WHF	
Typ/Type		TF57F1	
Reglerstellung/Position		kalt warm	
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+5 +5	
Valeurs de commutation	„aus“	-27 -12	
	(„abtauen“ od.) „alarm“		
Füllmenge/Fill.quantity/Charge	R600a g	21	
Anschlußwert/Conn.load/Puiss. connectée	W	90	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		