



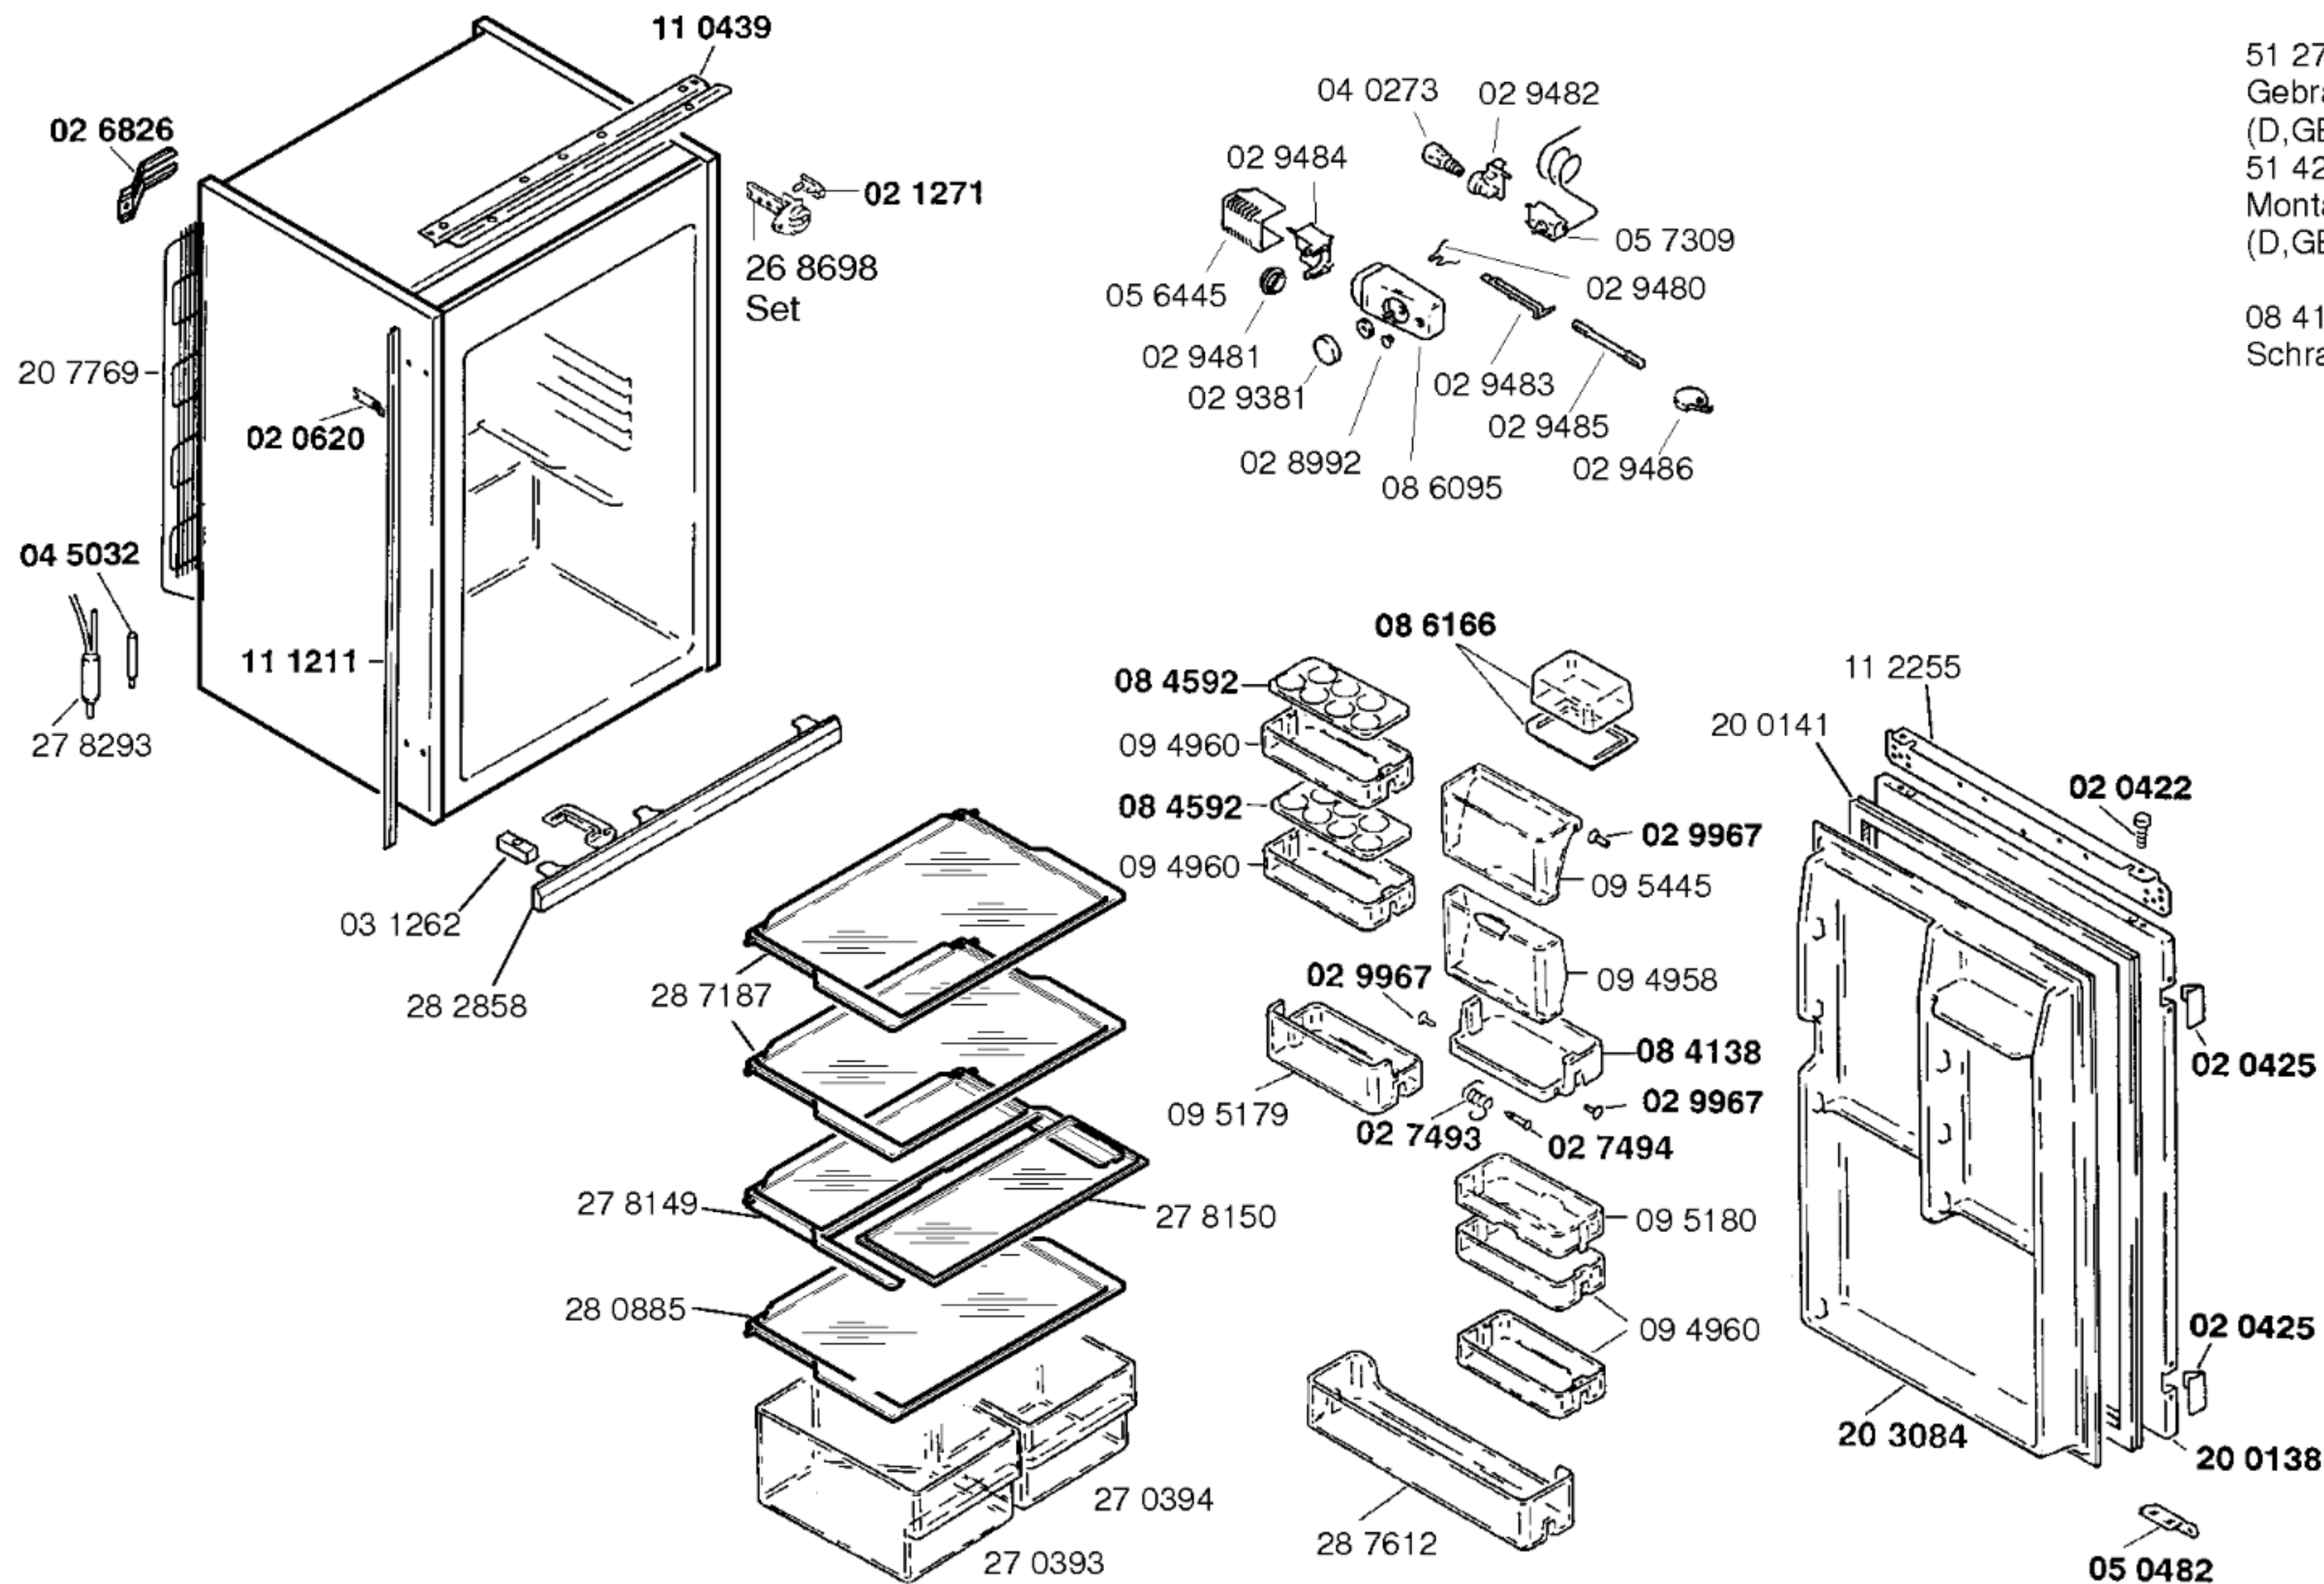

51 2718
Gebrauchsanweisung
(D,GB,F,I,NL,DK,N,S,SF,E)
51 4220
Montageanweisung
(D,GB,F,I,NL,DK,N,S,SF,E)

08 4136
Schraubensatz

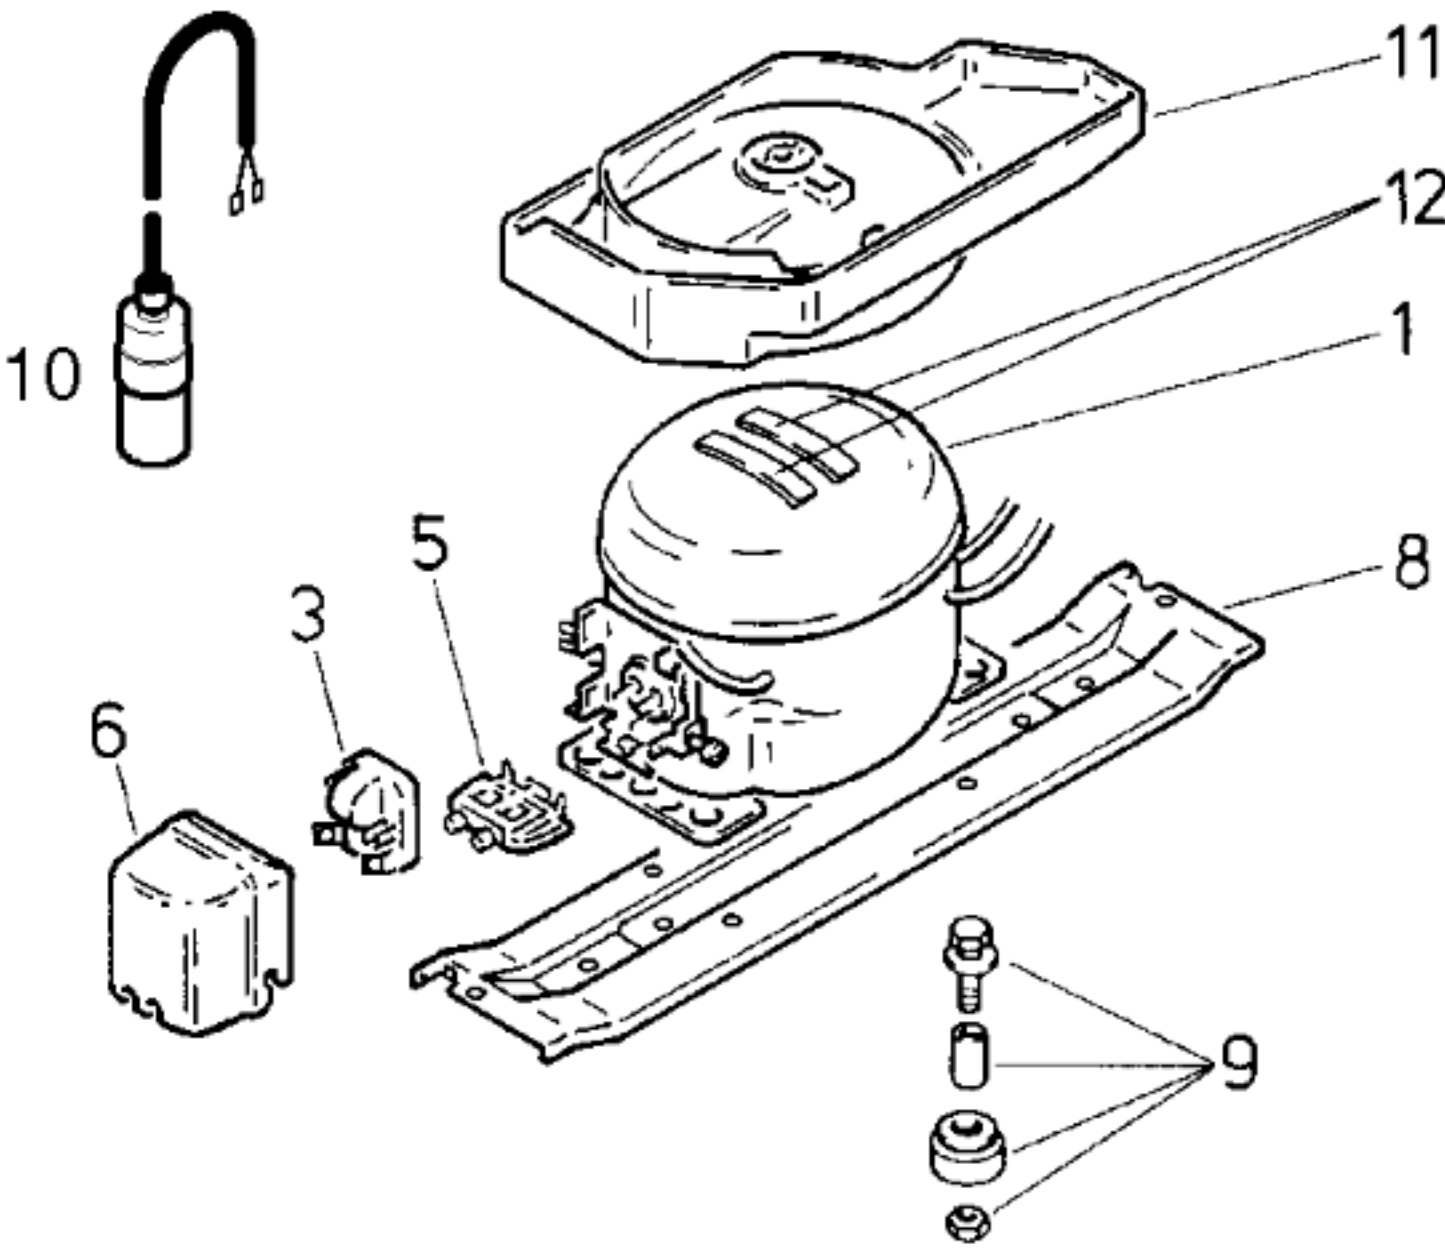

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		TLES 4 F	
Förderleistung/Delivery/Débit	l/h	615	
Anlaufstrom/Starting current/Cour de démarrage	A	2,9	
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	25,7	
	Hi/aux Ω	18,9	
Temp.-Regler/Thermostat		WHF	
Typ/Type		TF 57 F1	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+5	+5
Valeurs de commutation	„aus“	-27	-12
	(„abtauen“ od.) „alarm“		
Füllmenge/Fill.quantity/Charge	R134a	g	50
Anschlußwert/Conn.load/Puiss. connectée		W	90
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

Pos.	Danfoss		
	TLES 4 F		
1	14 1244		
2			
3	15 1055		
4			
5	15 1053		
6	15 1072		
7			
8	27 8207		
9	05 0166		
10	05 9467		
11	08 4744		
12	05 6008		