



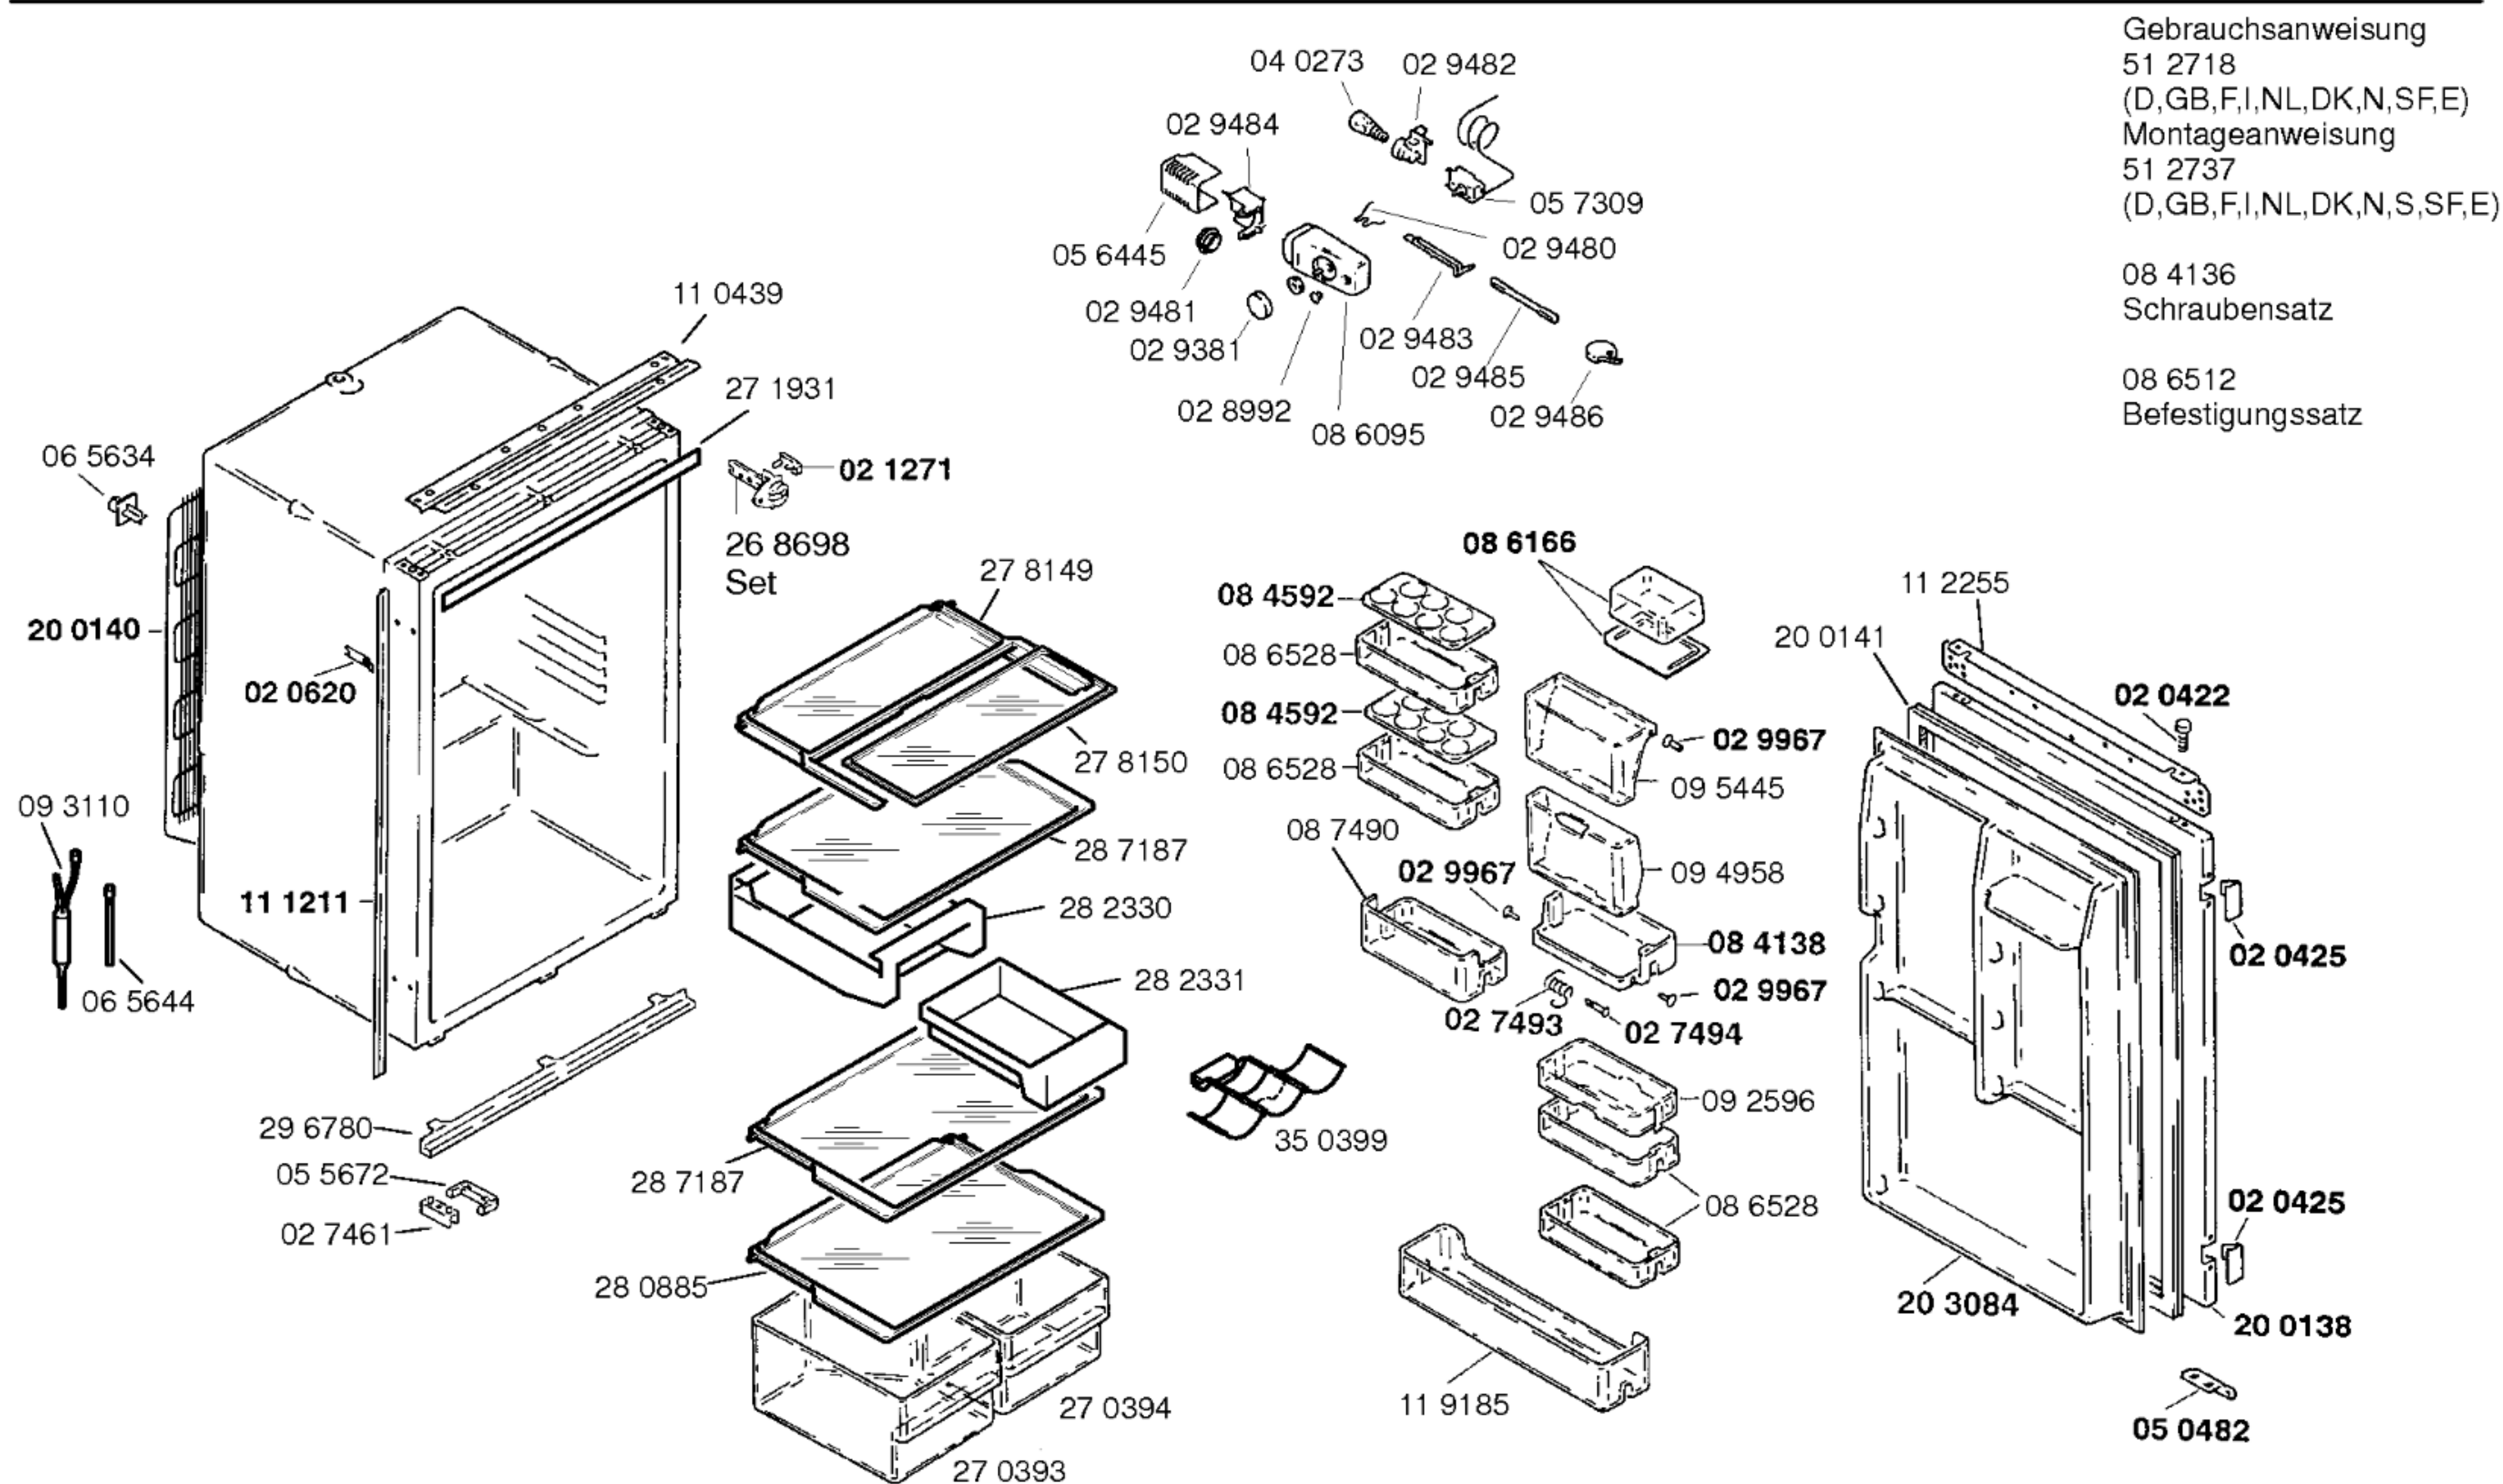

Gebrauchsanweisung
51 2718
(D,GB,F,I,NL,DK,N,SF,E)
Montageanweisung
51 2737
(D,GB,F,I,NL,DK,N,S,SF,E)

08 4136
Schraubensatz

08 6512
Befestigungssatz

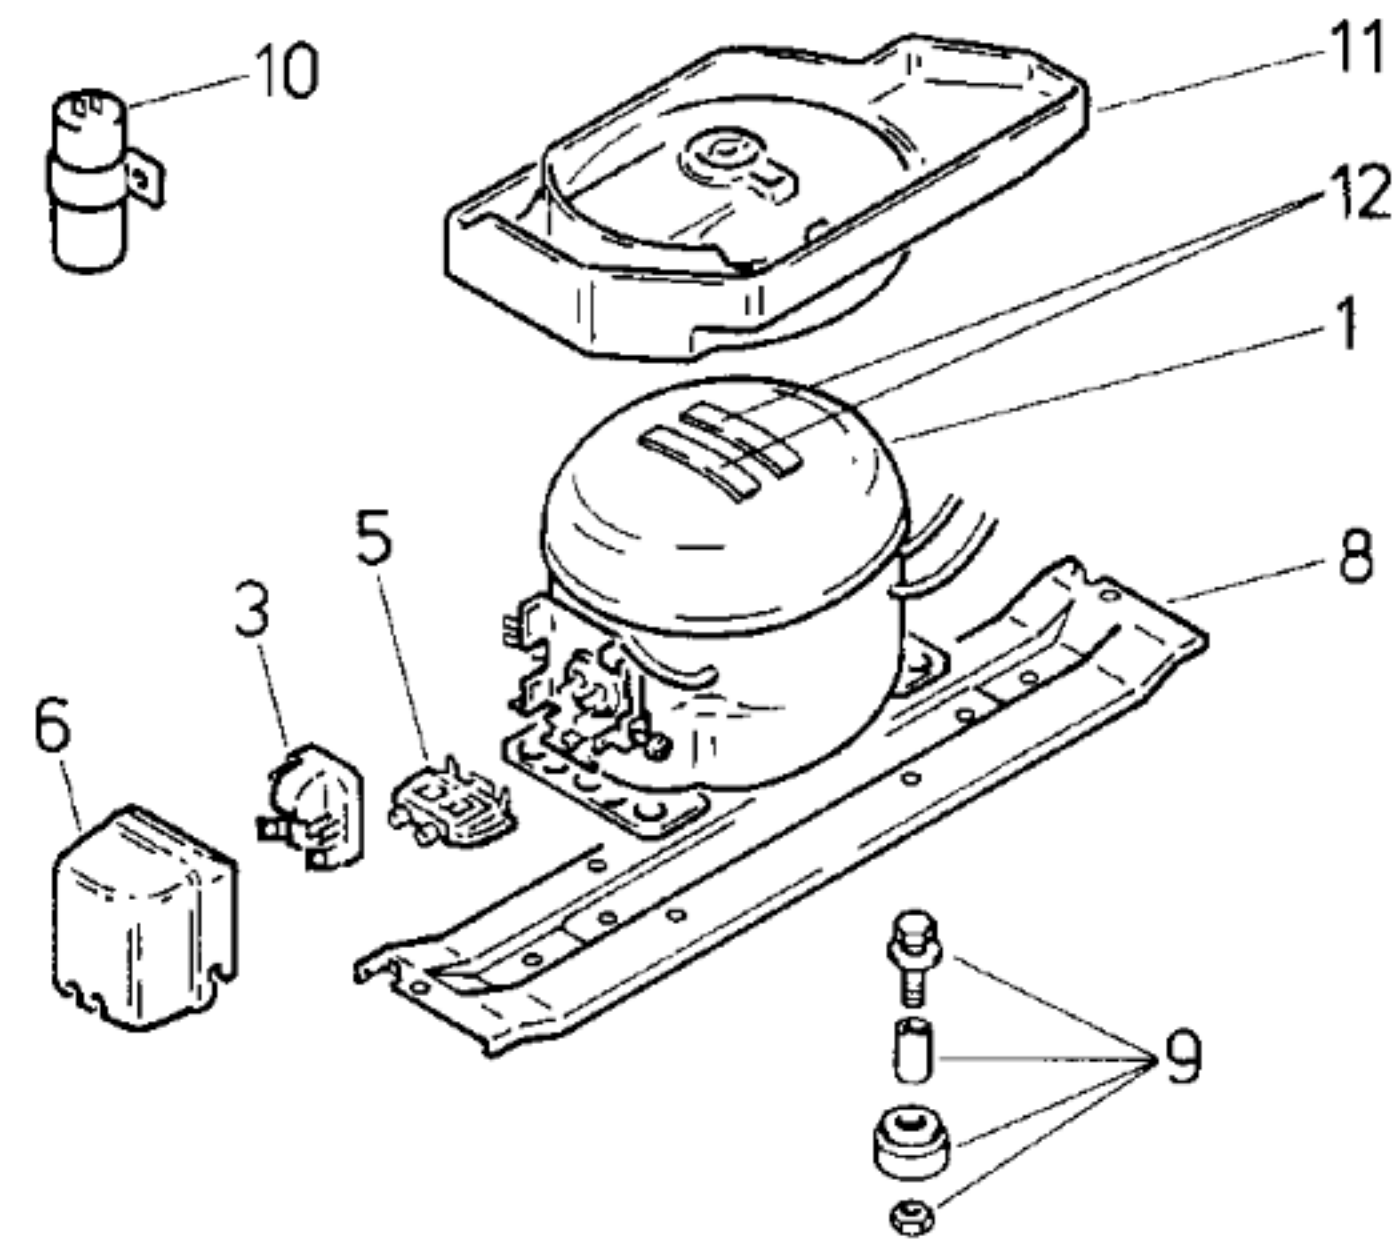

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES 6 K		
Förderleistung/Delivery/Débit		l/h	1026	
Anlaufstrom/Starting current/Cour de démarrage		A	4,0	
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	18,9
		Hi/aux	Ω	15,3
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF57F1		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		„ein“	°C	+5
Valeurs de commutation		„aus“		+5
		(„abtauen“ od.)	„alarm“	-27
				-12
Füllmenge/Fill.quantity/Charge		R600a	g	21
Anschlußwert/Conn.load/Puiss. connectée		W	90	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

Pos.	Danfoss		
	TLES 6 K		
1	14 1306		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	27 8207		
9	05 0166		
10			
11	08 4744		
12	05 6008		