 
 


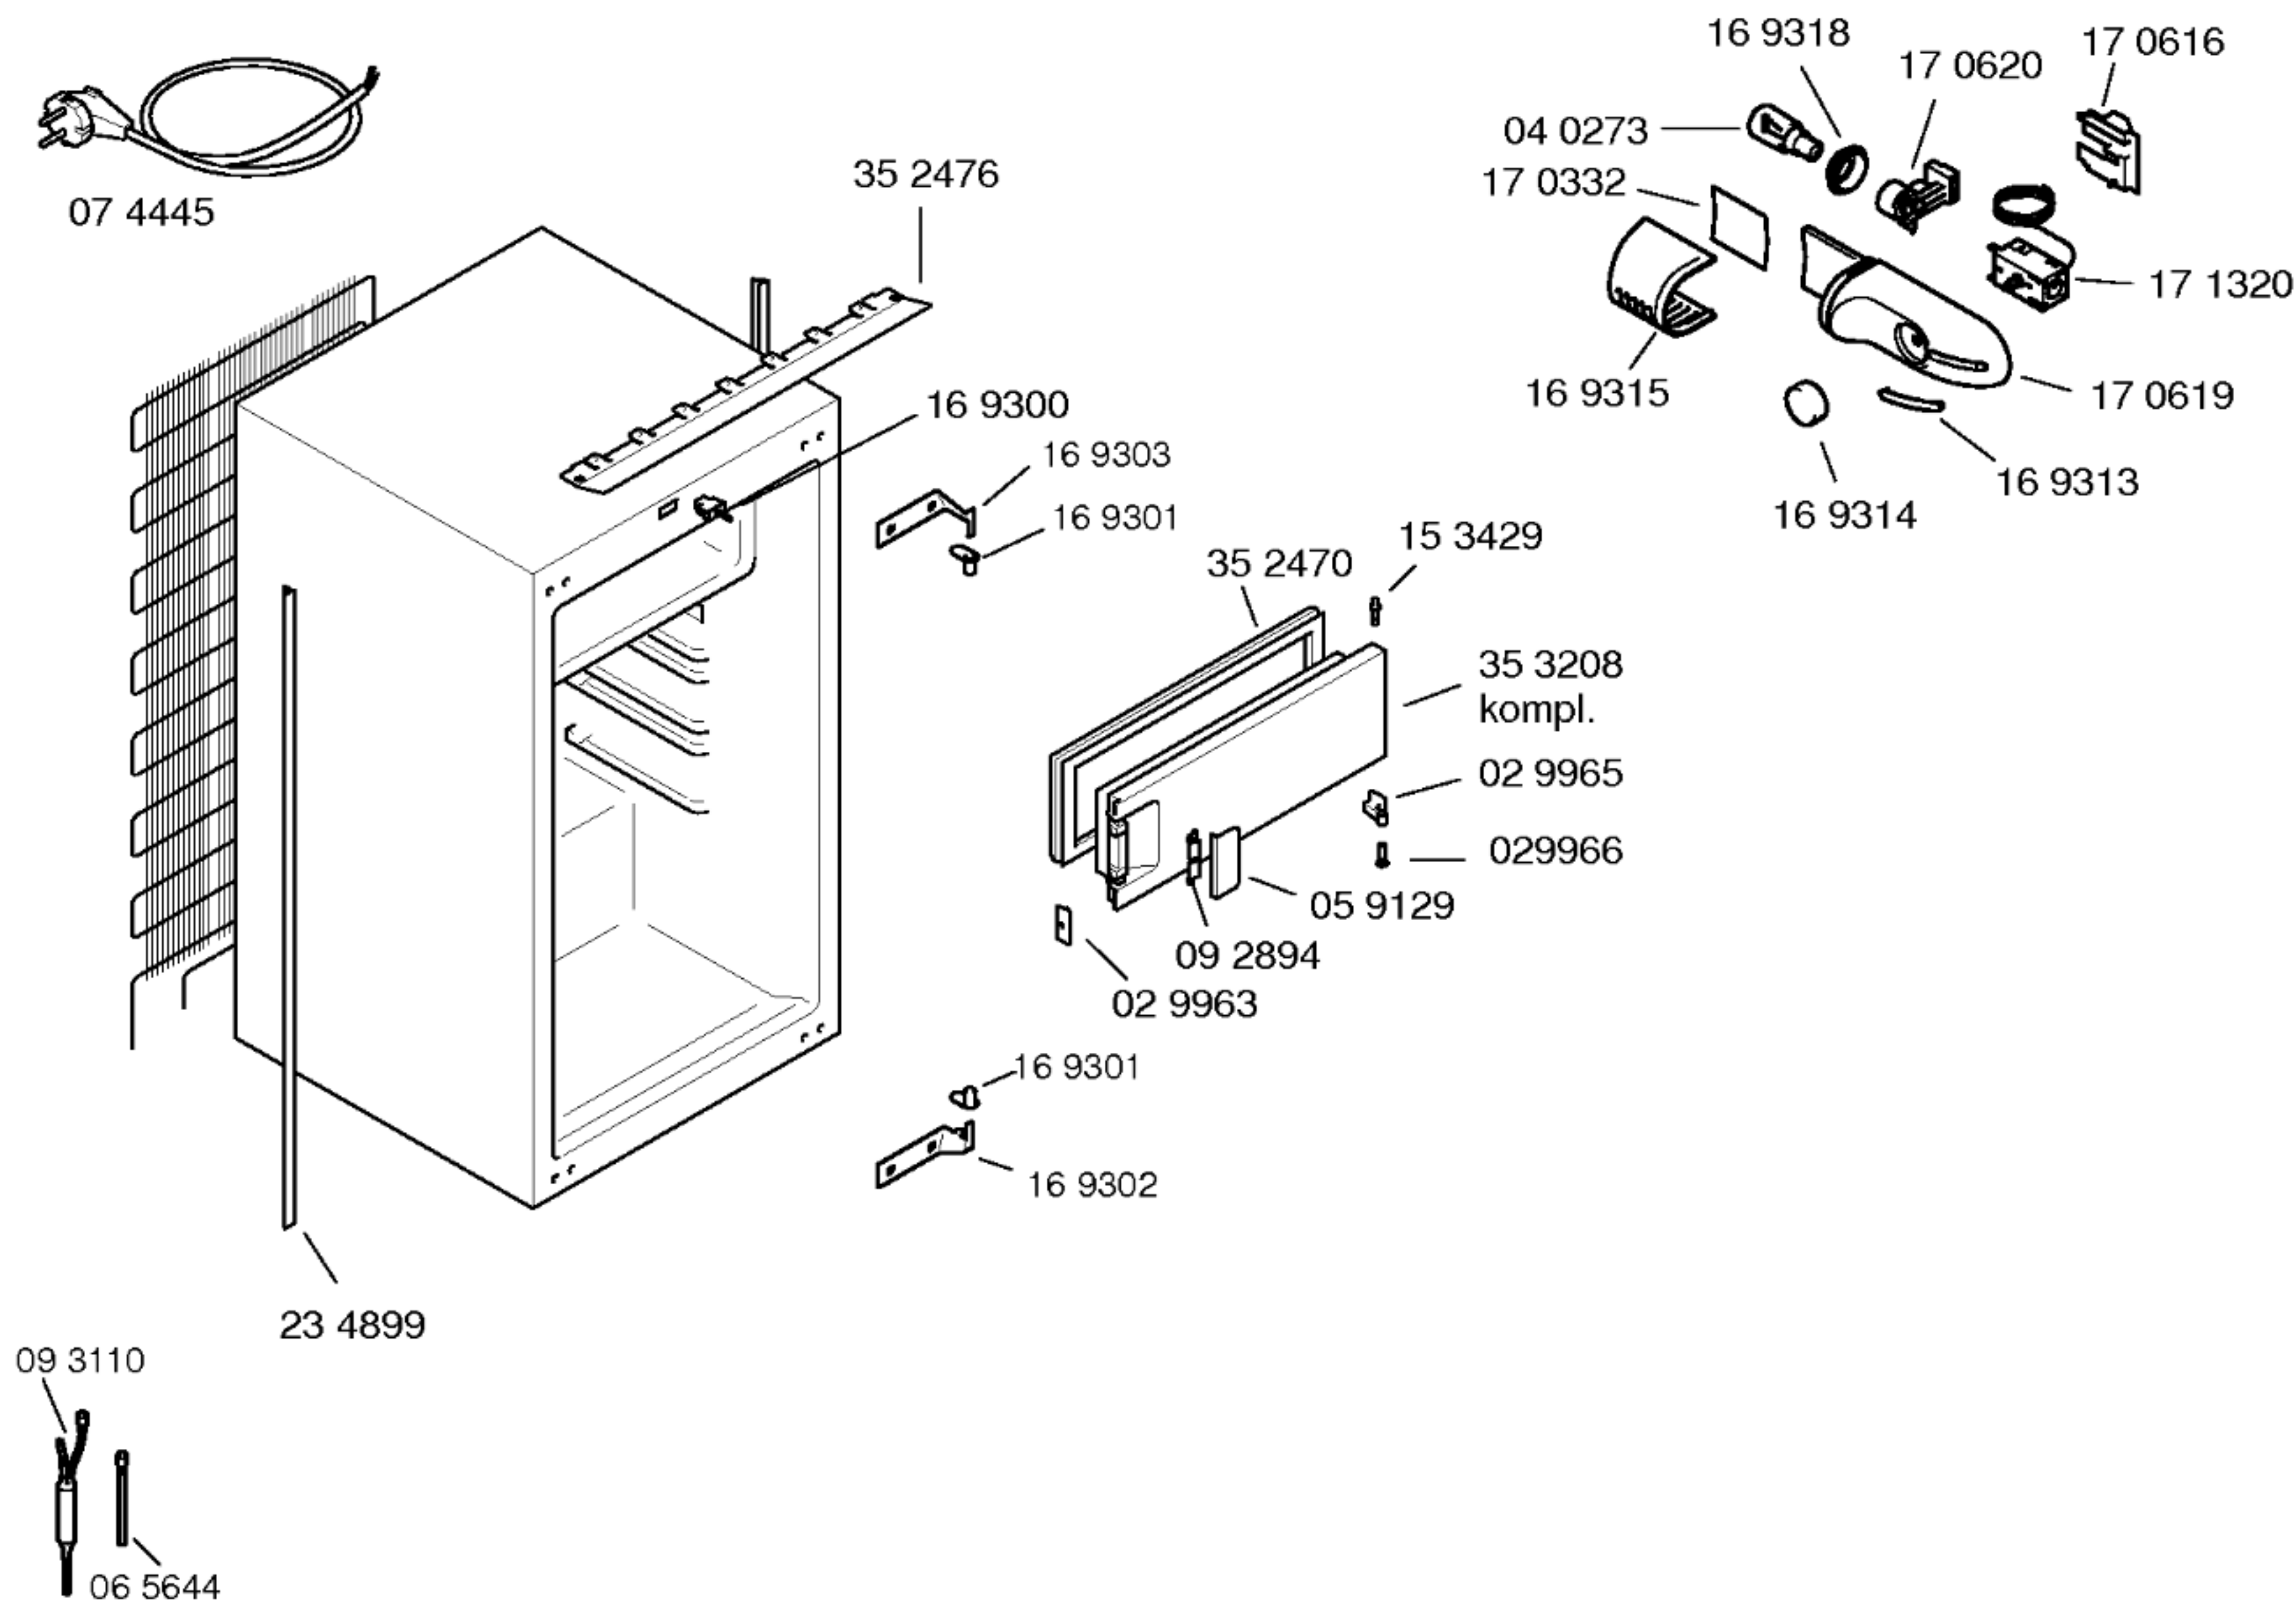 


Gebrauchsanweisung
52 2536
(D,GB,F,I,NL)

Montageanleitung
52 1893
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 4862

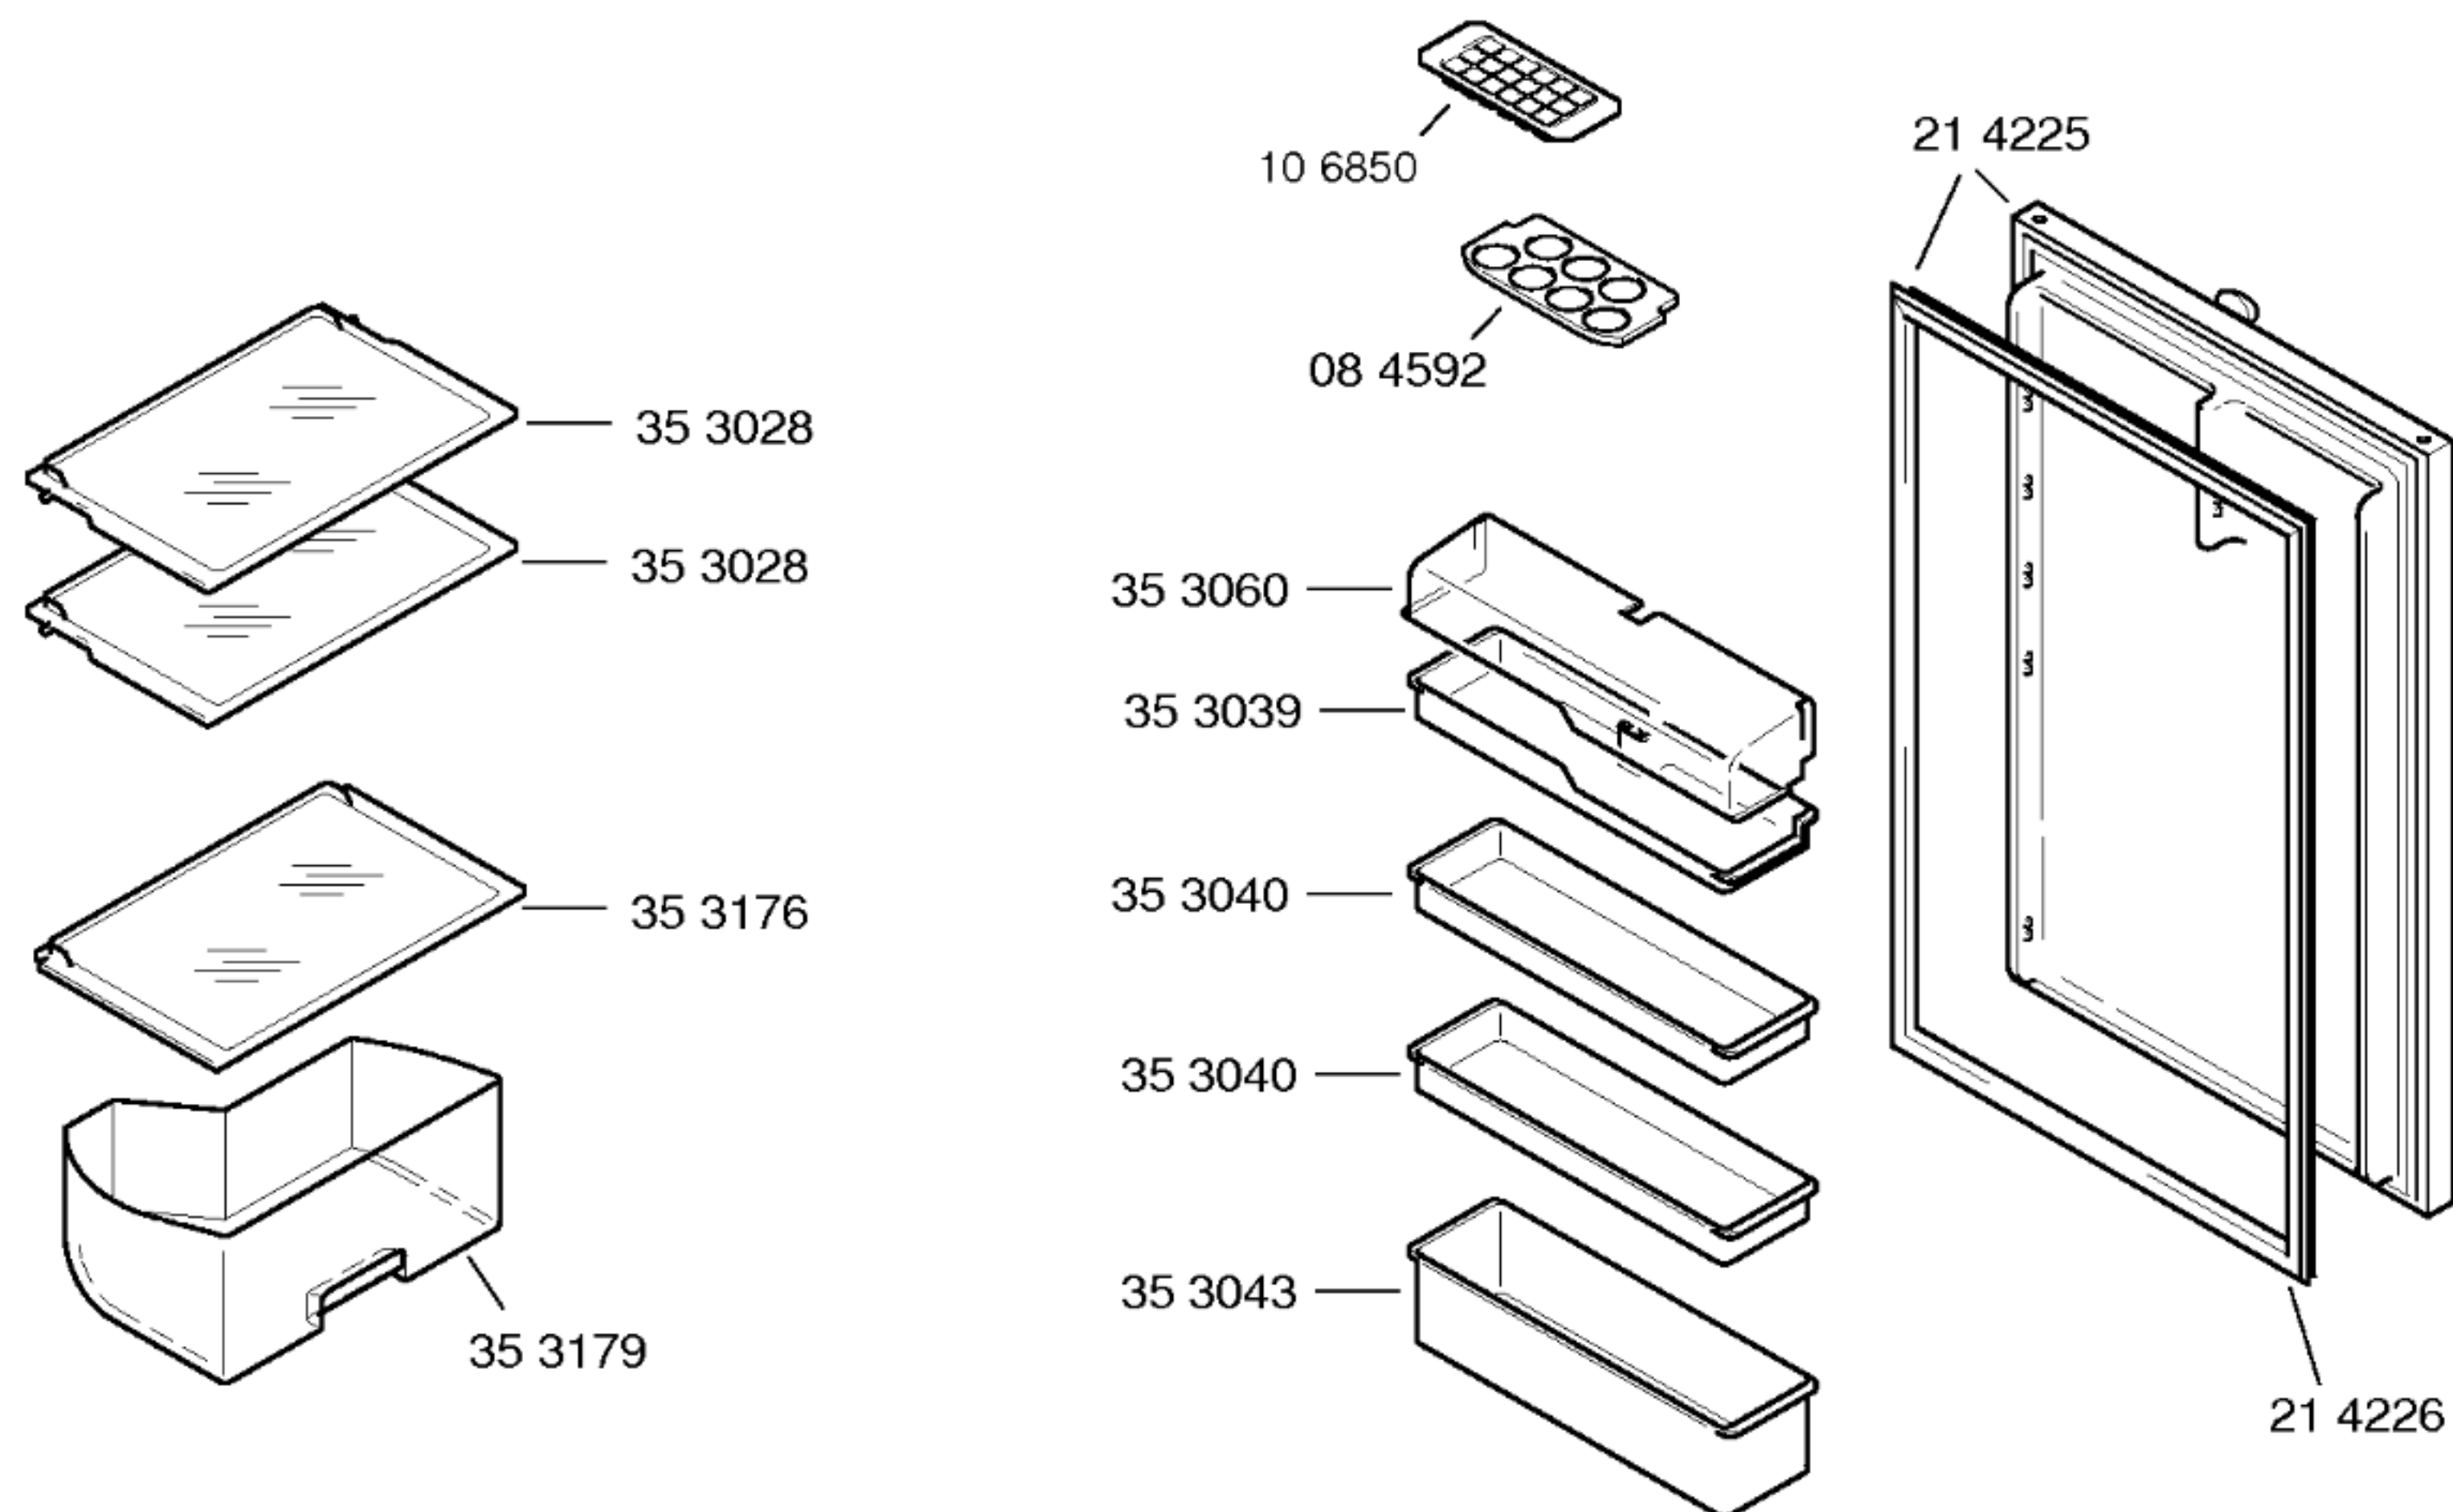

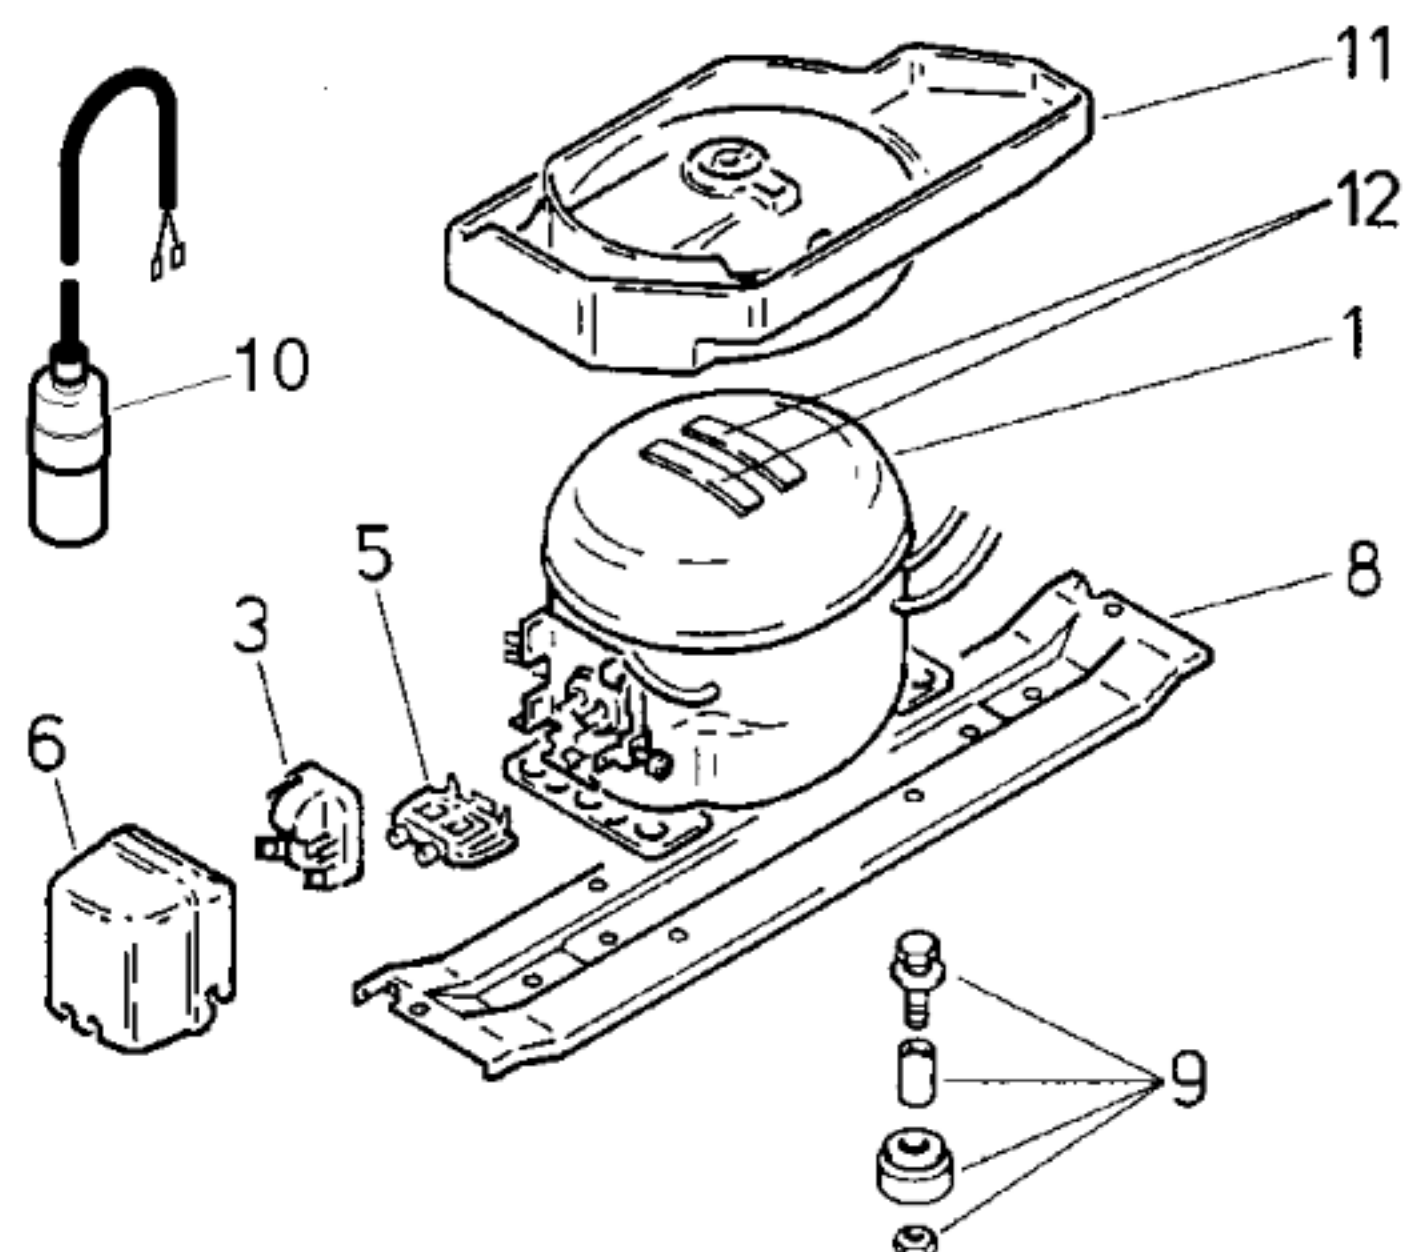

Pos.	V01		
	Aspera		
	BPK 1084Y		
1	14 2101		
2			
3	18 0819		
4			
5	17 0882		
6	17 0881		
7	16 9319		
8	26 4879		
9	050166		
10			
11	35 4549		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Aspera		
Typ/Type		BPK 1084Y		
Förderleistung/Delivery/Débit		l/h	1201	
Anlaufstrom/Starting current/Cour de démarrage		A	3,6	
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	29,6
		Hi/aux	Ω	39,1
Temp.-Regler/Thermostat		Ranco		
Typ/Type				
Reglerstellung/Position				
Schaltwerte/Switching values/ Valeurs de commutation		„ein“	°C	kalt
		„aus“		warm
		(„abtauen“ od.)		+4,0
		„alarm“		+4,0
				-32,0
				-12,0
Füllmenge/Fill.quantity/Charge		R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée			W	79
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance			Ω	
Leistung/Power/Puissance			W	
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance			Ω	
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance			Ω	
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance			Ω	
Spannung/Voltage/Tension			V	

* siehe Typenschild