



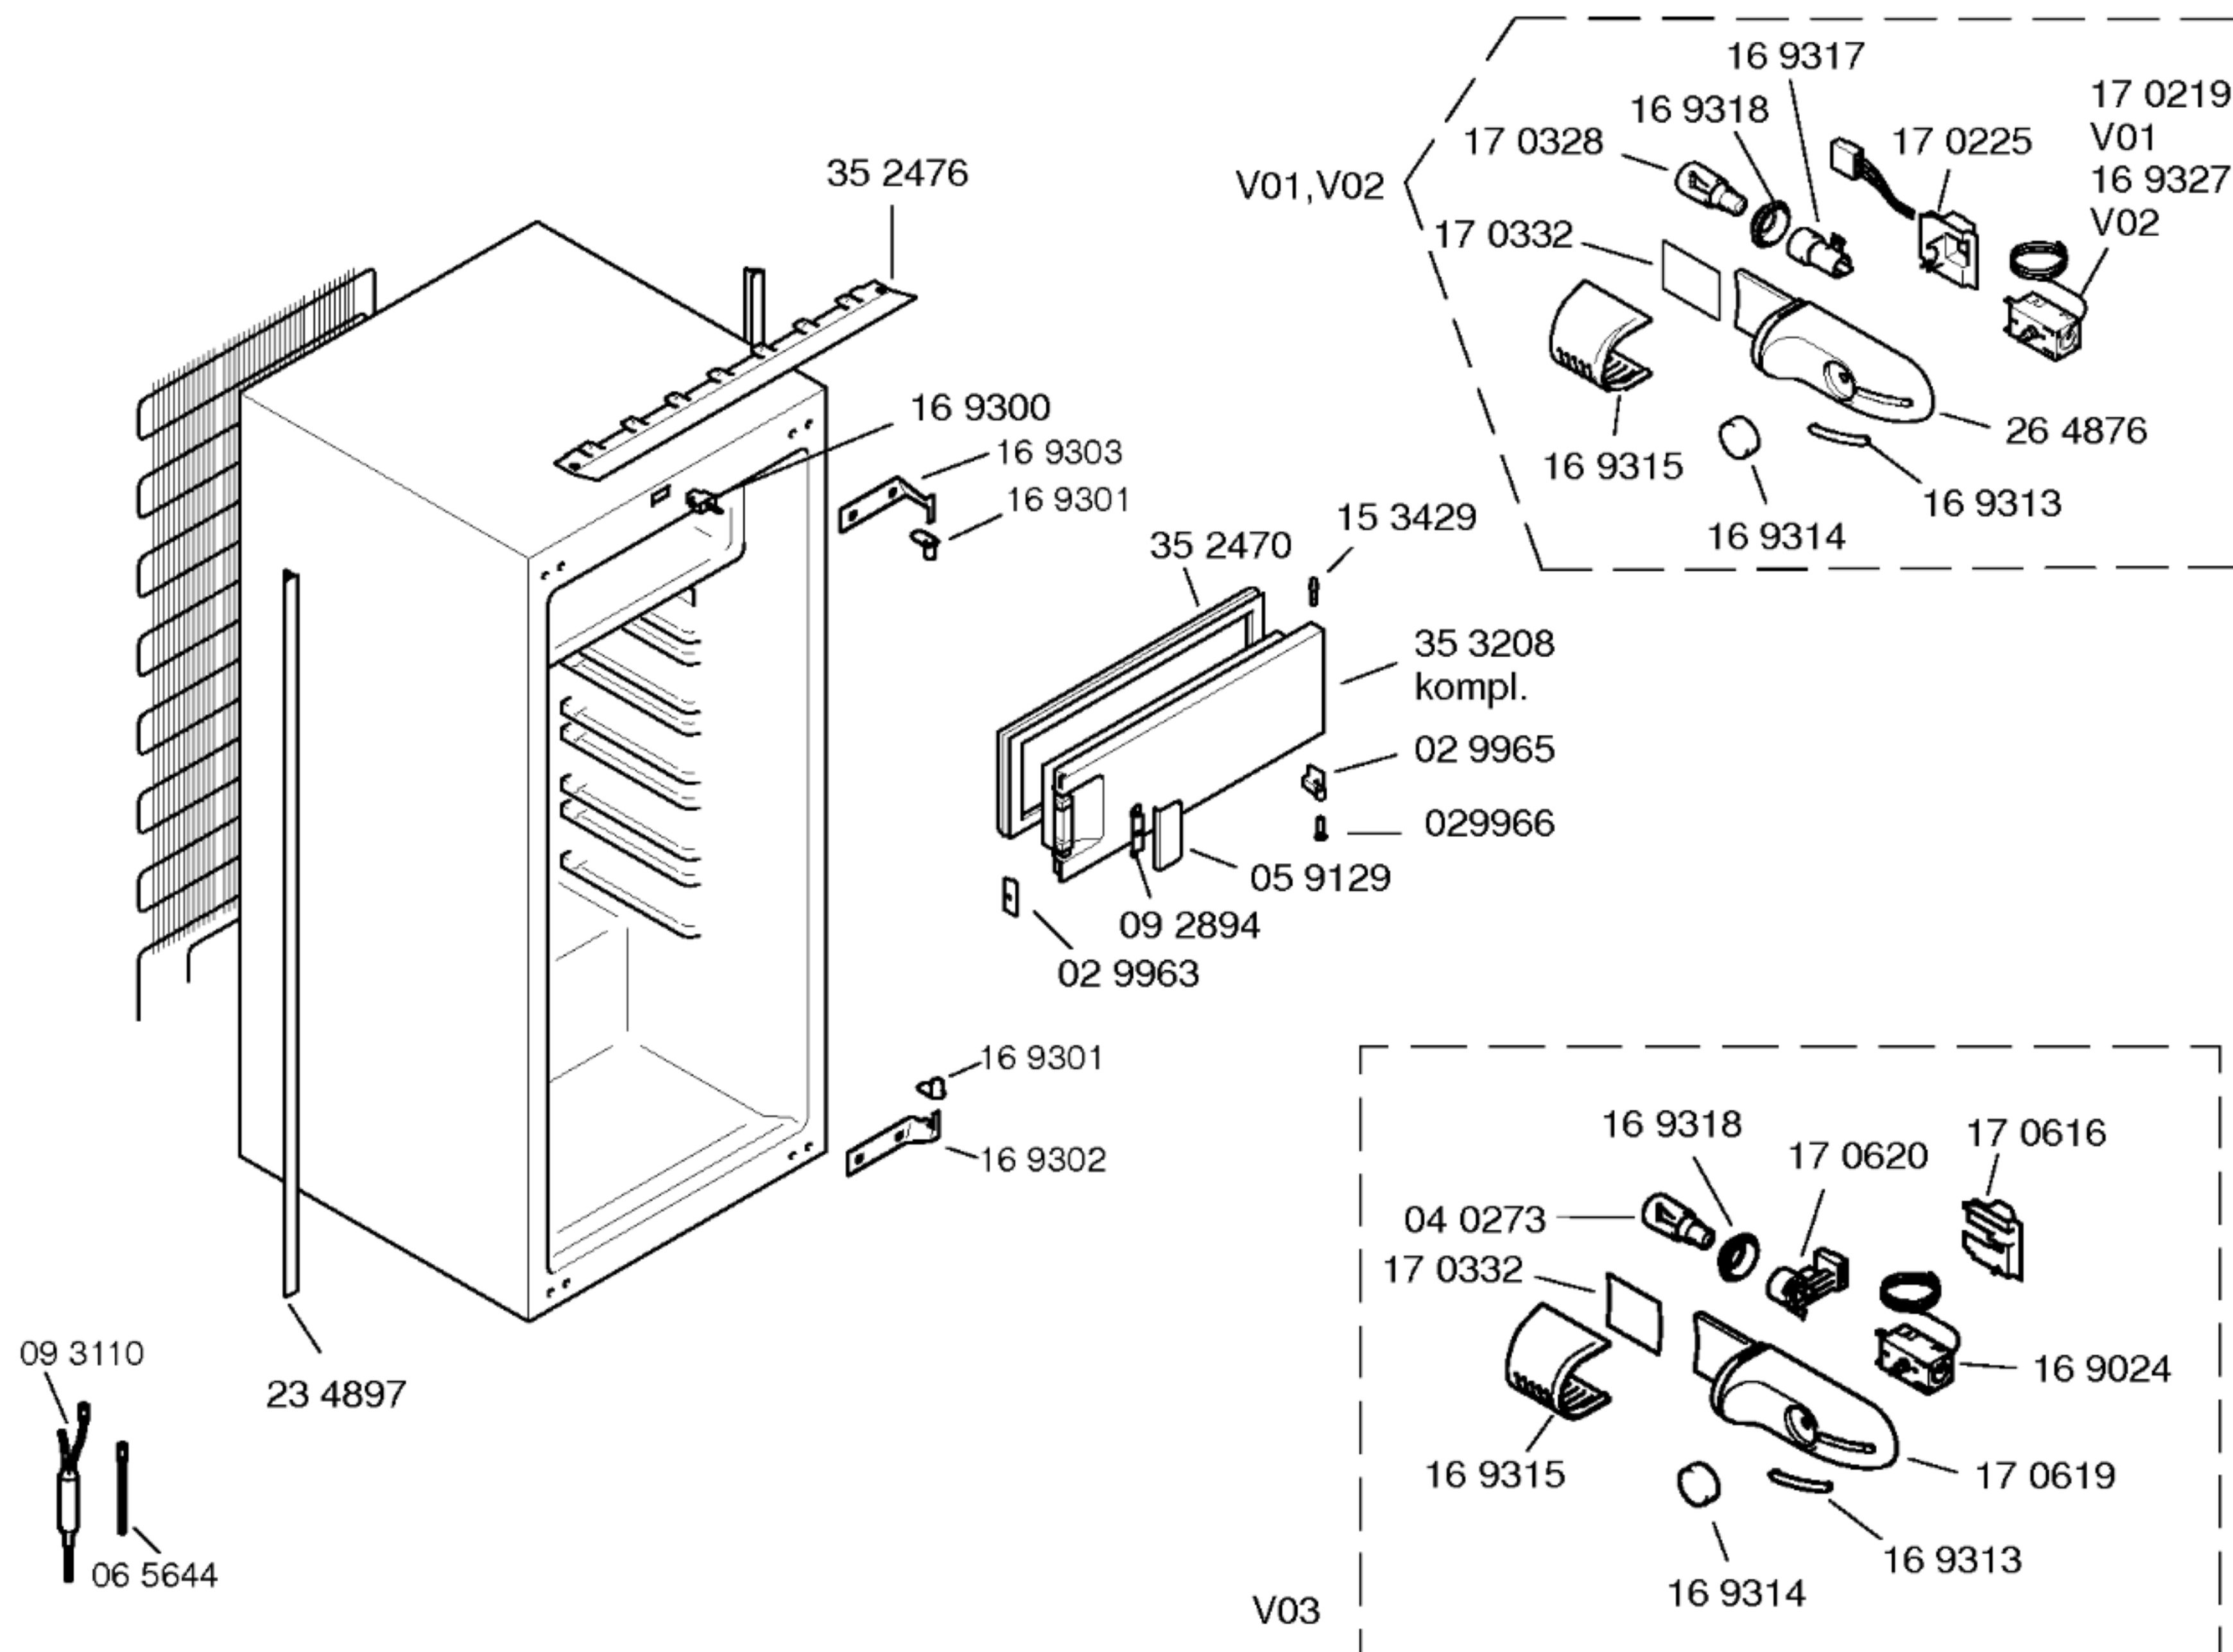


Gebrauchsanweisung
52 2542
V01
52 2548
V02
(D,GB,F,I,NL,GR)

Montageanleitung
51 1893
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5161

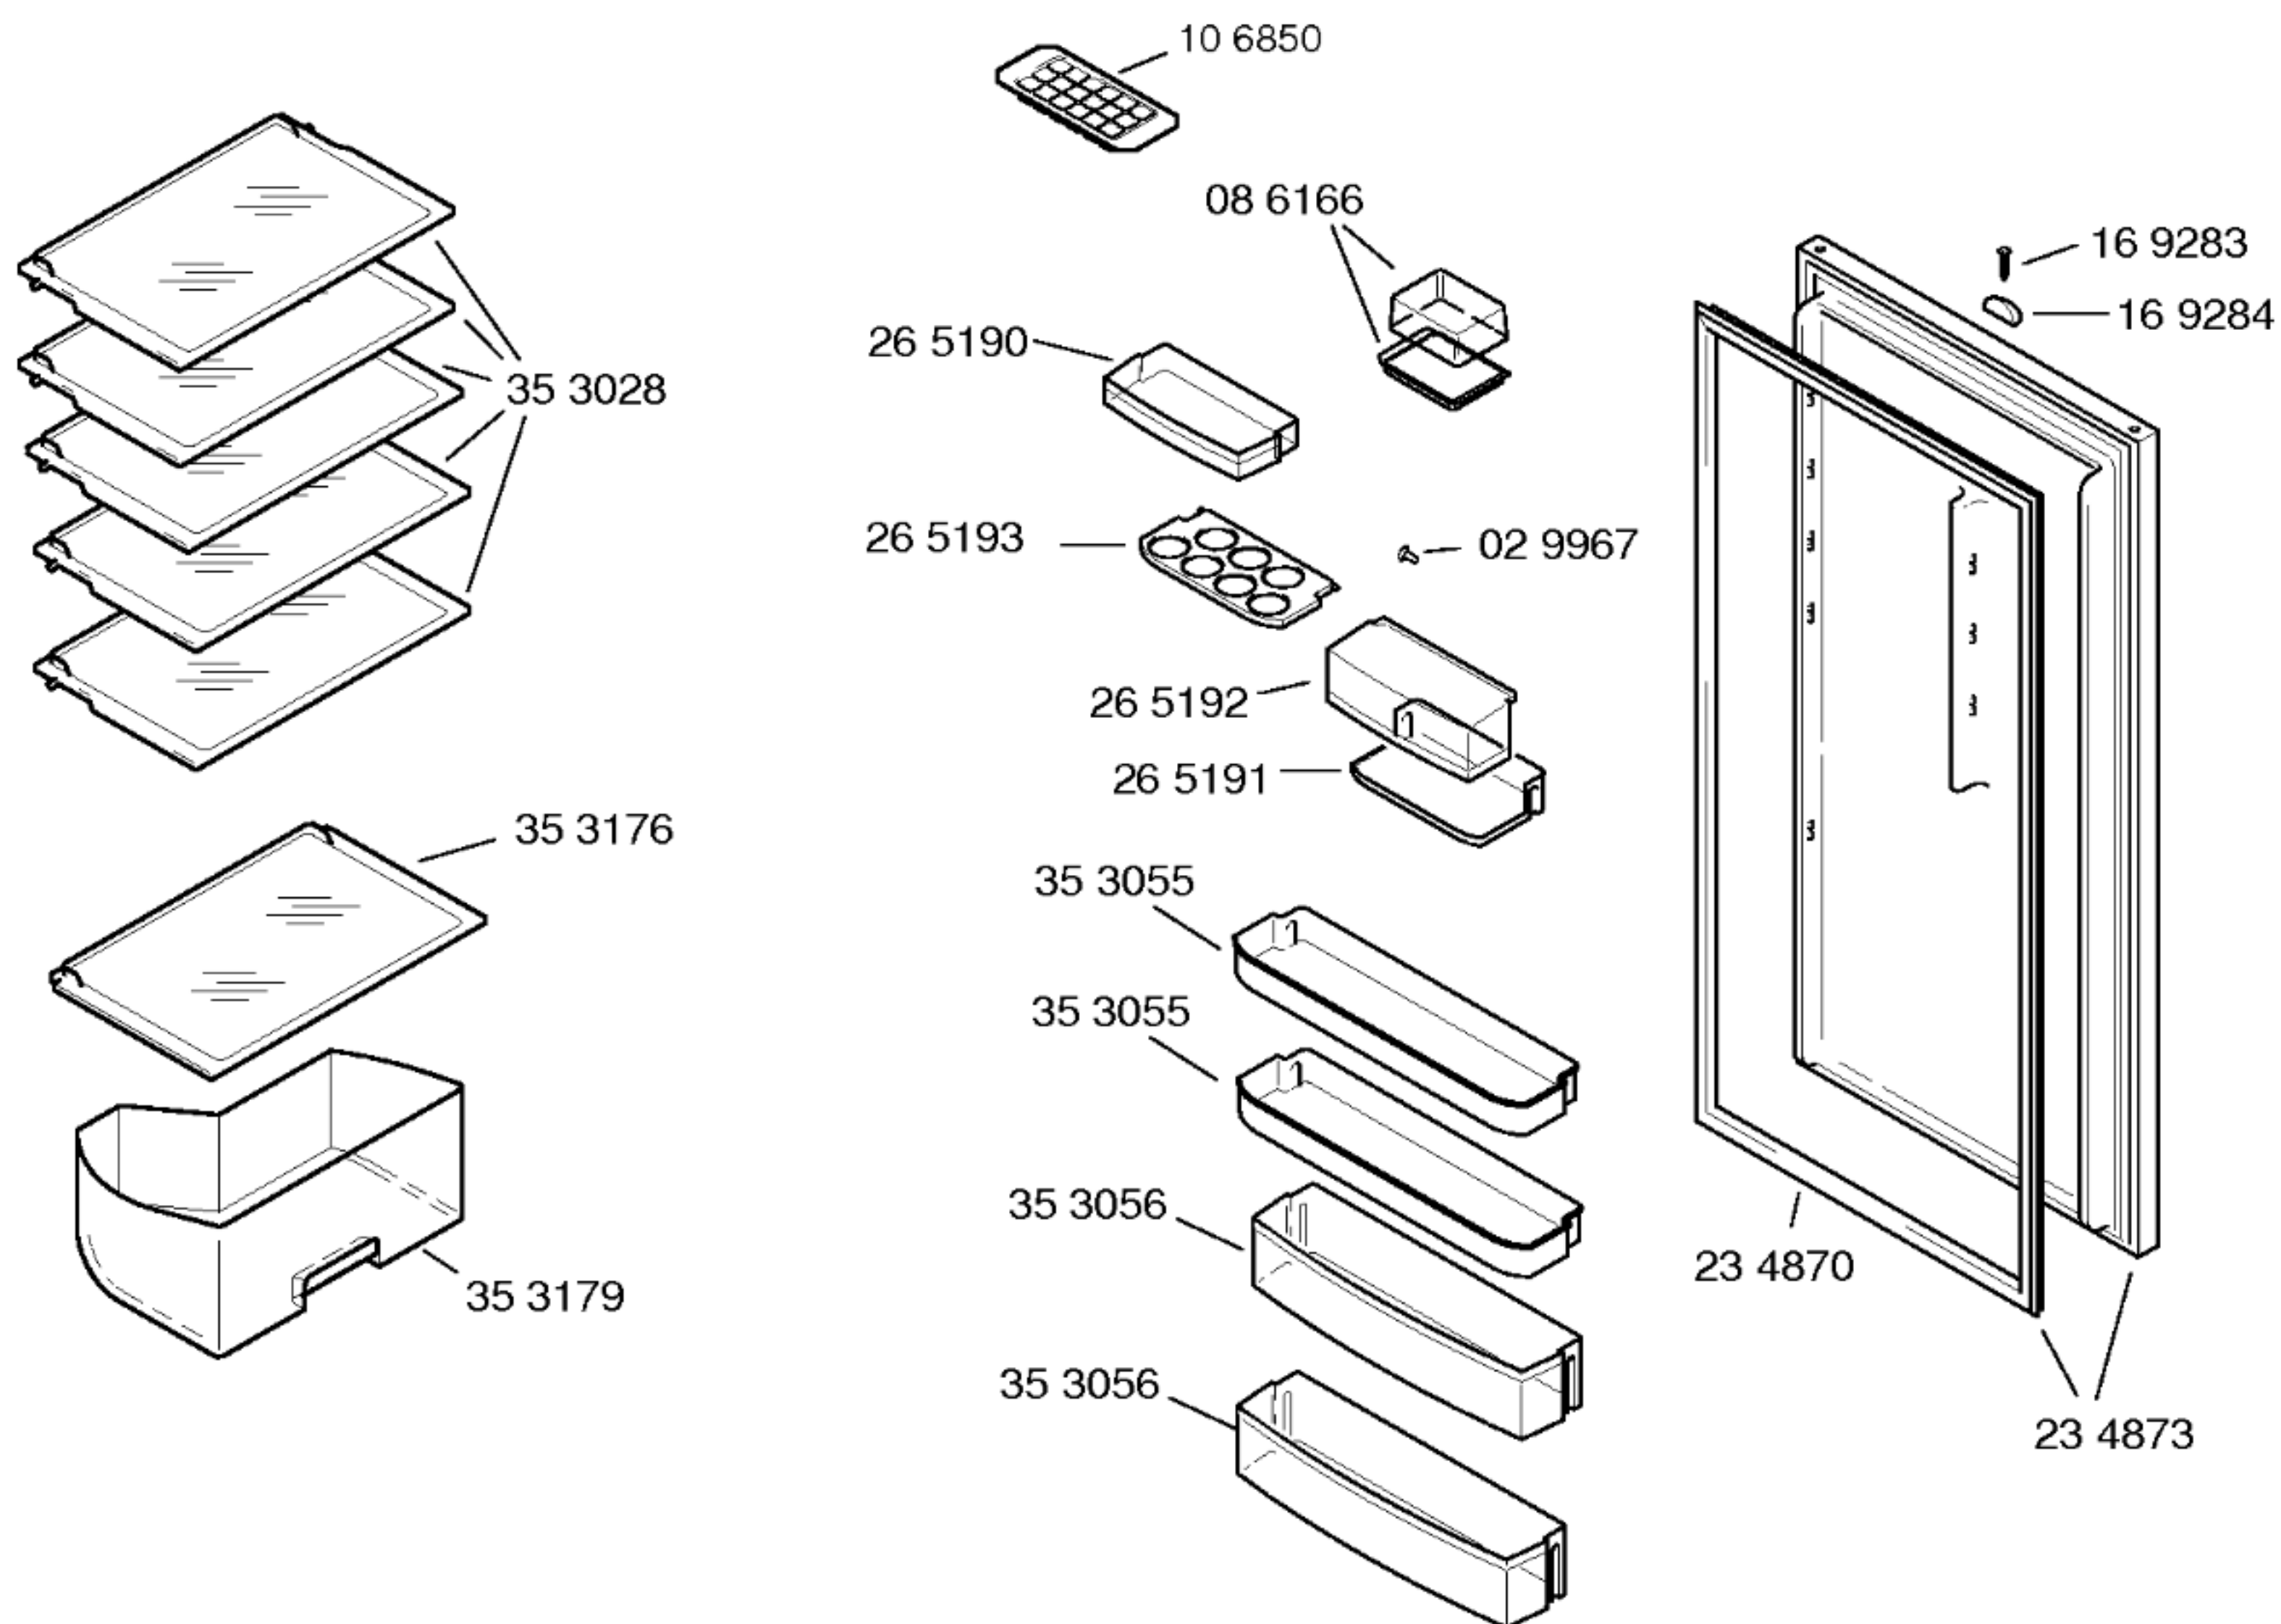

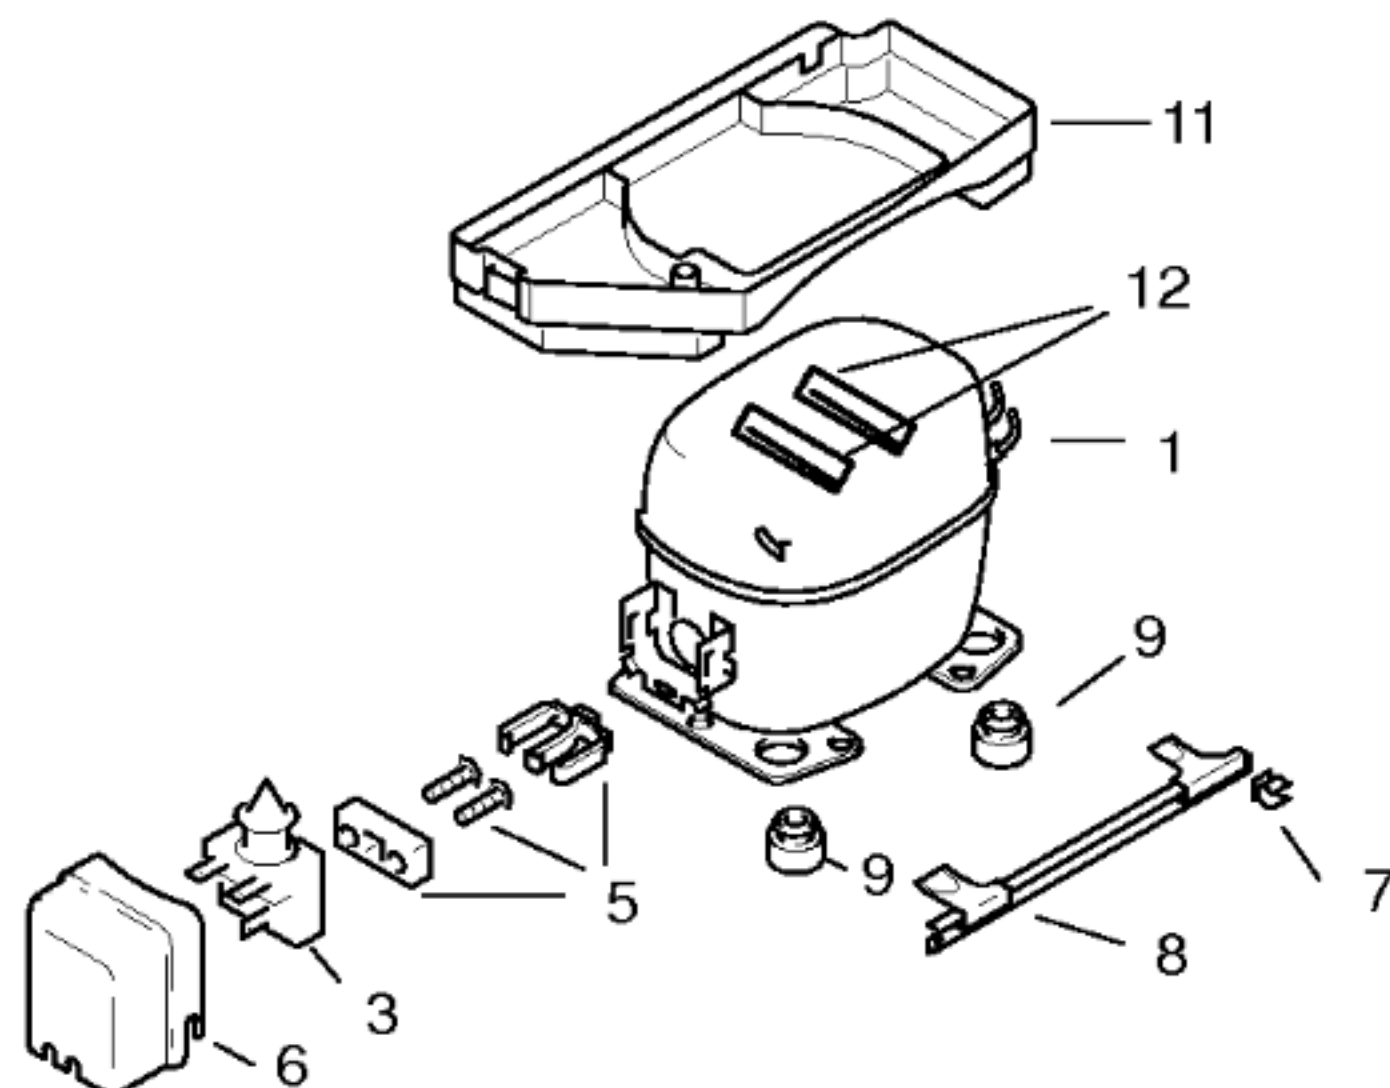

	V01	V02	V03
Pos.	Danfoss	Danfoss	Danfoss
	TLES4K	TLES9K	TLES7KK2
1	14 1663	14 1660	14 1903
2			
3	15 1055	15 1055	15 1055
4			
5	15 0760	15 0760	15 0760
6	15 1072	15 1072	15 1072
7	16 9319	16 9319	16 9319
8	26 4879	26 4879	26 4879
9	050166	050166	050166
10		16 5852	16 5852
11	26 4878	26 4878	35 4549
12	05 6008	05 6008	05 6008

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		Danfoss
Typ/Type		TLES4K		TLES9K
Förderleistung/Delivery/Débit		l/h	698	1589
Anlaufstrom/Starting current/Cour de démarrage		A	6,9	8,8
Widerstand/Resistance/Résistance		W	29,0	16,5
Hi/main/prin		W	19,0	16,9
Hi/aux		W	19,0	15,3
Temp.-Regler/Thermostat		Ranco		Ranco
Typ/Type		K59		K59
Regelstellung/Position		kalt	warm	kalt
Schaltwerte/Switching values		"warm"	+5,0	+5,2
Valeurs de commutation		"kalt"	-25,0	-32,0
		"alarm"	-10,0	-15,0
Füllmenge/Fill.quantity/Charge		R600a	*	
Anschlußwert/Conn.load/Puiss. connectée		W	90	100
Heizung/Heater/Chauffage		W		
Widerstand/Resistance/Résistance		W		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur		W		
Widerstand/Resistance/Résistance		W		
Temp.-Regler/Thermostat				
Magnetventil/Magnetic valve/Electrovanne		W		
Widerstand/Resistance/Résistance		V		
Spannung/Voltage/Tension		V		

* siehe Typenschild