




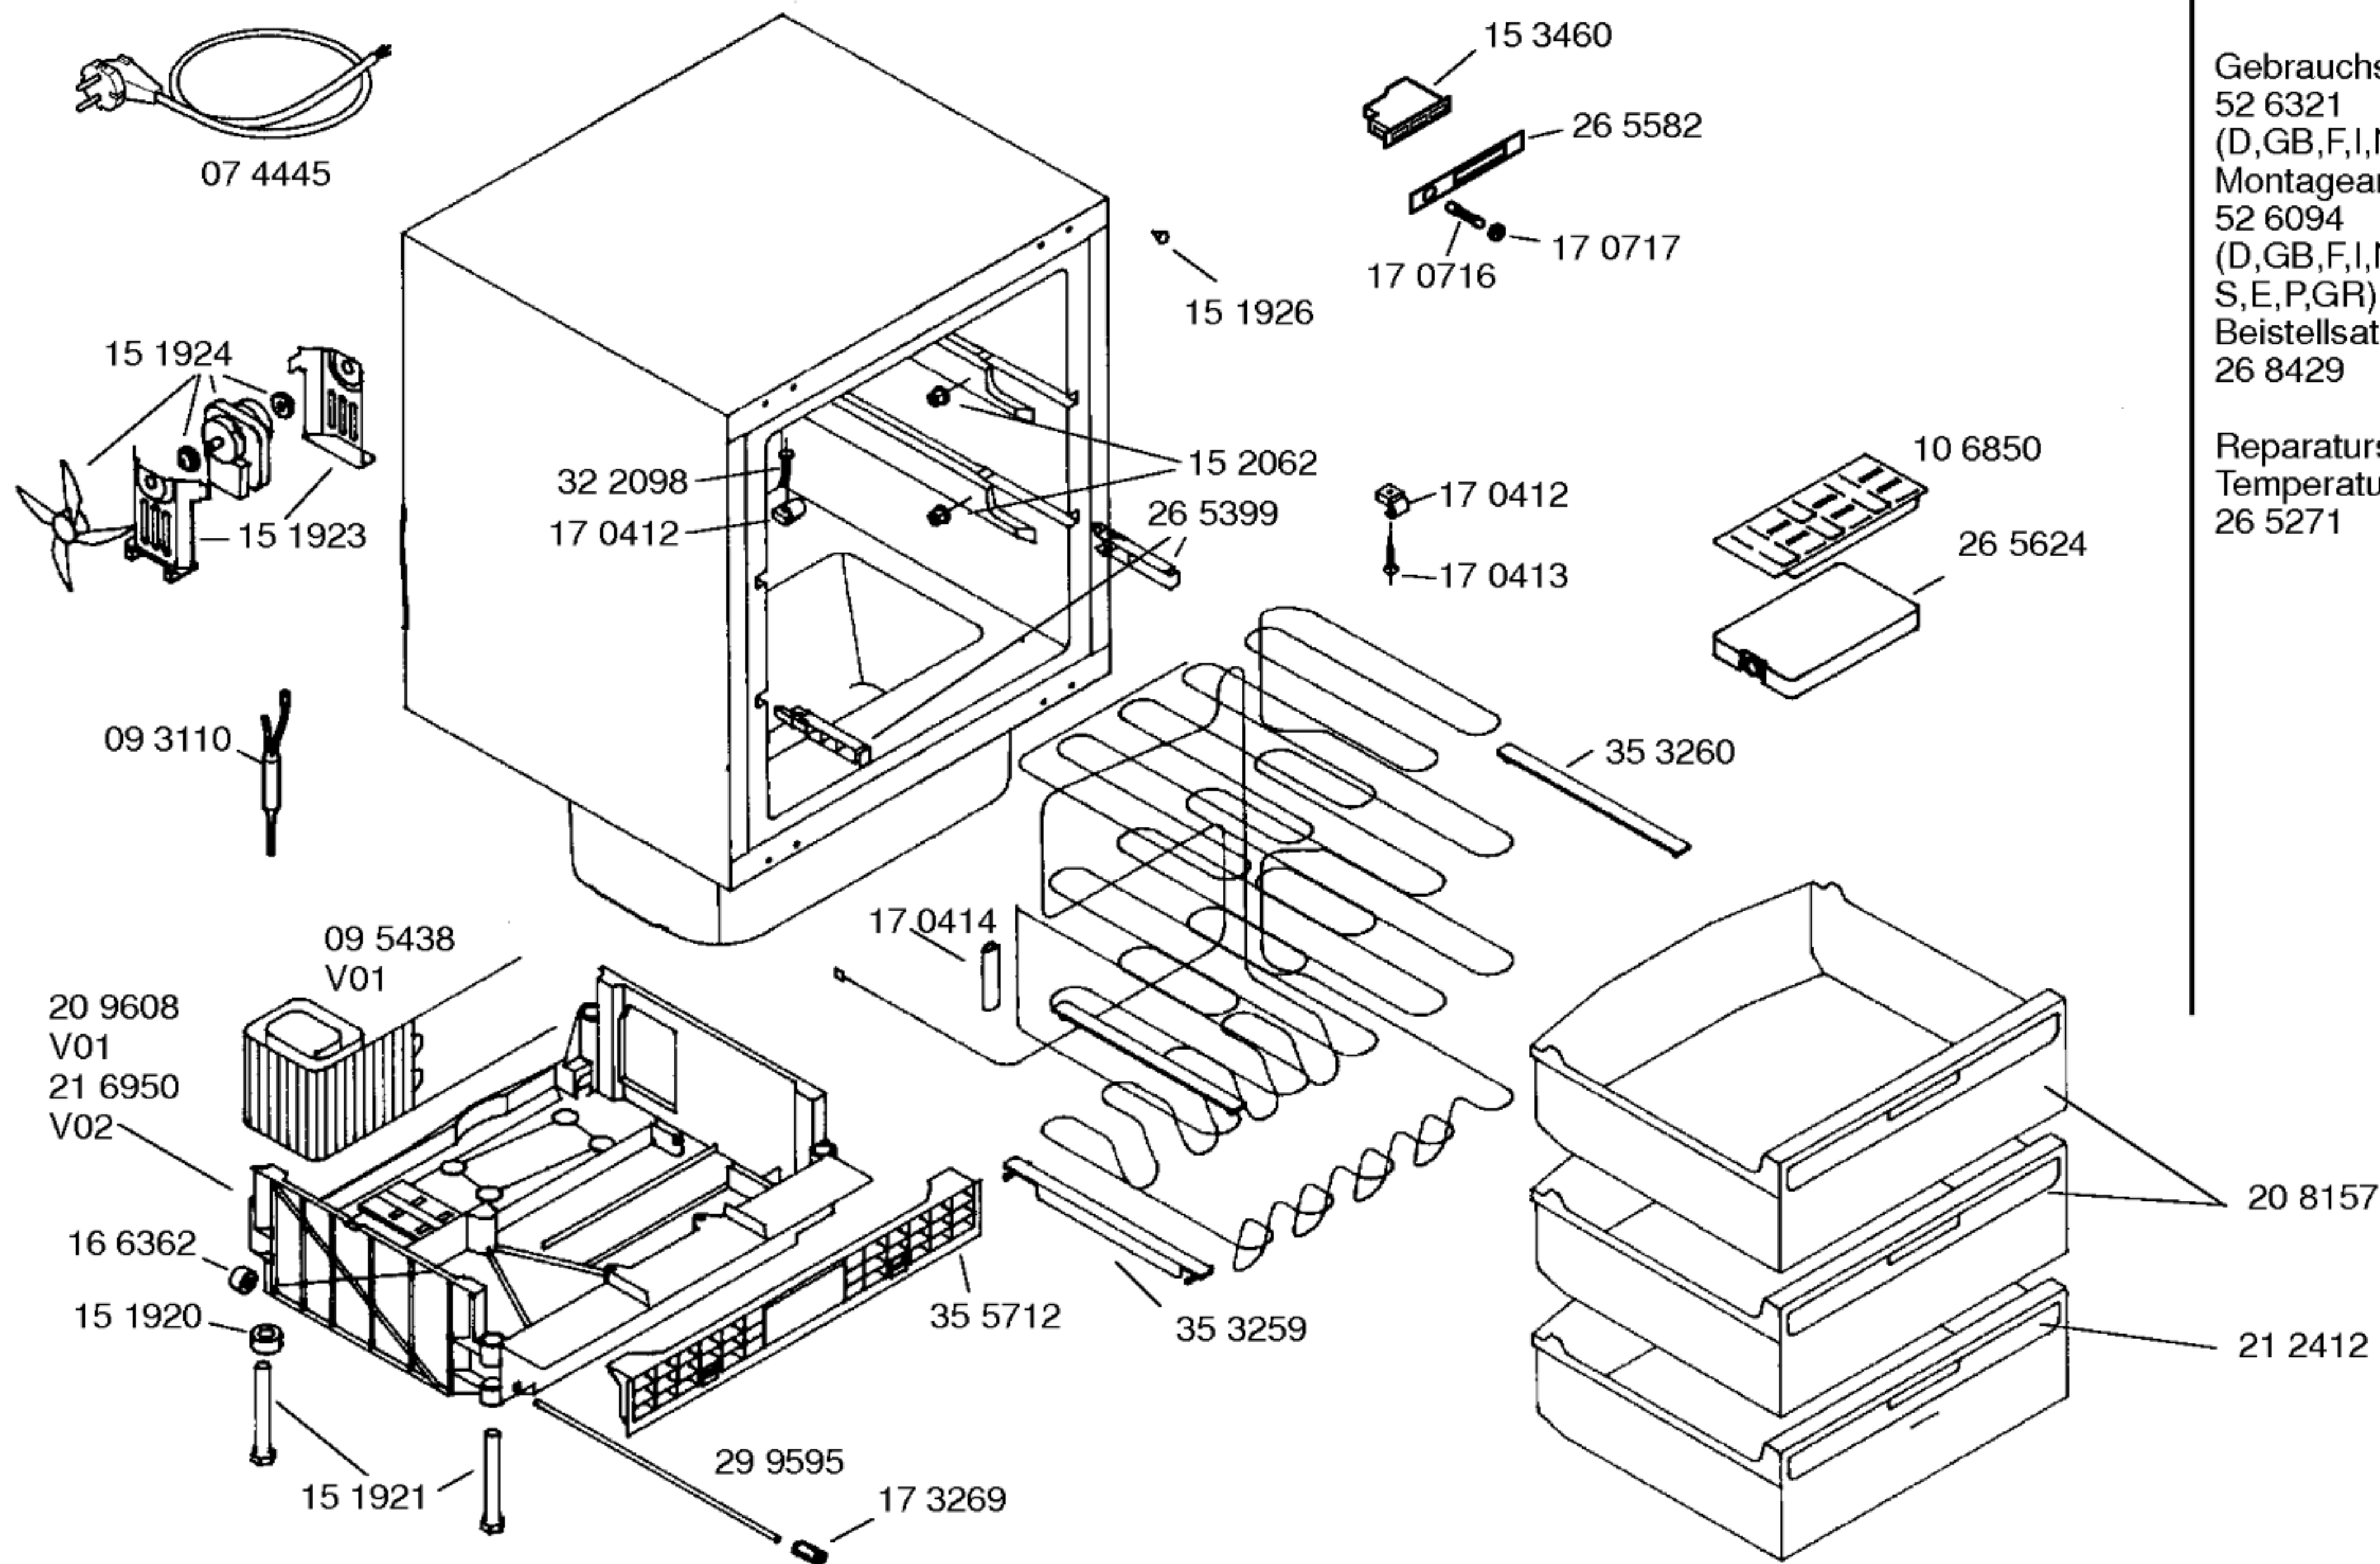

Gebrauchsanweisung
 52 6321
 (D,GB,F,I,NL)
 Montageanleitung
 52 6094
 (D,GB,F,I,NL,DK,N,SF,
 S,E,P,GR)
 Beistellsatz
 26 8429

Reparatursatz
 Temperaturregler
 26 5271

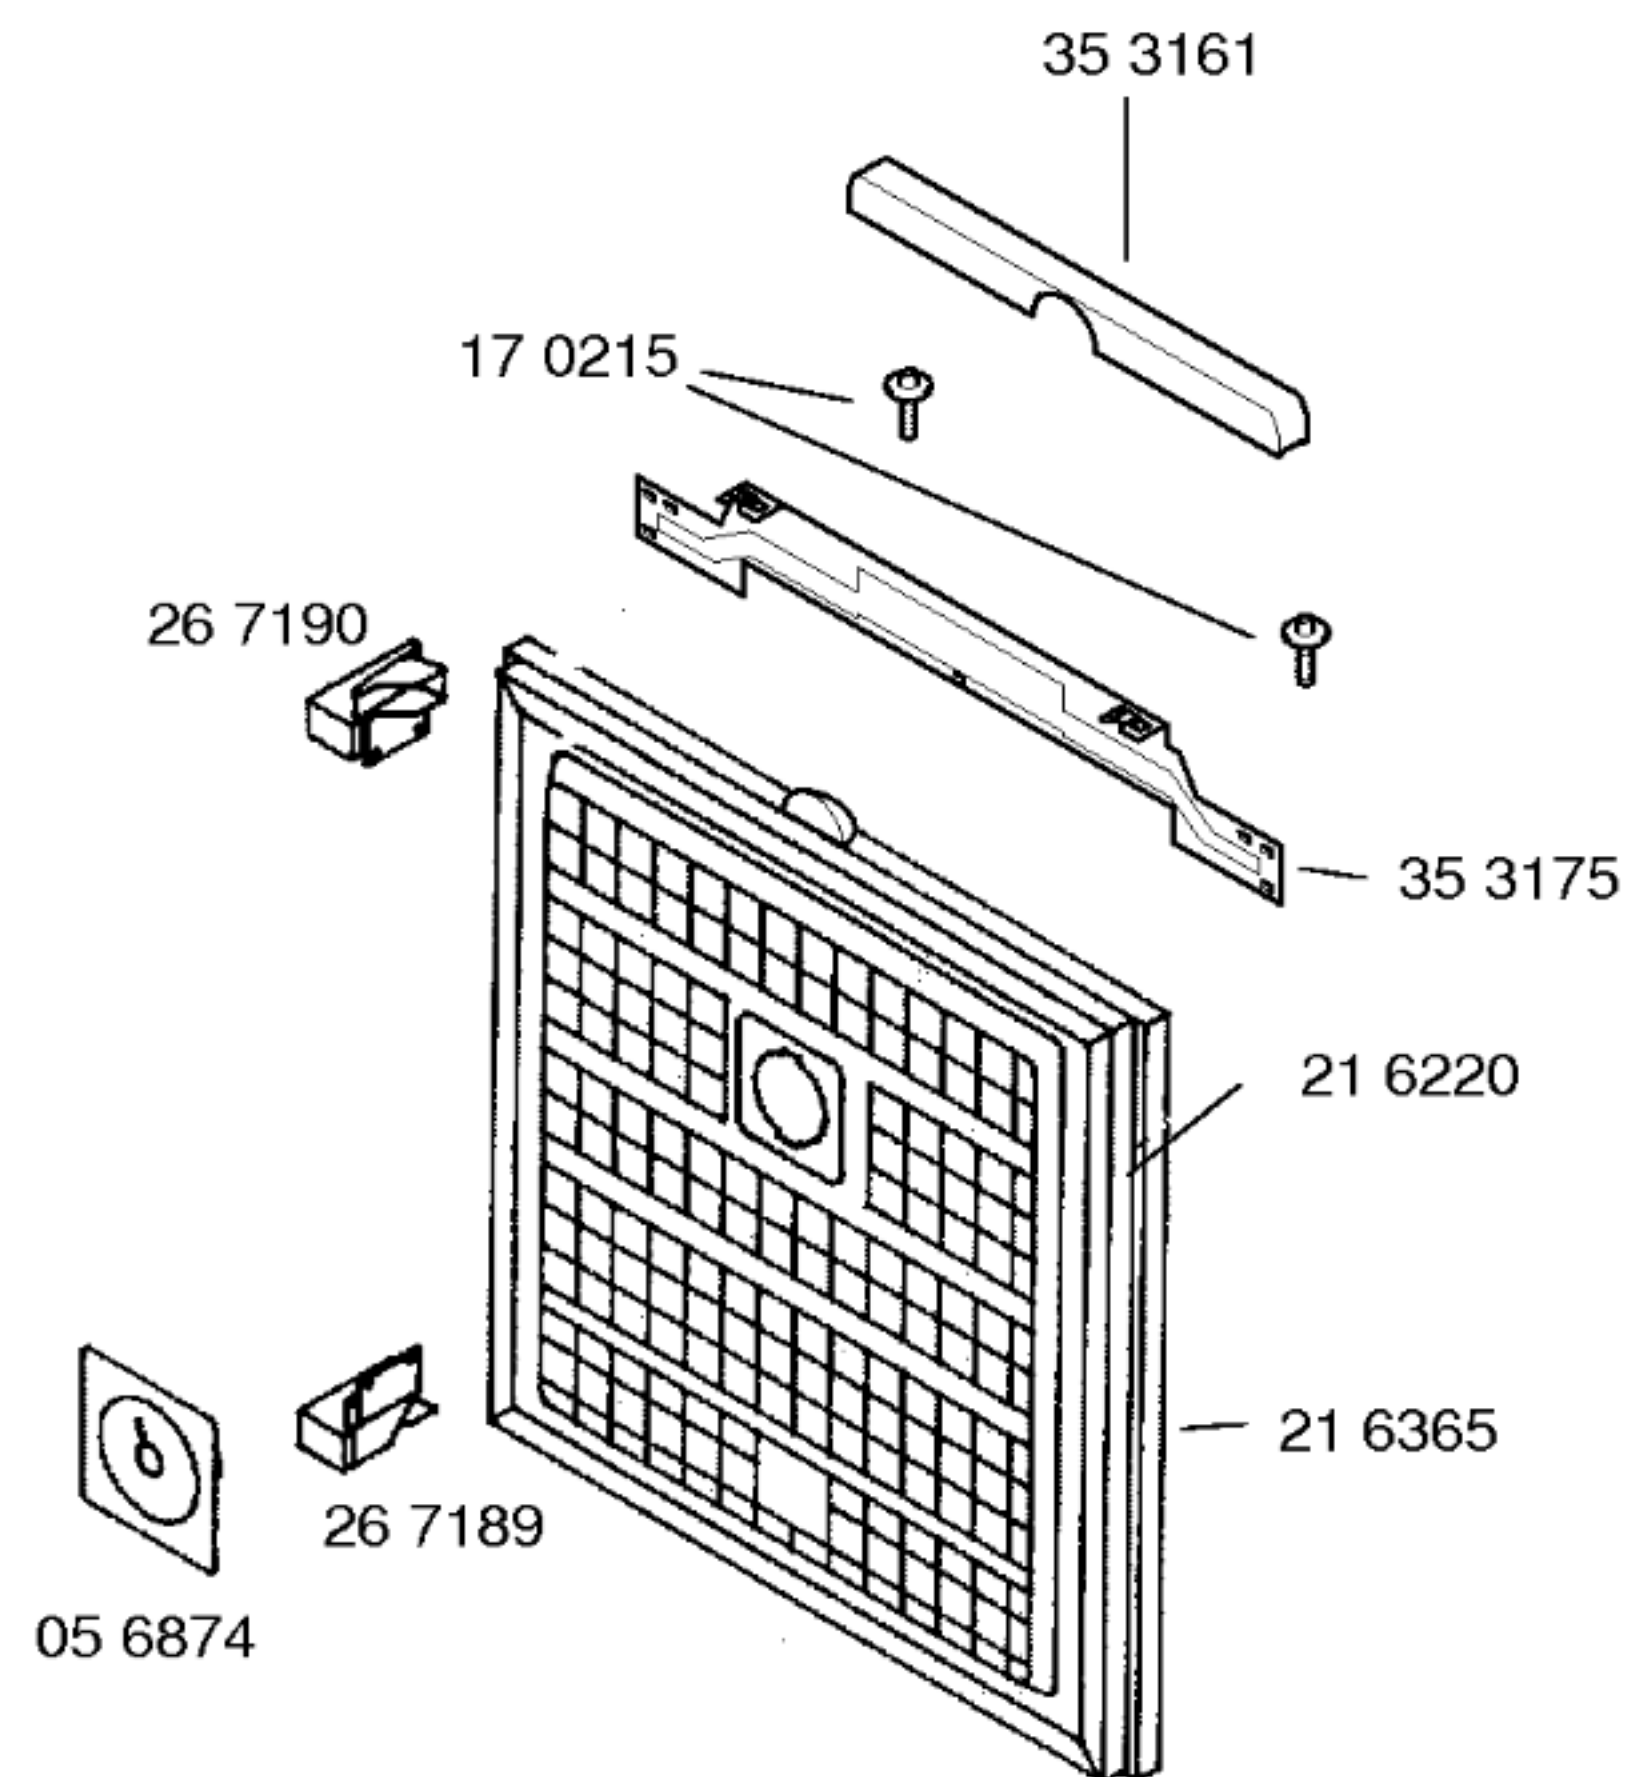

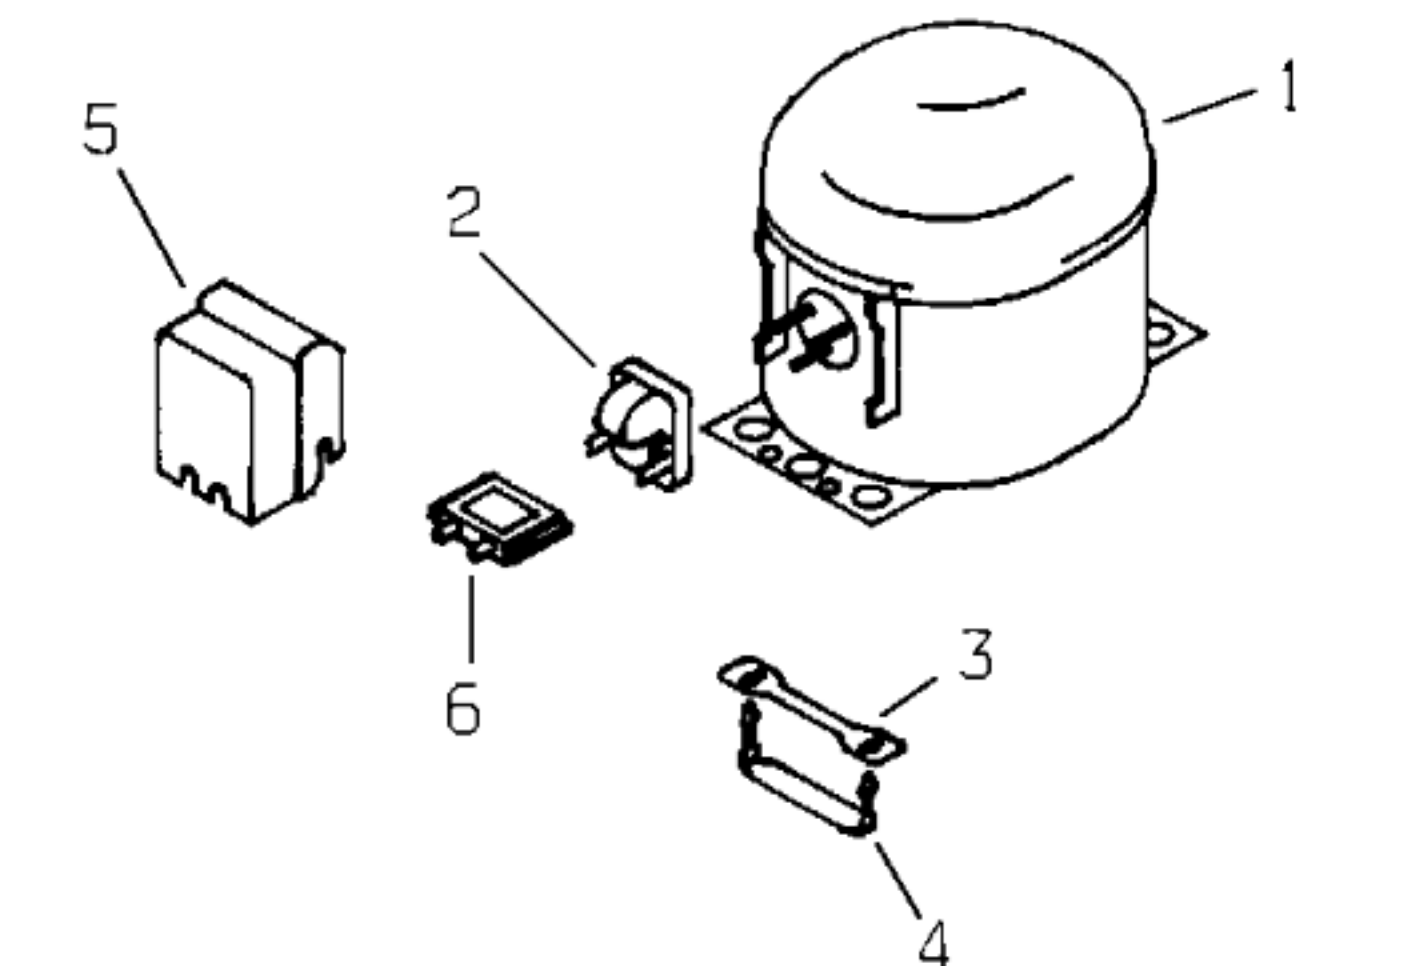

Pos.	Danfoss		
	TLES 9 KK2		
1	14 1660		
2	15 1055		
3	15 1919		
4	15 1918		
5	15 1072		
6	15 1053		
7			
8			
9			
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		TLES 9 KK2	
Förderleistung/Delivery/Débit		l/h	1584
Anlaufstrom/Starting current/Cour de démarrage		A	4,5
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	16,5
	Hi/aux	Ω	16,9
Temp.-Regler/Thermostat		Ranco	
Typ/Type		K56-1	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/ Valeurs de commutation	„ein“	°C	-25
	„aus“		-15
	(„abtauen“ od.) „alarm“		-36
Füllmenge/Fill.quantity/Charge		R600a	g
			*
Anschlußwert/Conn.load/Puiss. connectée		W	70
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance		Ω	
Leistung/Power/Puissance		W	
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance		Ω	MES F61-10 680
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance		Ω	
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance		Ω	
Spannung/Voltage/Tension		V	

* siehe Typenschild