 
 
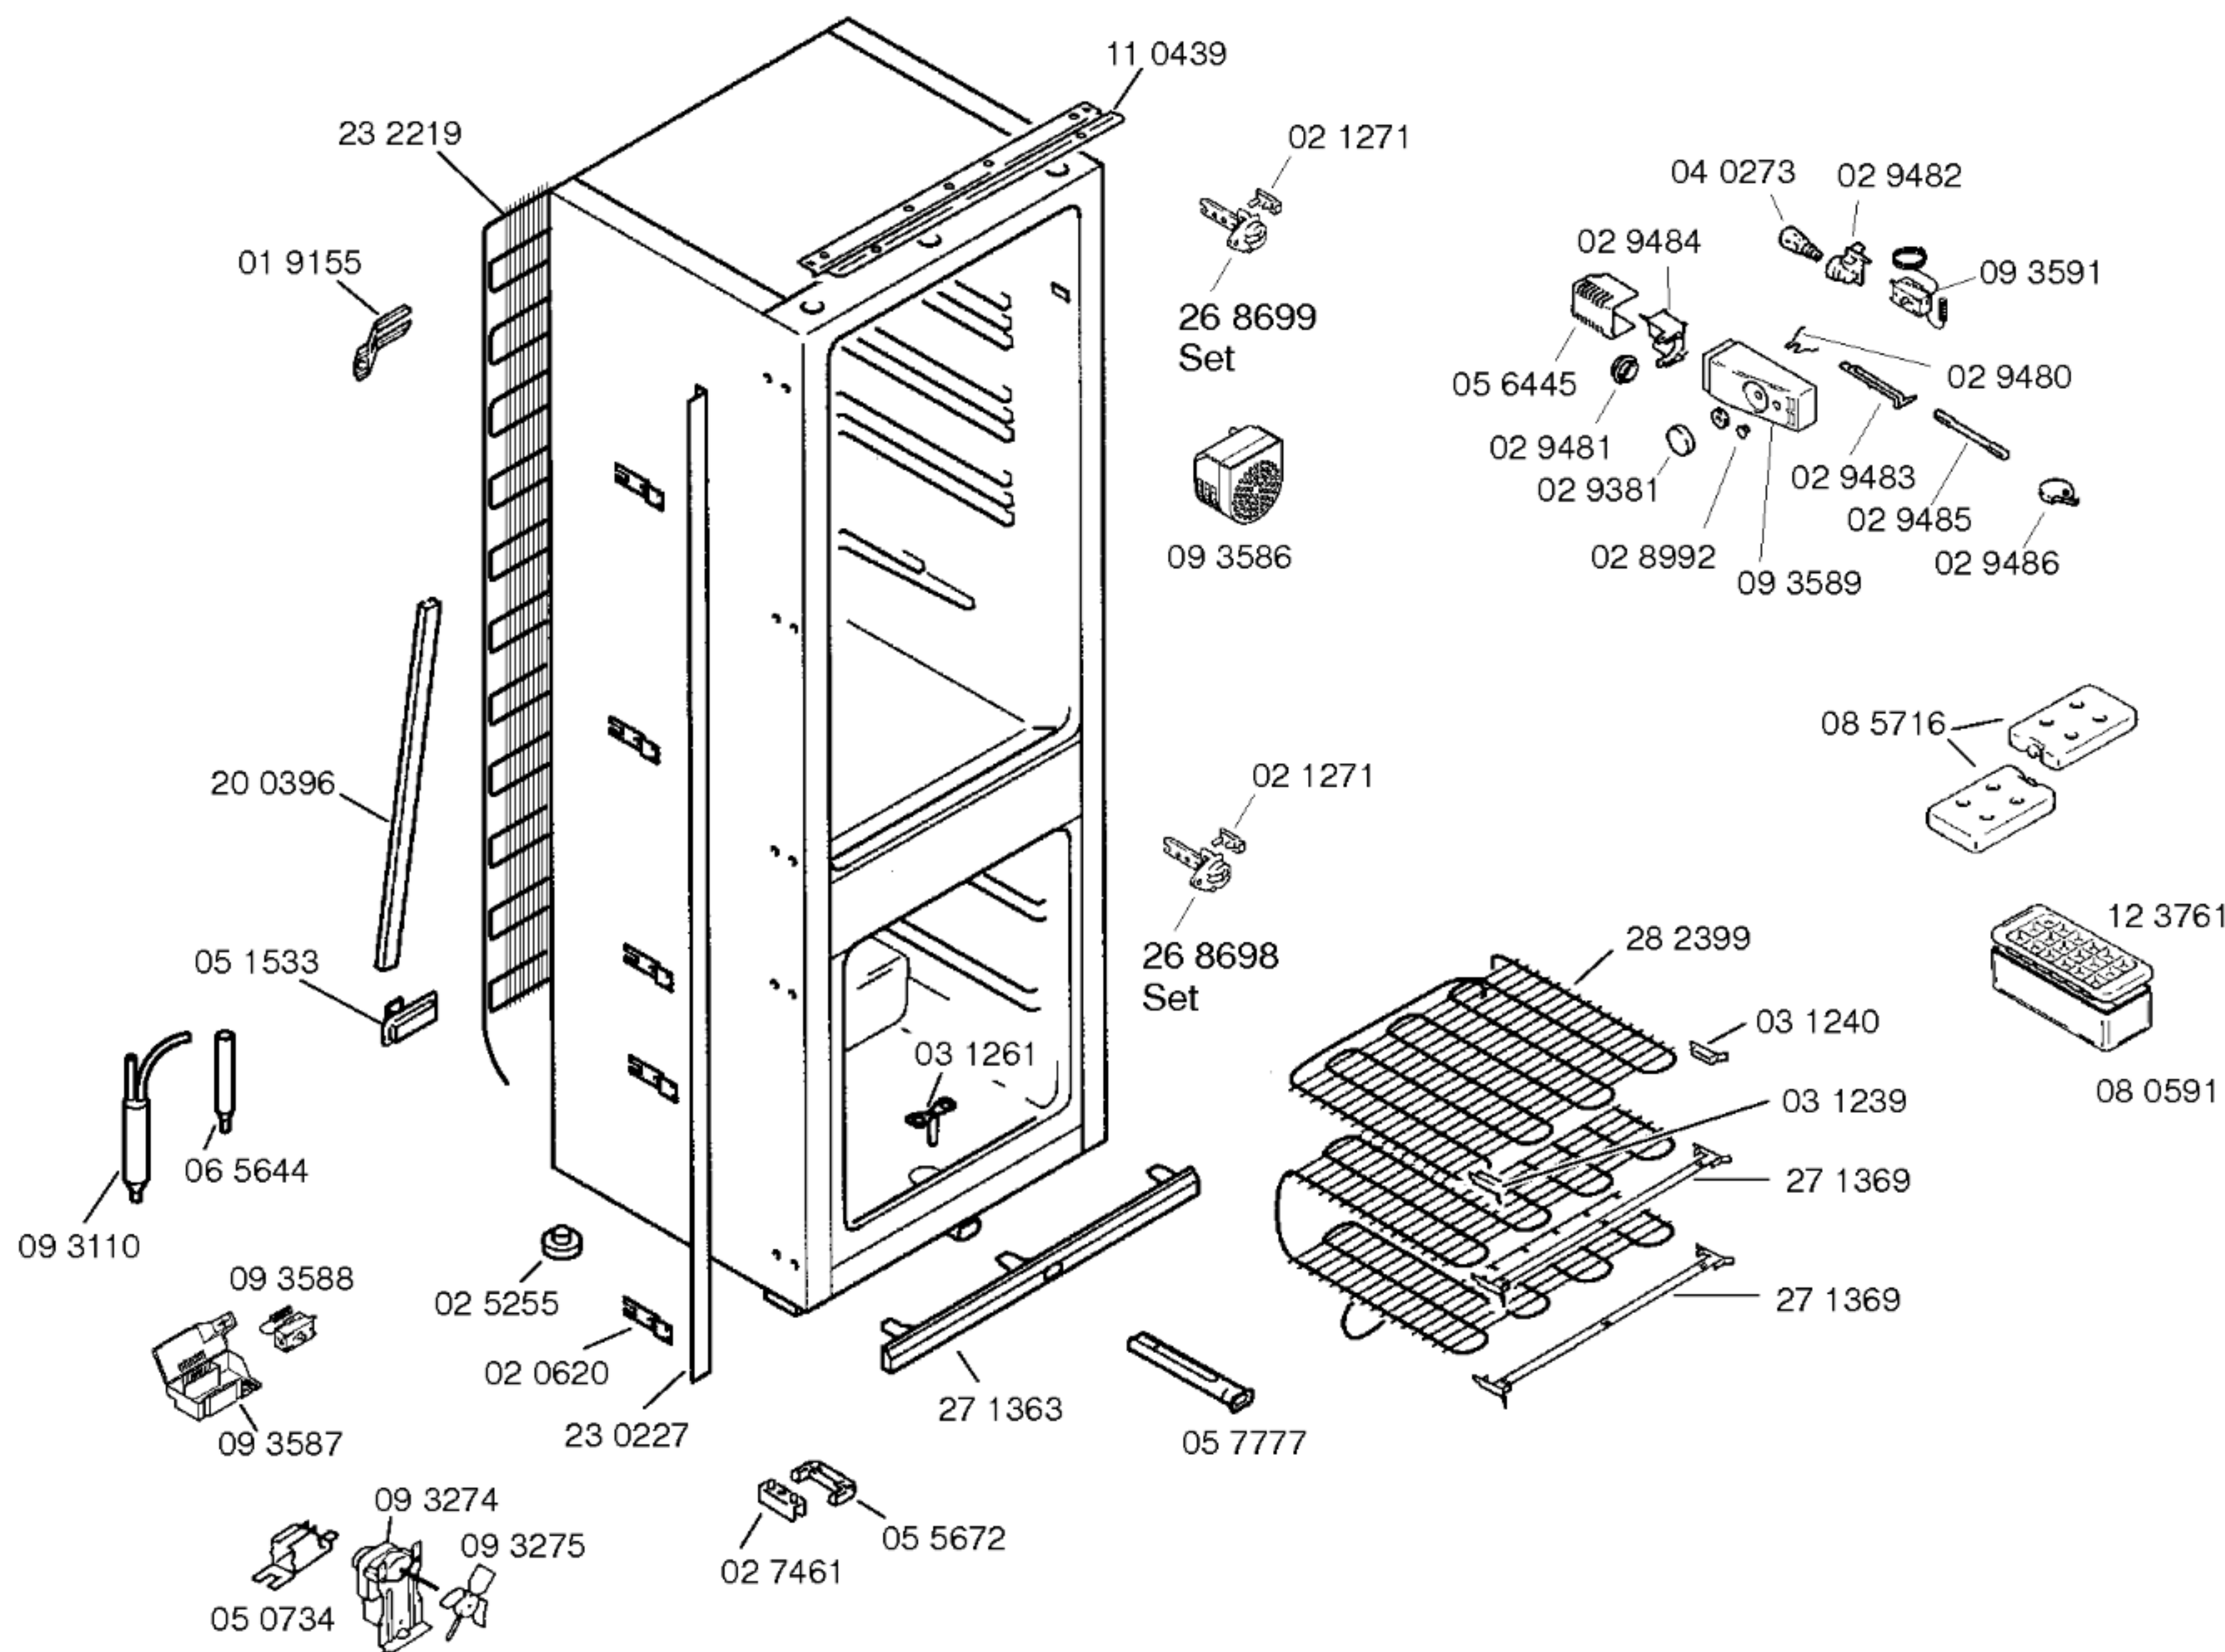 


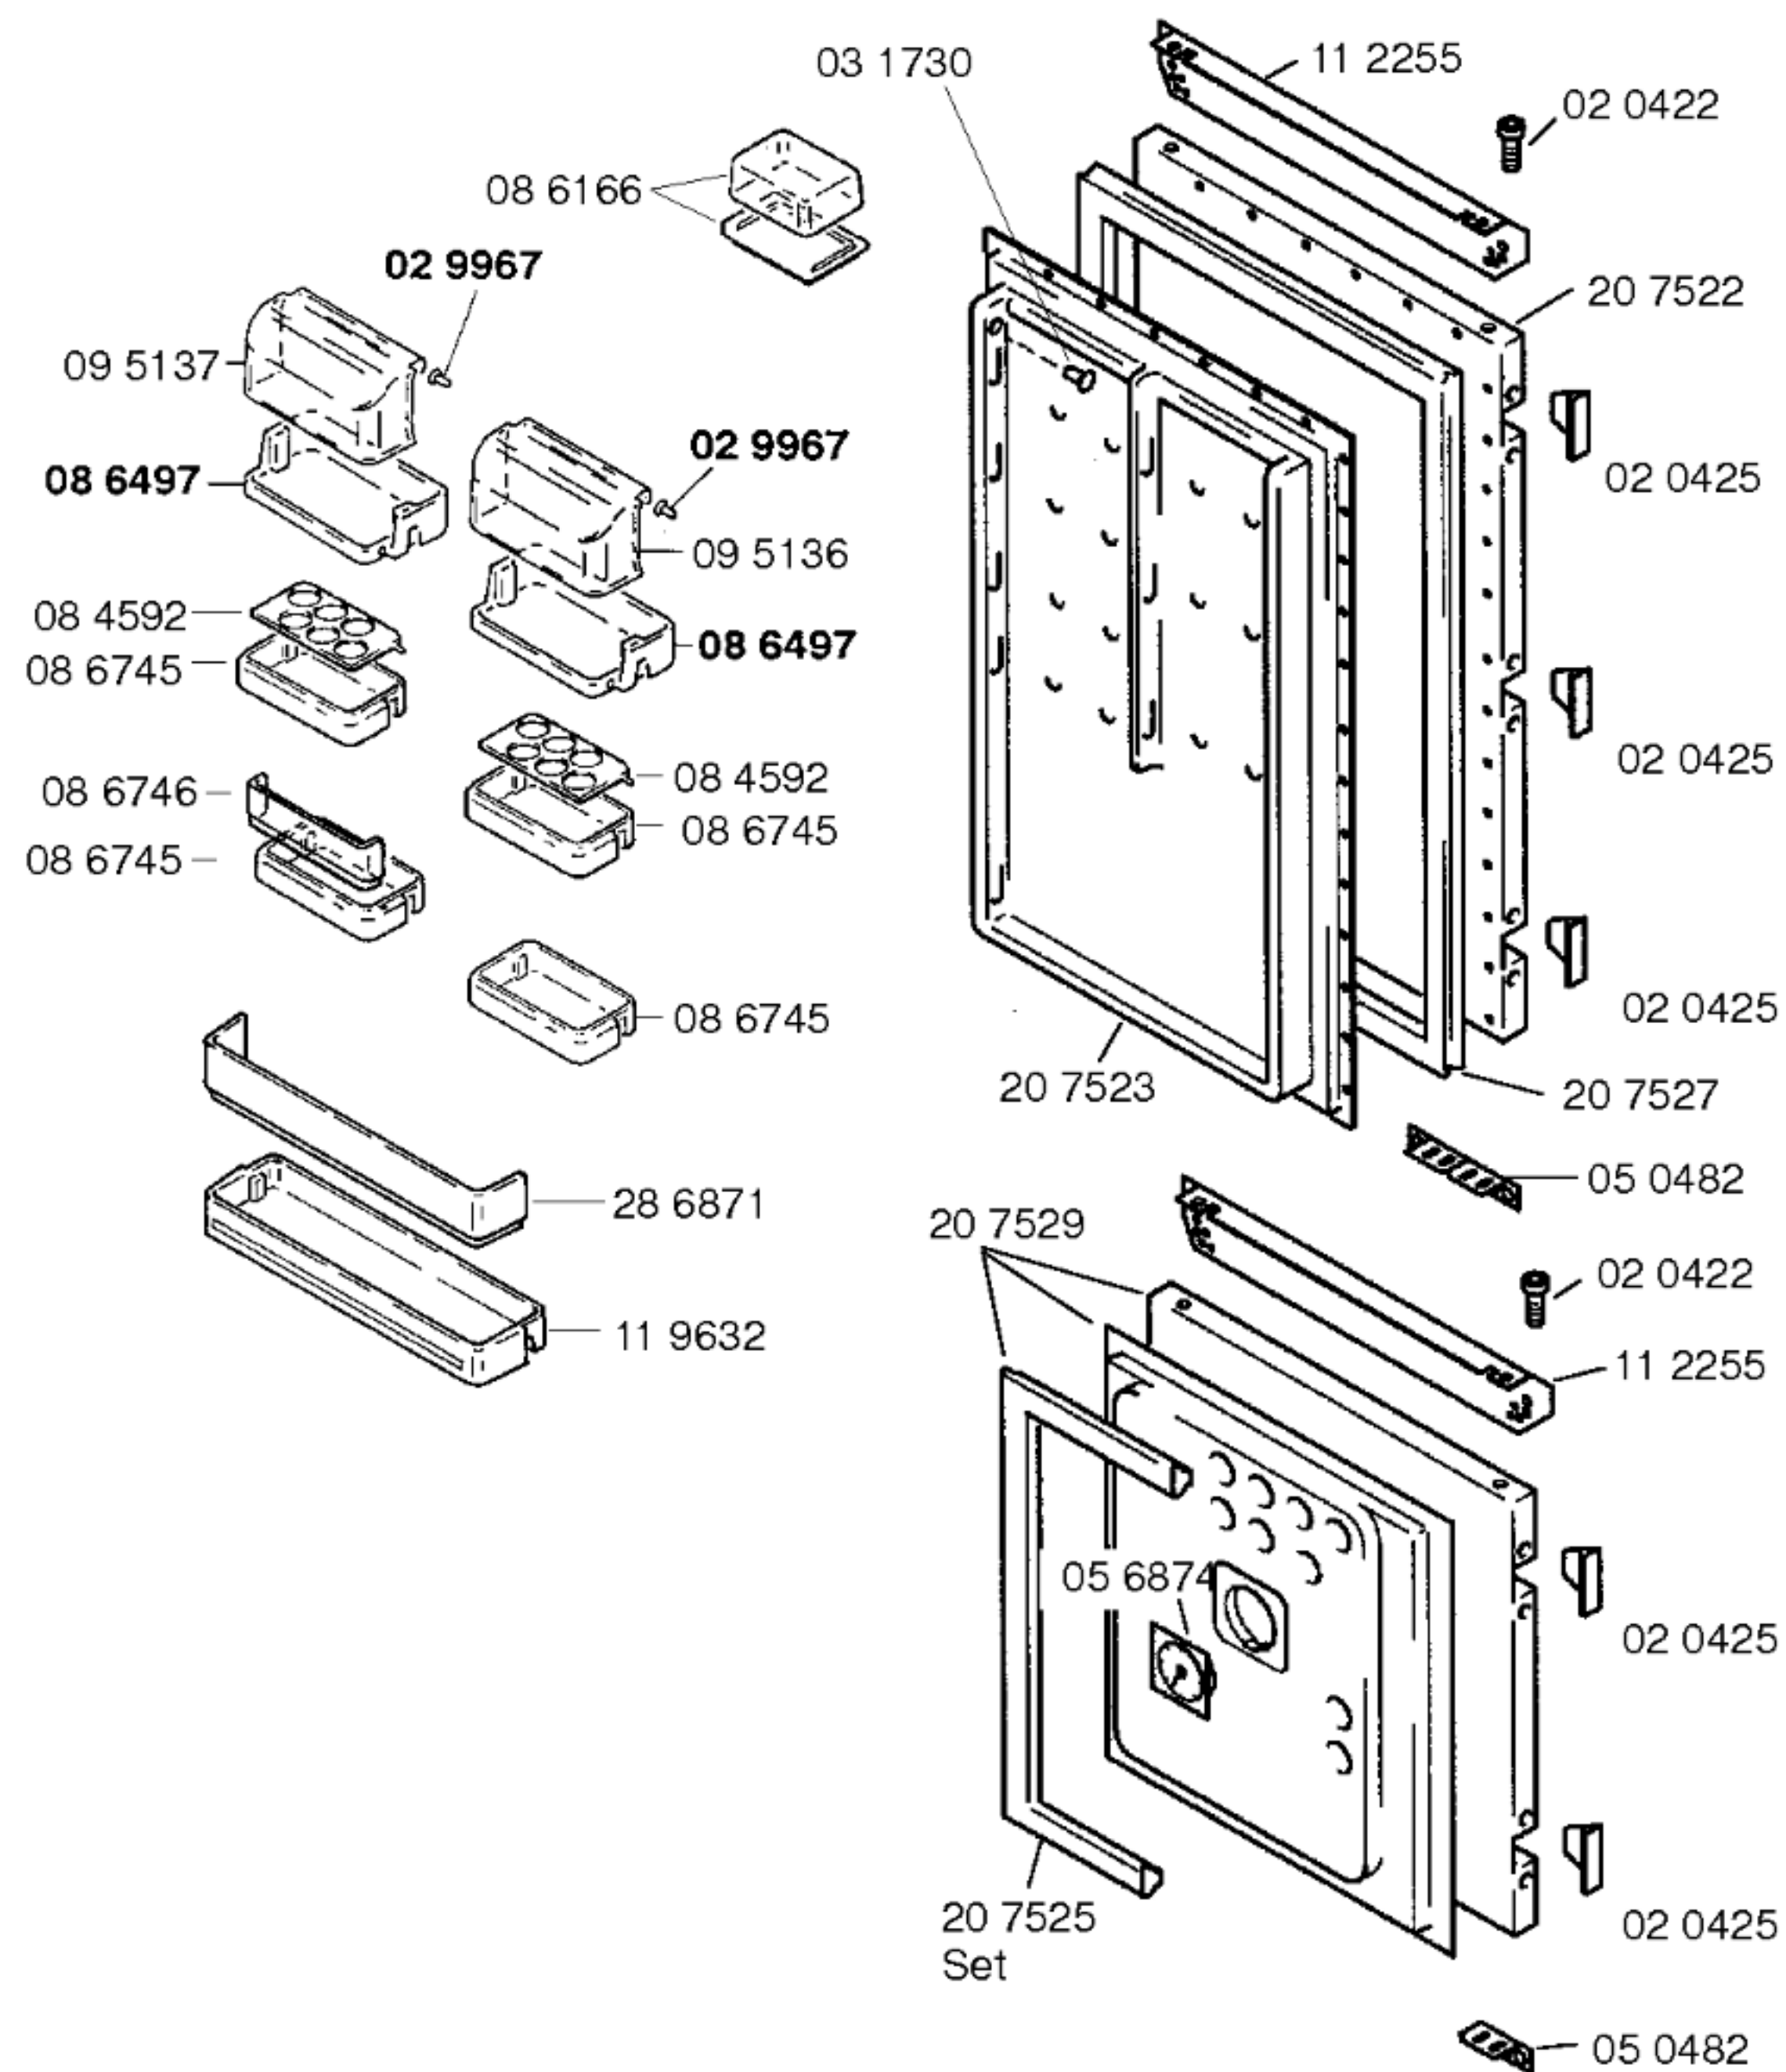 


Gebrauchsanweisung
51 5681
(D,GB,F,I,NL,S,E,DK,N,,SF)

Montageanleitung
51 5546
(D,GB,F,I,NL,S,E,DK,N,,SF)

08 4137
Befestigungssatz
08 4136
Schraubensatz

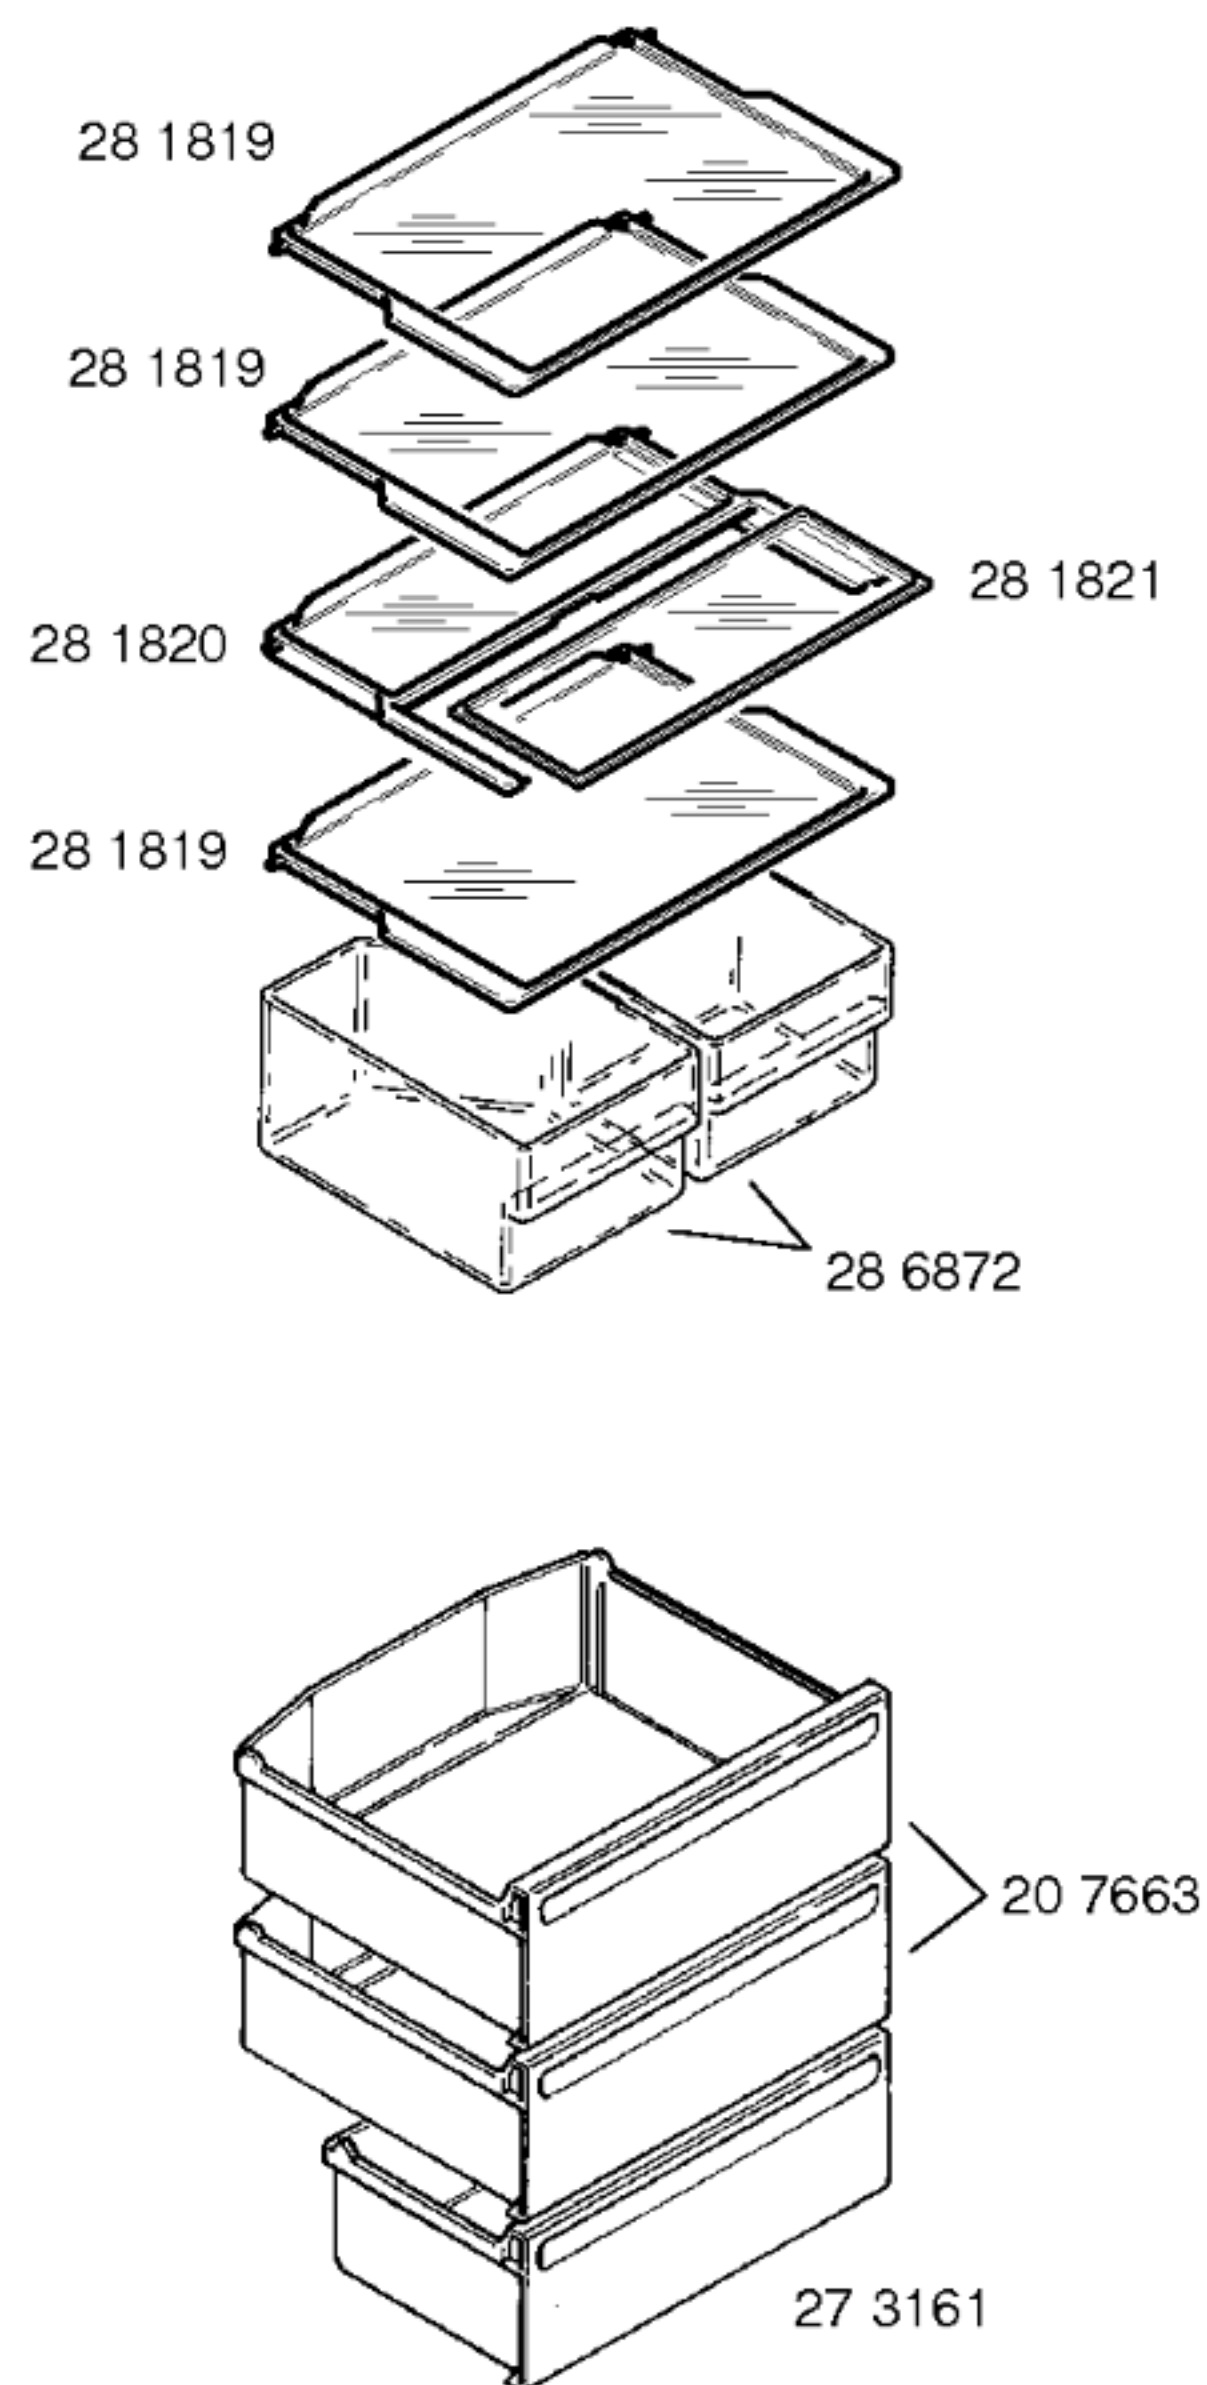

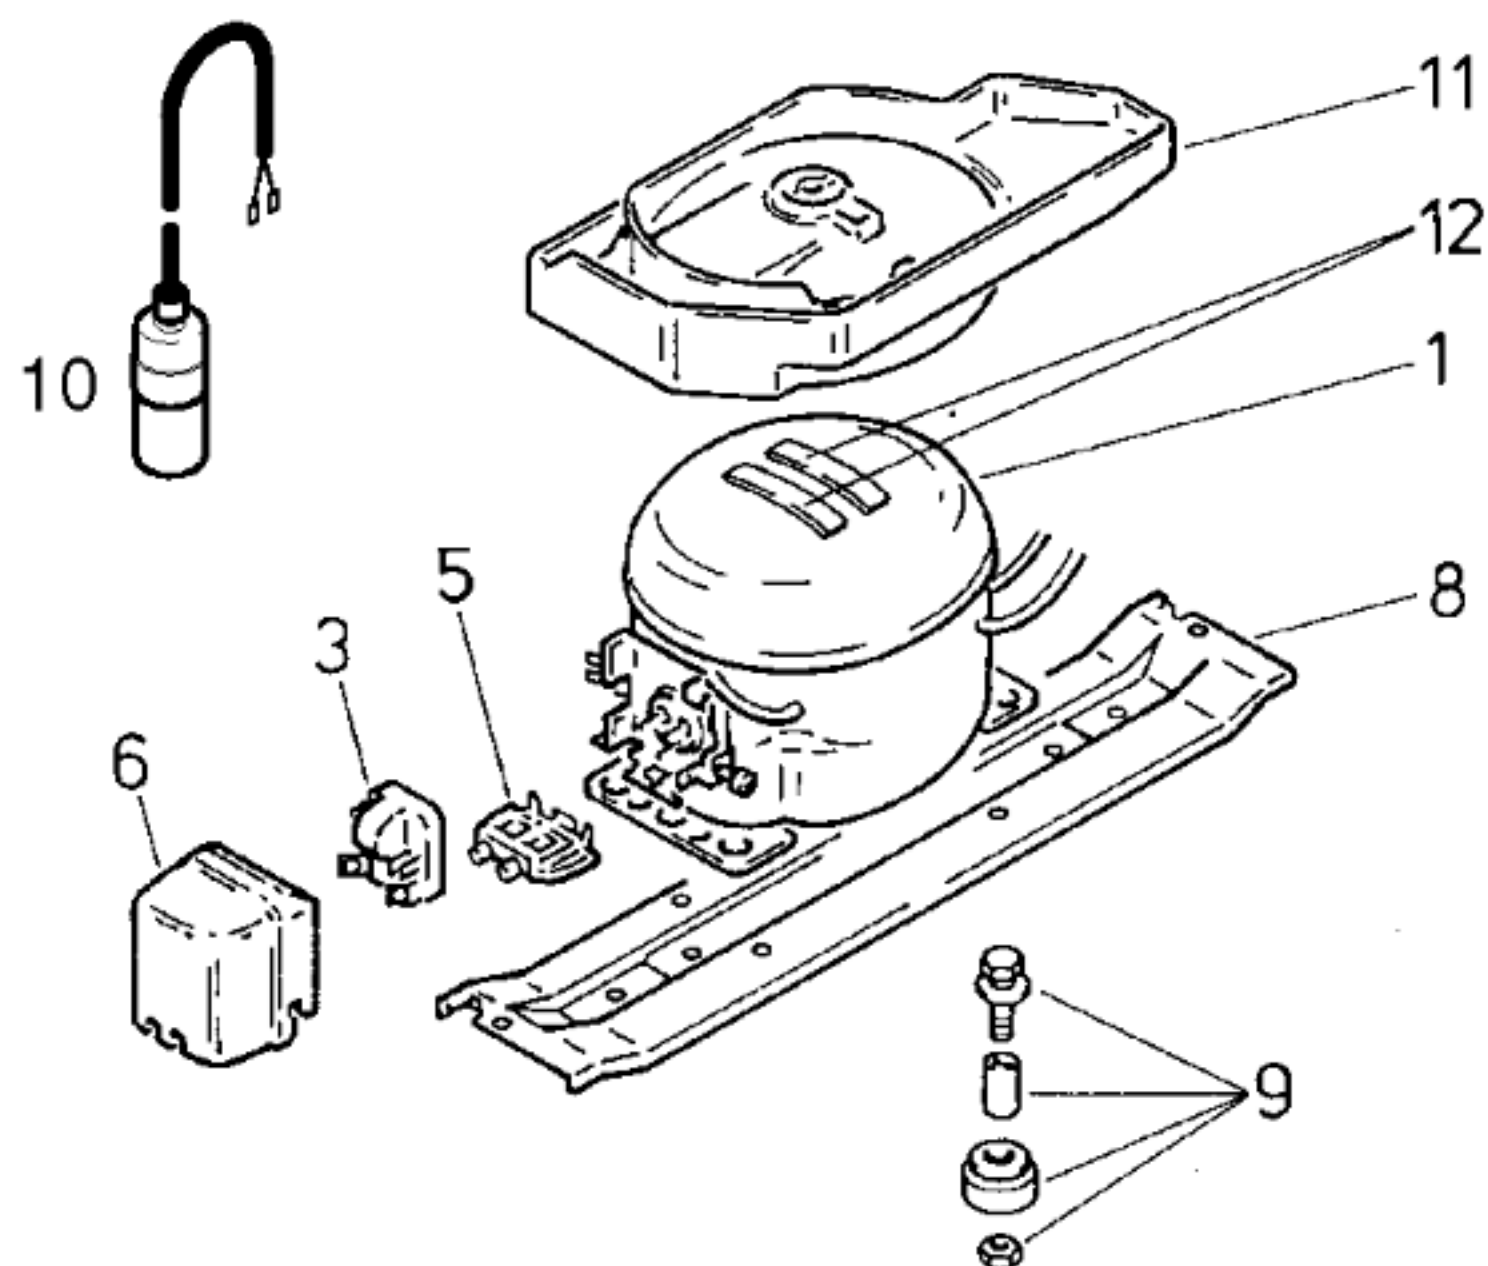

Pos.			
	Danfoss		
	NLE 15 K		
1	14 1311		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	28 1825		
9	05 0166		
10	05 9467		
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		NLE 15 K			
Förderleistung/Delivery/Débit		l/h	2637		
Anlaufstrom/Starting current/Cour. de démarrage		A			
Widerstand/Resistance/Résistance		Ha/main/prin. Ω			
		Hi/aux Ω			
Temp.-Regler/Thermostat		Innentemp.		Außentemp.	
Typ/Type		K 52-1		K 50-L5772	
Reglerstellung/Position					
Schaltwerte/Switching values/		„ein“	°C	kalt	warm
Valeurs de commutation		„aus“		+4	+7,5
		(„abtauen“ od.)		0	+10
Luftf.					+31,5
					+28,5
Füllmenge/Fill.quantity/Charge		R600a	g	70	
Anschlußwert/Conn.load/Puiss. connectée		W	150		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur		Innen		Außen	
Widerstand/Resistance/Résistance		Ω	1300	350	
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			