

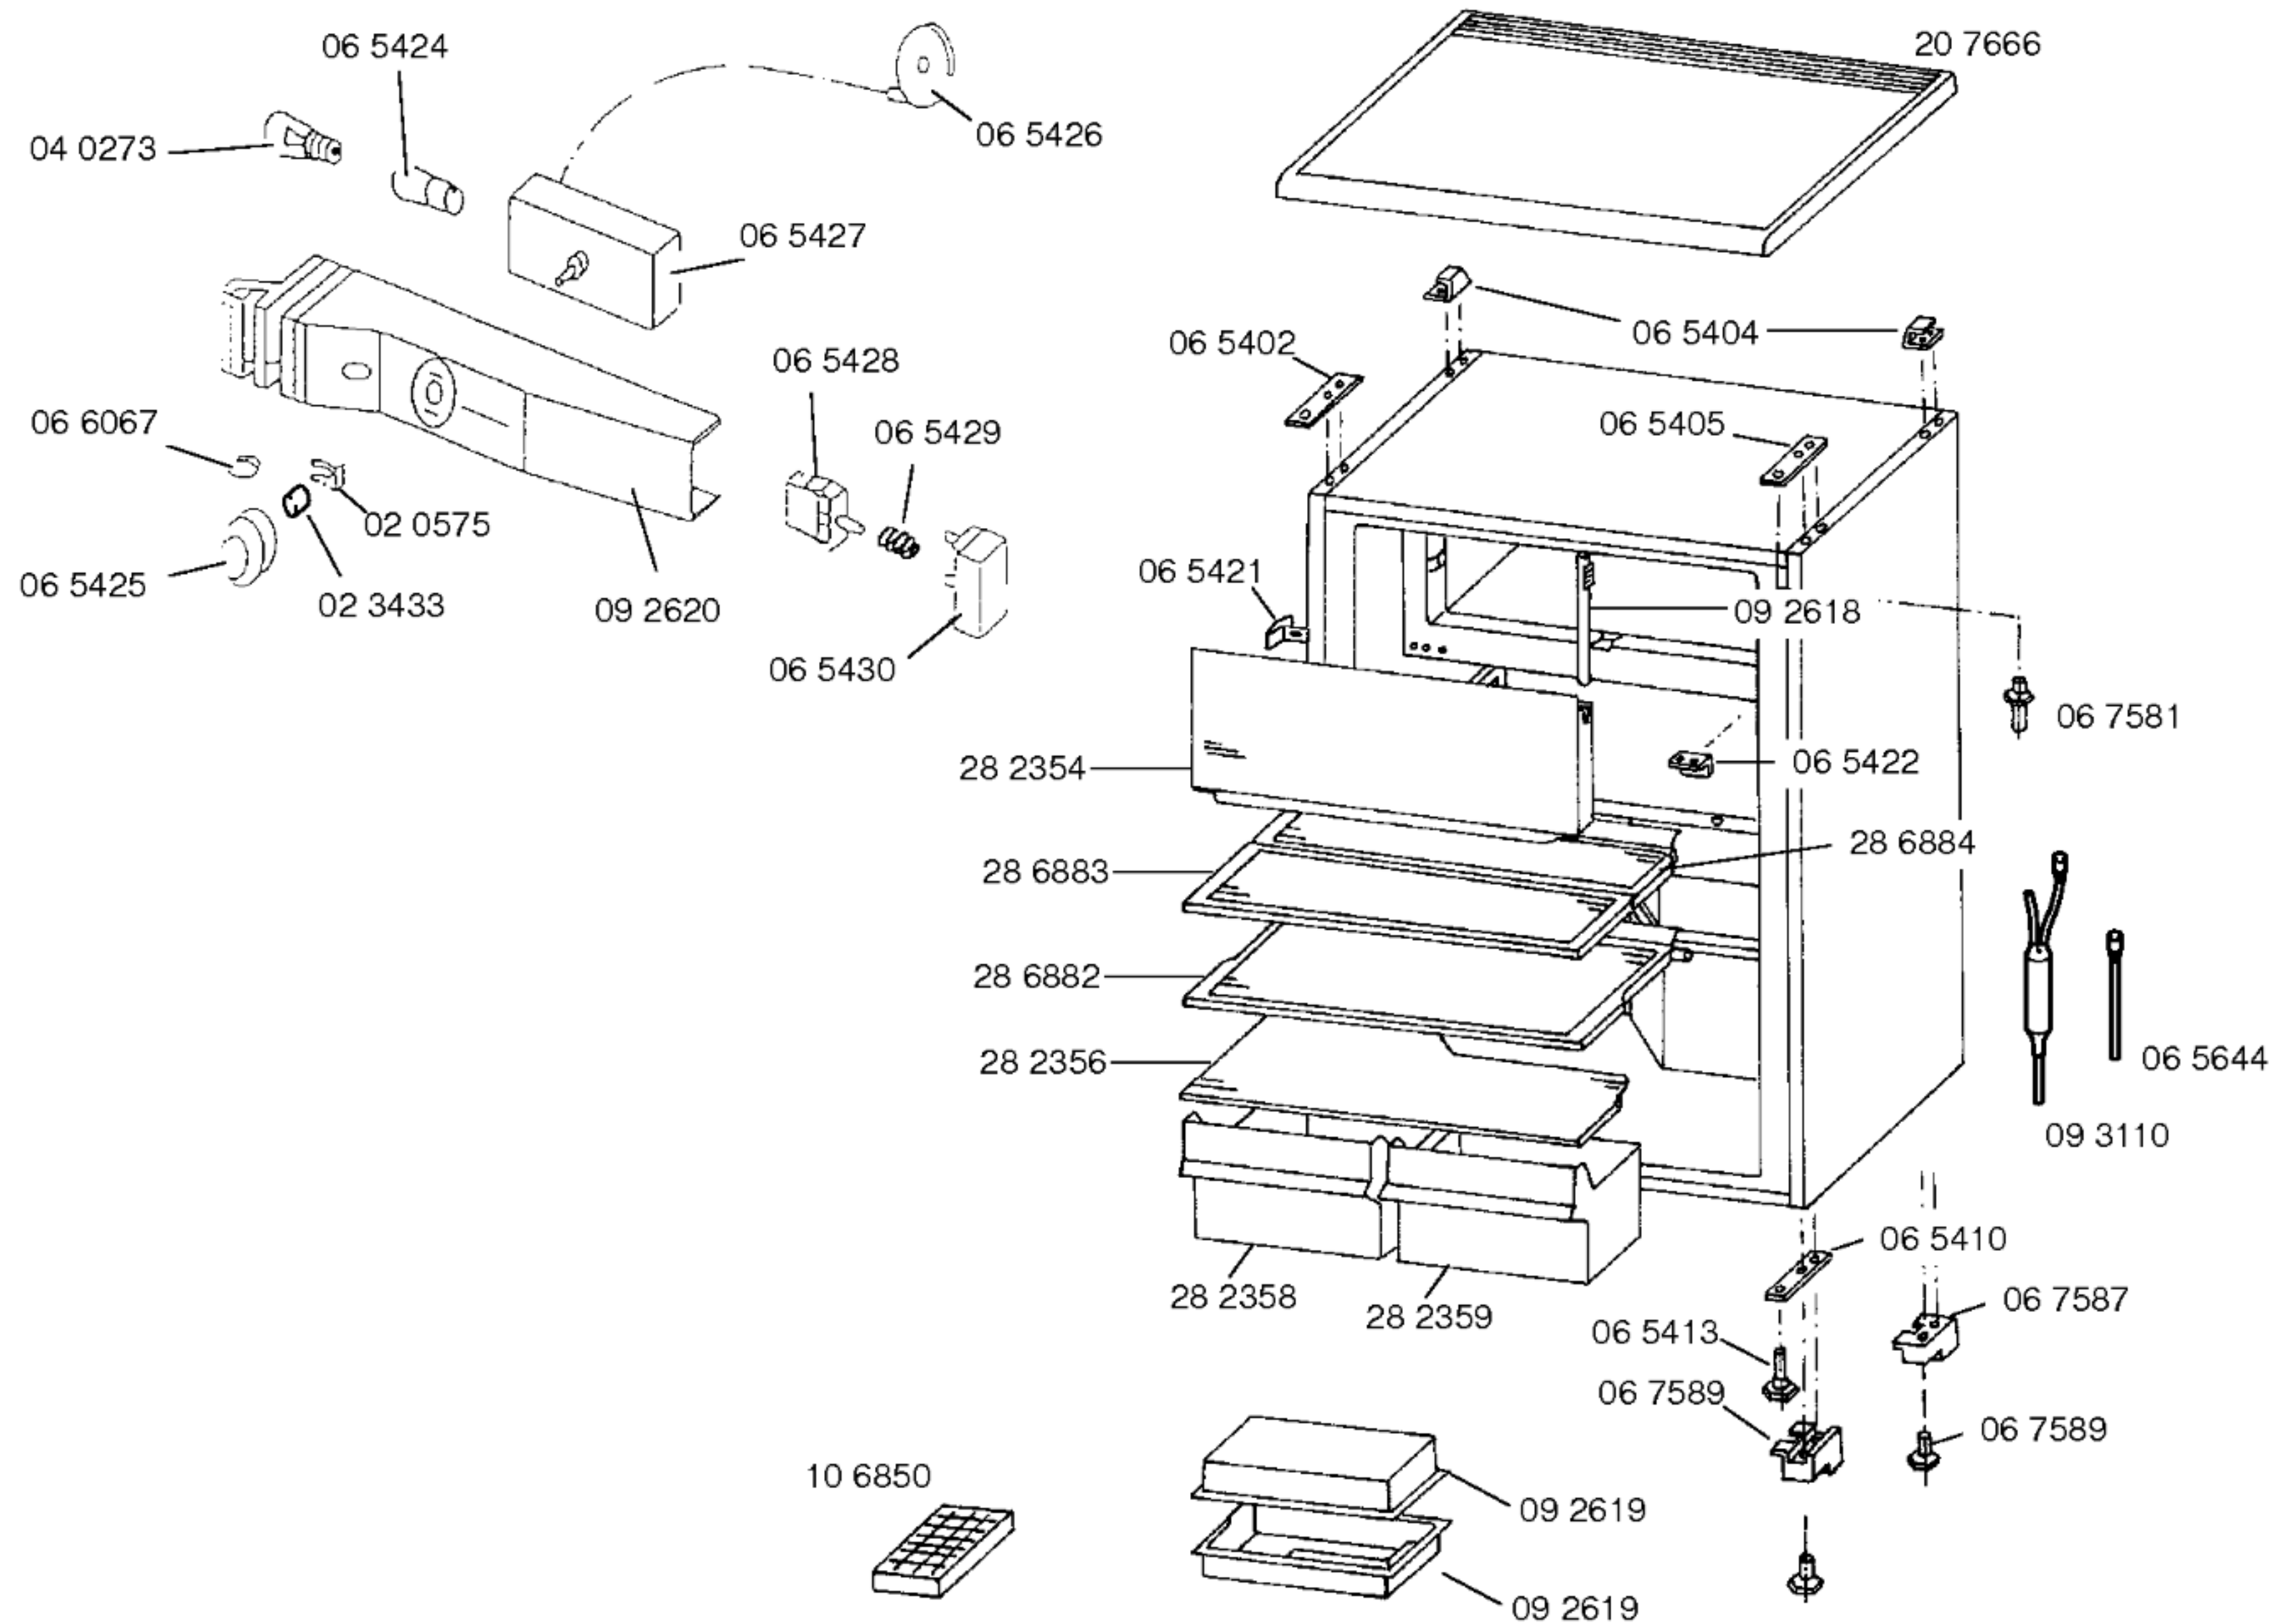
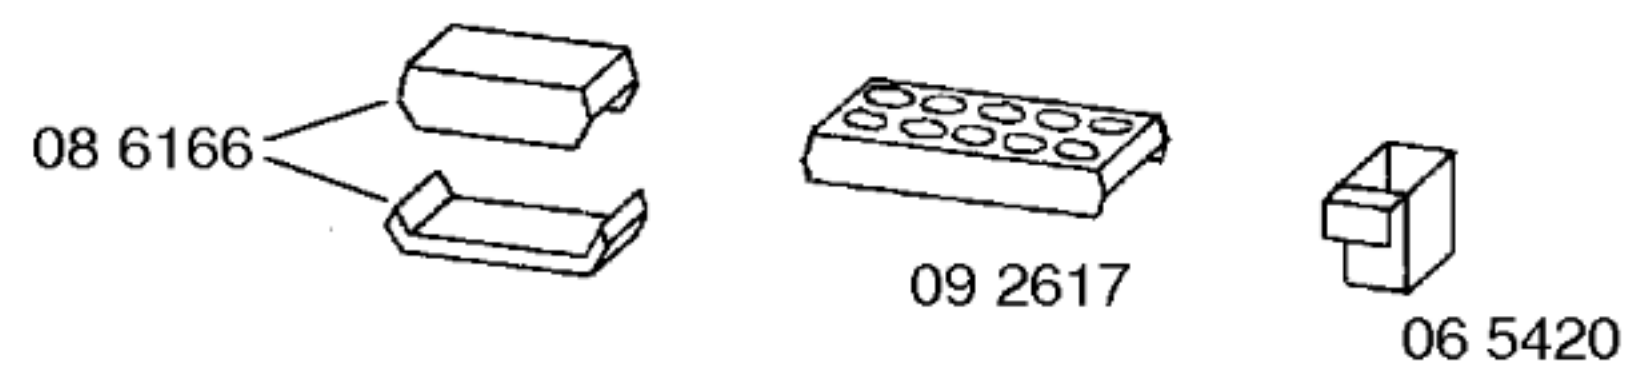


Mat. - Nr. - Konstante
3740Gebrauchsanweisung
51 5686
(D,GB,F,I,E,NL)

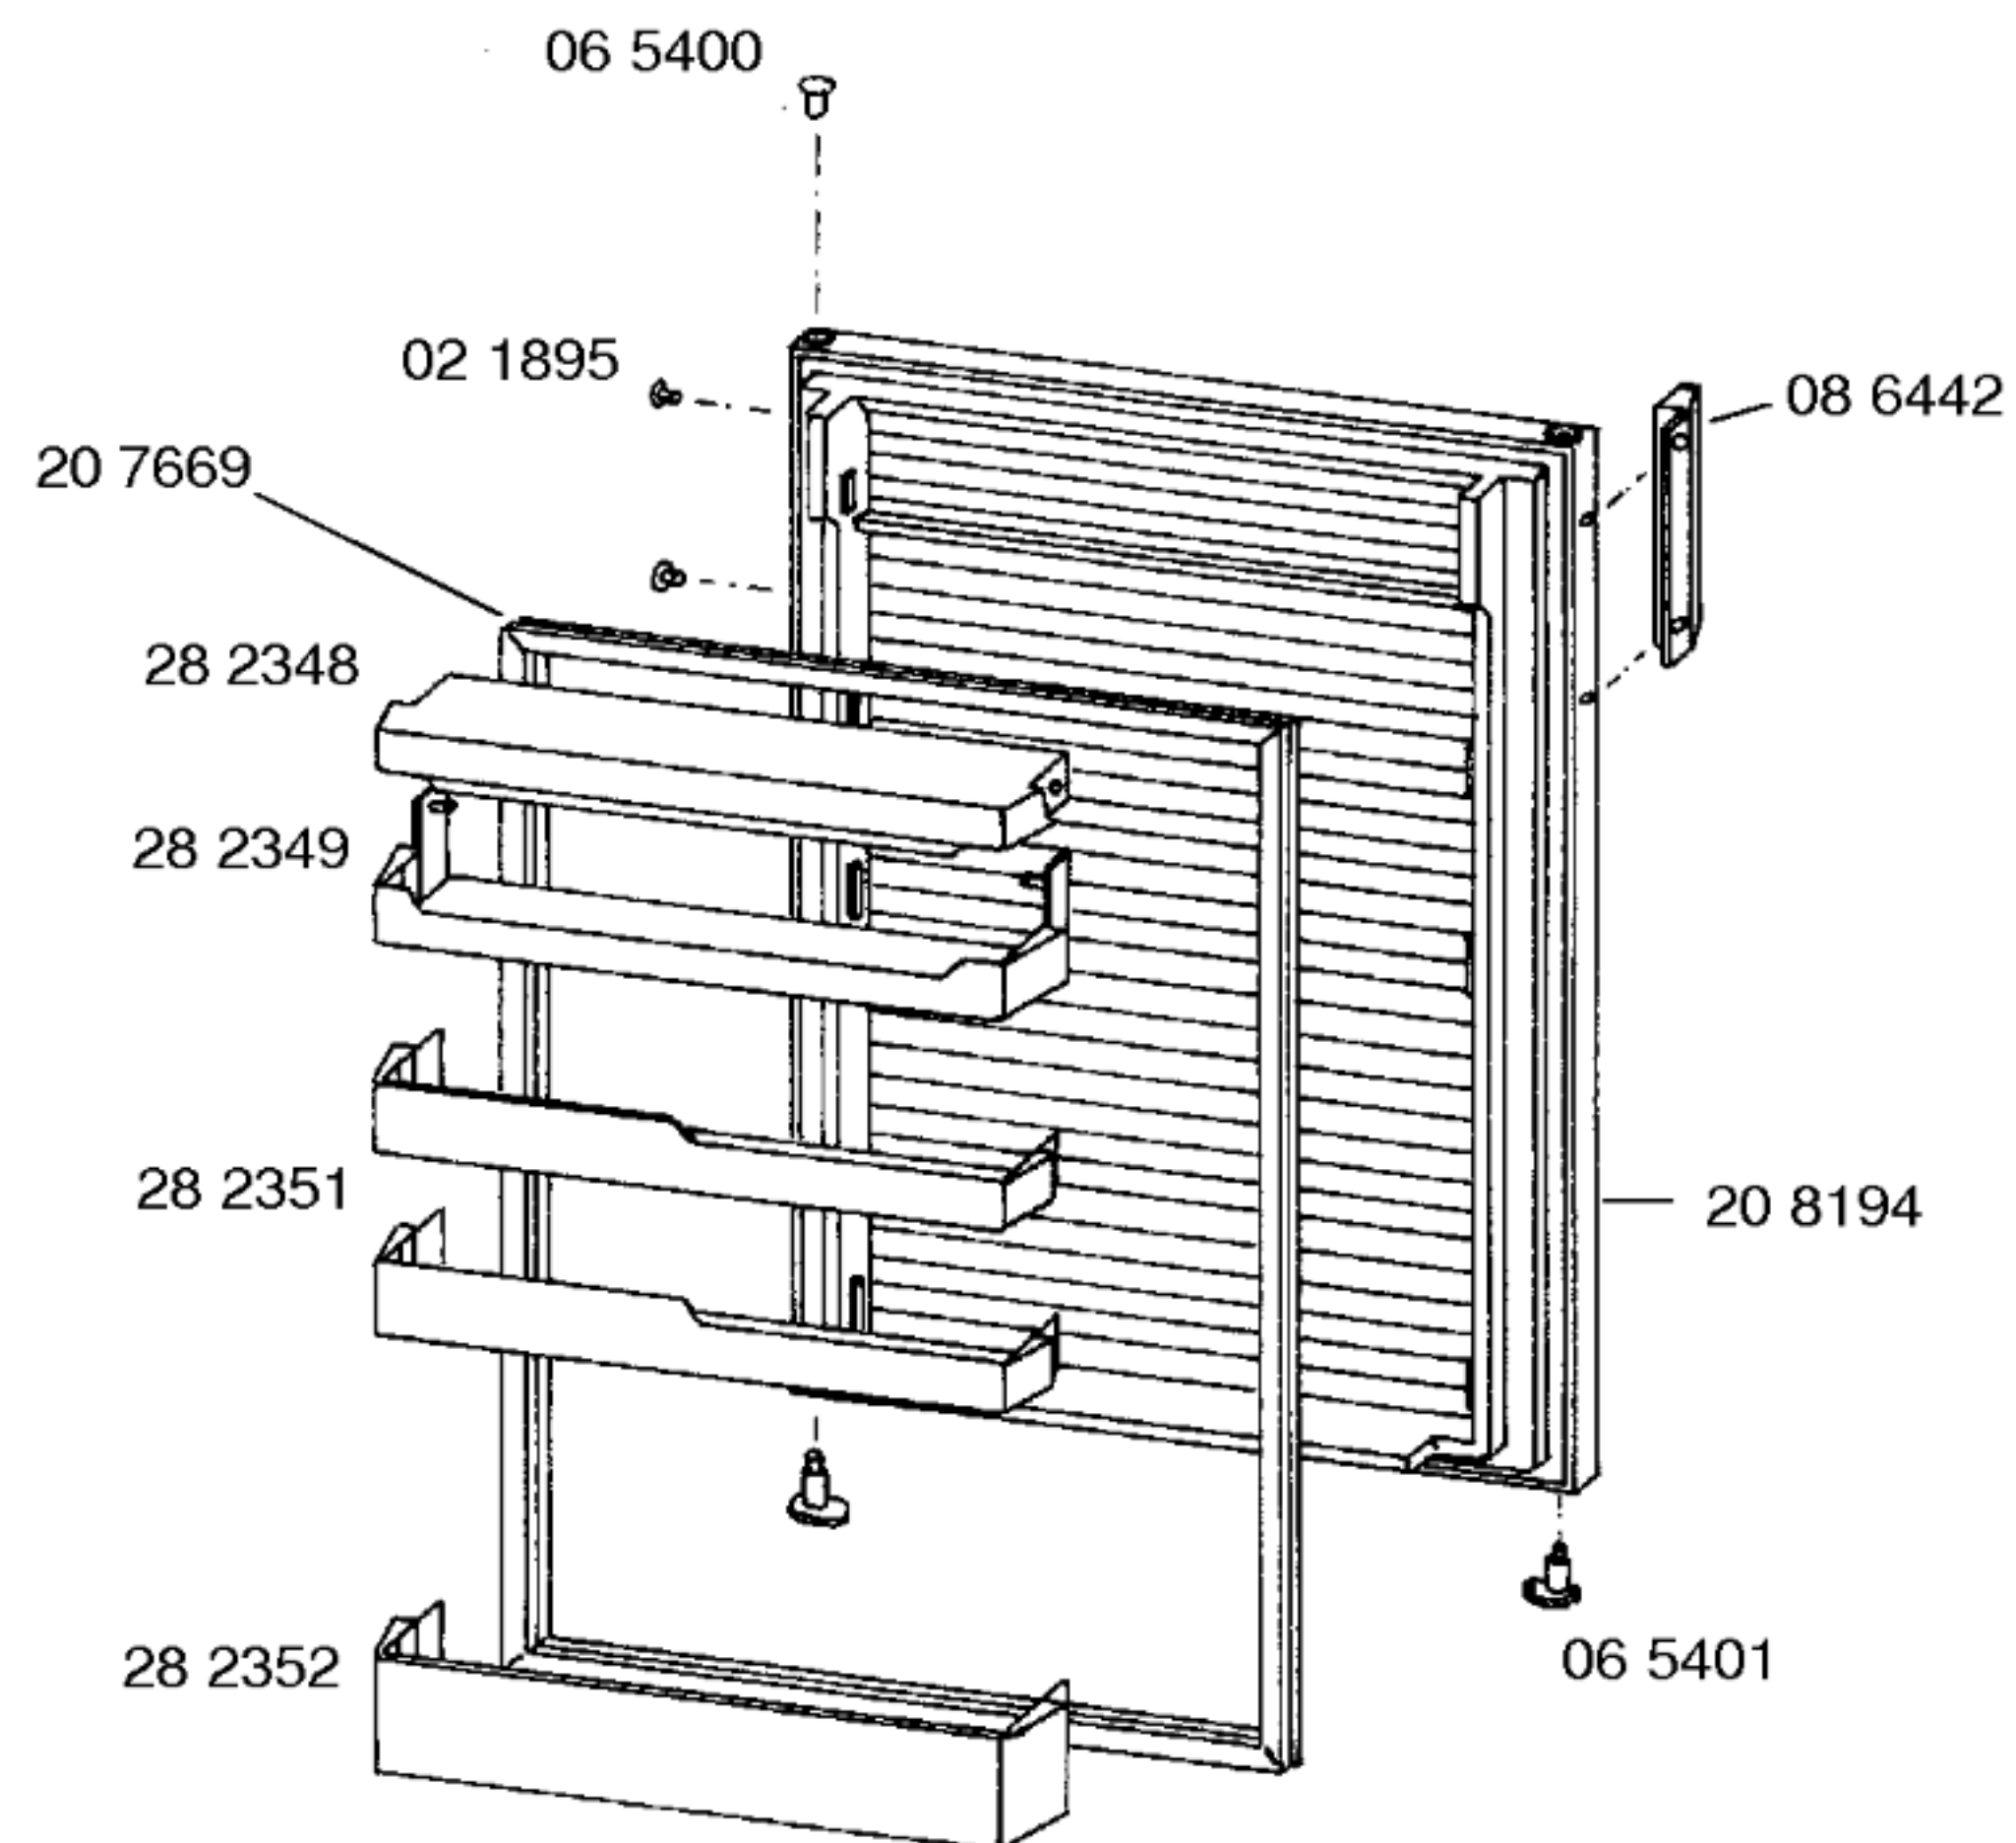

Mat. – Nr. – Konstante
3740

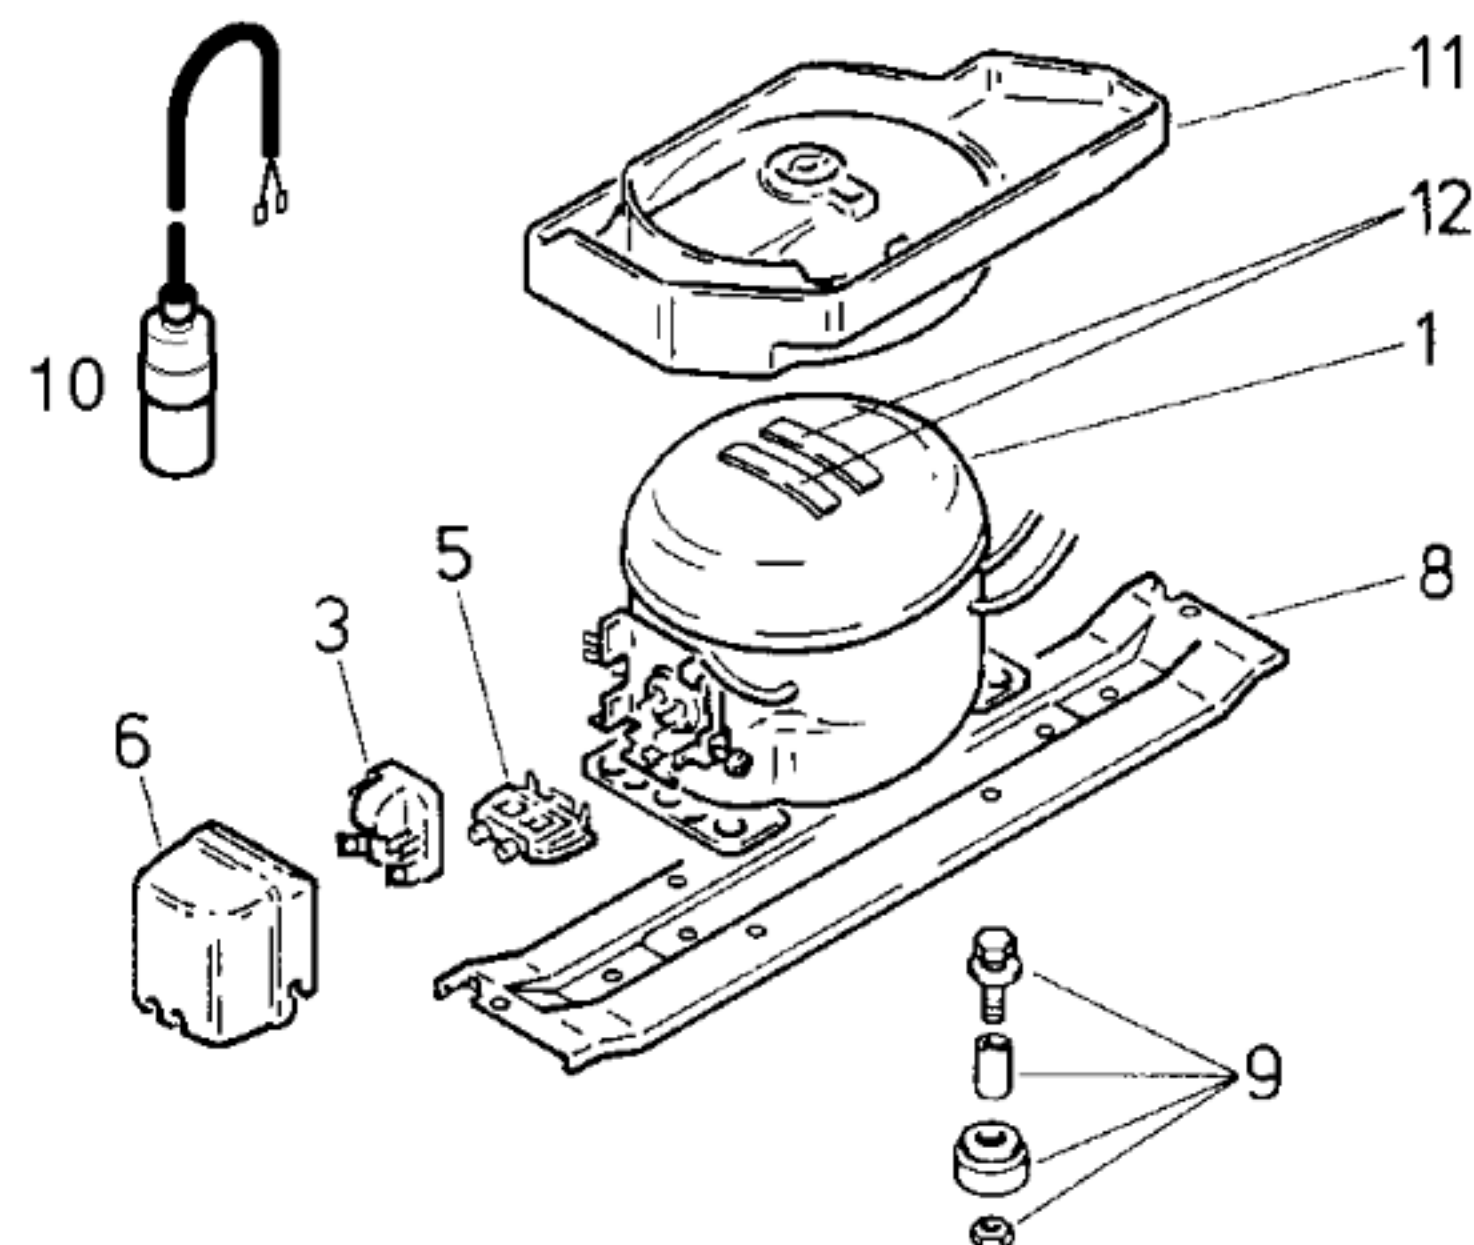

Pos.	Danfoss	Unidad	
1	14 1244	GL35AH	
2		06 5605	
3	15 1055	06 5604	
4		06 5607	
5	15 1053		
6	15 1072	06 5608	
7		06 5609	
8	27 8207		
9	05 0166		
10			
11	08 4744	09 5157	
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur Typ/Type Förderleistung/Delivery/Débit Anlaufstrom/Starting current/Cour de démarrage Widerstand/Resistance/Résistance	i/h A Ω Ω	Danfoss TLES 4 F 615 2,9 25,7 18,9	Unidad GL35AH – – 41,7 69,6	
Temp.-Regler/Thermostat Typ/Type Reglerstellung/Position Schaltwerte/Switching values/ Valeurs de commutation („abtauen“ od.)	°C „ein“ „aus“ „alarm“	WHF TF 57 kalt warm +4 +4 –28,5 –16		
Füllmenge/Fill.quantity/Charge	R134a g	65		
Anschlußwert/Conn.load/Puiss. connectée	W	65		
Heizung/Heater/Chauffage Widerstand/Resistance/Résistance Leistung/Power/Puissance	Ω W			
Ventilator/Blower/Ventilateur Widerstand/Resistance/Résistance	Ω			
Schaltuhr/Timer/Minuterie de contact Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne Widerstand/Resistance/Résistance Spannung/Voltage/Tension	Ω V			