



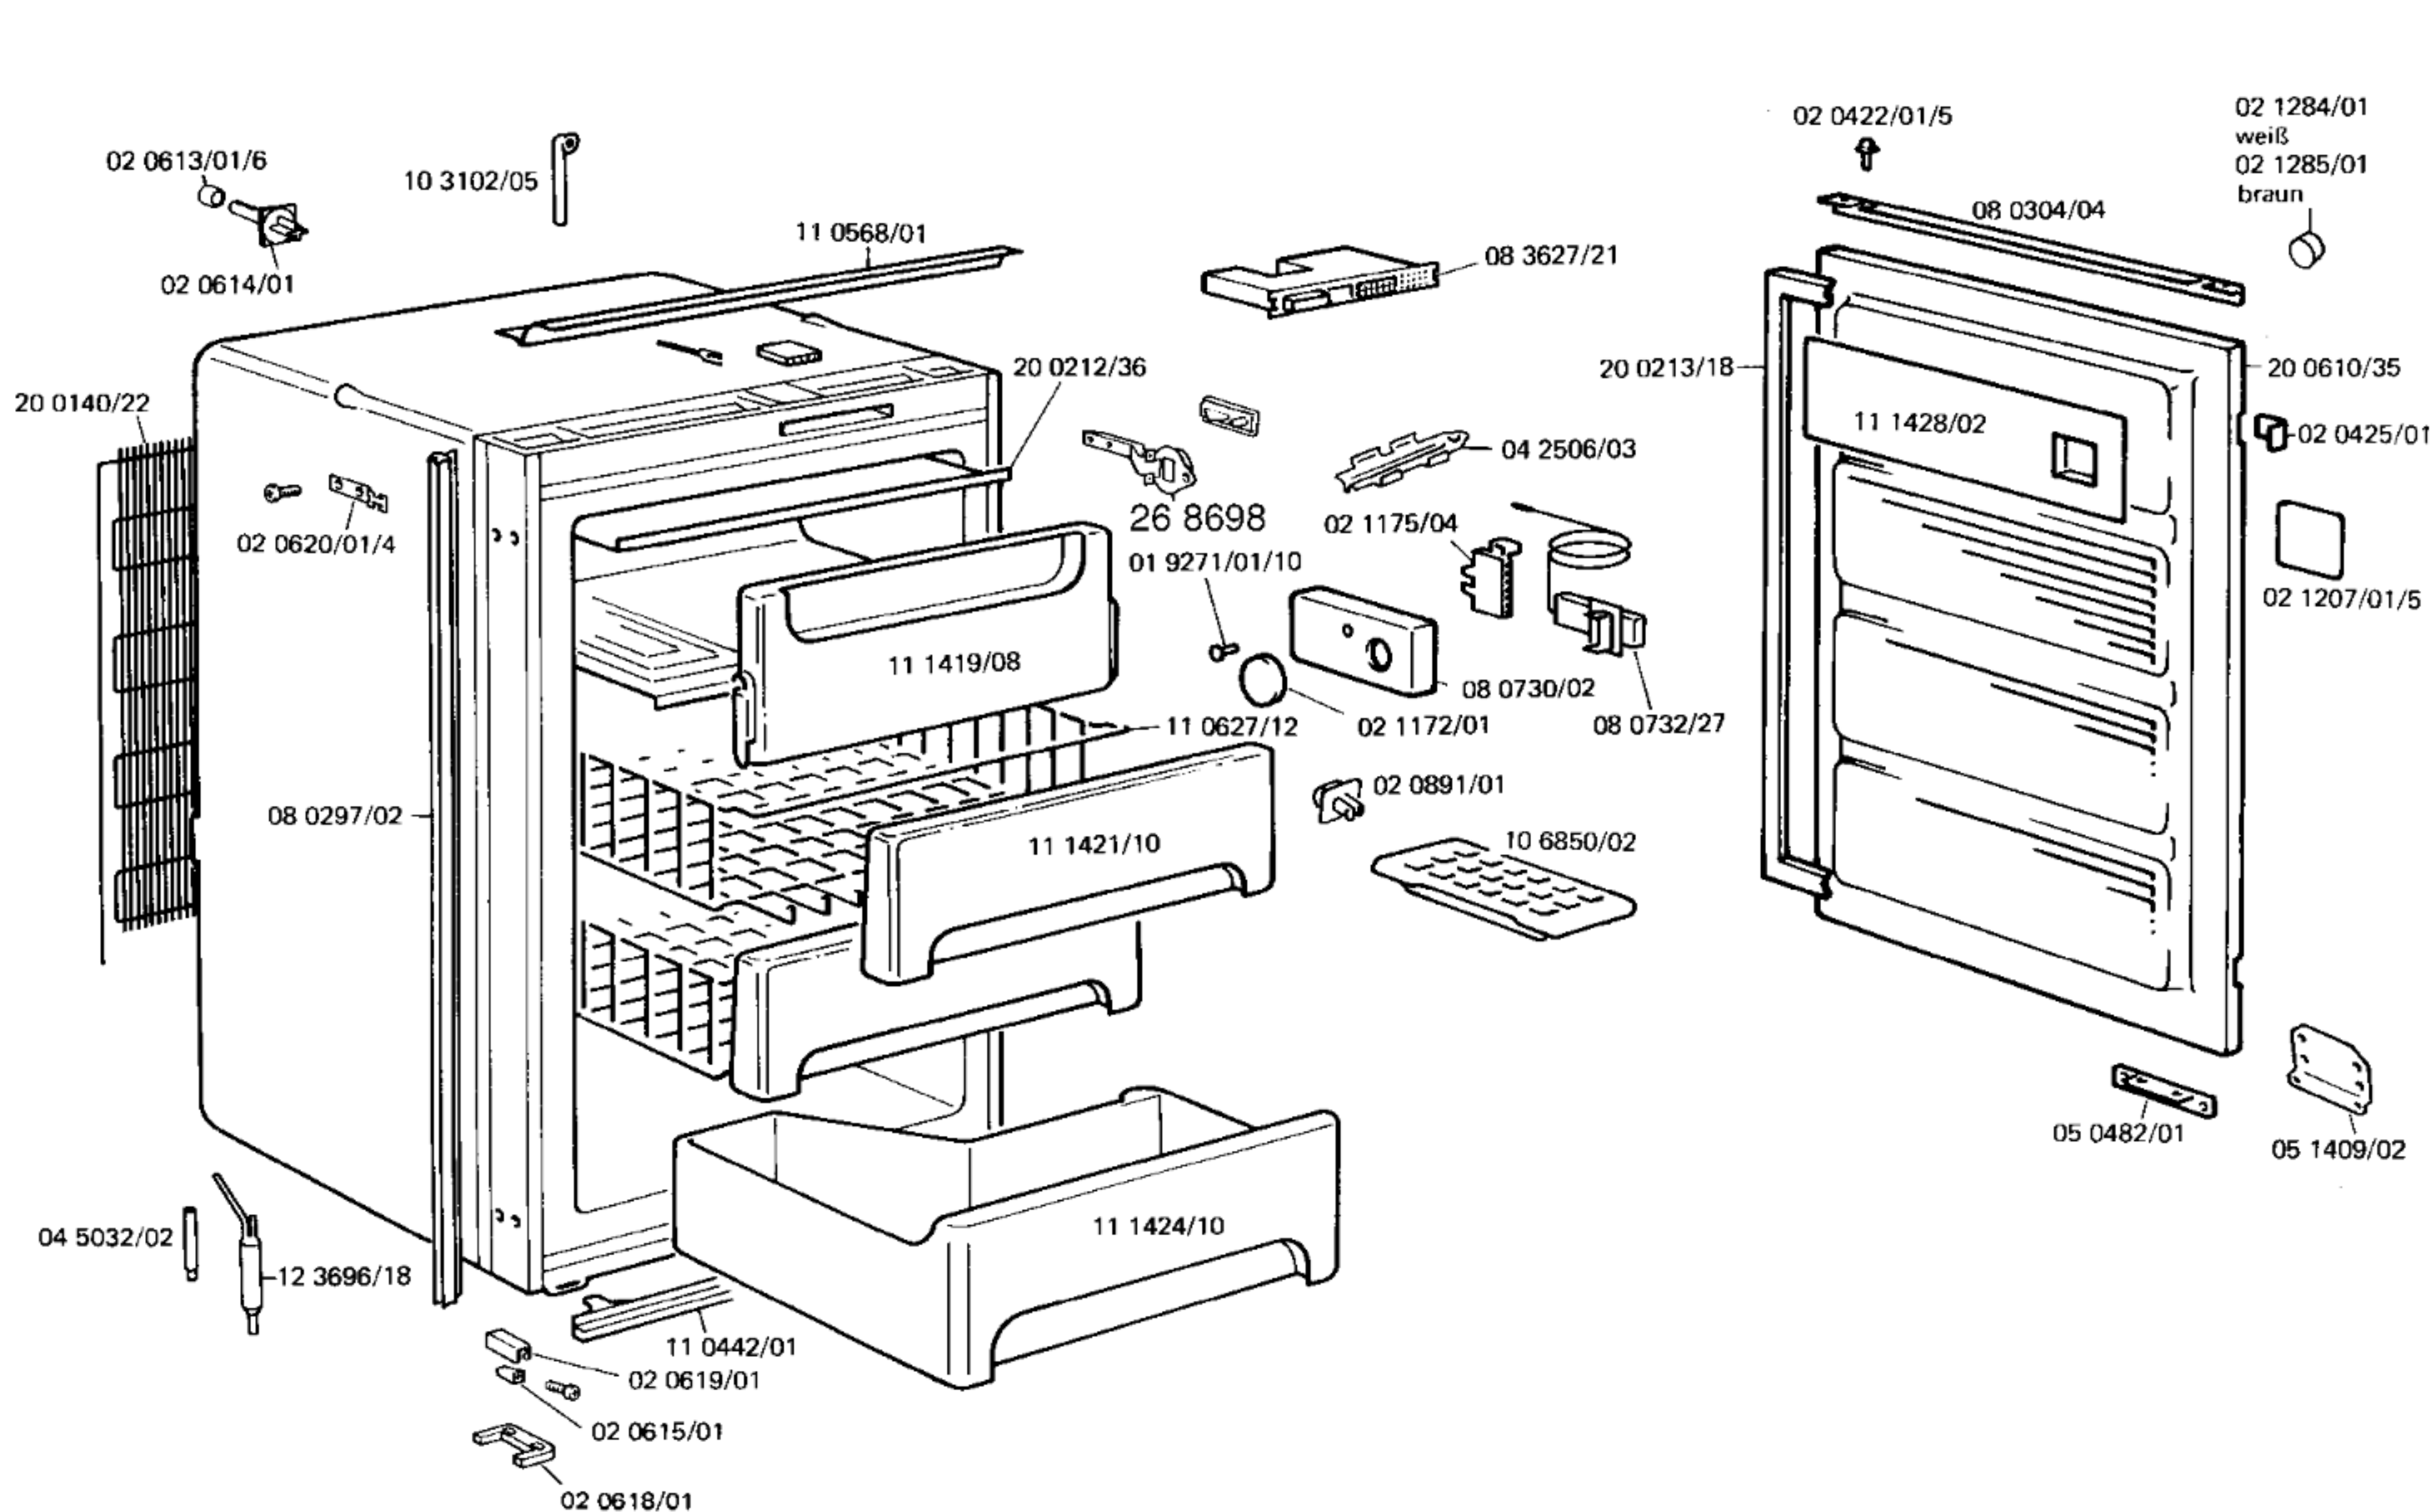

51 0384/00
D1
Montage-Anleitung
(D,GB,F,I,NL,DK,N,S,SF,E)
51 0768/00
D1
Gebrauchsanweisung
(D,GB,F,I,NL,DK,N)

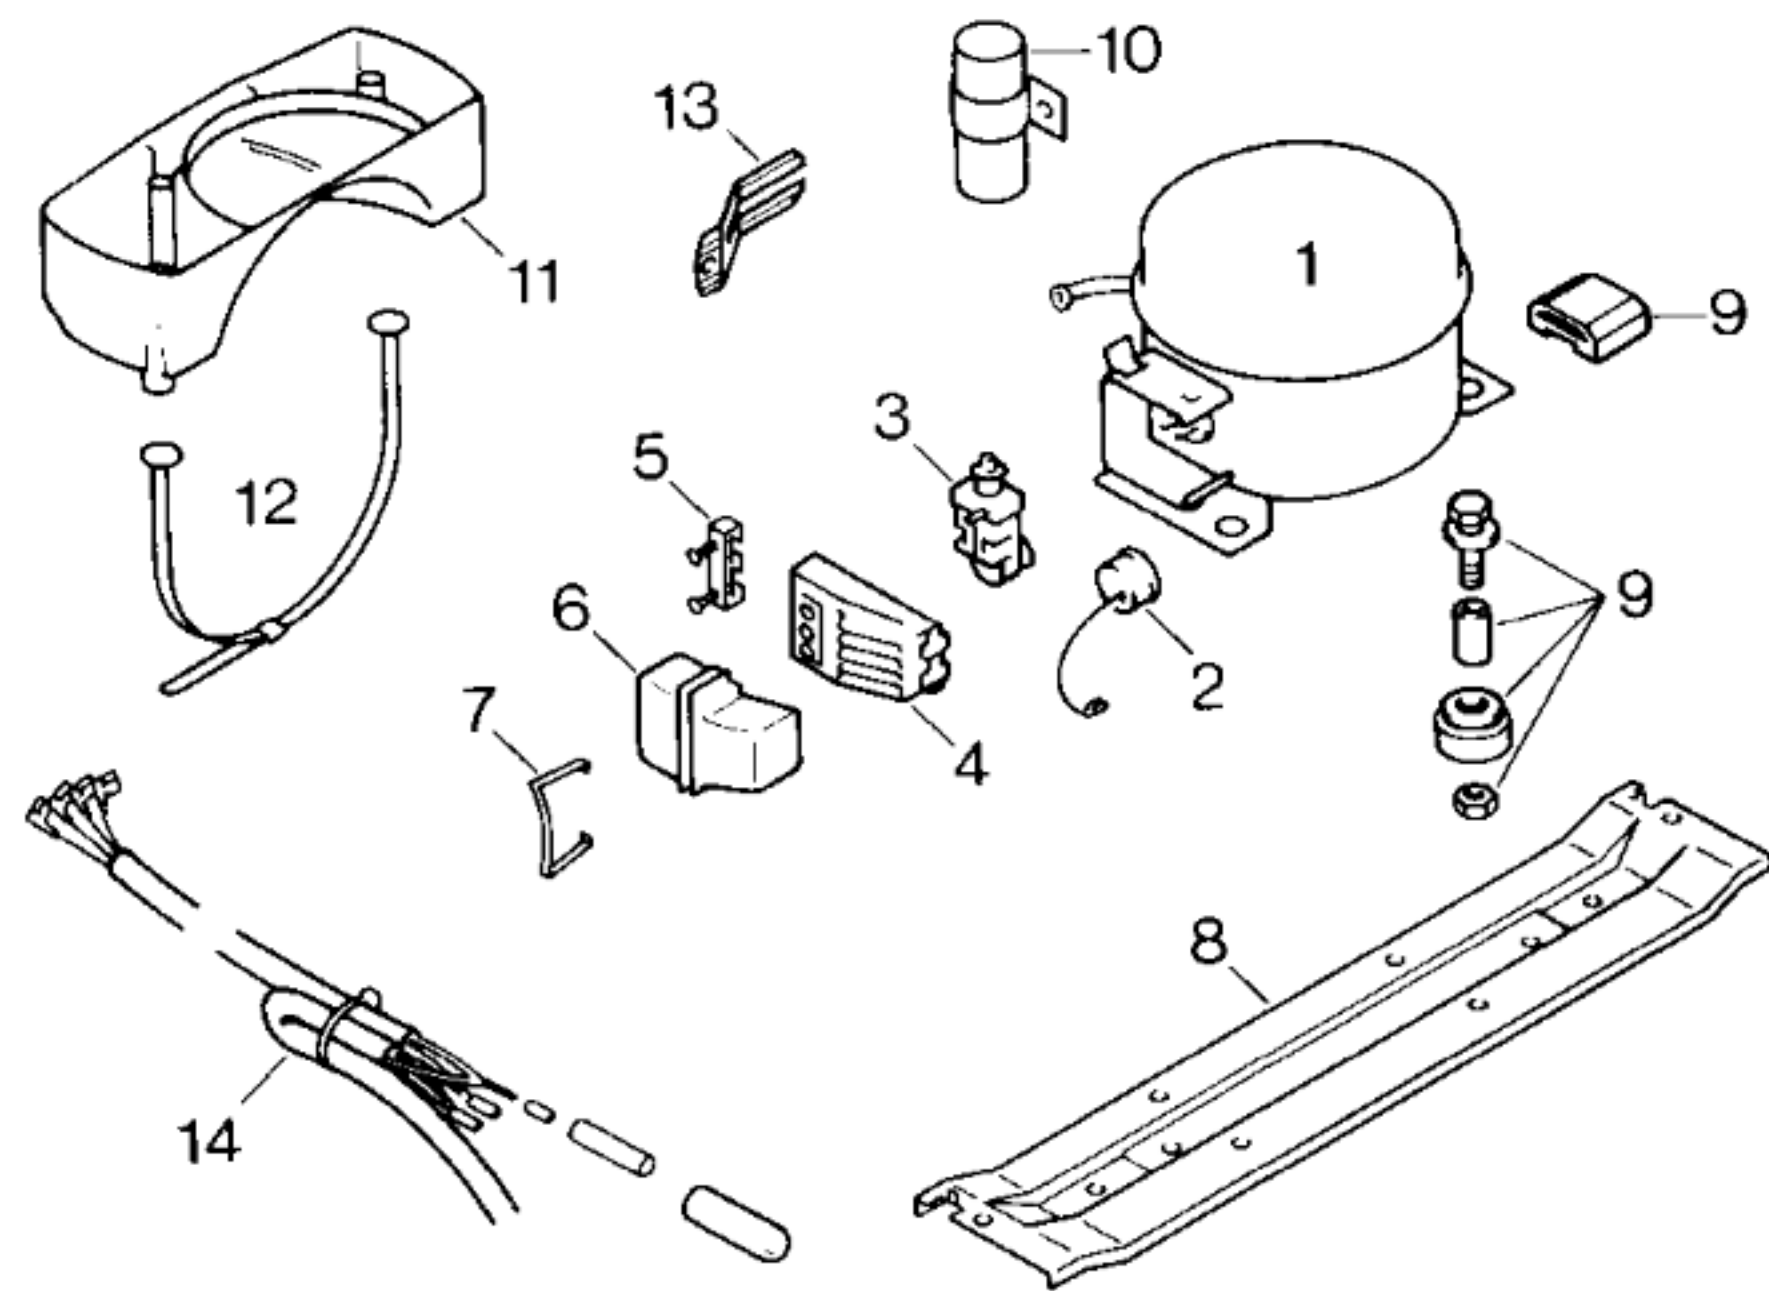

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur					
Typ/Type					
Förderleistung/Delivery/Débit	I/h				
Anlaufstrom/Starting current/Cour. de démarrage	A				
Widerstand/Resistance/Résistance	Ha/main/prin. Ω				
	Hi/aux Ω				
Temp.-Regler/Thermostat					
Typ/Type					
Reglerstellung/Position					
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$				
Valeurs de commutation	„aus“				
(„abtauen“ od.)	„alarm“				
Füllmenge/Fill.quantity/Charge	R12	g	90		
Anschlußwert/Conn.load/Puiss. connectée		W	120		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance	Ω				
Leistung/Power/Puissance	W				
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance	Ω				
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance	Ω				
Spannung/Voltage/Tension	V				

Pos.	D1			
	Danfoss			
1	14 0065/45			
2				
3	02 0108/27			
4				
5				
6	05 1413/05			
7				
8	11 0437/04			
9	05 0166/05			
10				
11				
12				
13				
14				