

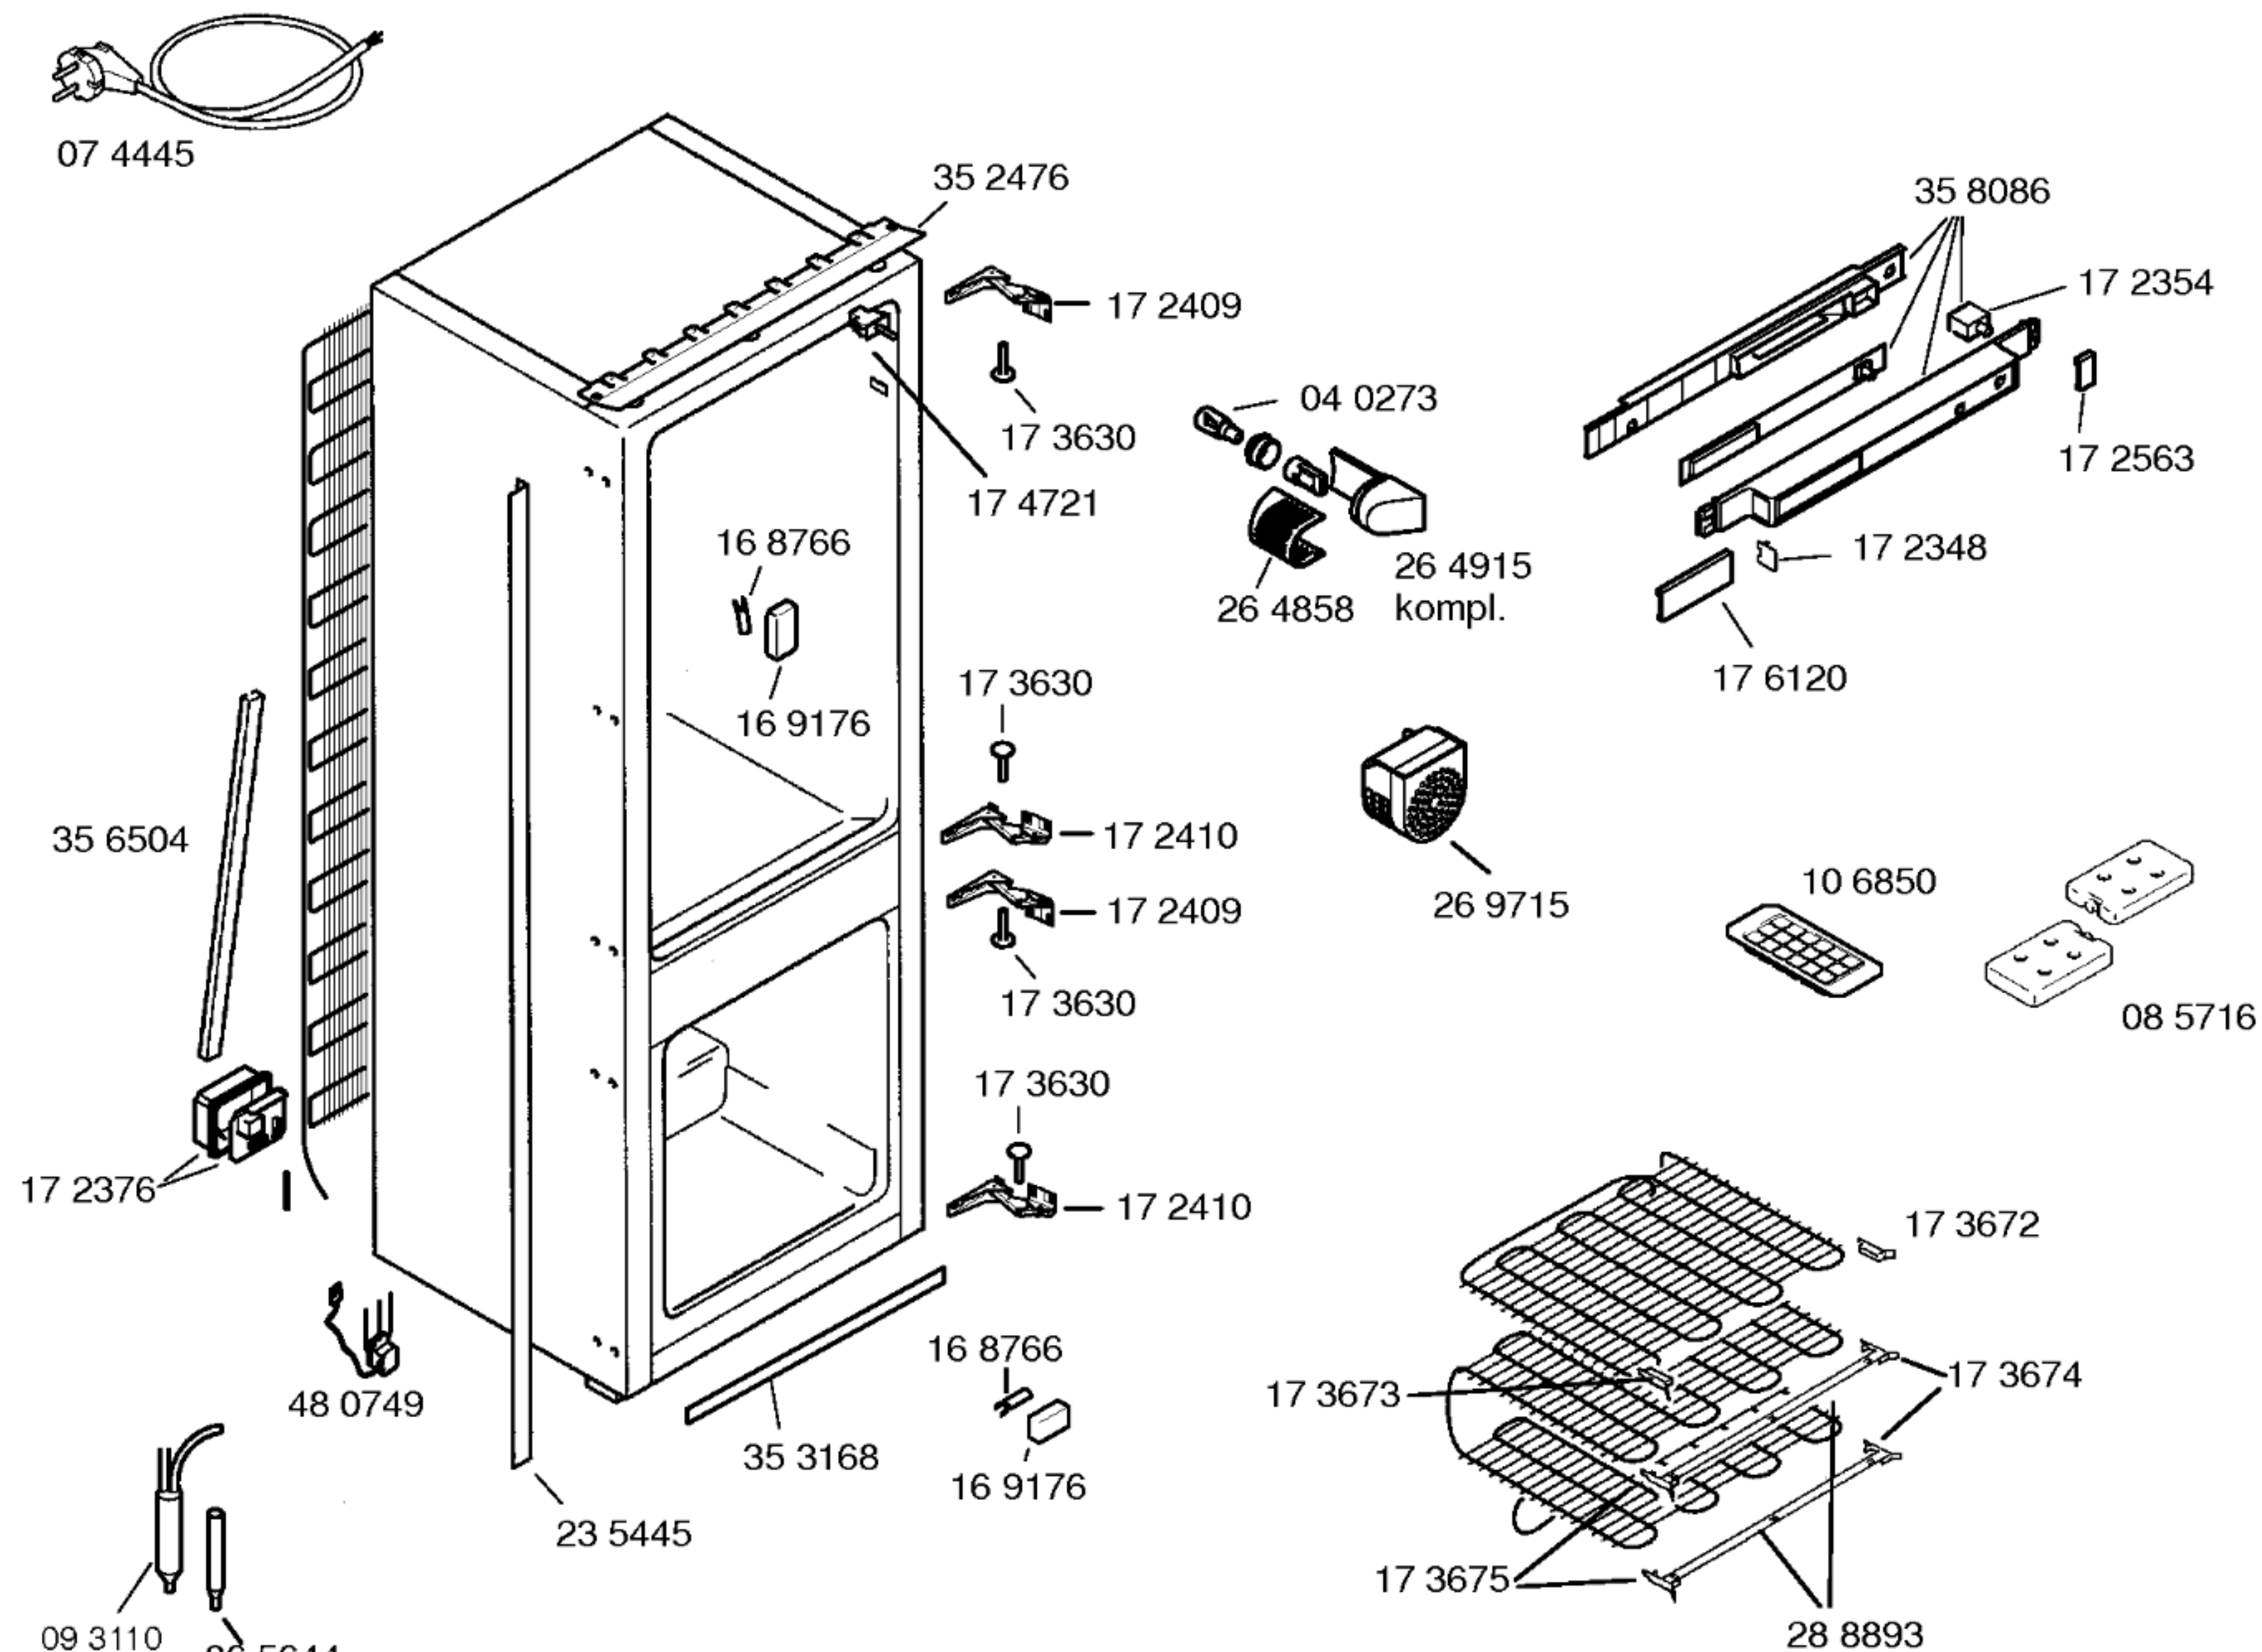
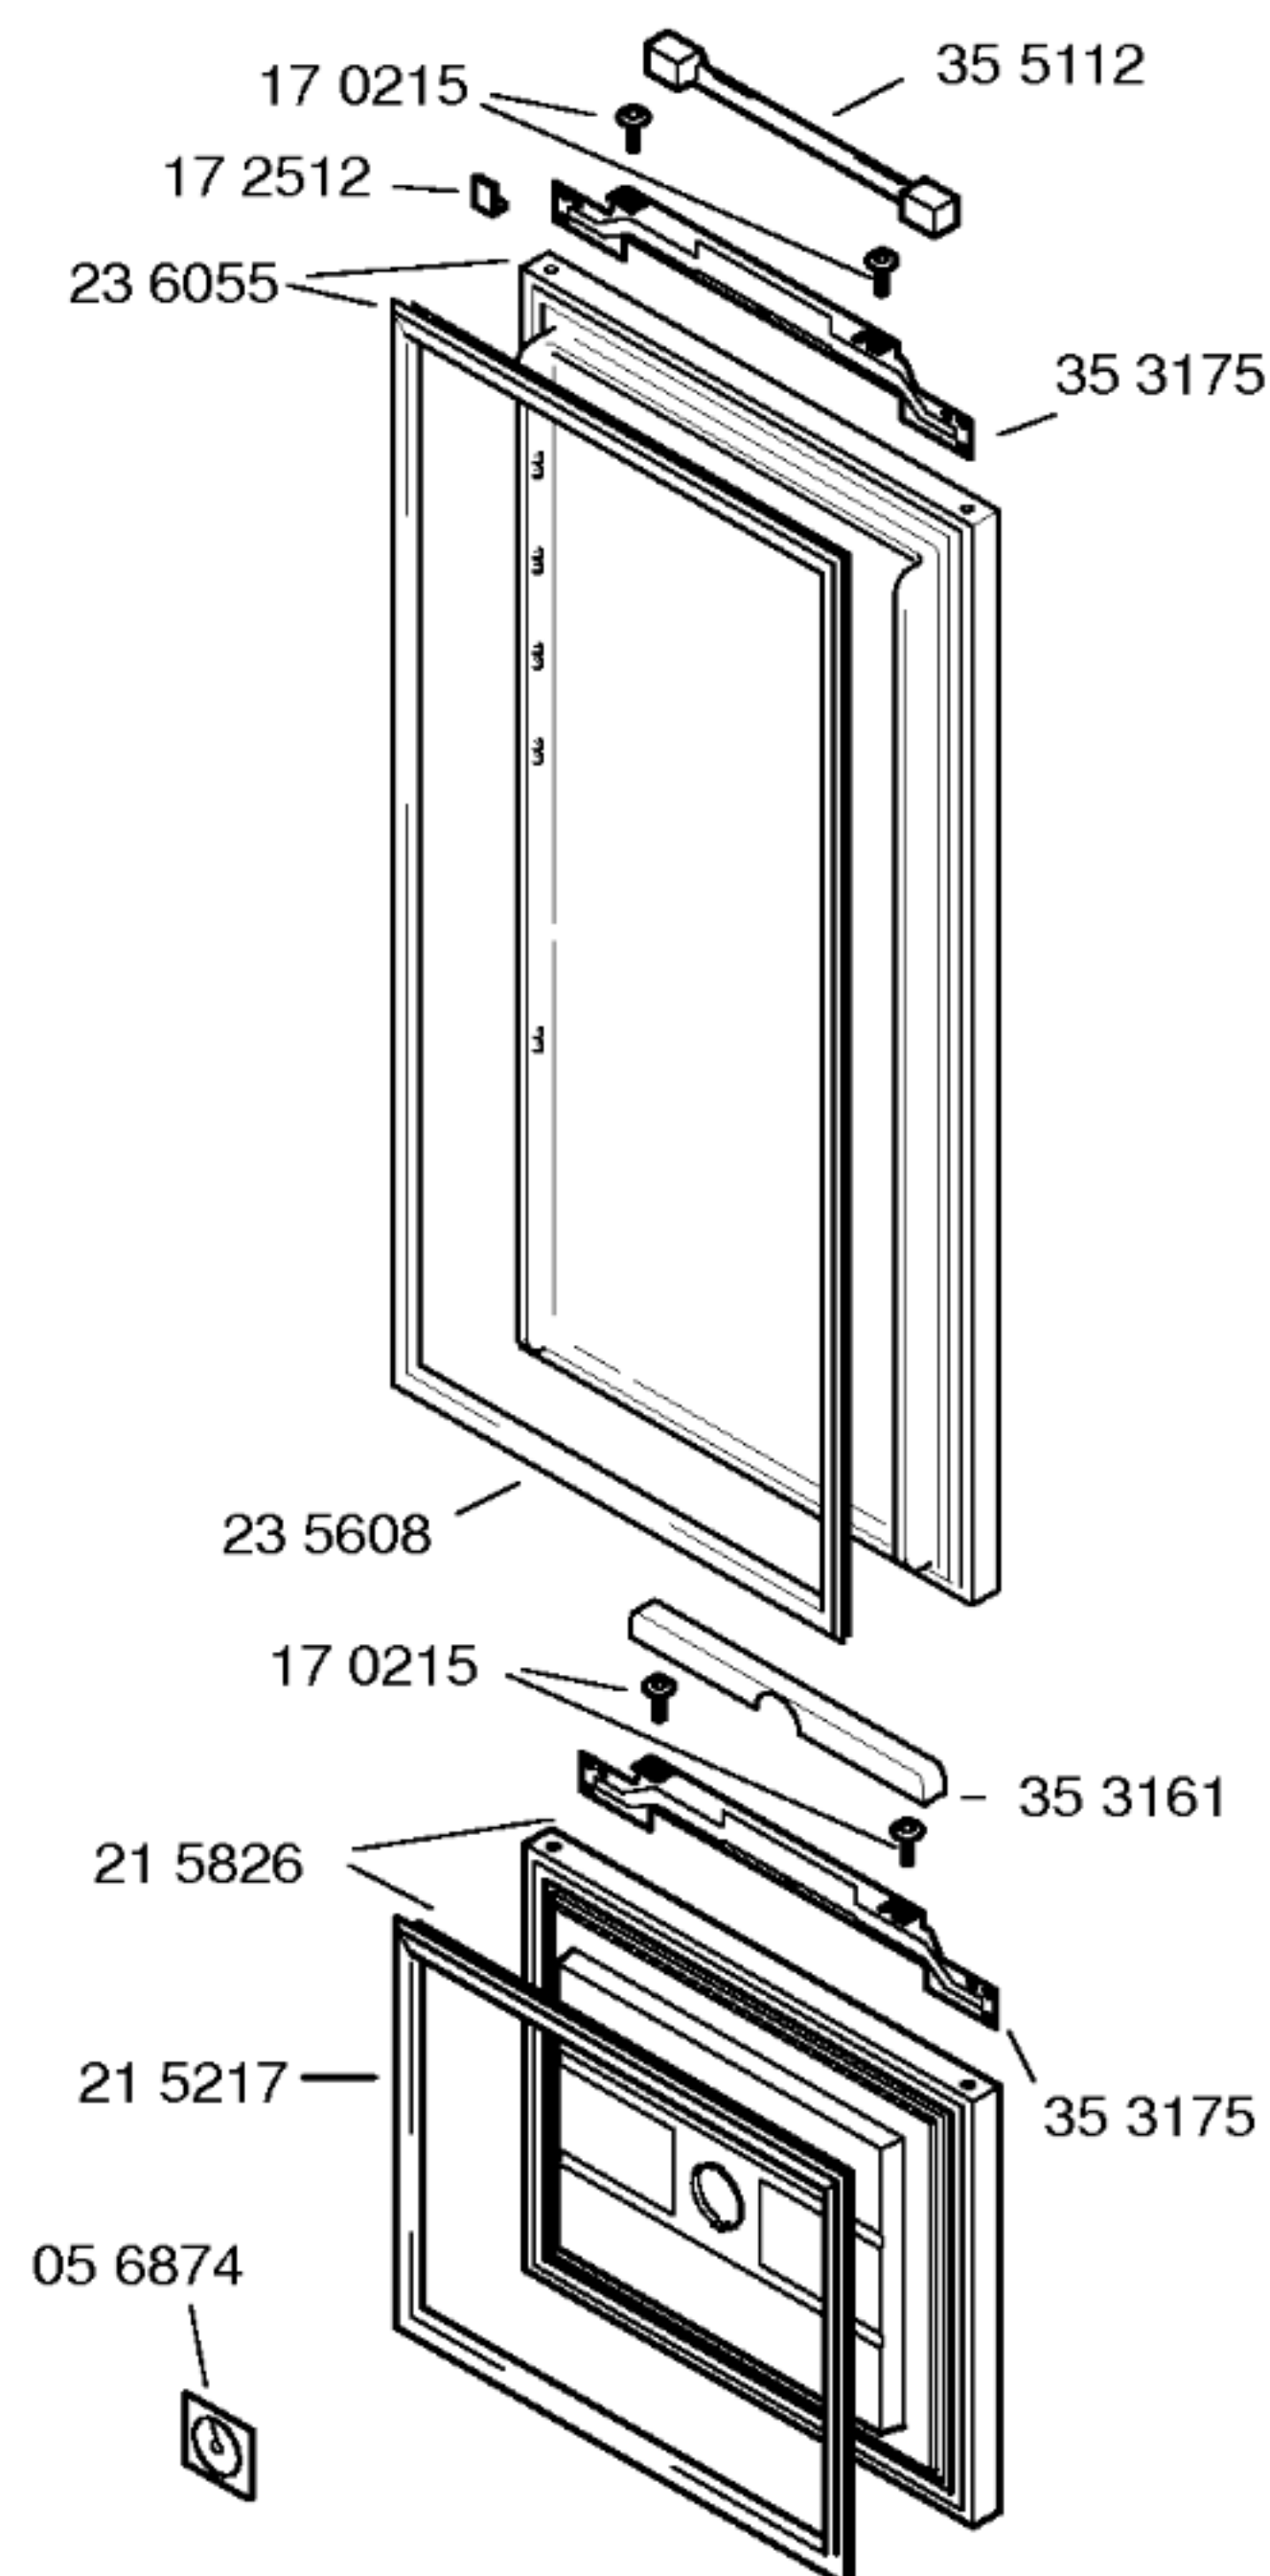
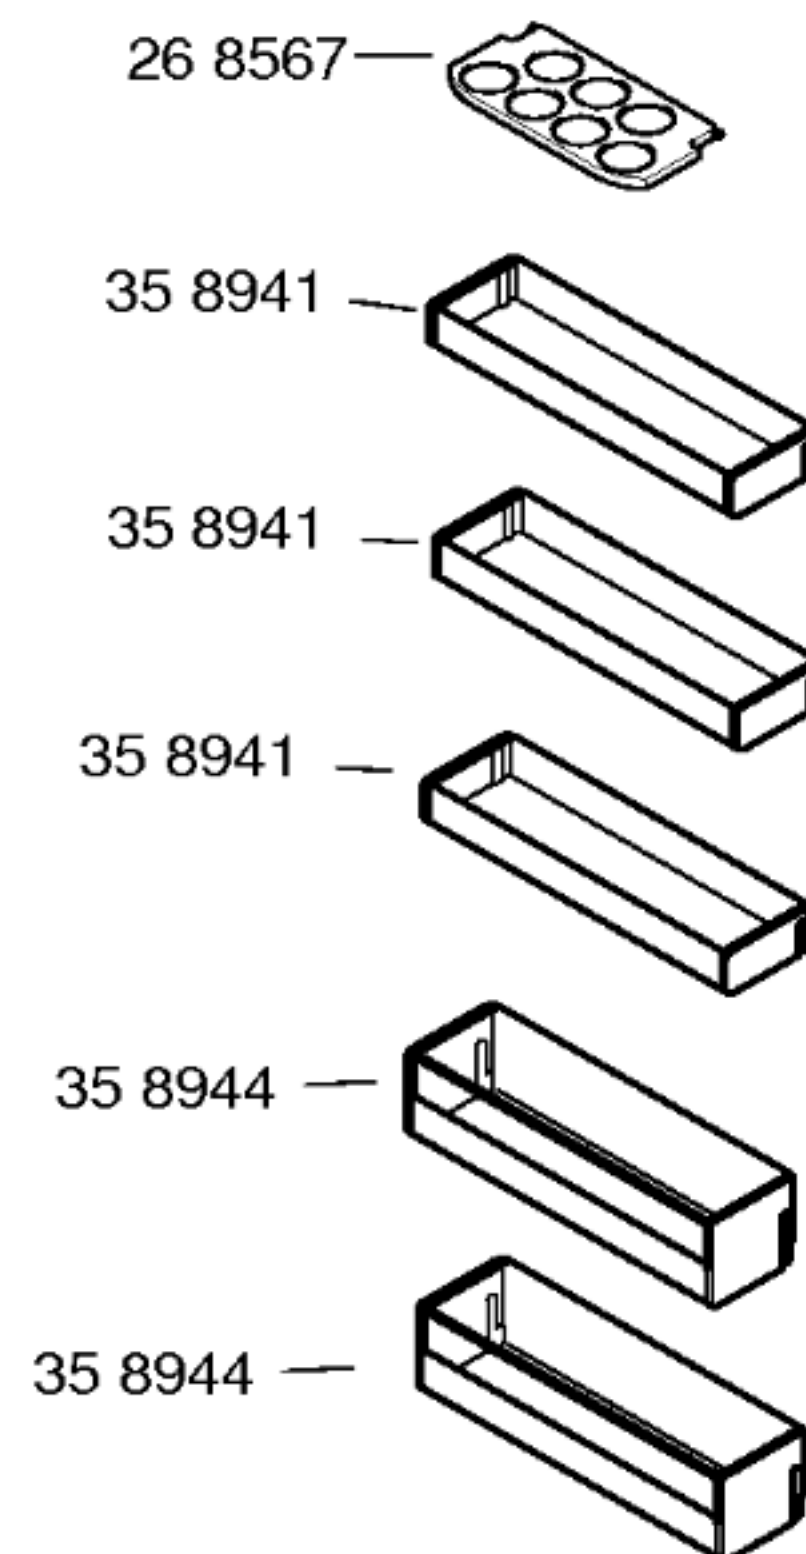


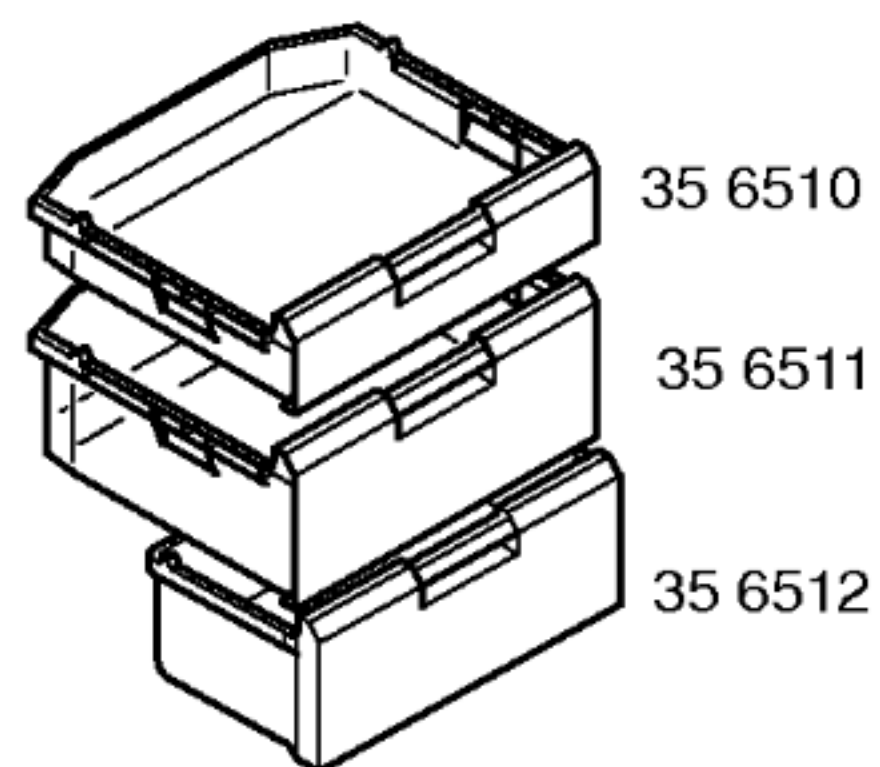


Gebrauchsanweisung
52 6300
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,S,E,DK,N,,SF)

Befestigungssatz
26 6910

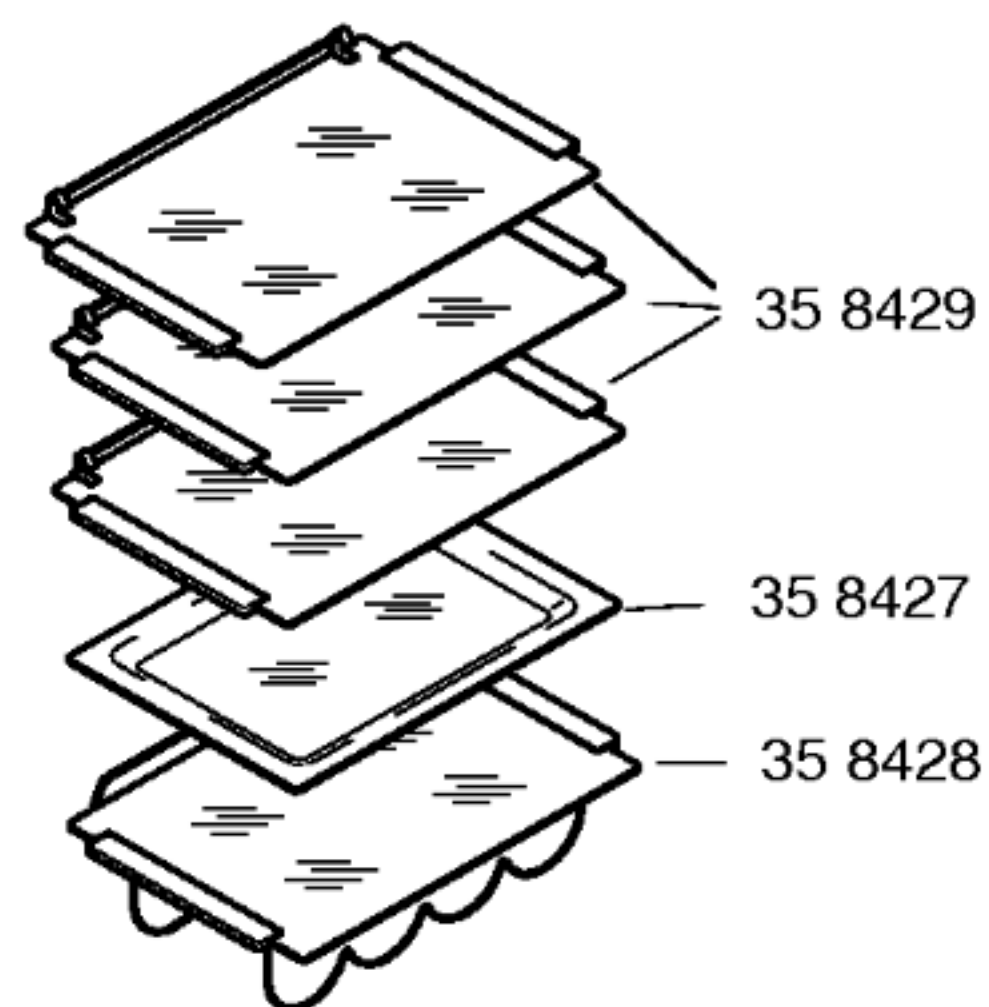

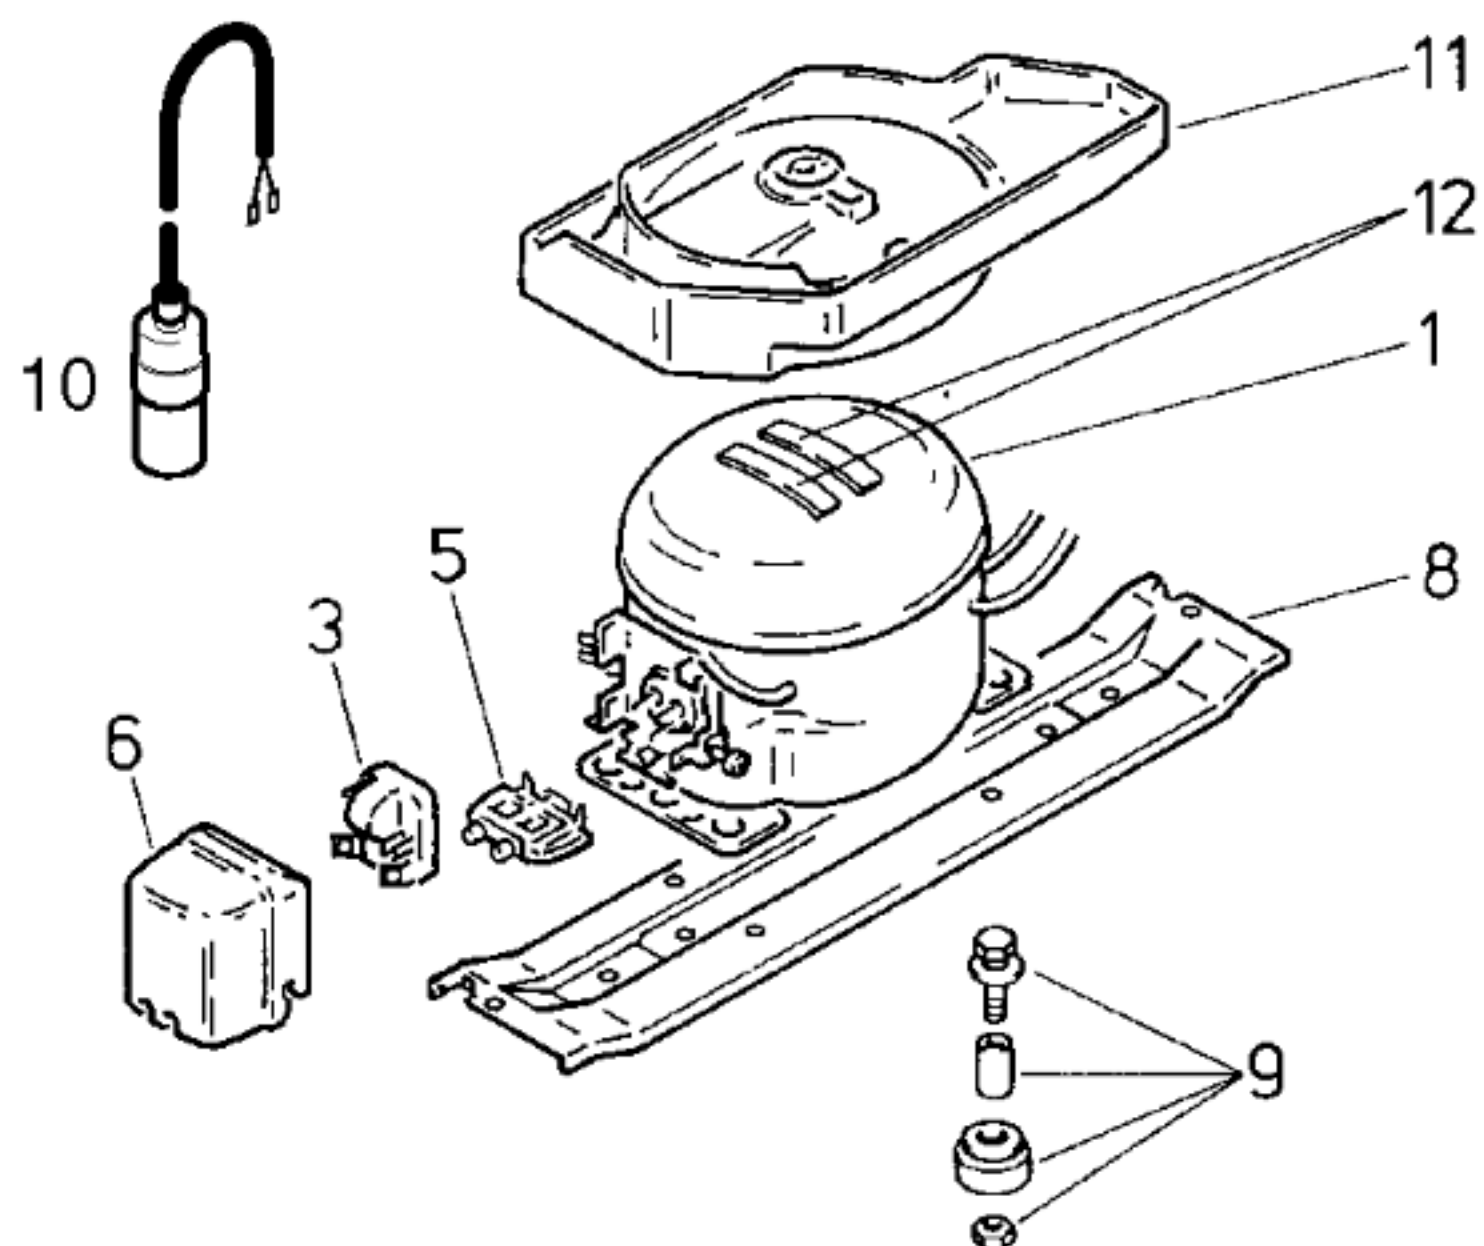

Pos.	V01	V02, V04, V06	V03, V05
	Matsushita	Danfoss	Matsushita
	DC110 E	NL9FT	DC110 E
1	14 1946	14 1782	14 2130
2			
3	17 2671	151055	17 2671
4			
5	16 2549	15 0760	16 2549
6	16 6782	15 1072	16 6782
7			
8	28 1825	35 5493	28 1825
9	05 0166	05 0166	05 0166
10	15 2222		15 2222
11	26 6624	26 8513	26 6624
12	05 6008	05 6008	05 6008

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita	Danfoss	
Typ/Type		DC110E	NL9FT	
Förderleistung/Delivery/Débit		l/h	1954	1503
Anlaufstrom/Starting current/Cour de démarrage		A	8,6	12,8
Widerstand/Resistance/Résistance Ha/main/prin		Ω	14,2	8,9
Hi/aux		Ω	12,8	12,8
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values "warm"				
Valeurs de commutation "kalt"				
Füllmenge/Fill.quantity/Charge R600a				
Anschlußwert/Conn.load/Puiss. connectée W				
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance Ω				
Leistung/Power/Puissance W				
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance Ω				
NTC-Fühler / Sensor				
		°C	kΩ	°C
		+10	9,95 ± 0,18	-18
		+5	12,70 ± 0,18	-22
		0	16,33 ± 0,16	-26
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance Ω				
Spannung/Voltage/Tension V				