



Ident-Nummern-Konstante
3740

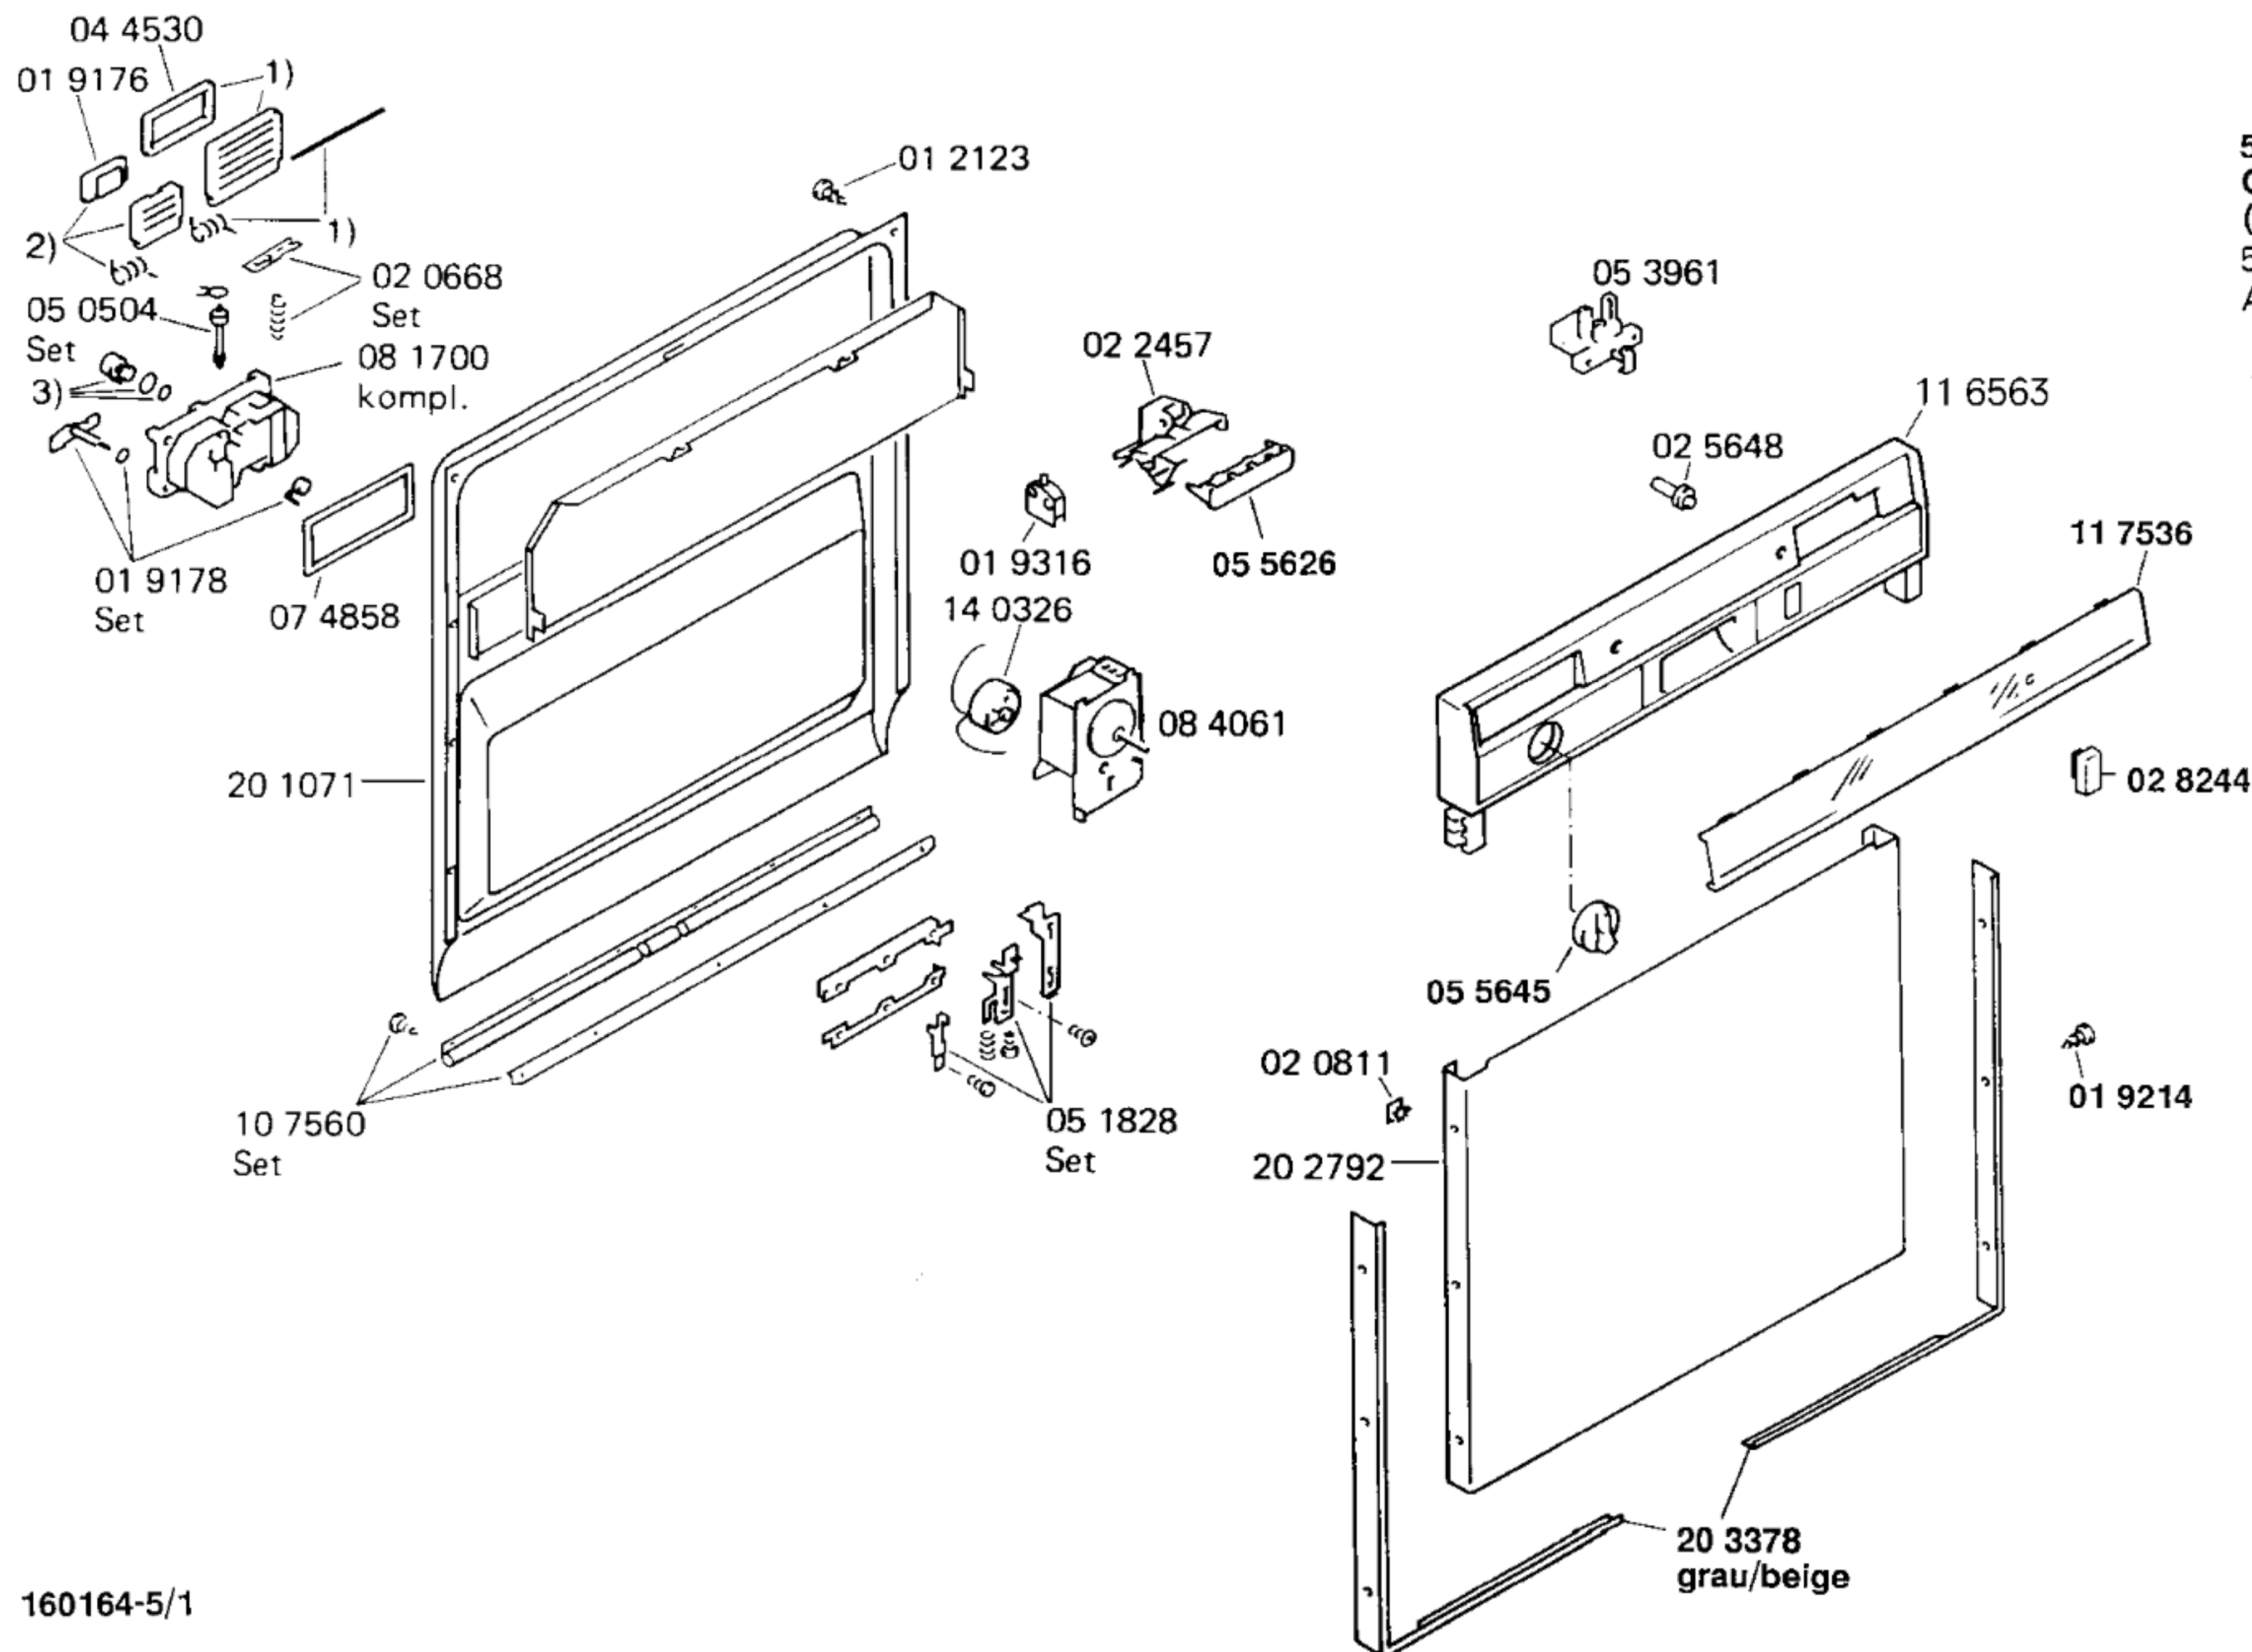

51 2832
Gebrauchsanweisung
(DK)
51 2277
Aufstellanleitung

- 1) 04 2085 Set
- 2) 04 2105 Set
- 3) 01 9177 Set


Ident-Nummern-Konstante
3740

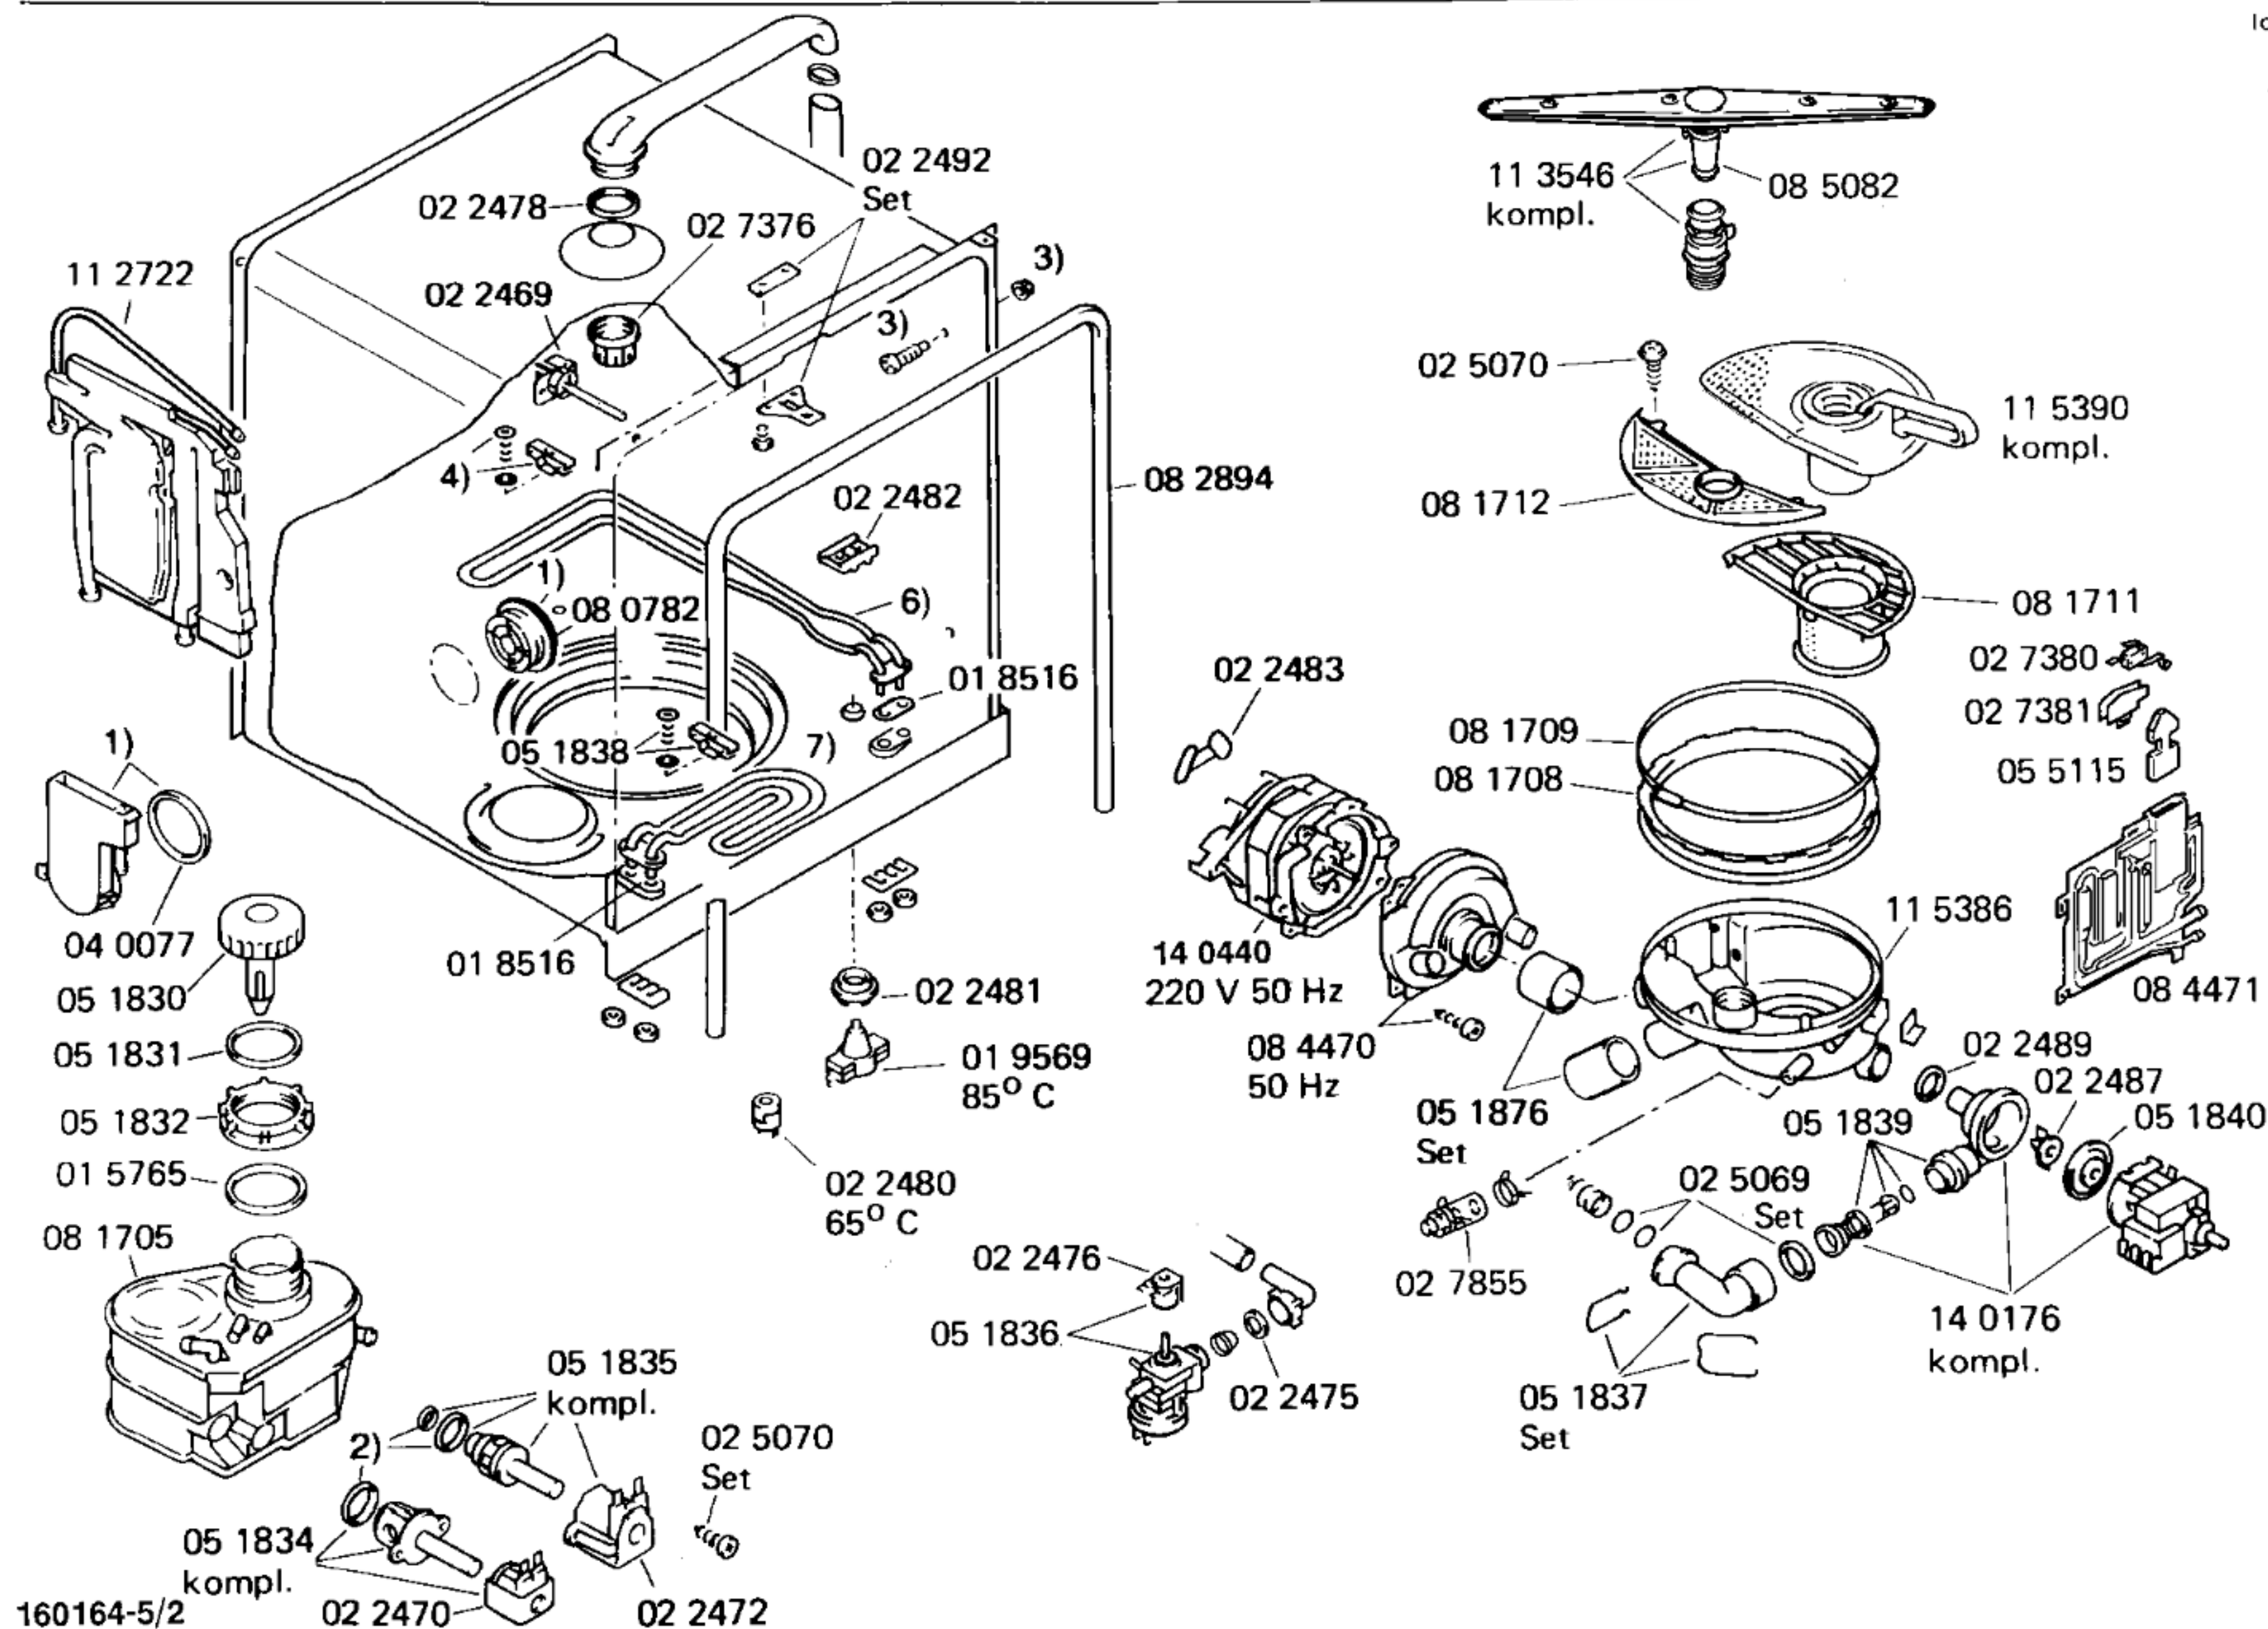

- 1) 08 0781
Set
- 2) 02 5067
Set
- 3) 01 9204
Set
- 4) 05 1838
- 6) 20 2292
1700 W
- 7) 08 3501
1300 W


**BOSCH**

S210 - SMS 2100H - 0 730 103 573-DK1

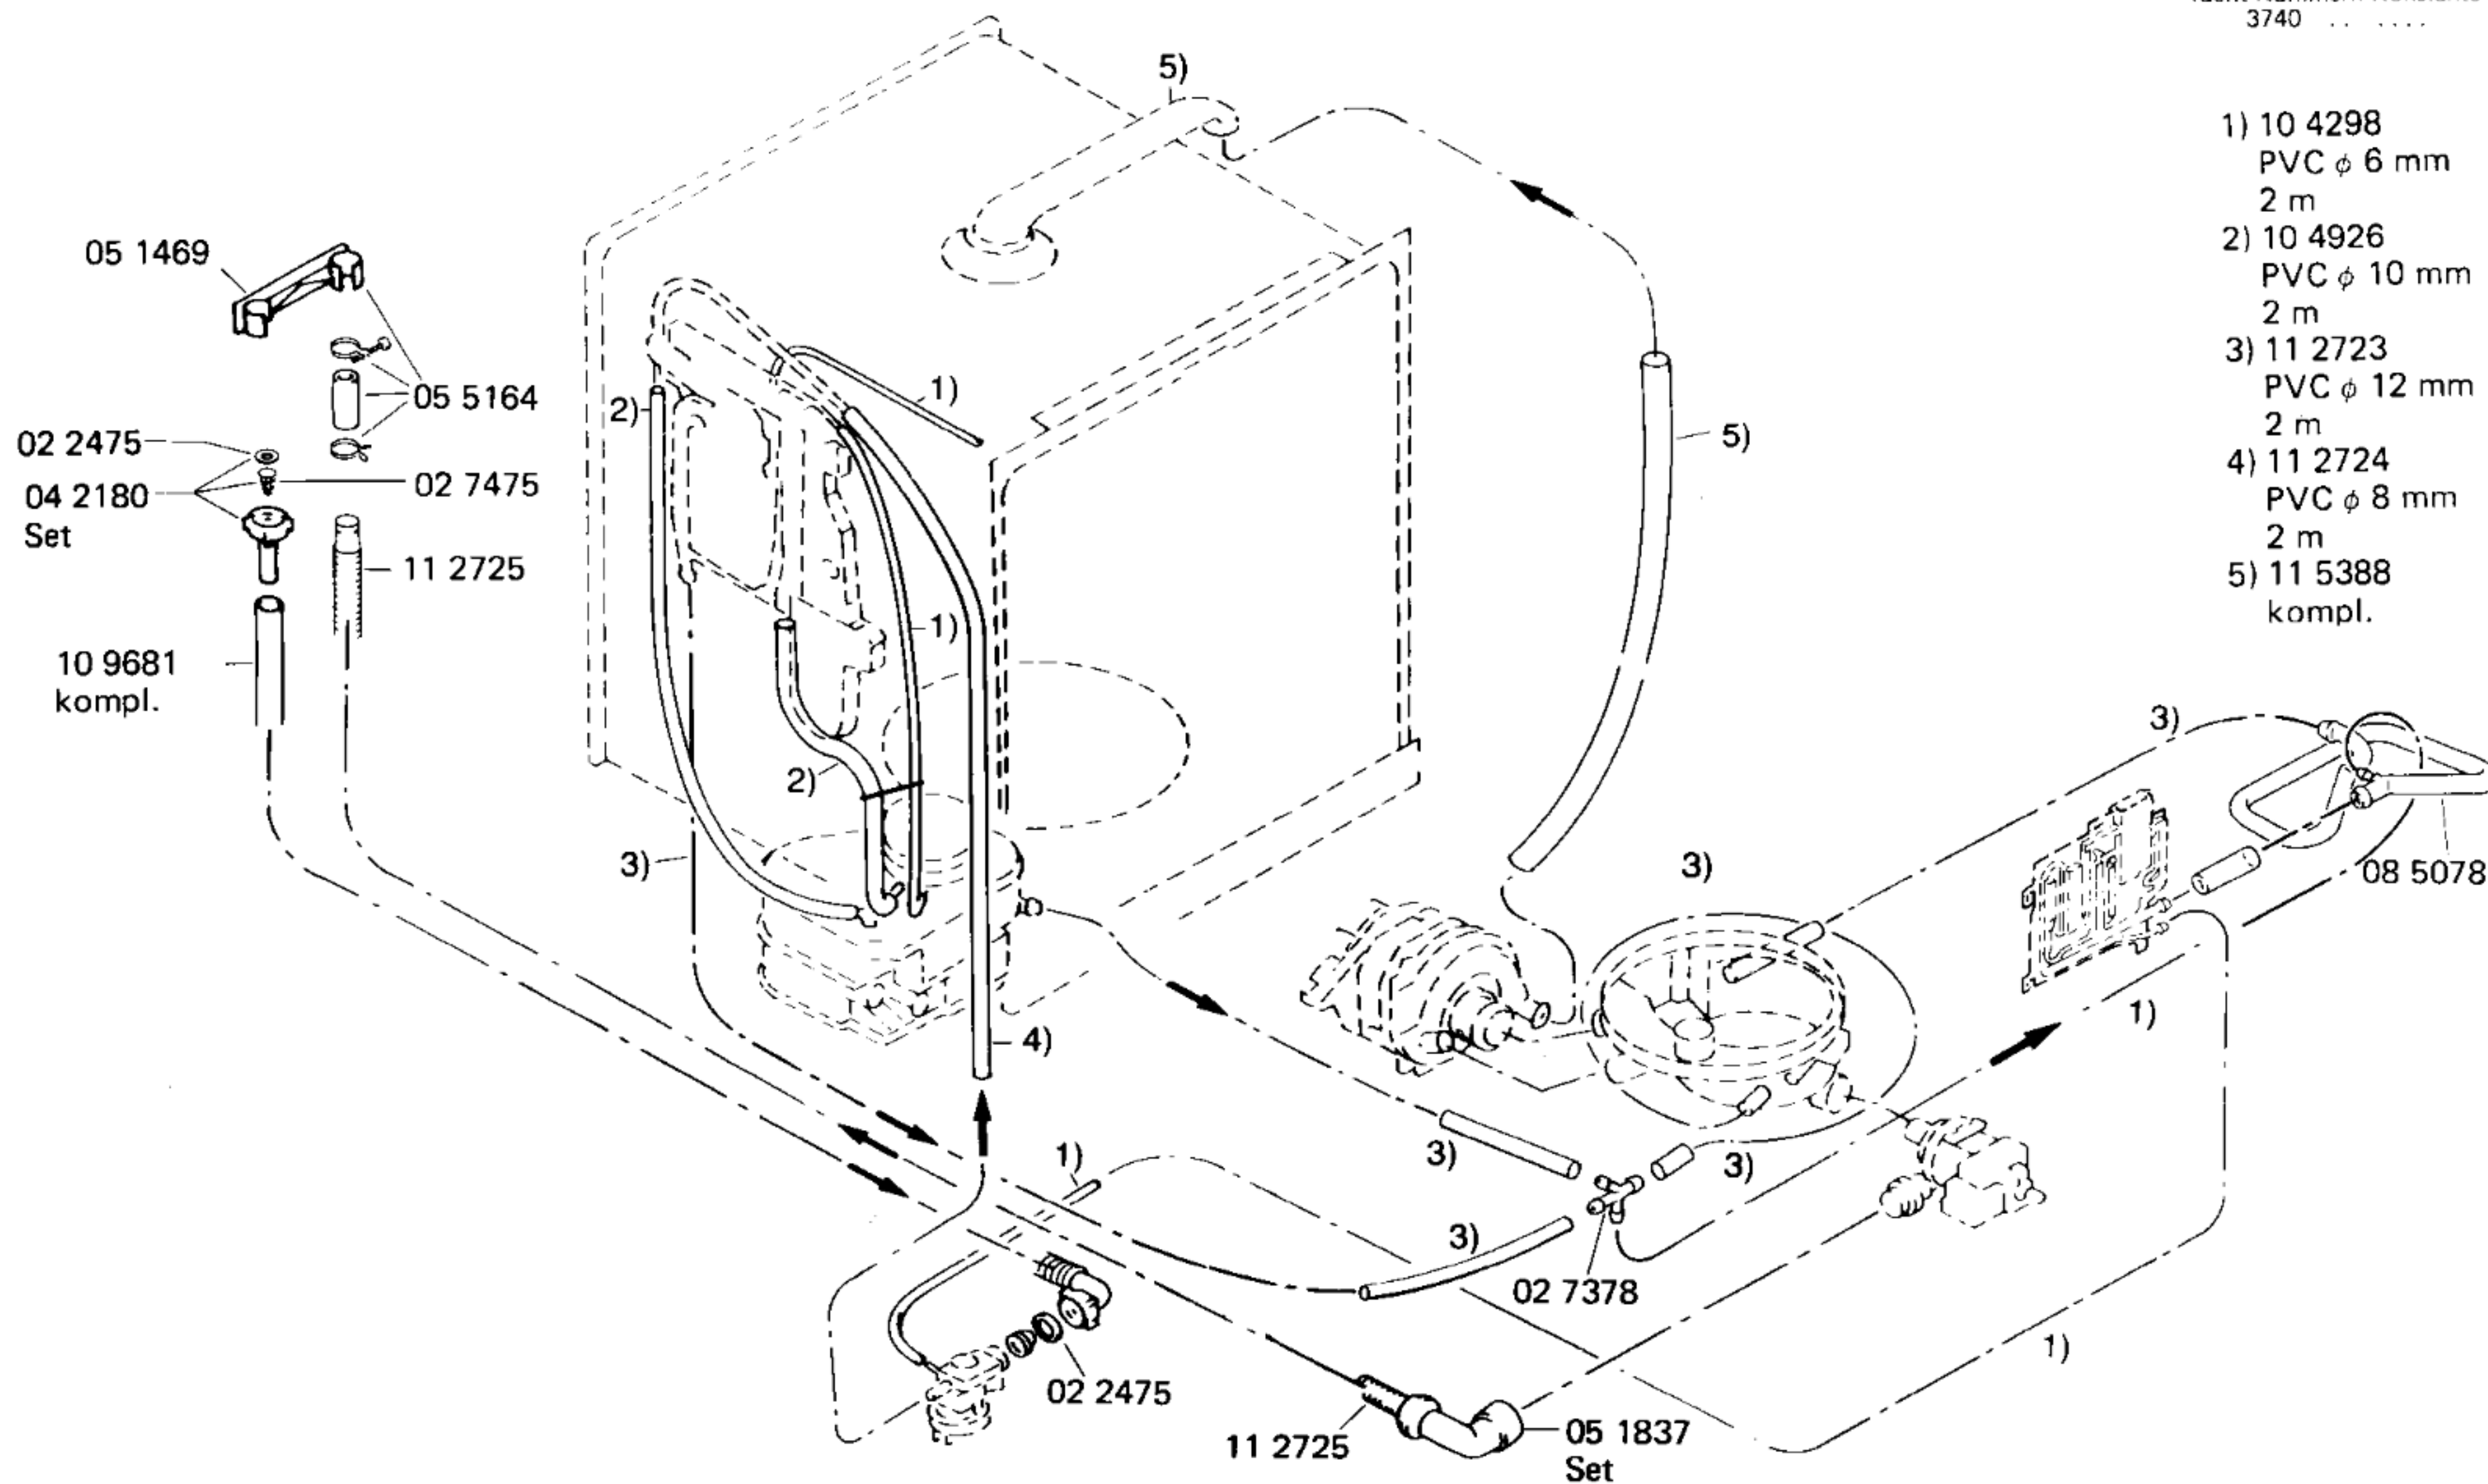GESCHIRRSPÜLGERÄTE
StandgeräteIdent.-Nummern-Konstante
3740

**BOSCH**

S210 - SMS 2100H - 0 730 103 573-DK1

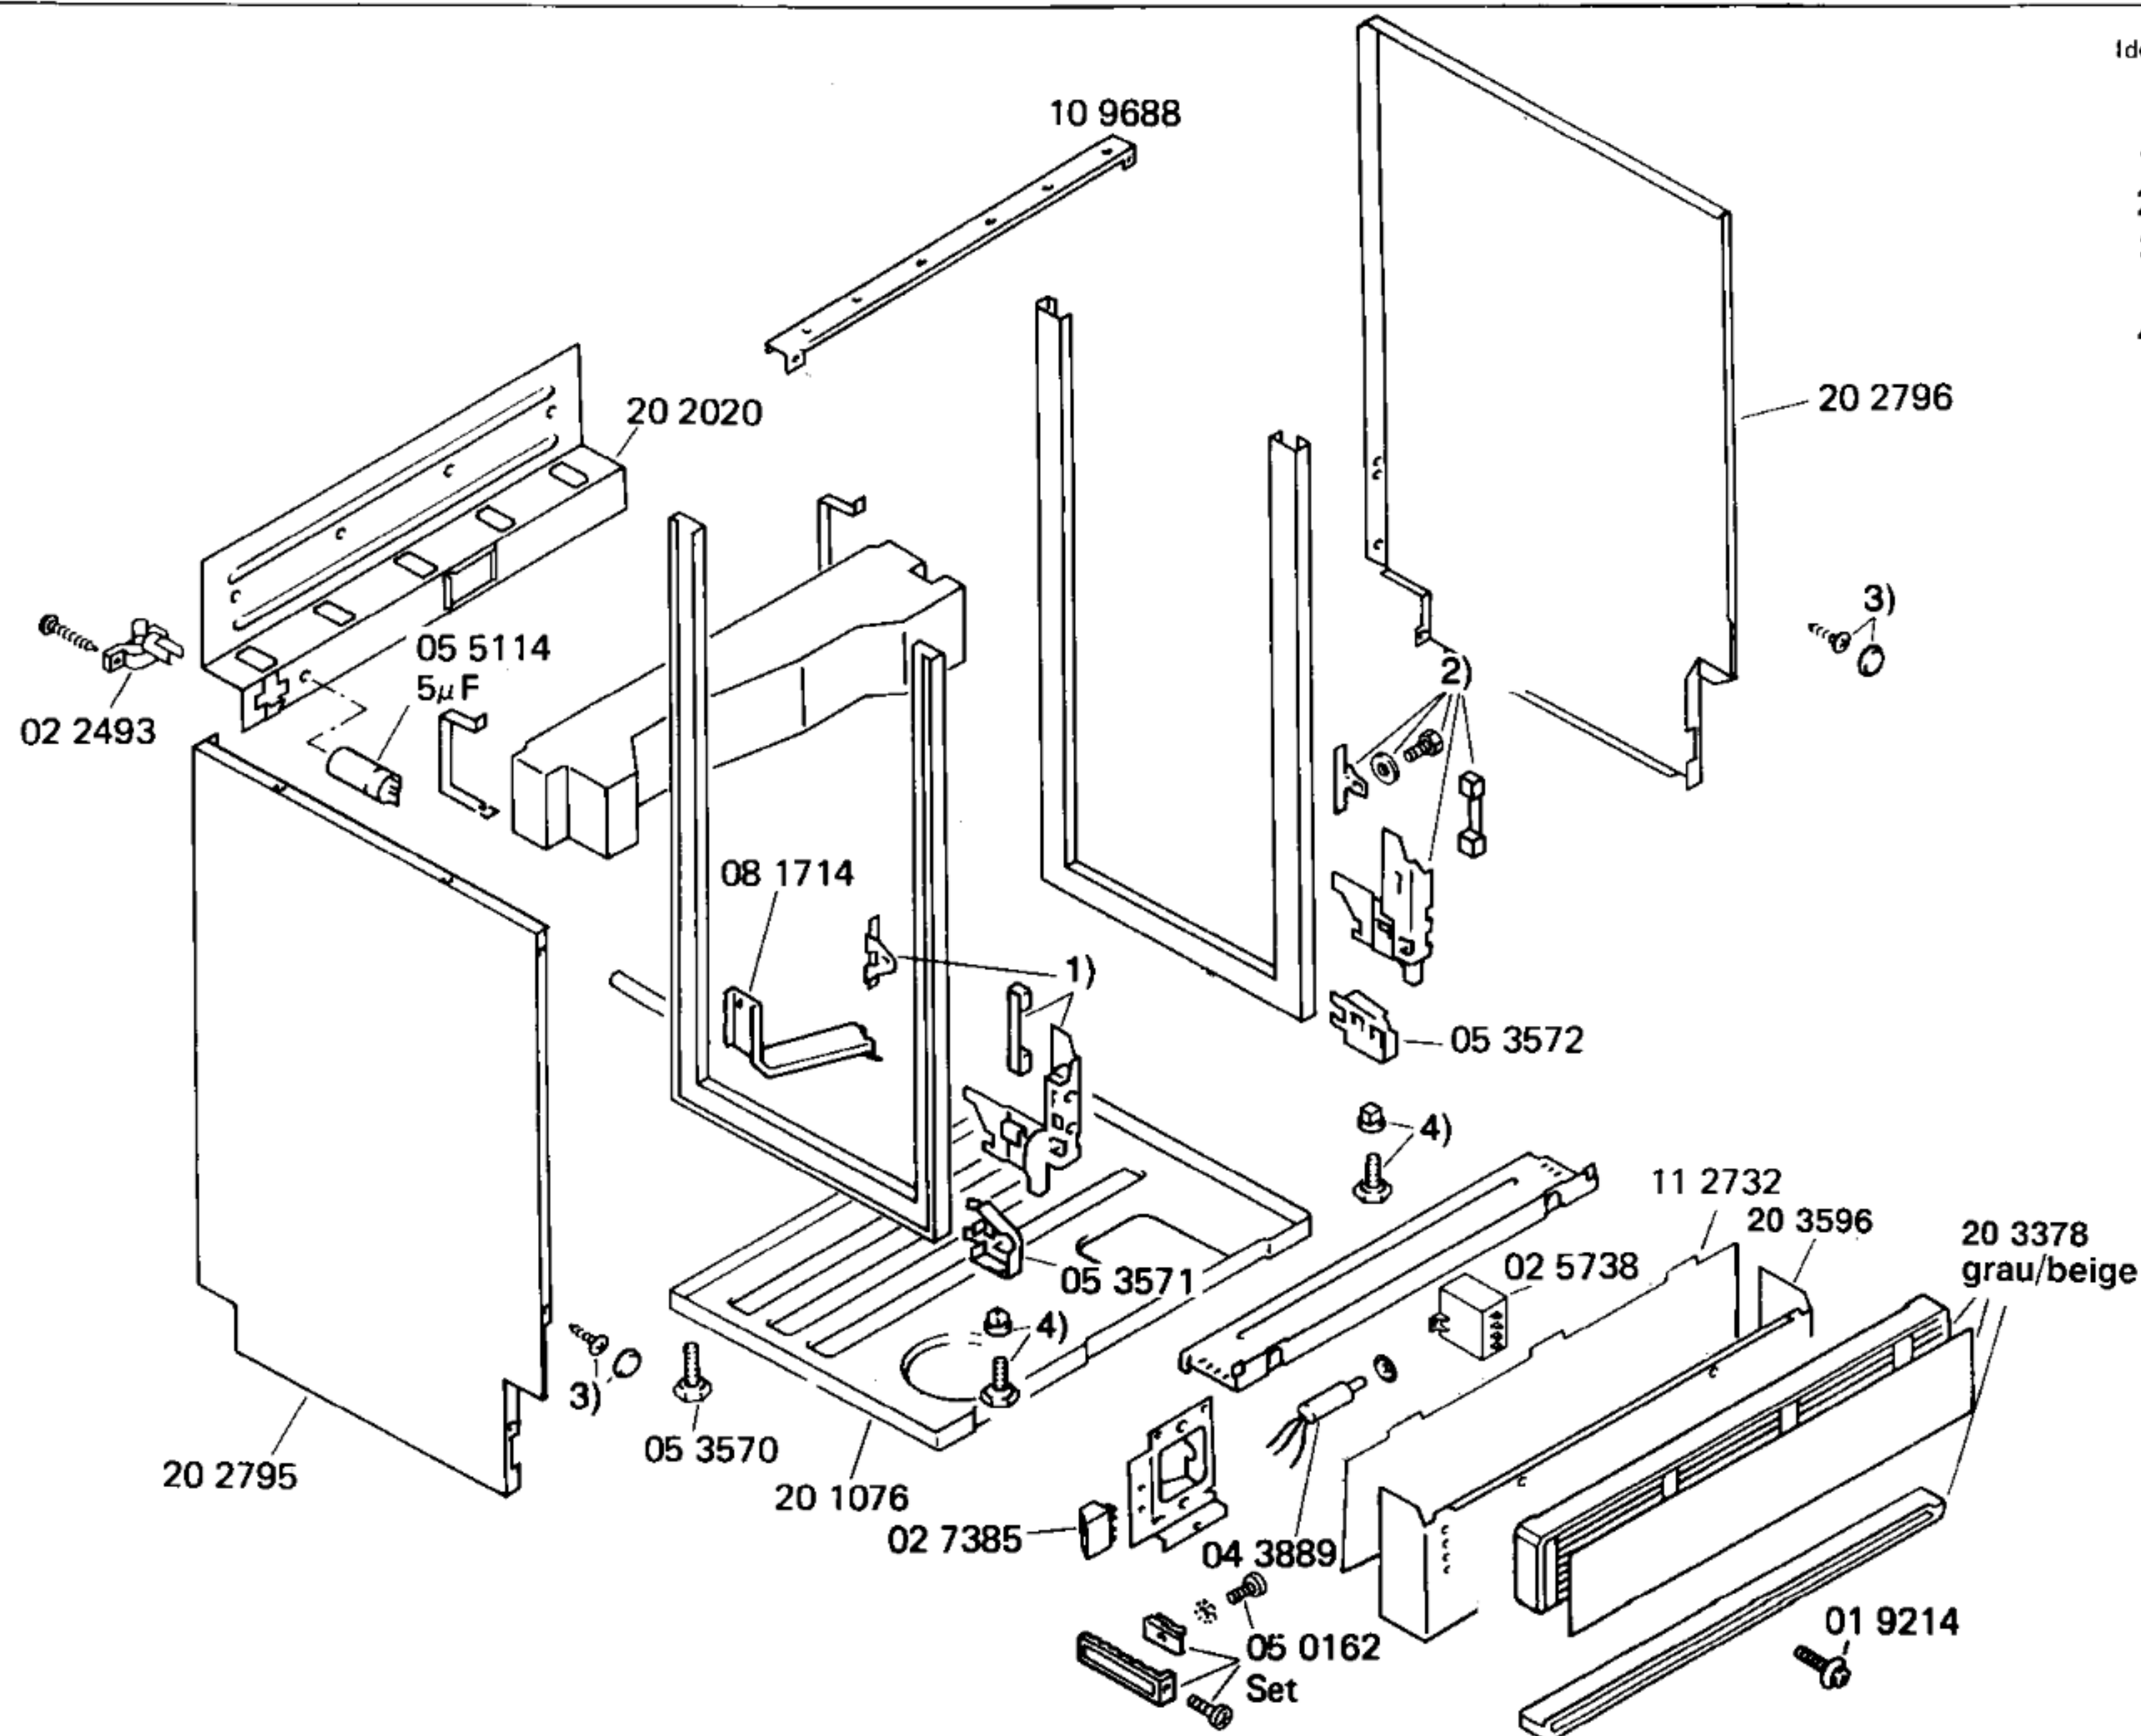GESCHIRRSPÜLGERÄTE
StandgeräteIdent.-Nummern-Konstante
3740

- 1) 08 2970
- 2) 08 2971
- 3) 01 3861
Set
- 4) 02 7386

**BOSCH**

S210 - SMS 2100H - 0 730 103 573-DK1

GESCHIRRSPÜLGERÄTE
StandgeräteIdent-Nummern-Konstante
3740

- 1) 01 9202
- 2) 11 0668
Set
- 3) 05 1287
Set

