
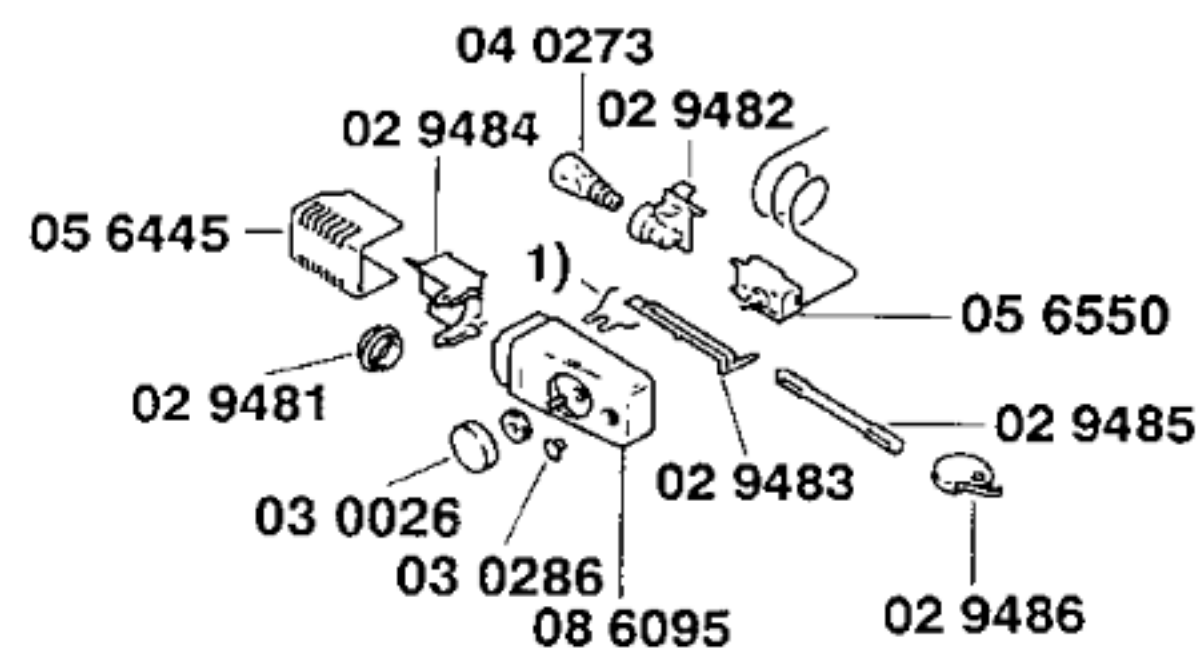


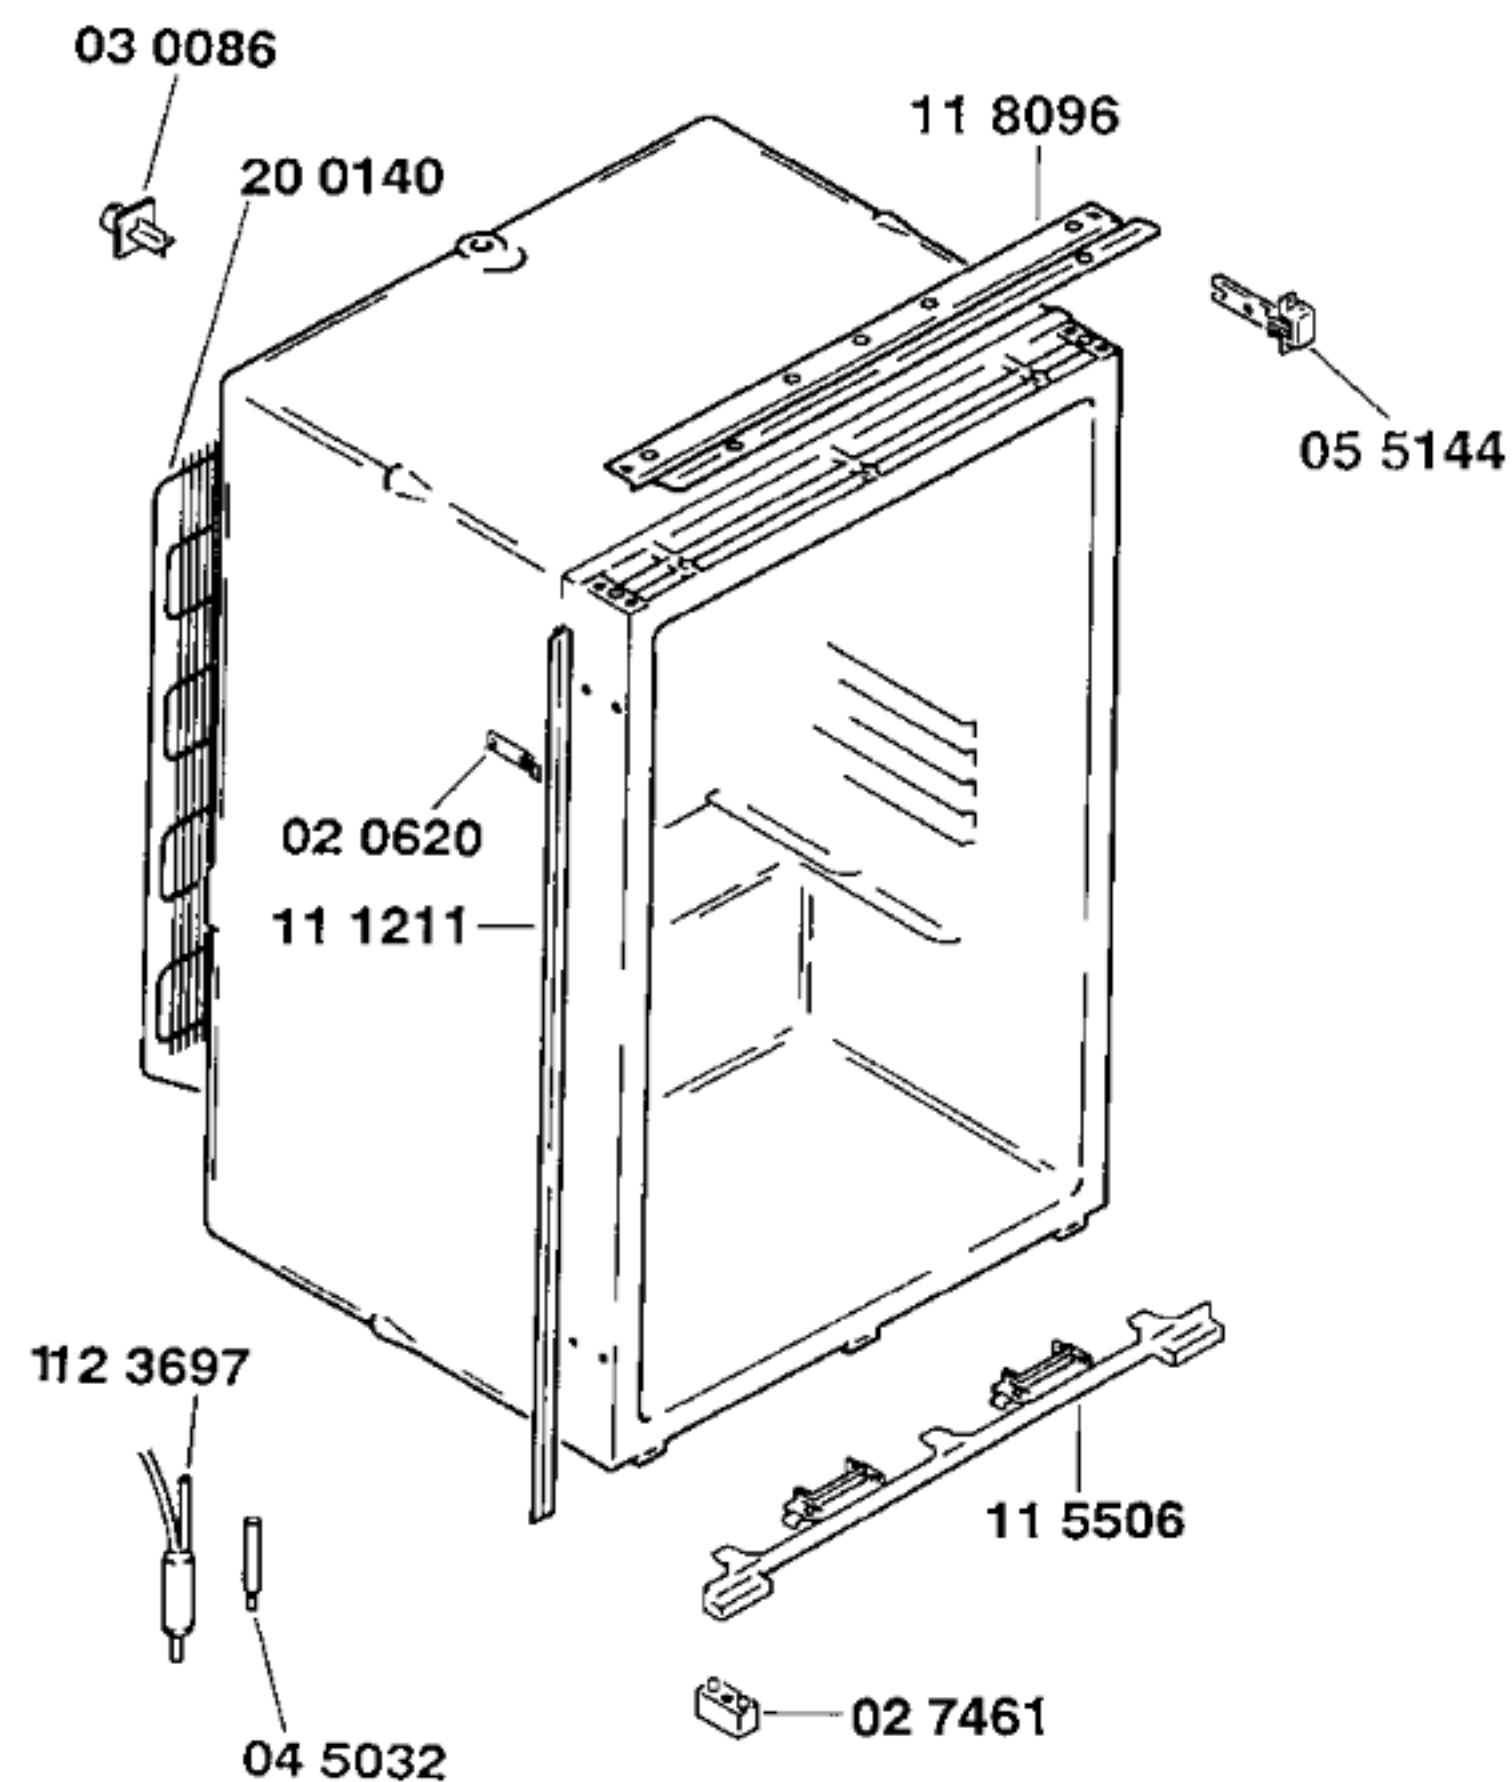

51 3747
Gebrauchsanweisung
(D,GB,F,I,NL,N)

51 2304
Montageanleitung
(D,GB,F,I,NL,DK,N,S,SF,
E,P)

08 4136
Schraubensatz


1) 02 9480


Zubehör:

Dekorrahmen
Z4130B0, braun
Z4130W0, weiss

Ausgleichs-
blenden
Alu:
Z4210A0, 37mm
Z4220A0, 56mm

braun:
Z4210B0, 37mm
Z4220B0, 56mm

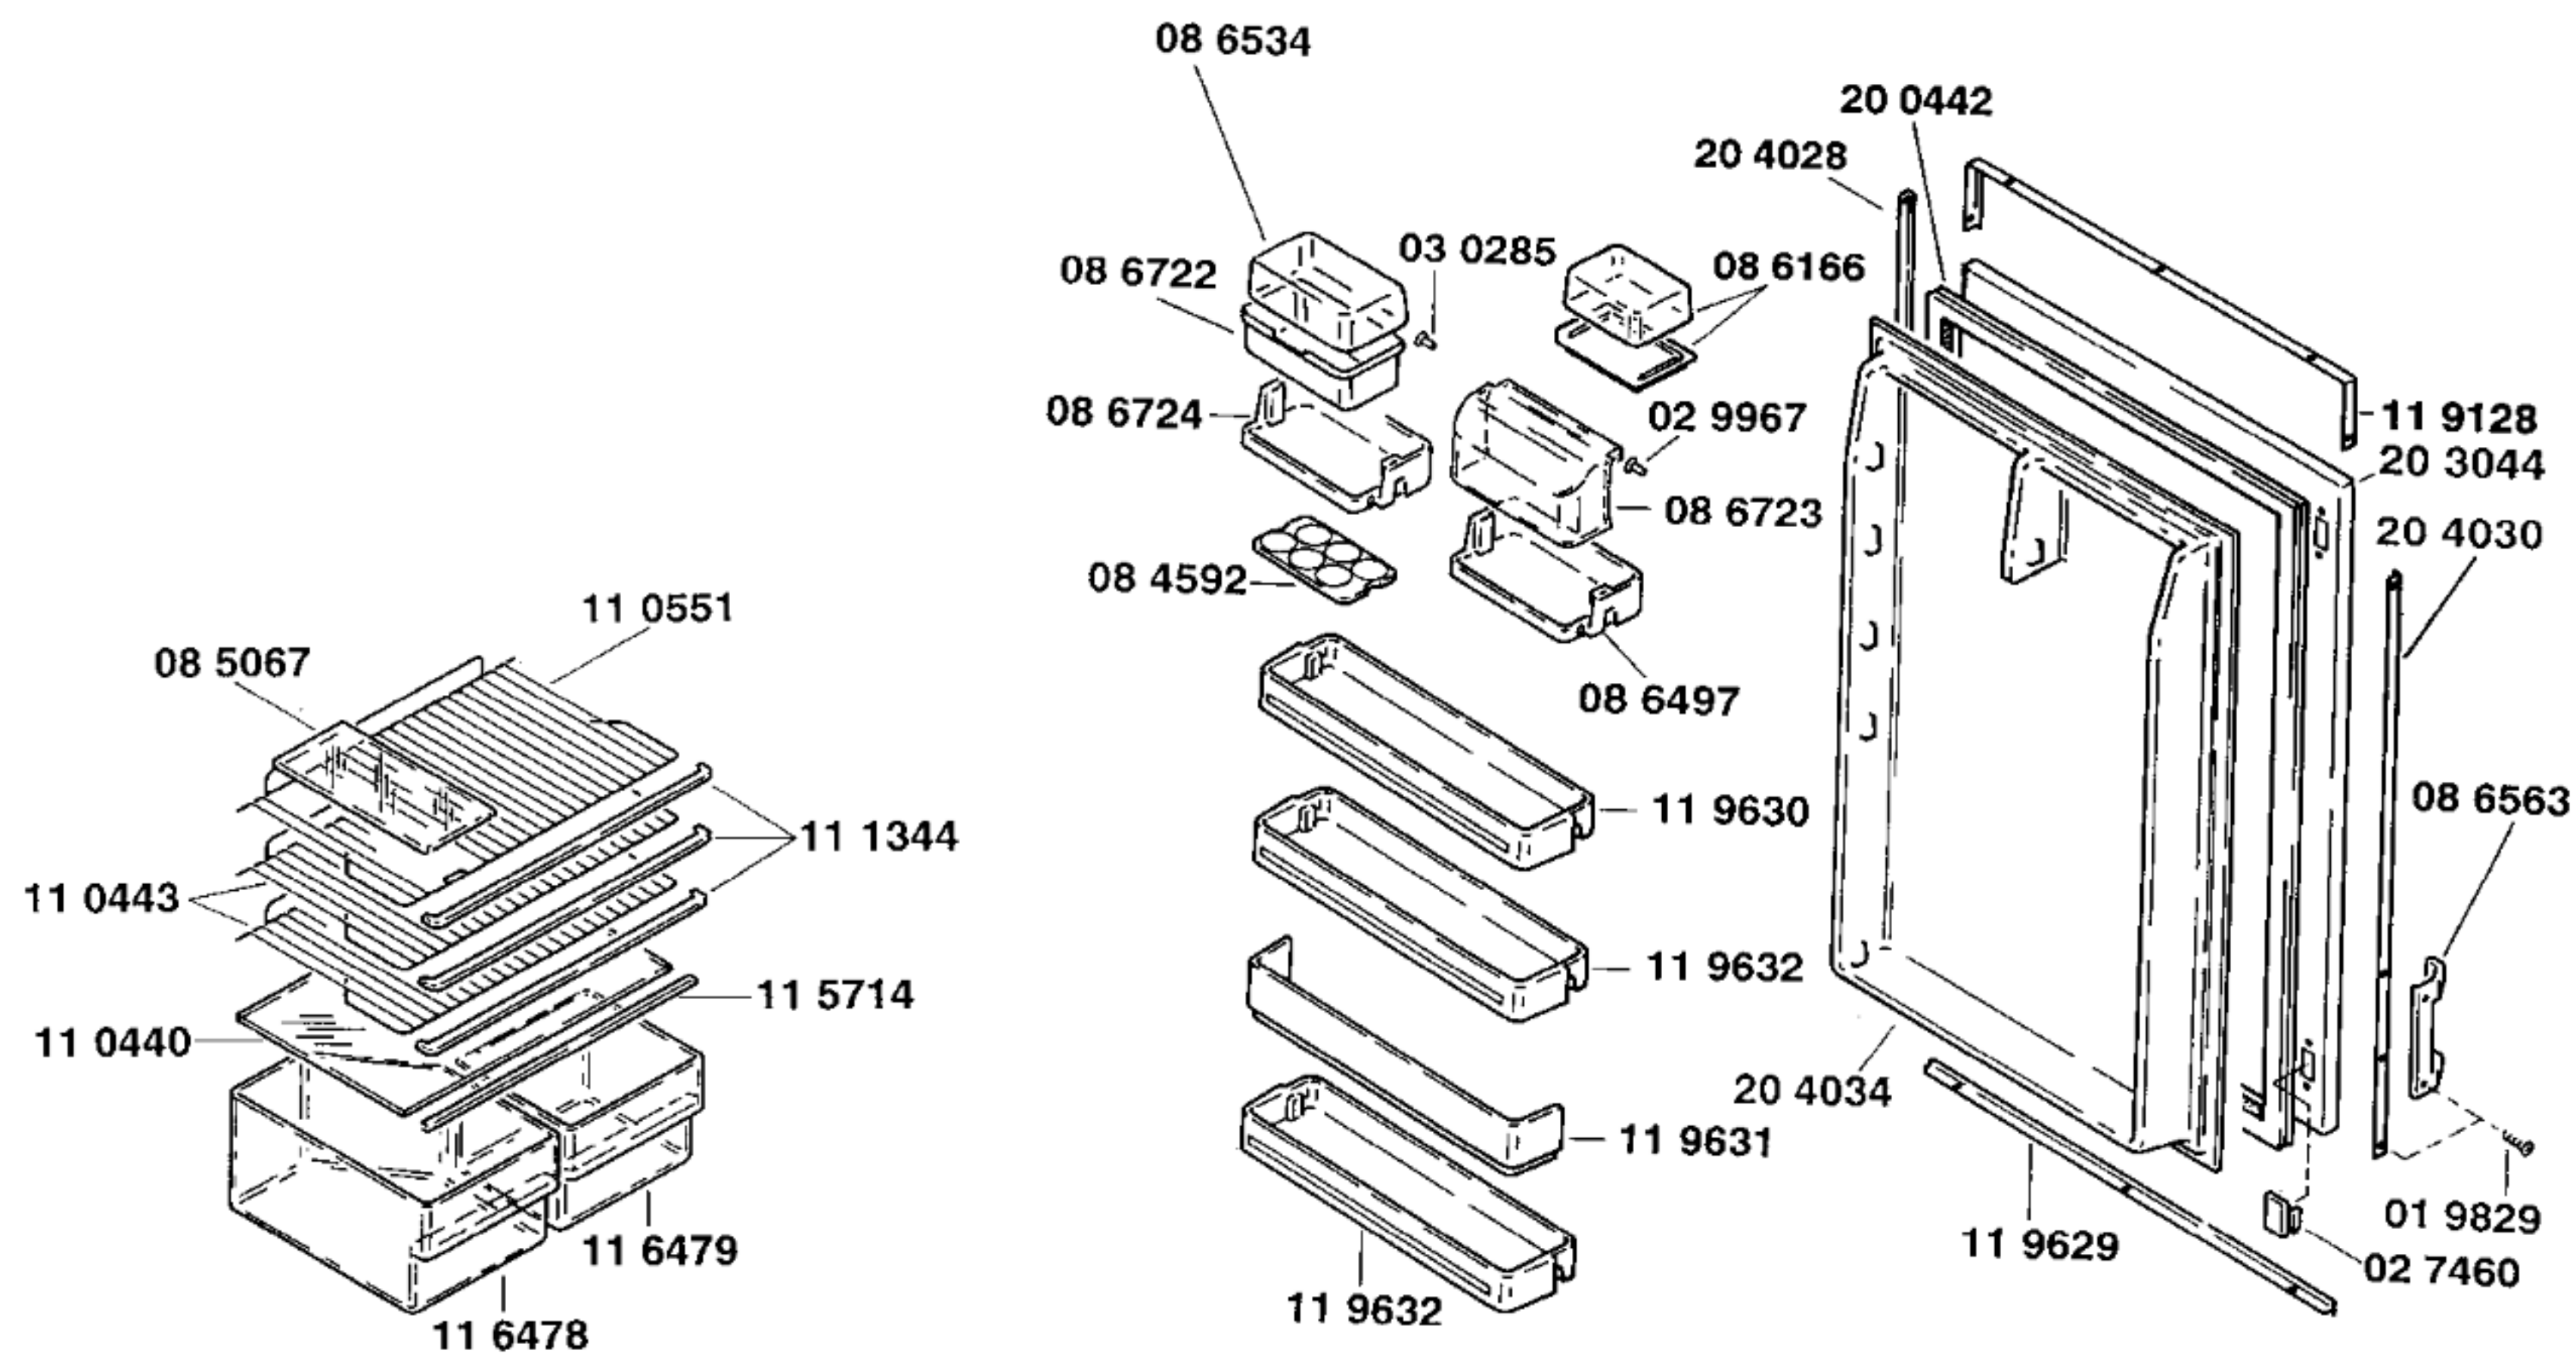

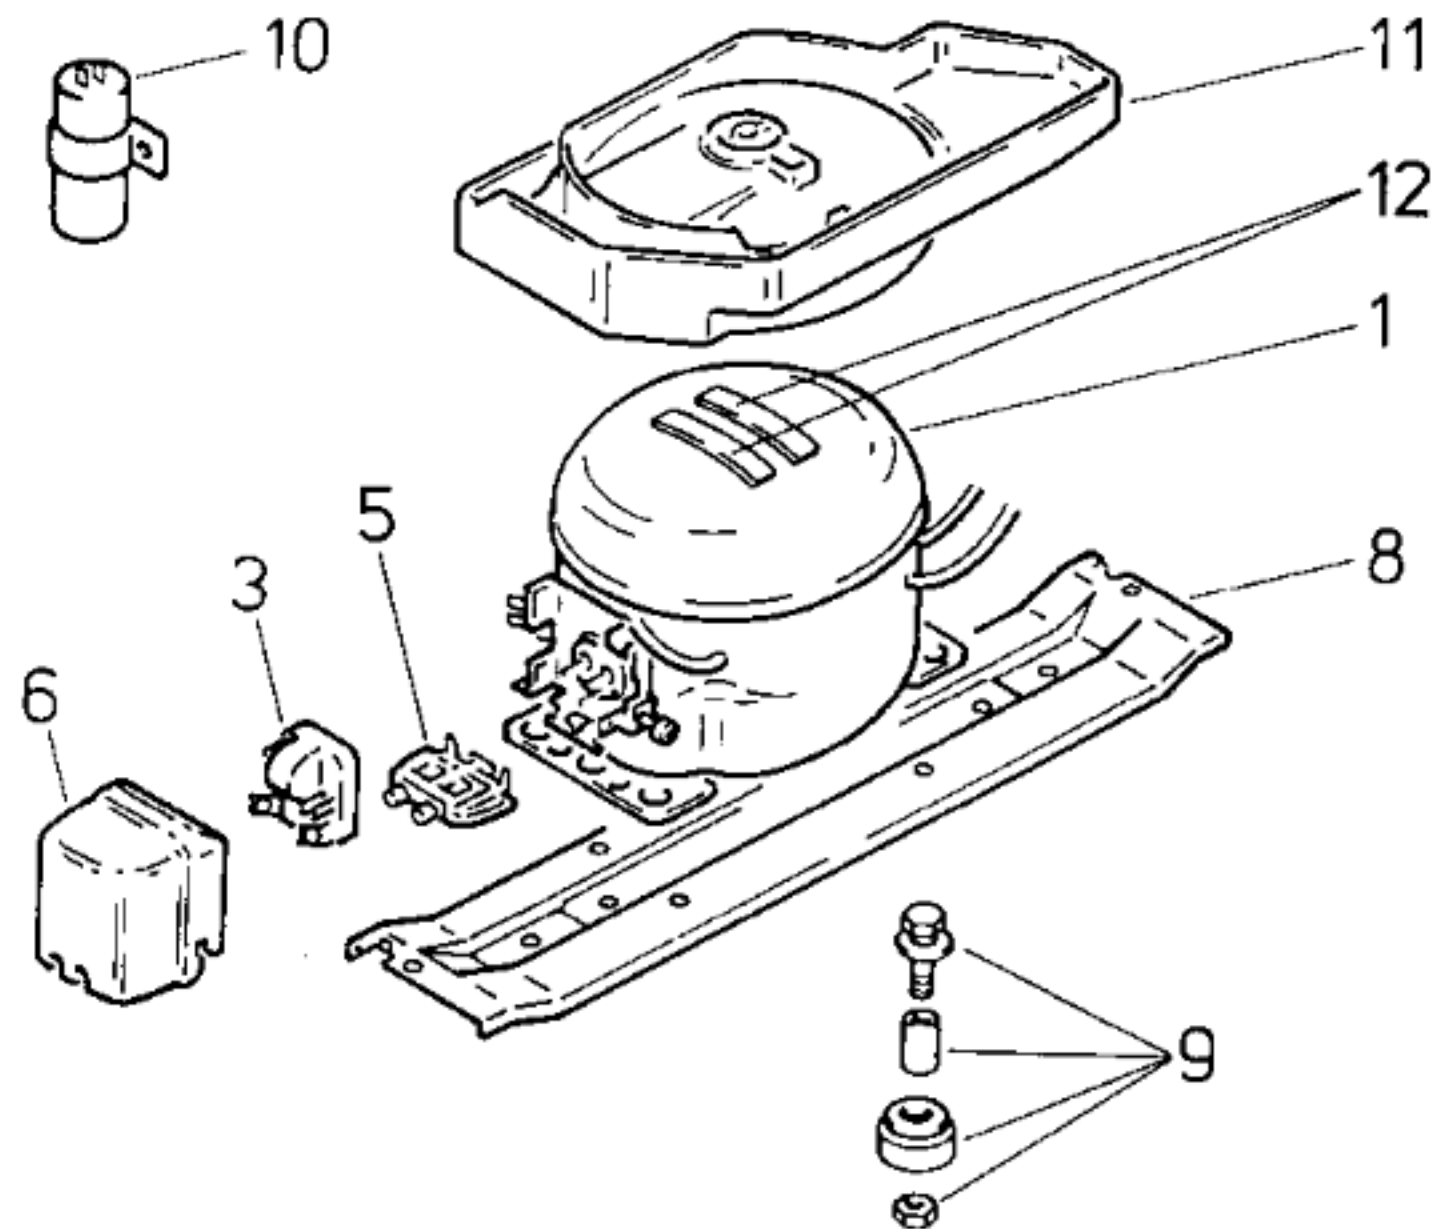

Pos.	EU1,GB1	E1	
	Danfoss TL 3 A	Danfoss TL 4 A	
1	14 0080	13 1064	
2			
3	02 0108	02 0108	
4			
5	02 7310	02 7310	
6	05 1413	05 1413	
7			
8	11 0437	11 0437	
9	05 0166	05 0166	
10			
11	08 5744	08 5744	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 3 A	TL 4 A	
Förderleistung/Delivery/Débit	l/h	563	695	
Anlaufstrom/Starting current/Cour. de démarrage	A	7,2	8,3	
Widerstand/Resistance/Résistance	Ha/main/prin.	31,4	23,4	
	Hi/aux	15,5	15,5	
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57 F1		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“	+ 5	+ 5	
Valeurs de commutation	„aus“	- 26	- 12	
	(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	R12	g	70	
Anschlußwert/Conn.load/Puiss. connectée		W	90	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		