




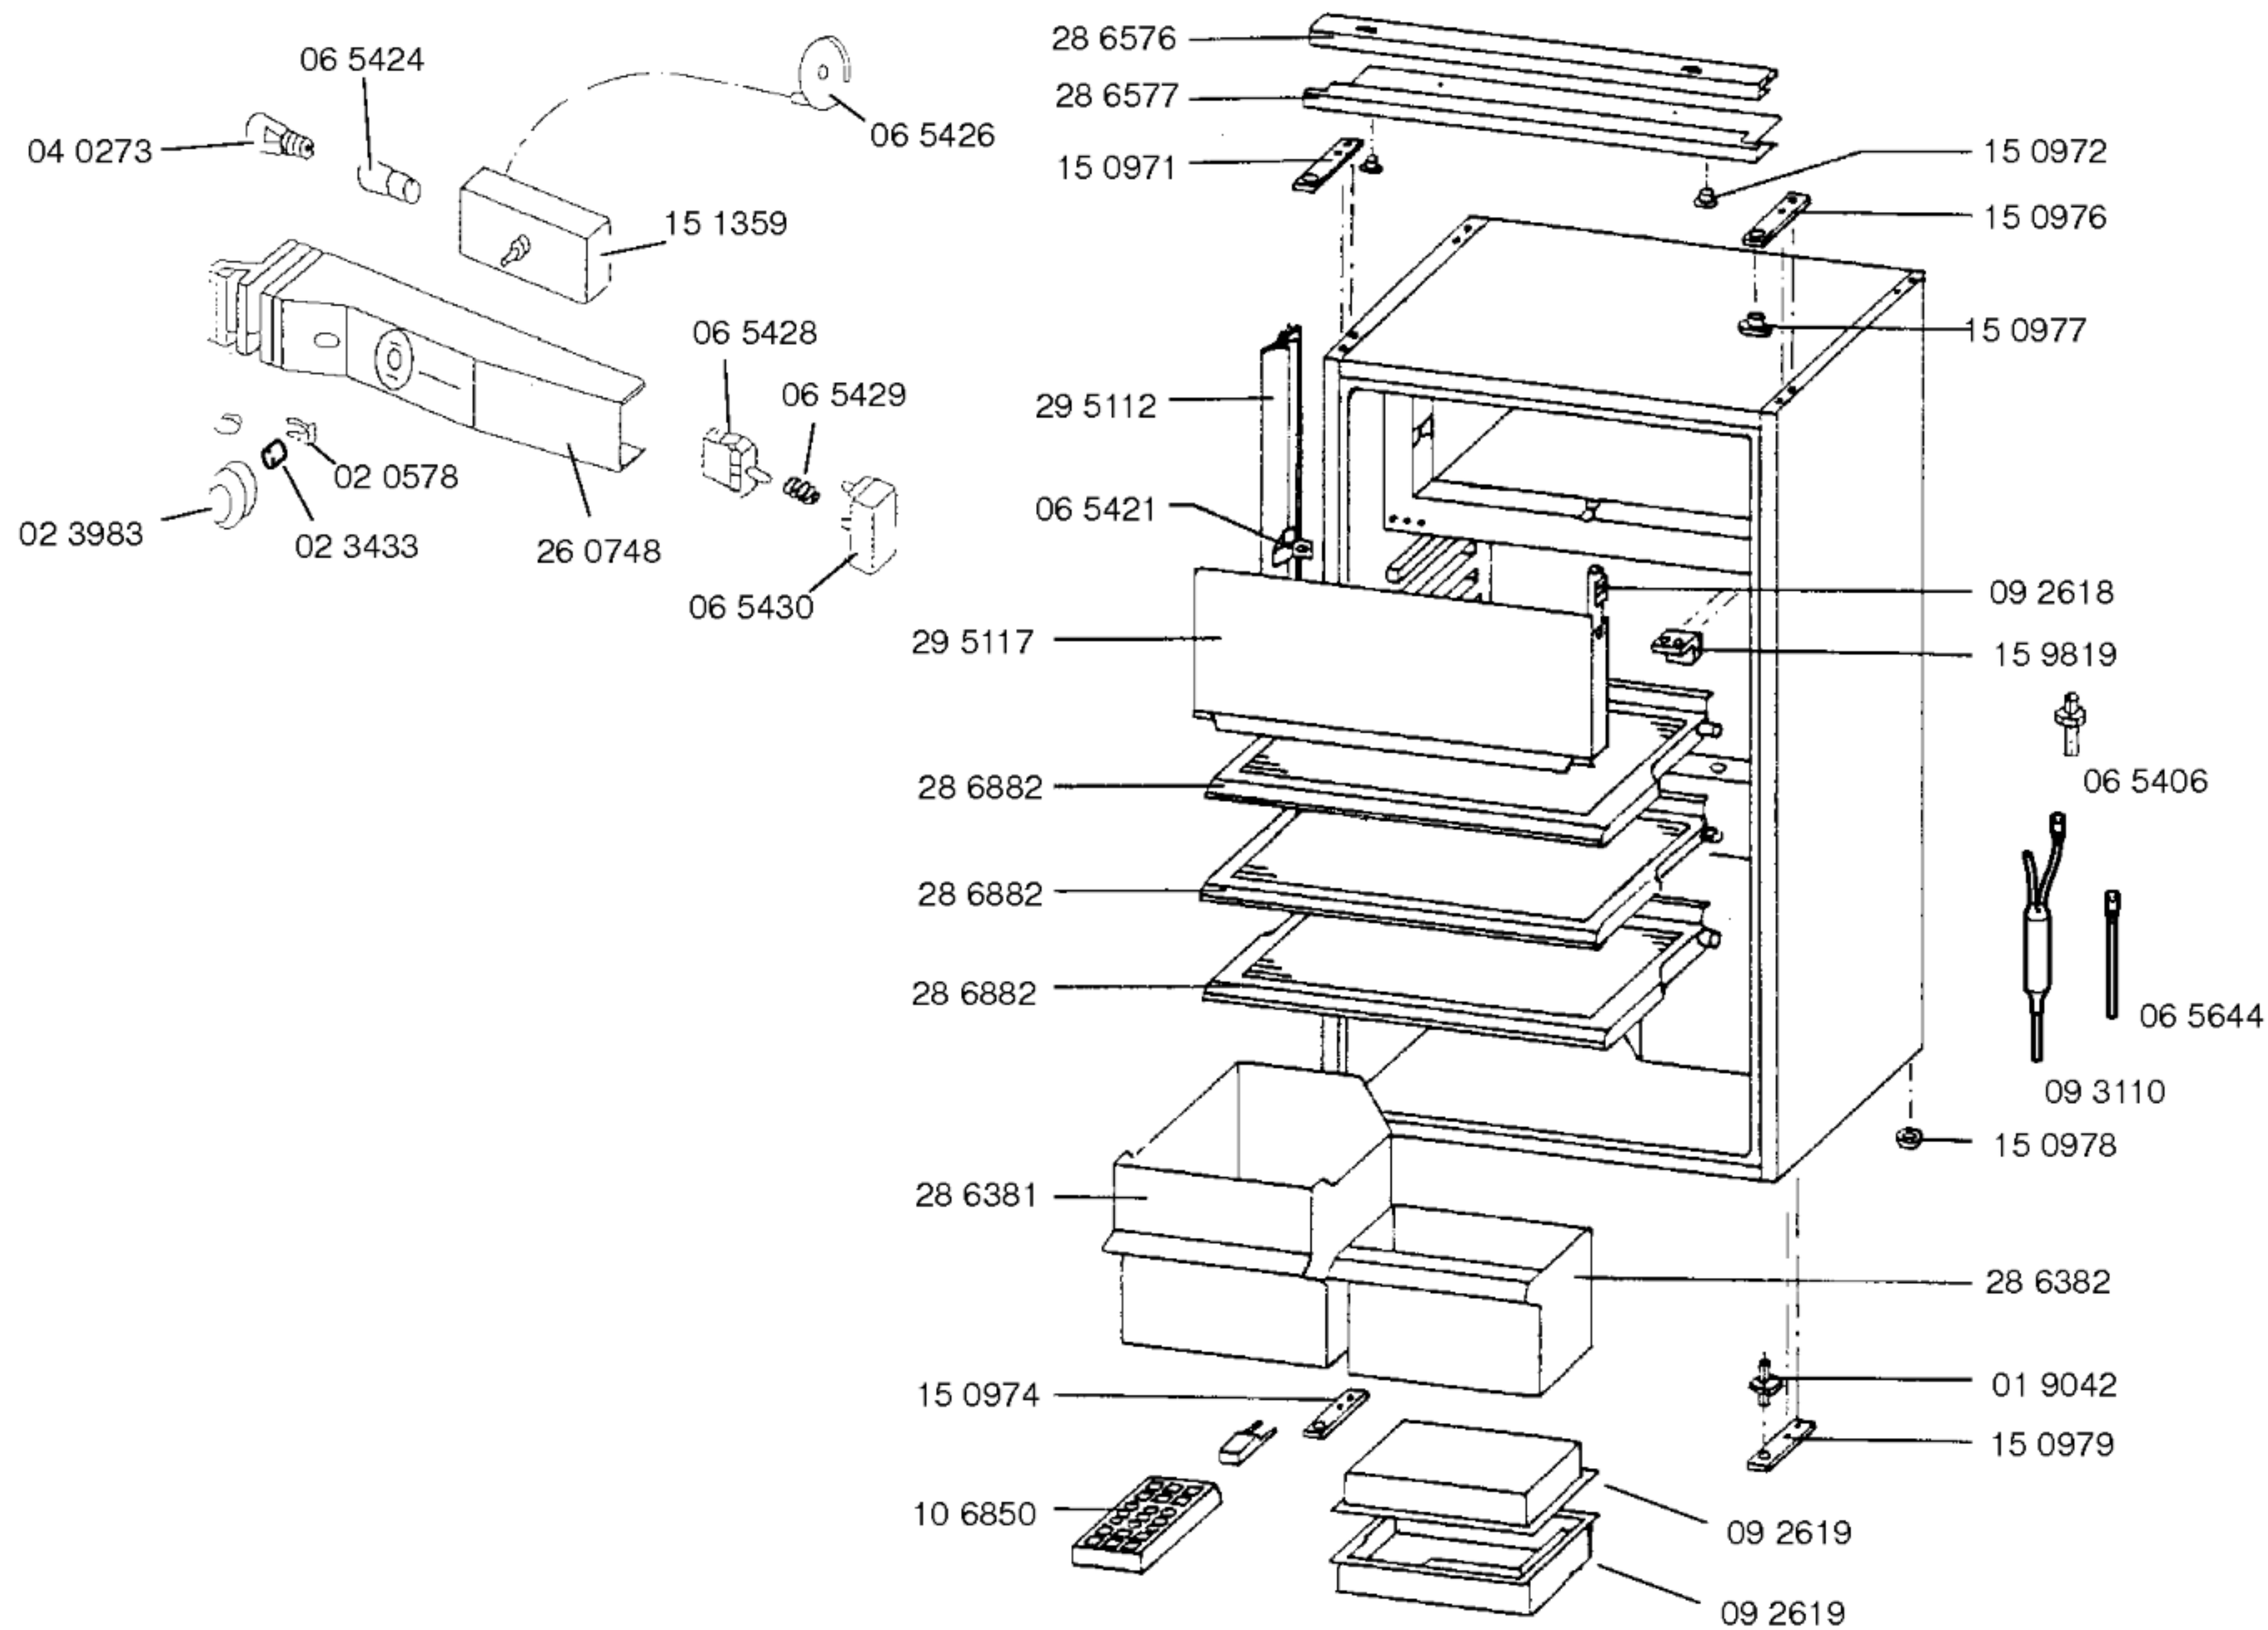

Gebrauchsanweisung
51 7272
(D,GB,F,I,E,NL)

Montageanleitung
51 7263

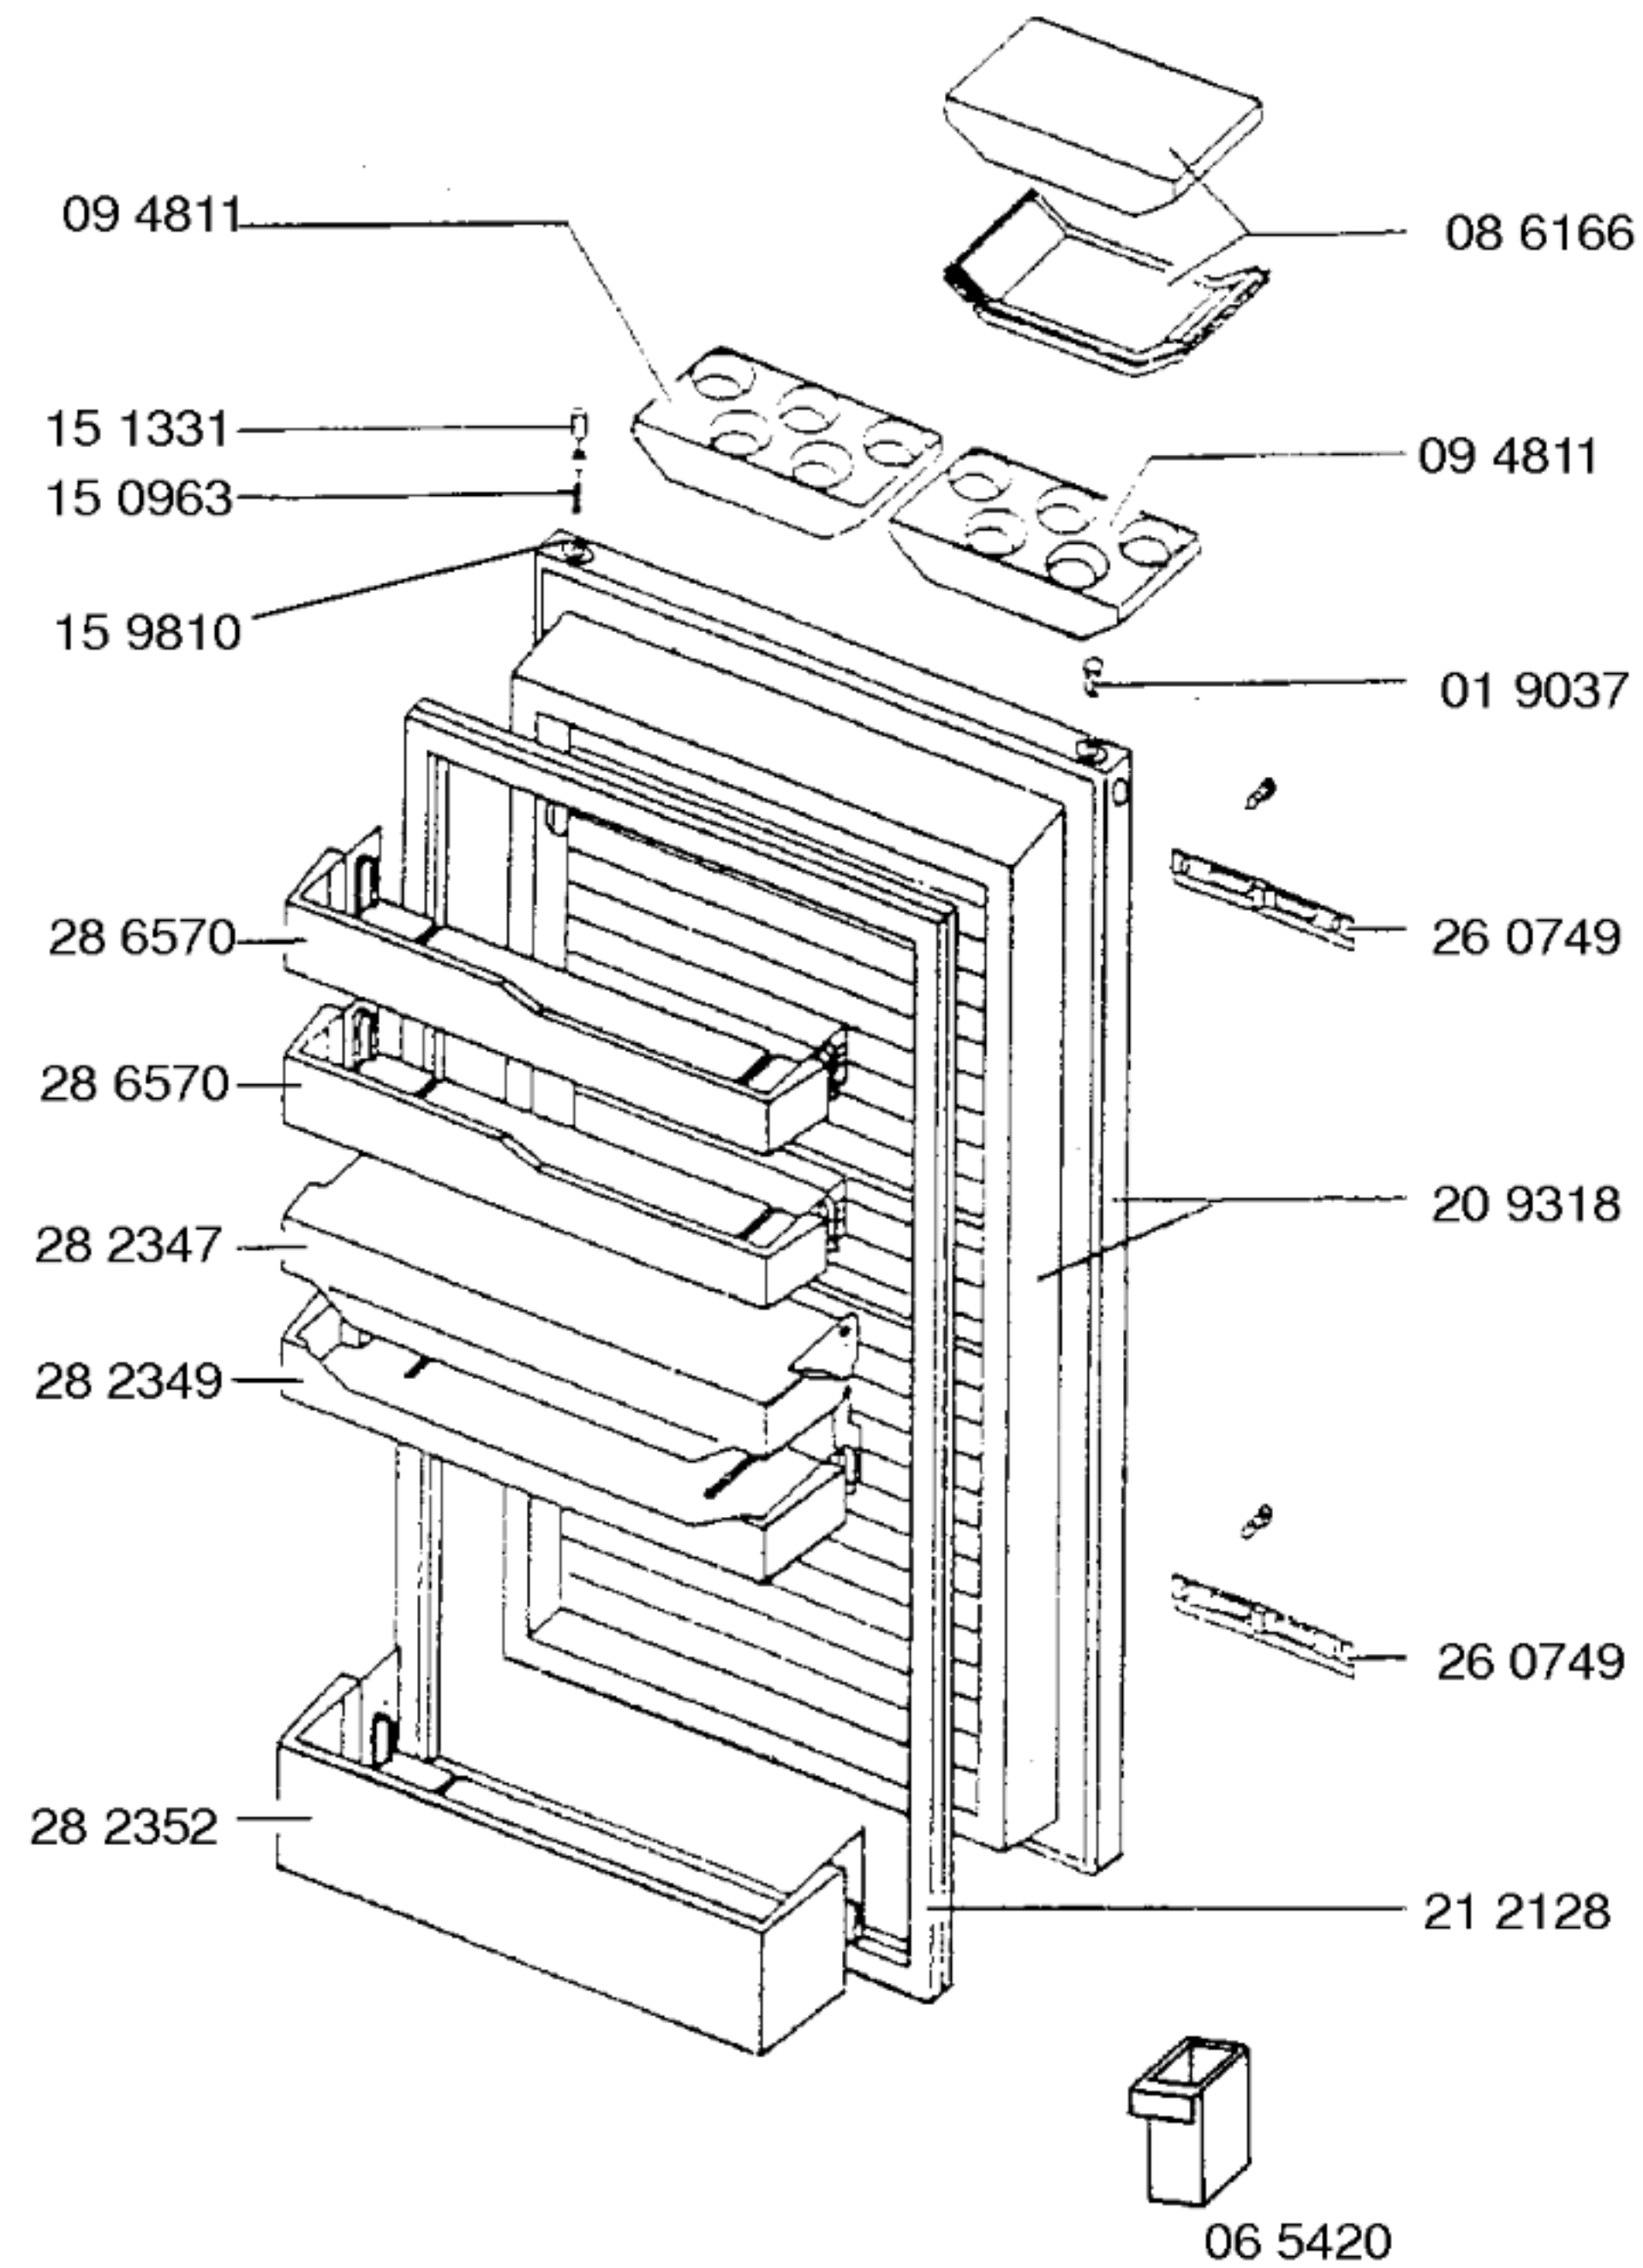

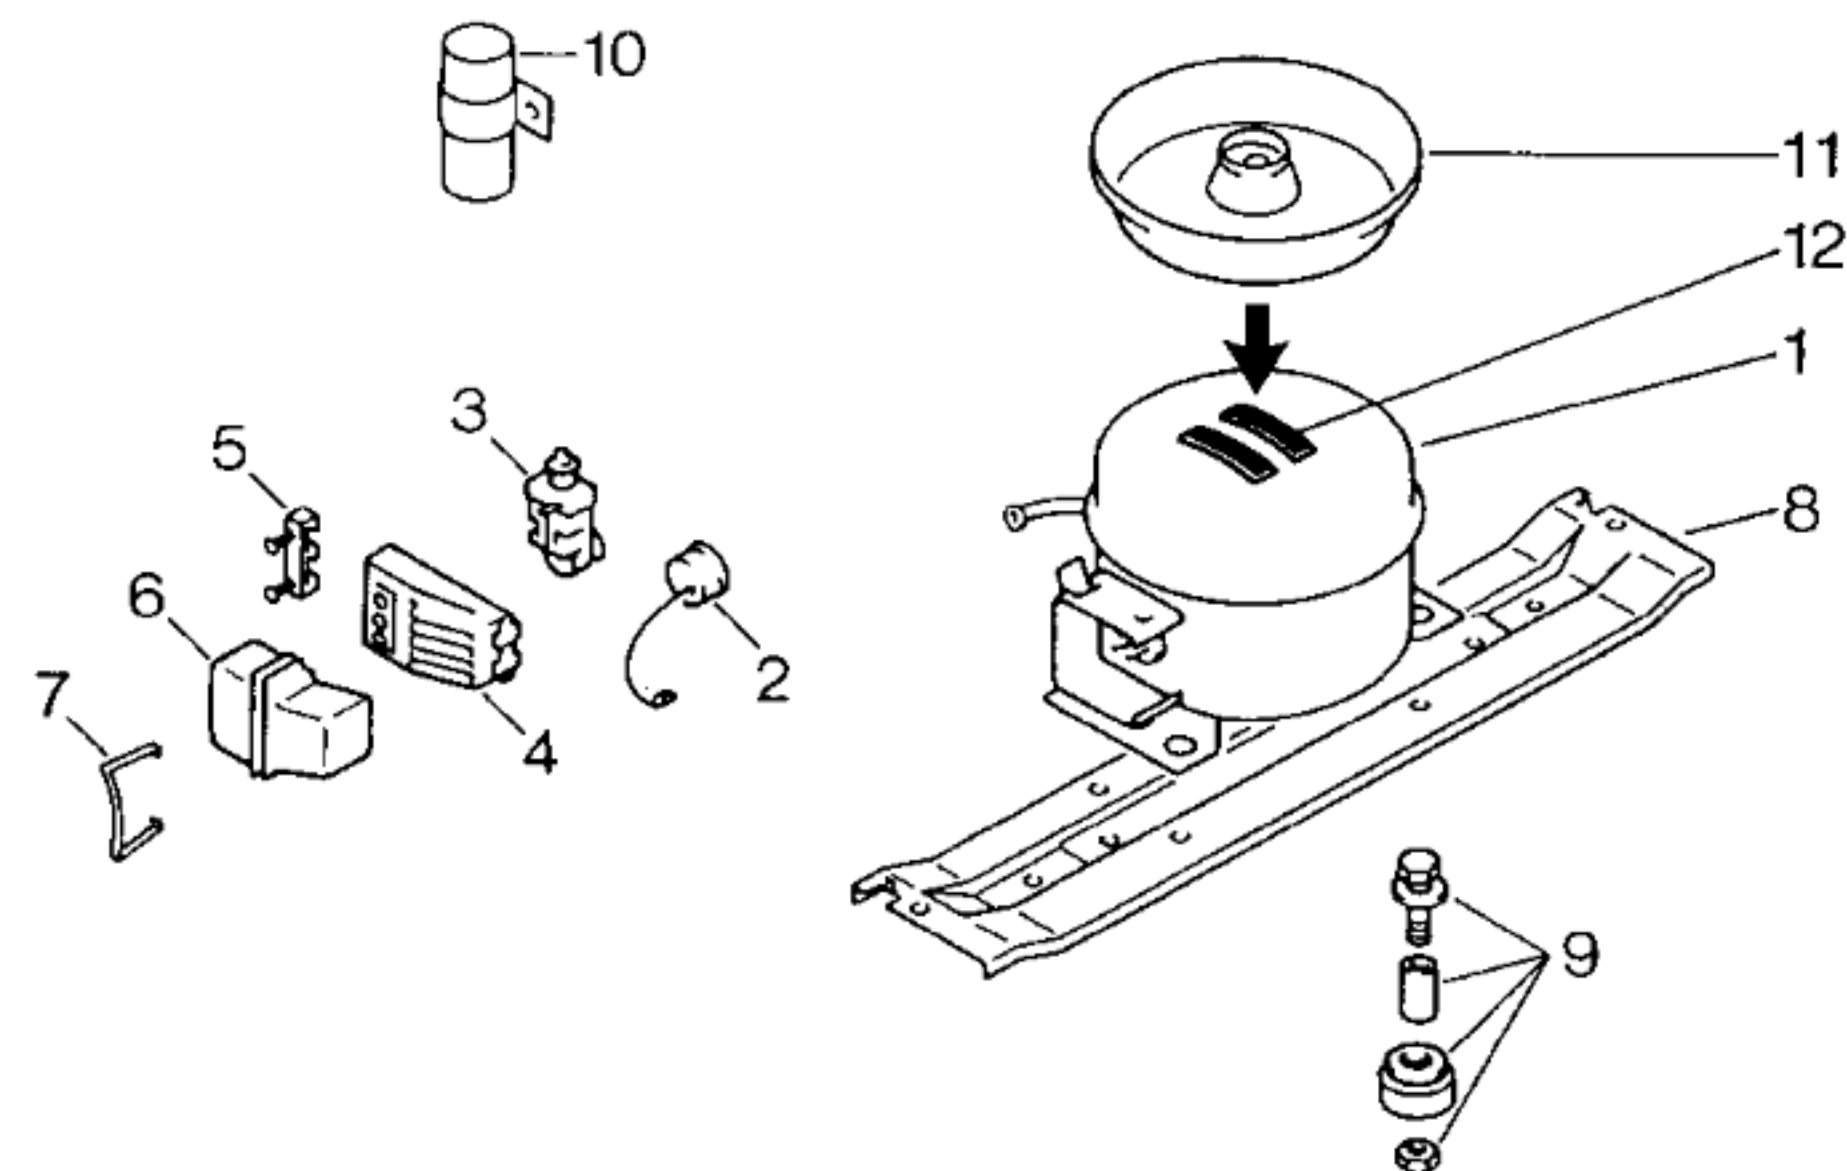

Pos.	Danfoss	Unidat	
	TLES 9 K	HL 90 AA	
1	14 1308		
2		15 9824	
3	15 1055	15 9823	
4		15 9821	
5	15 1053	15 9822	
6	15 1072	15 9820	
7			
8	27 0291		
9	05 0166		
10			
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES 9 K		
Förderleistung/Delivery/Débit		l/h	1589	
Anlaufstrom/Starting current/Cour de démarrage		A	8,8	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	16,5	
		Hi/aux Ω	16,4	
Temp.-Regler/Thermostat		Ranco		
Typ/Type		K59		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/ Valeurs de commutation		„ein“ $^{\circ}\text{C}$	+4,5	
		„aus“ („abtauen“ od.) „alarm“	-31	
Füllmenge/Fill.quantity/Charge		R600a	g	
Anschlußwert/Conn.load/Puiss. connectée		W	110	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		