



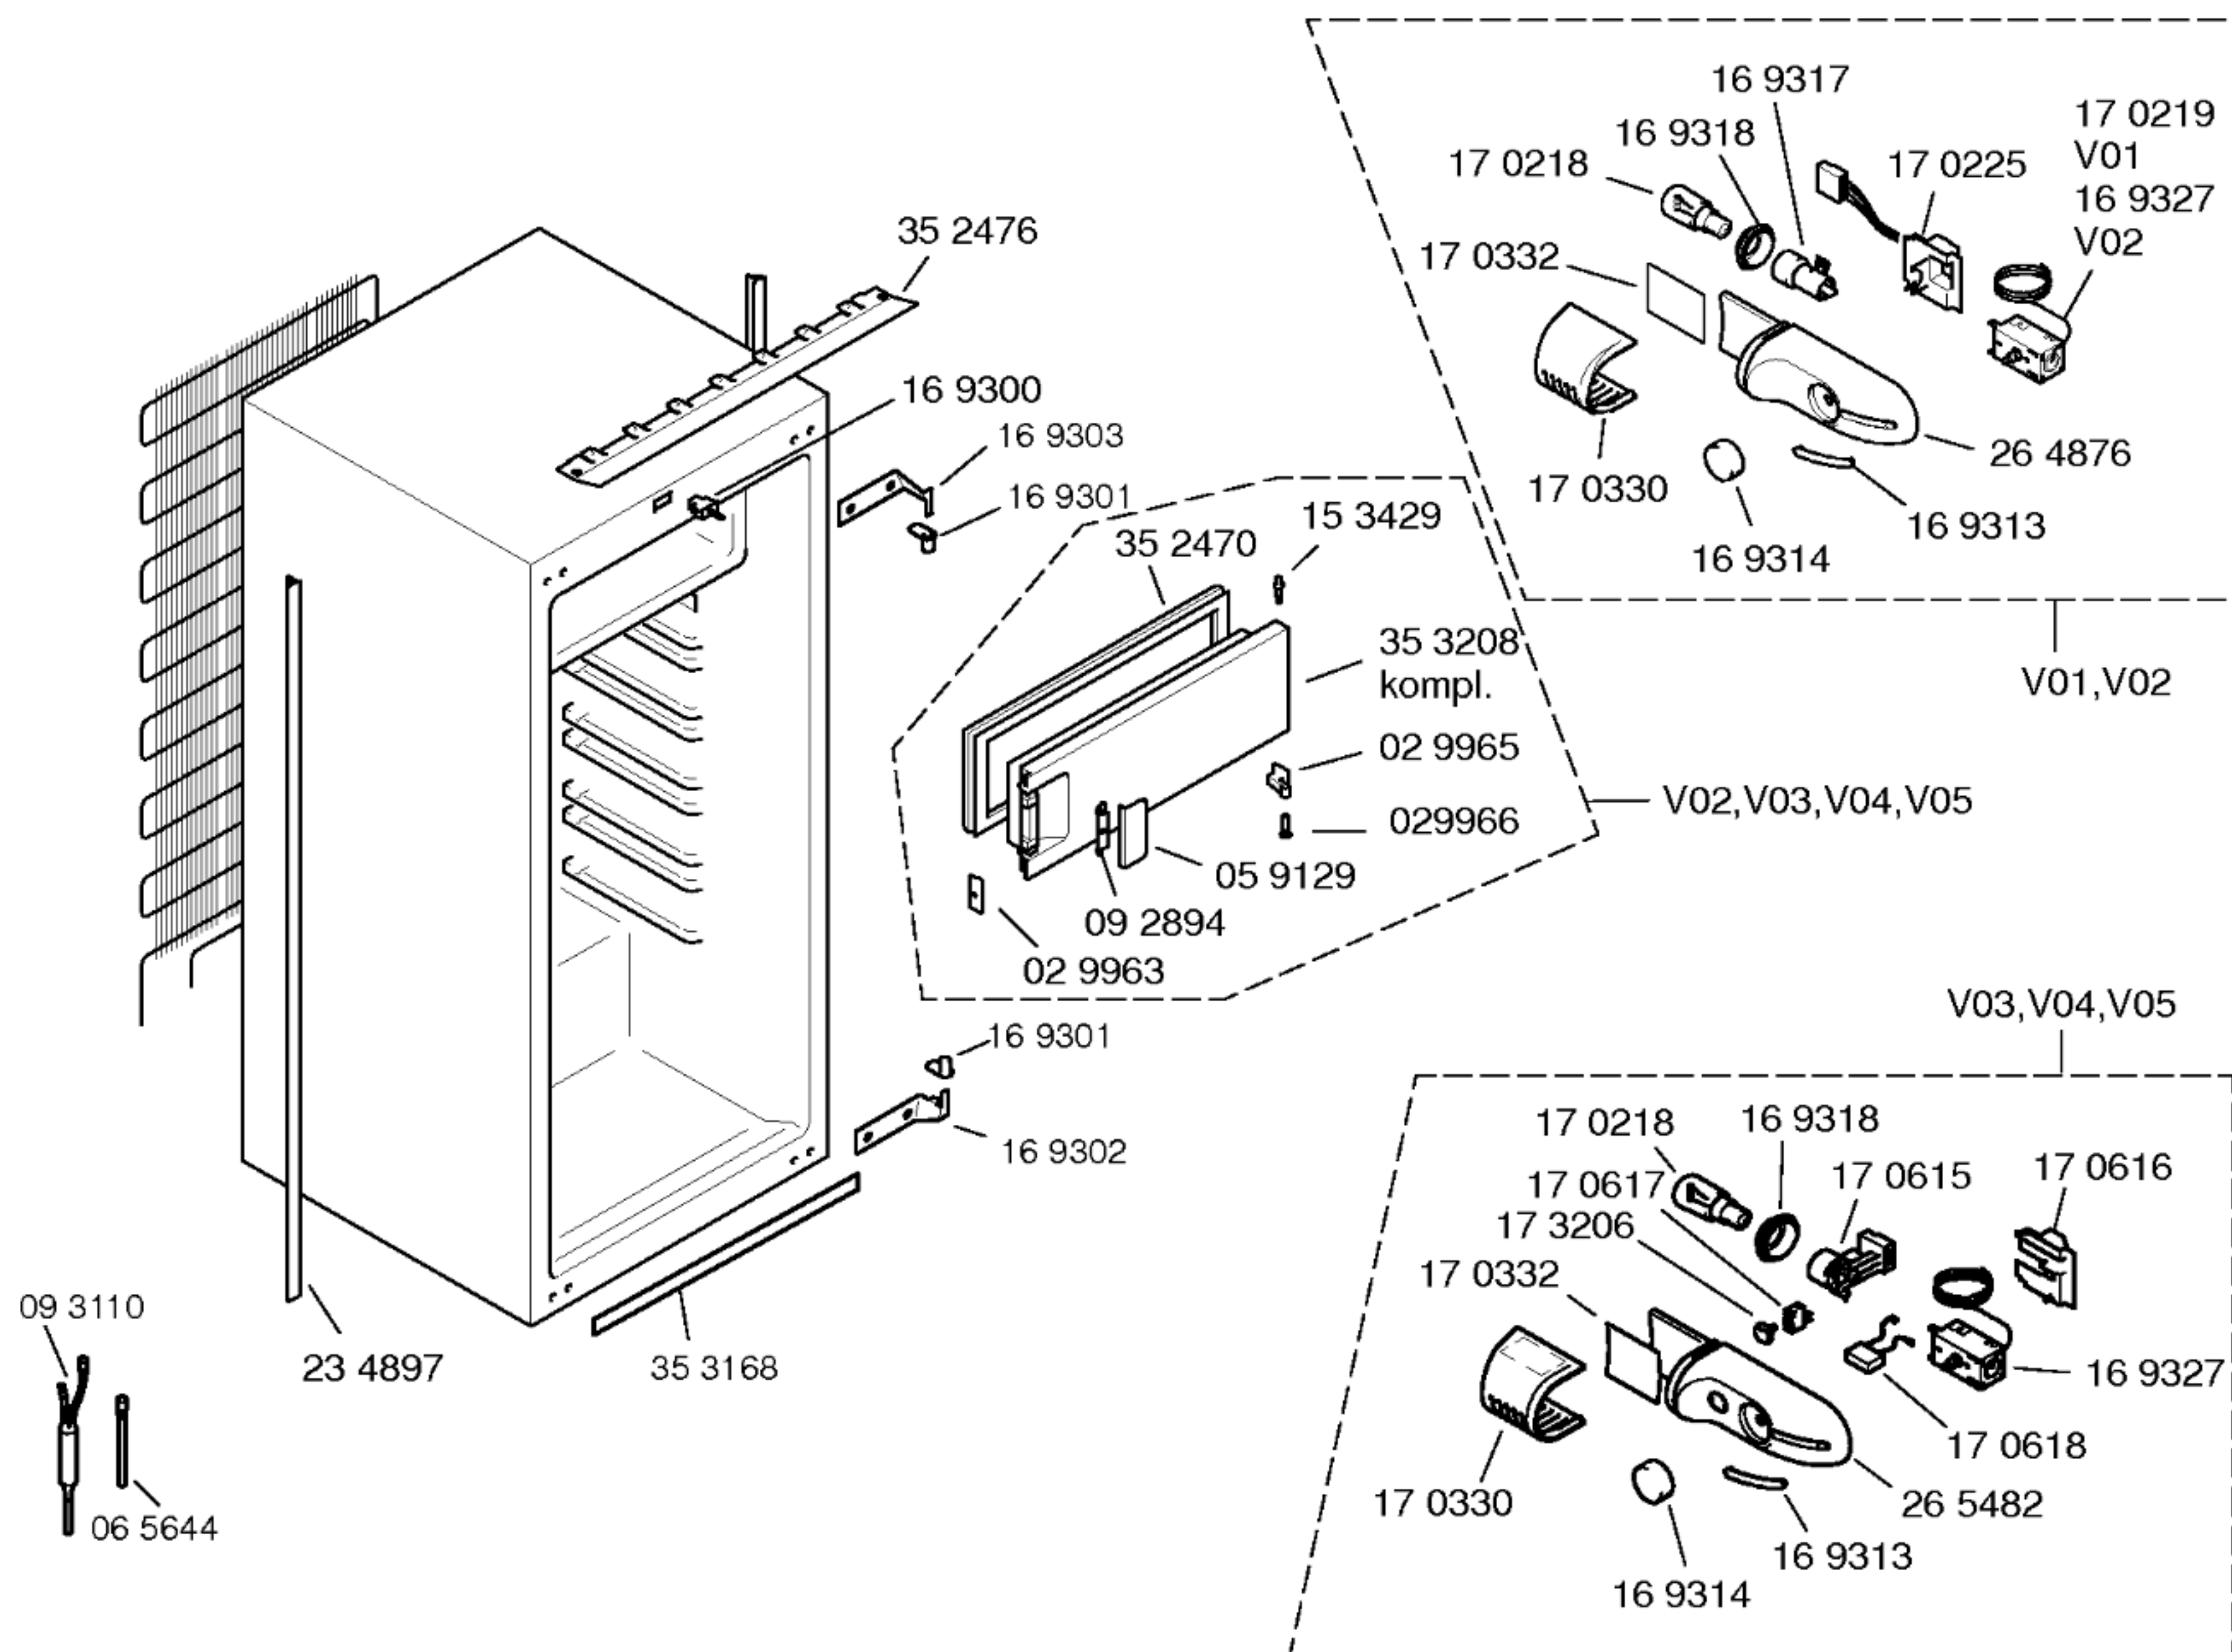



Gebrauchsanweisung
52 2542
V01
52 2548
V02-V05
(D,GB,F,I,NL)

Montageanleitung
52 1893
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5161

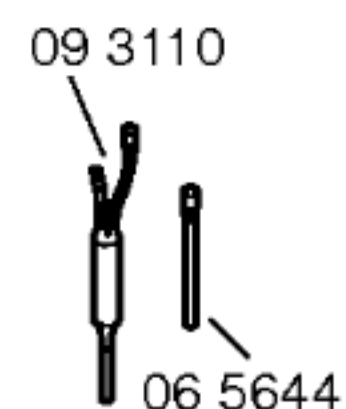

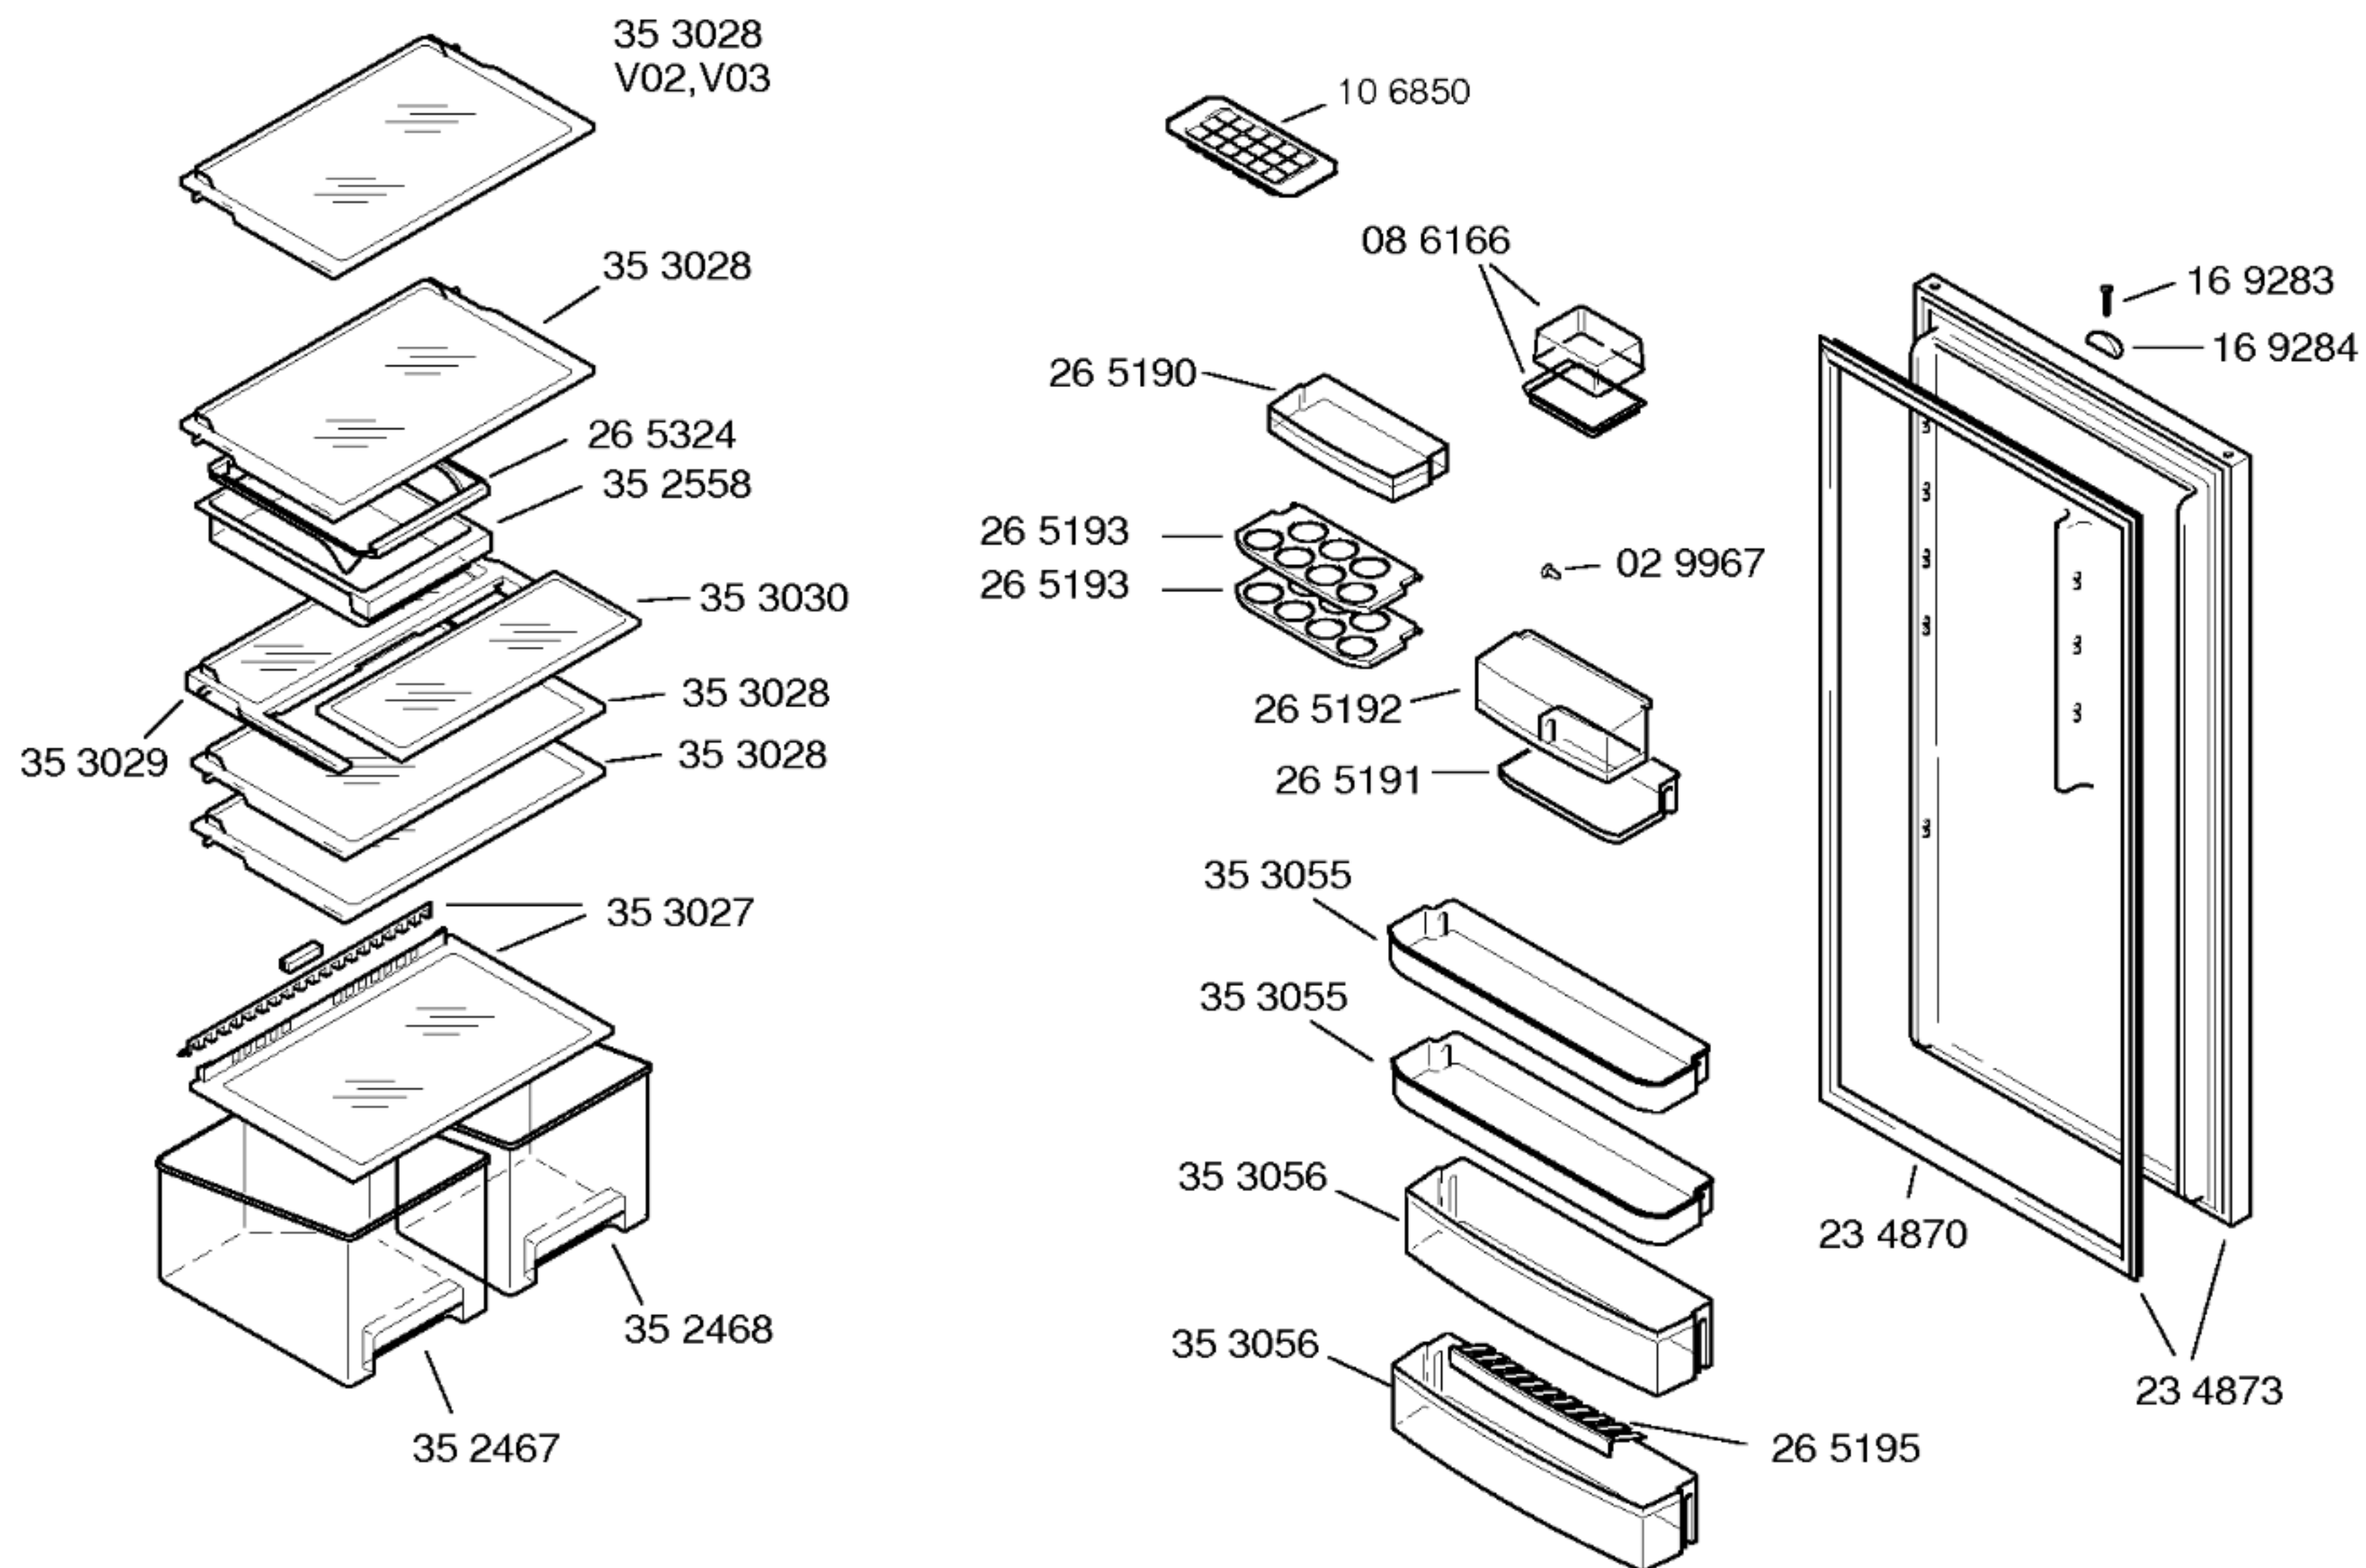

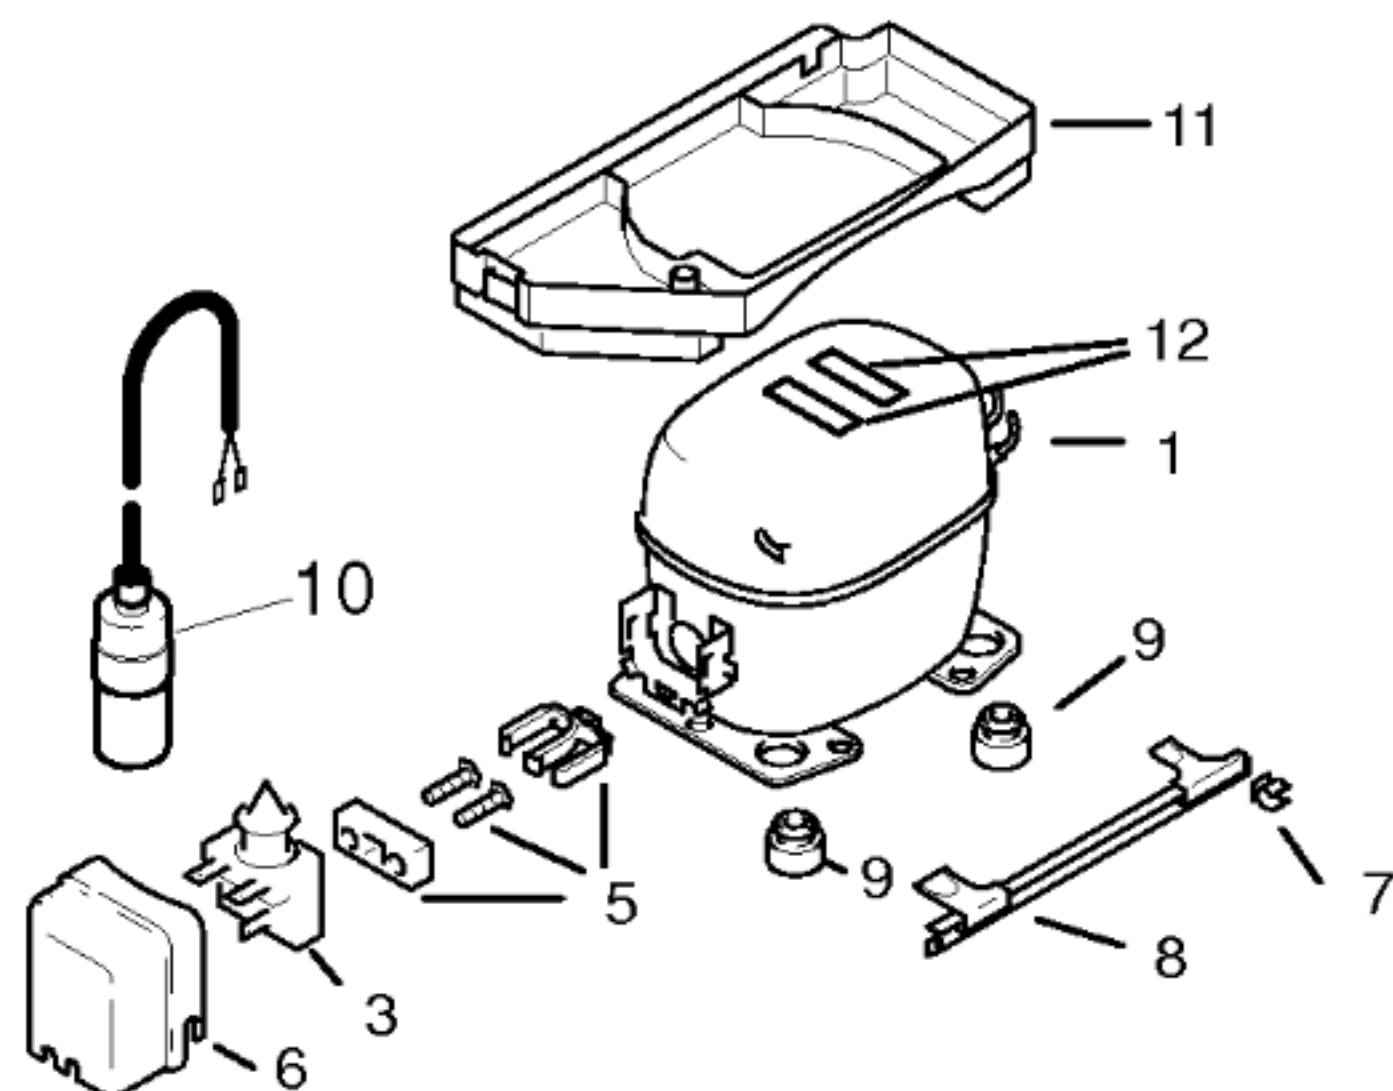

	V01	V02,V03	V04	V05
Pos.	Danfoss TL4K	Danfoss TLY8K	Aspera EMT 32 CLP	Danfoss TLY7K
1	14 1821	14 1657	14 1838	14 1816
2				
3	15 1055	15 1055	17 0880	15 1055
4				
5	15 0760	15 0760	17 0882	15 0760
6	15 1072	15 1072	17 0881	15 1072
7	16 9319	16 9319	16 9319	16 9319
8	26 4879	26 4879	26 4879	26 4879
9	050166	05 0166	05 0166	05 0166
10	16 5852	16 5852		16 5852
11	26 4878	26 4878	26 4878	26 4878
12	05 6008	05 6008	05 6008	05 6008

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur Typ/Type	Danfoss TL4K	Danfoss TLY8K	Aspera EMT 32 CLP	Danfoss TLY 7 K
Förderleistung/Delivery/Débit	l/h 698	1404	1073	1168
Anlaufstrom/Starting current/Cour de démarrage	A 6,9	6,4	3,5	5,7
Widerstand/Resistance/Résistance Ha/main/prin	W 29,0	21,6	28,4	27,1
Hi/aux	W 19,0	26,0	24,7	27,2

Temp.-Regler/Thermostat Typ/Type	Ranco K59	Ranco K59		
Regelstellung/Position	kalt	warm	kalt	warm
Schaltwerte/Switching values	+5,0	+5,0	+5,2	+5,2
Valeurs de commutation	-25,0	-10,0	-32,0	-15,0
"alarm"				

Füllmenge/Fill.quantity/Charge	R600a	*		
--------------------------------	-------	---	--	--

Anschlußwert/Conn.load/Puiss. connectée	W	90	68	67
---	---	----	----	----

Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	W			
Leistung/Power/Puissance	W			

Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	W			

Temp.-Regler/Thermostat				
-------------------------	--	--	--	--

Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	W			
Spannung/Voltage/Tension	V			