



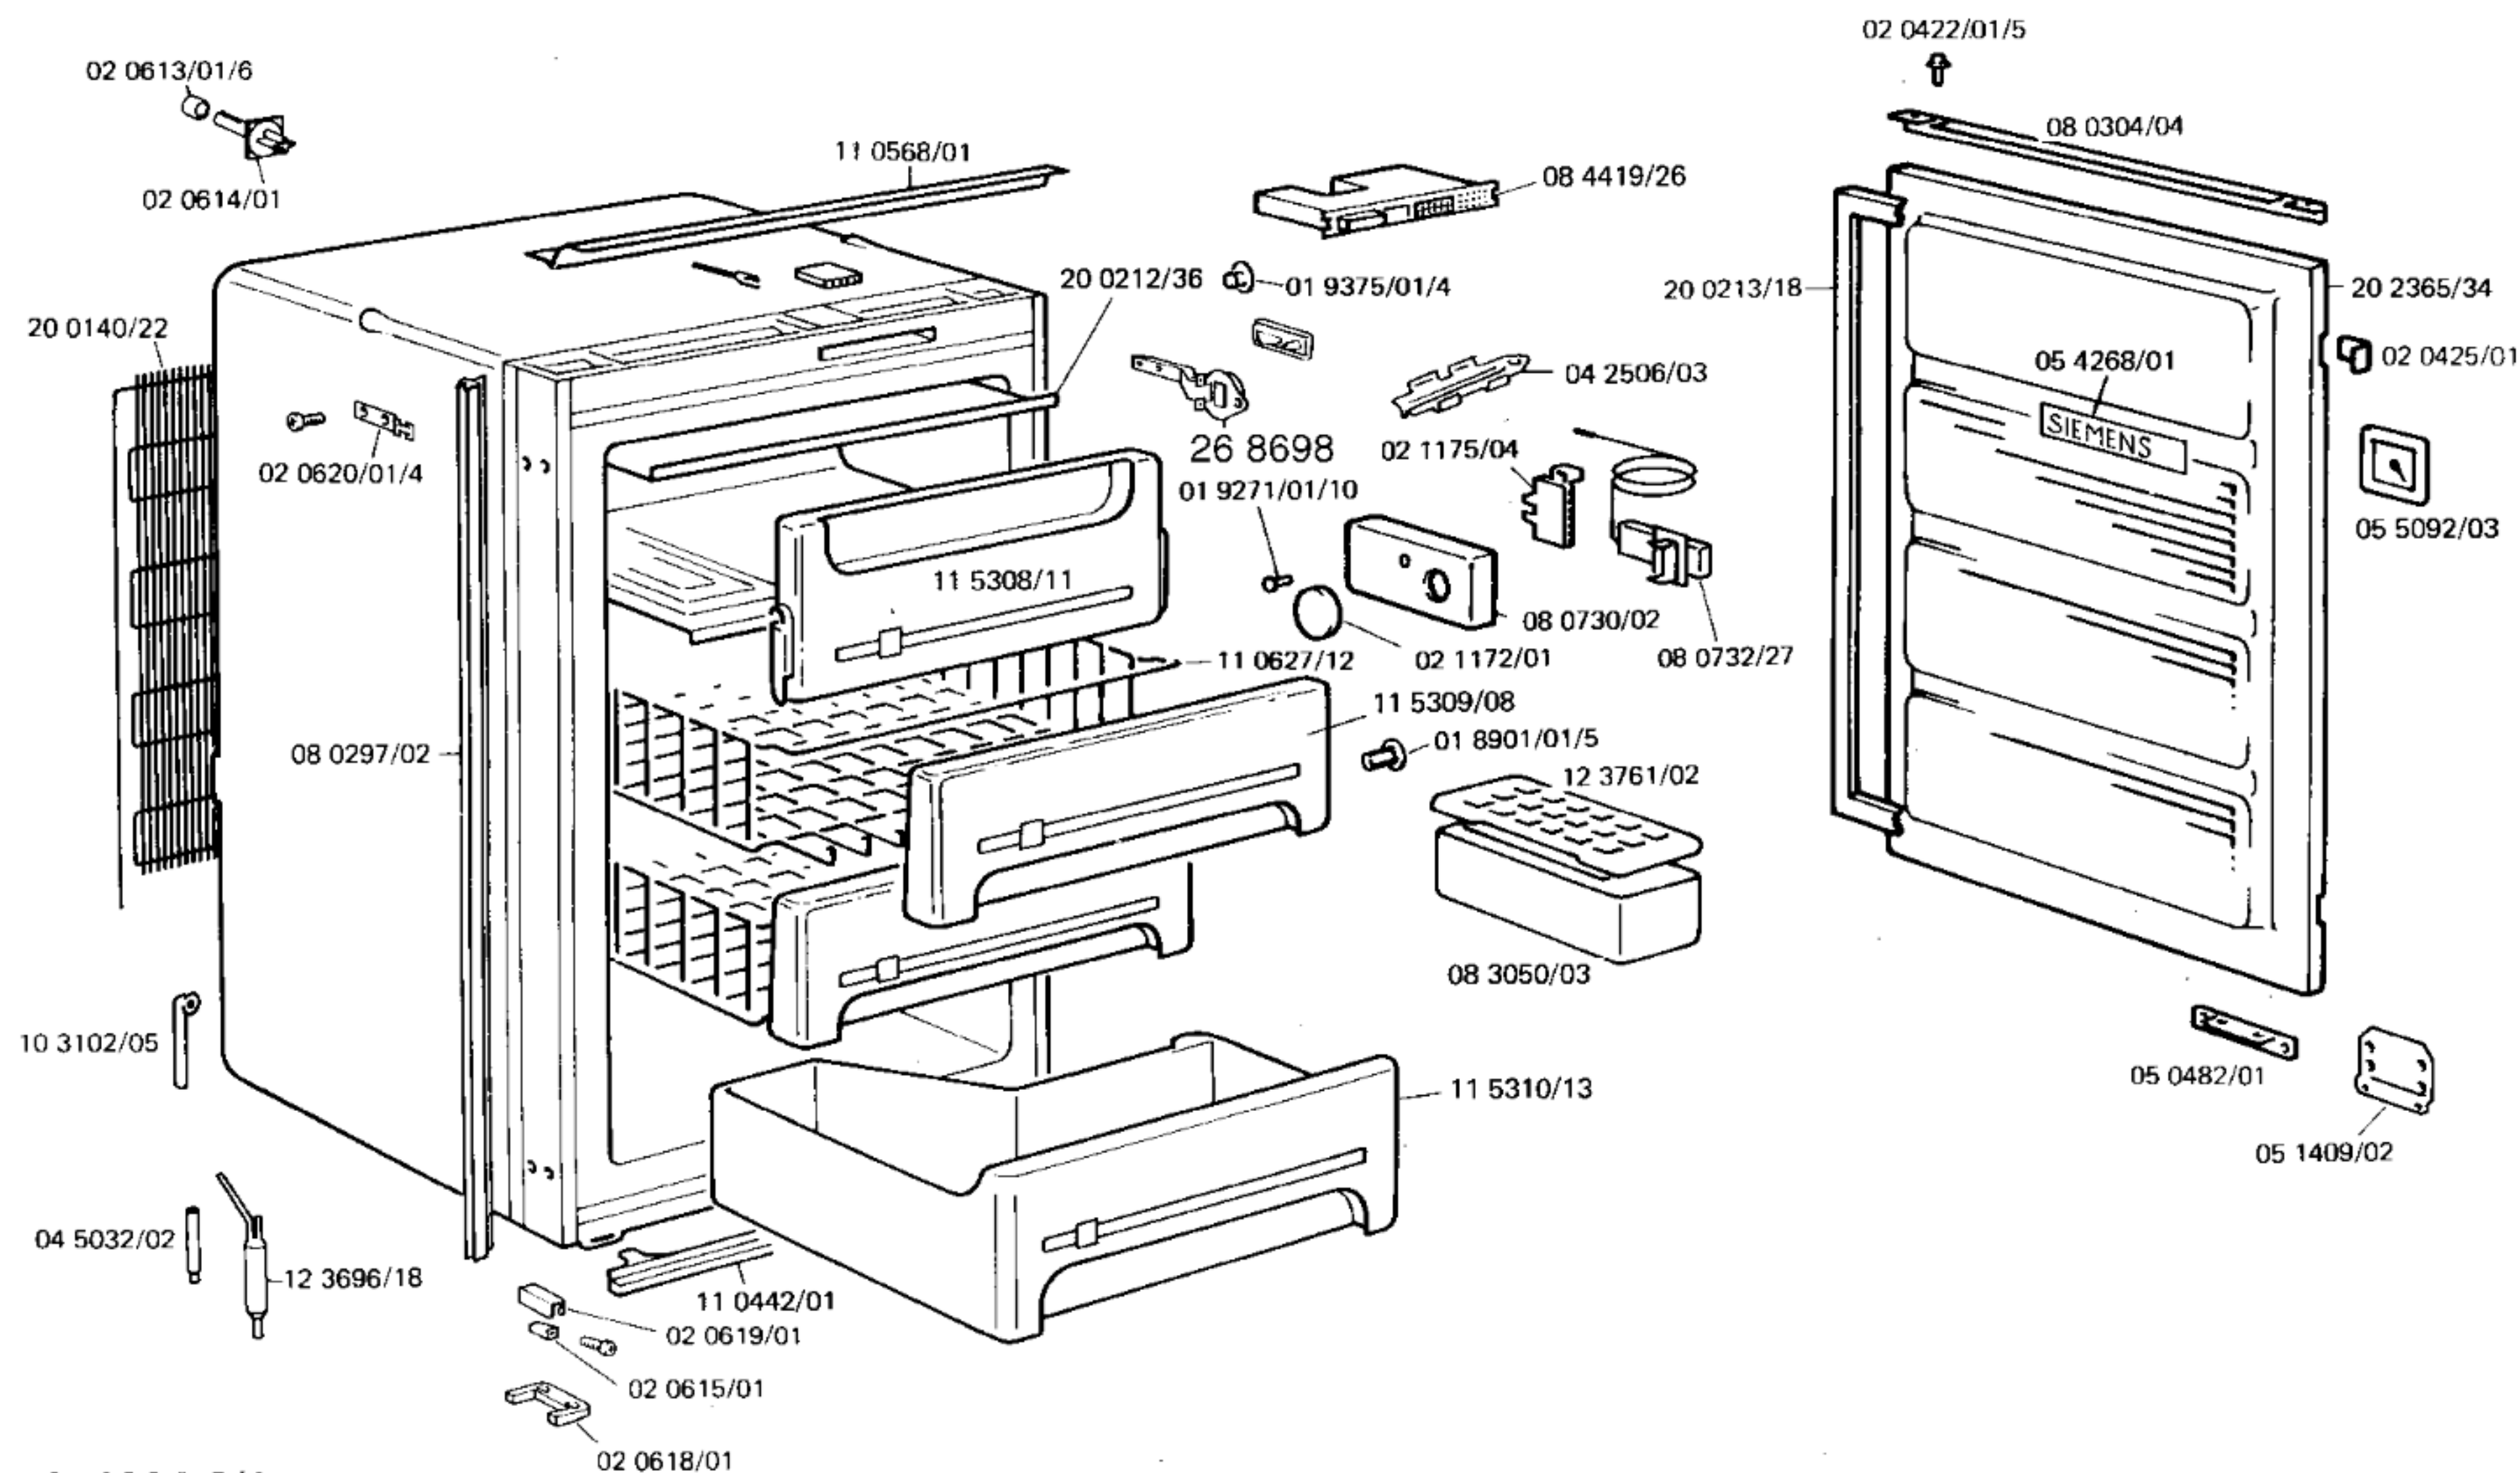

51 0384/00
D1, F1, CH1, SF1
Aufstellanleitung
(D, GB, F, I, NL, DK, N,
S, SF, E)

51 1079/00
D1, CH1, F1, GB1, SF1
Gebrauchsanweisung
(D, GB, F, I, NL, DK, N, S, SF, E)

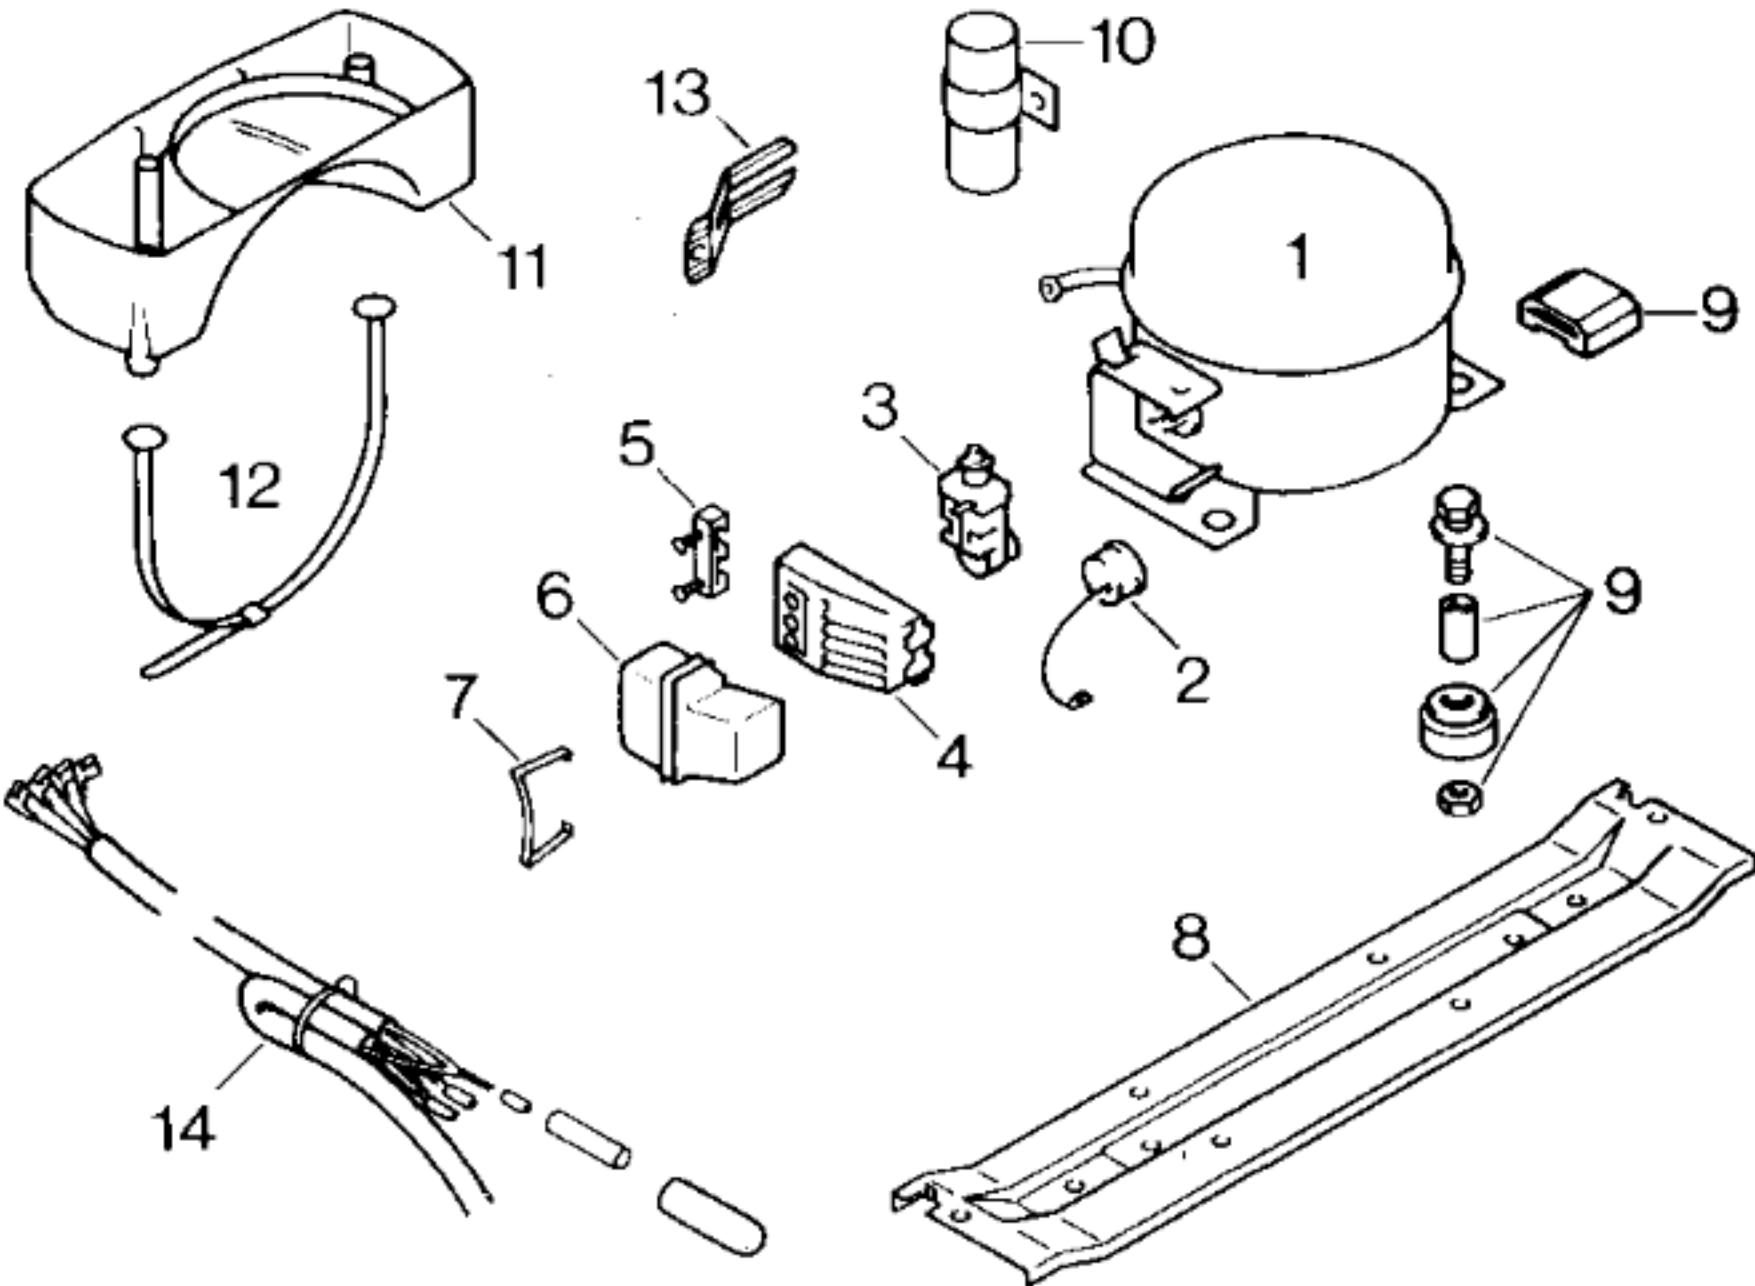

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 5 A		
Förderleistung/Delivery/Débit		l/h	V 920	
Anlaufstrom/Starting current/Cour. de démarrage		A	9,2	
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	15,7
		Hi/aux	Ω	18,8
Temp.-Regler/Thermostat		M + J		
Typ/Type		TF 57 SF		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		„ein“	°C	- 28 - 19
Valeurs de commutation		„aus“		- 34 - 26
		(„abtauen“ od.)	„alarm“	- 20 - 15
Füllmenge/Fill.quantity/Charge		R12	g	90
Anschlußwert/Conn.load/Puiss. connectée		W	120	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

Pos.	Danfoss			
1	14 0065/45			
2				
3	02 0108/27			
4				
5				
6	05 1413/05			
7				
8	11 0437/04			
9	05 0166/05			
10				
11				
12				
13				
14				