



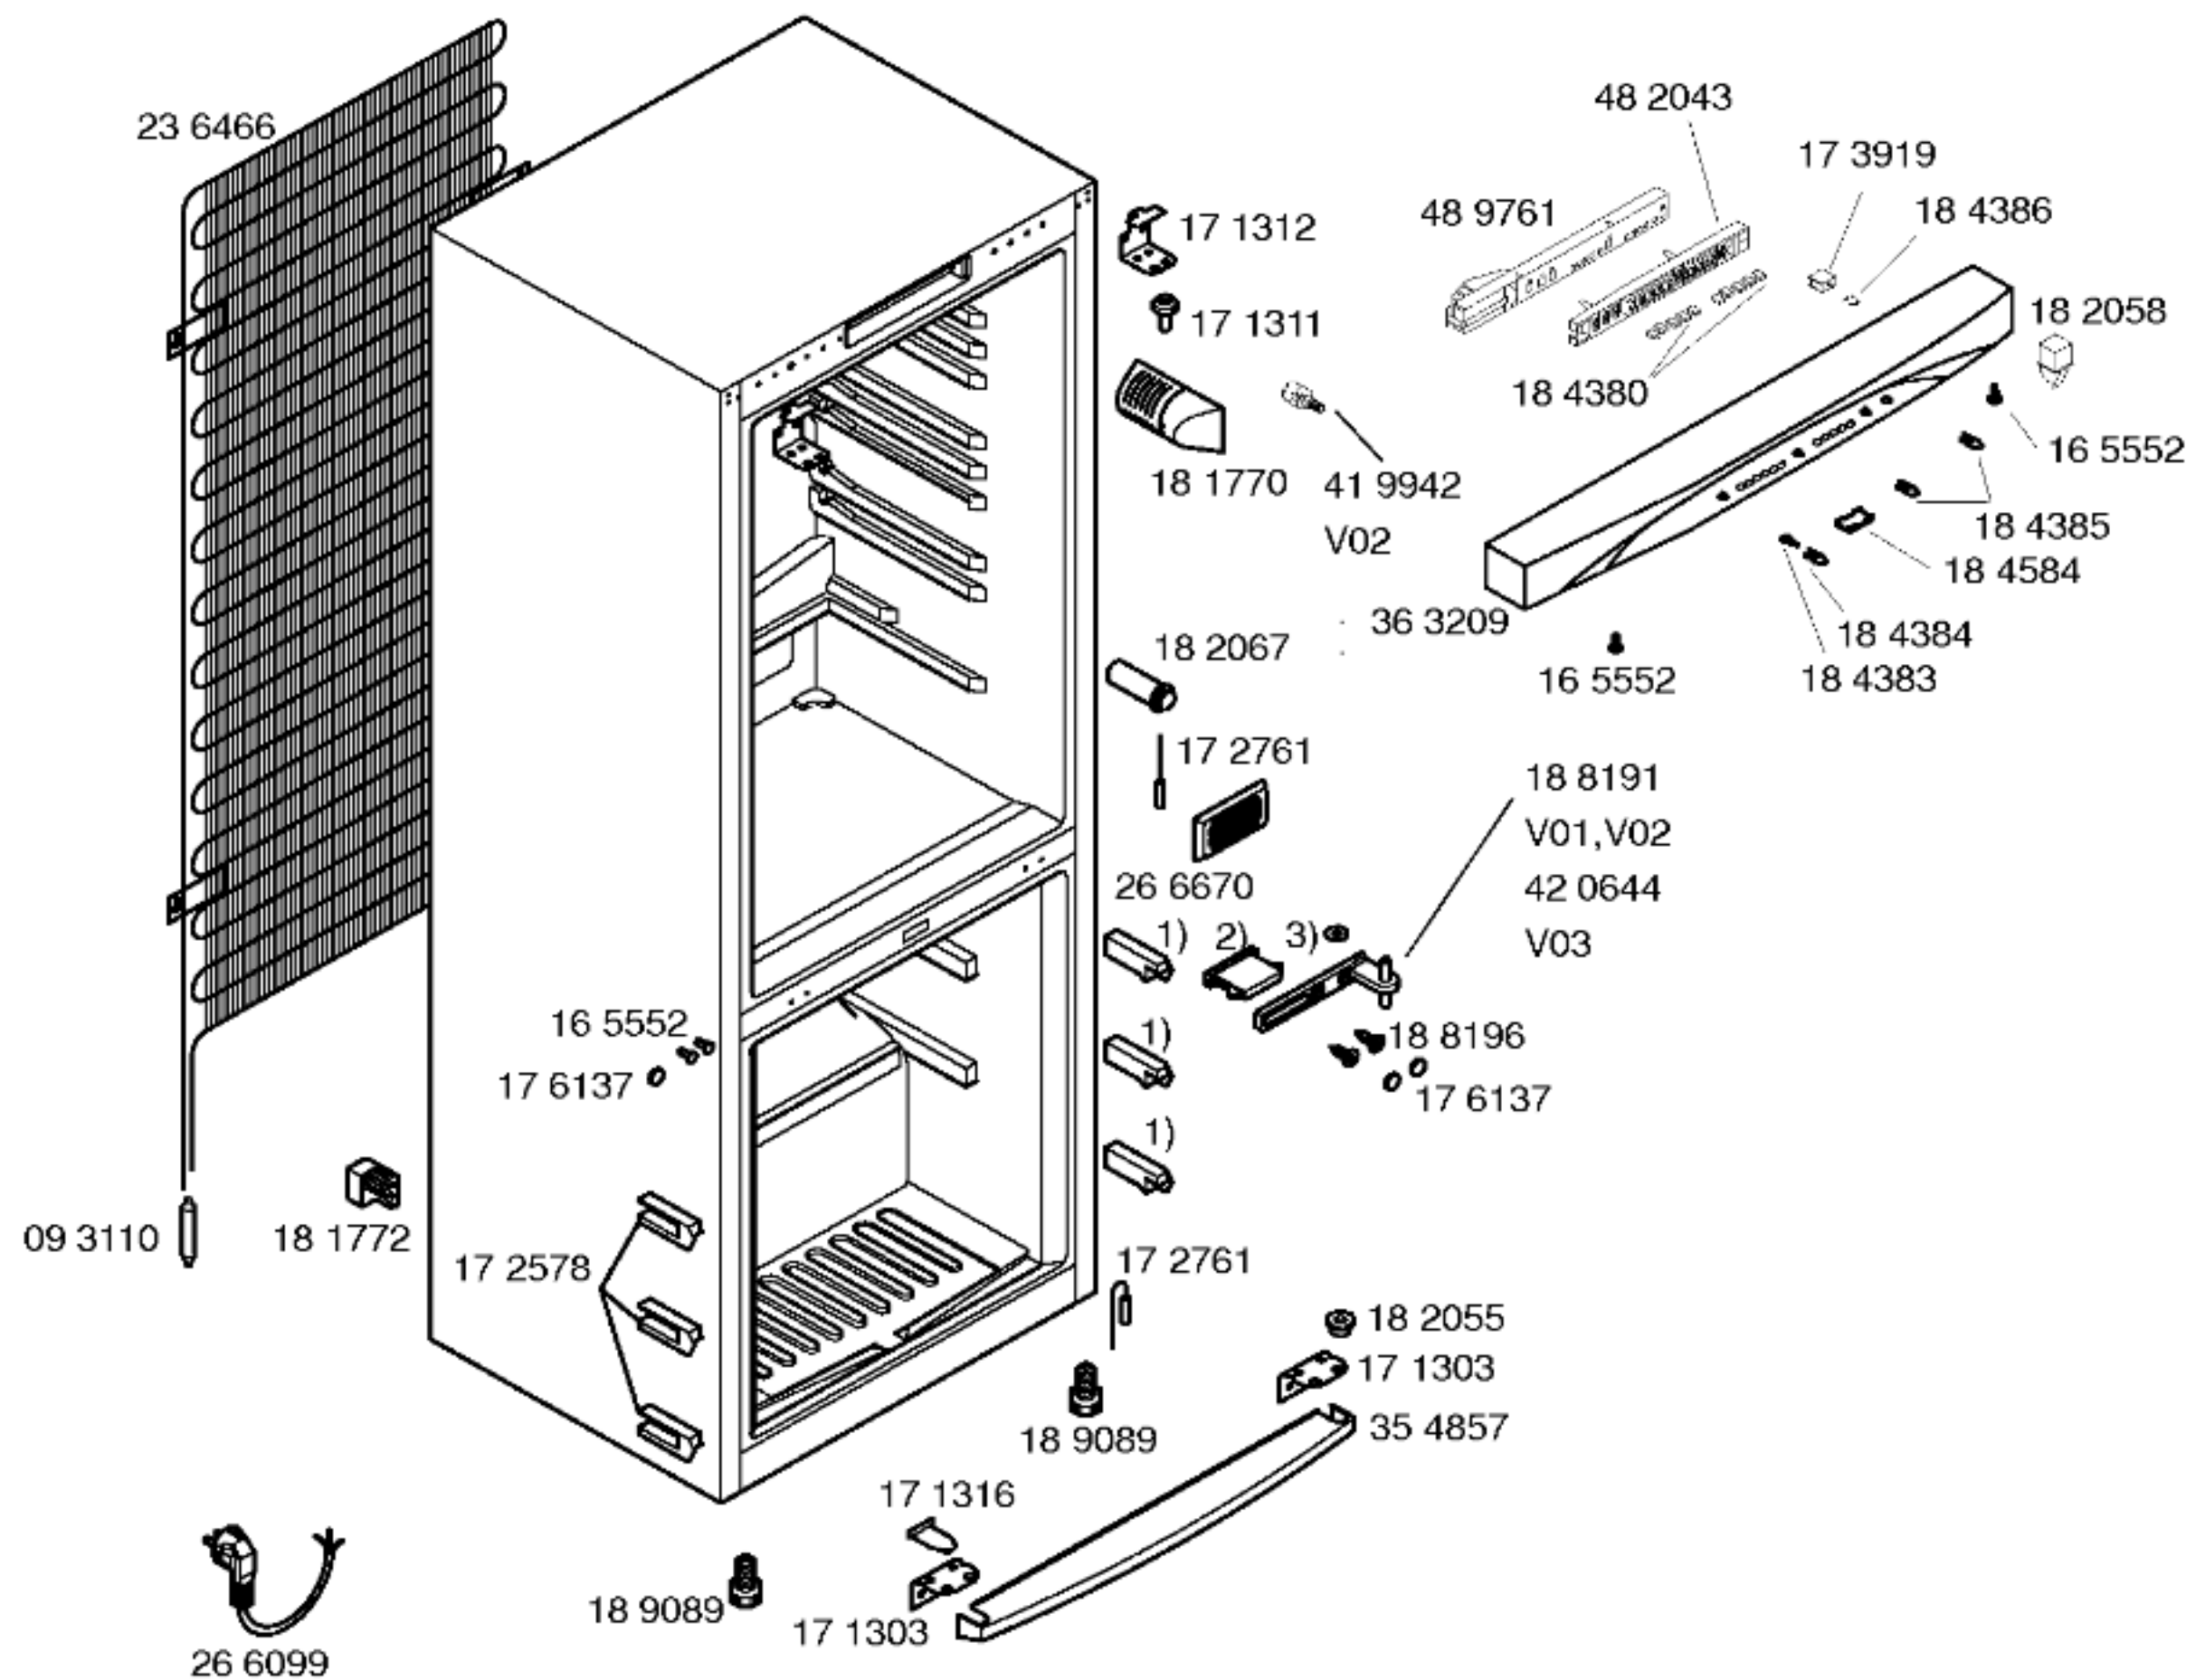

Mat. - Nr. - Konstante
3740

Gebrauchsanweisung
58 5561

- 1) 17 2579
- 2) 41 8128
- 3) 17 2256

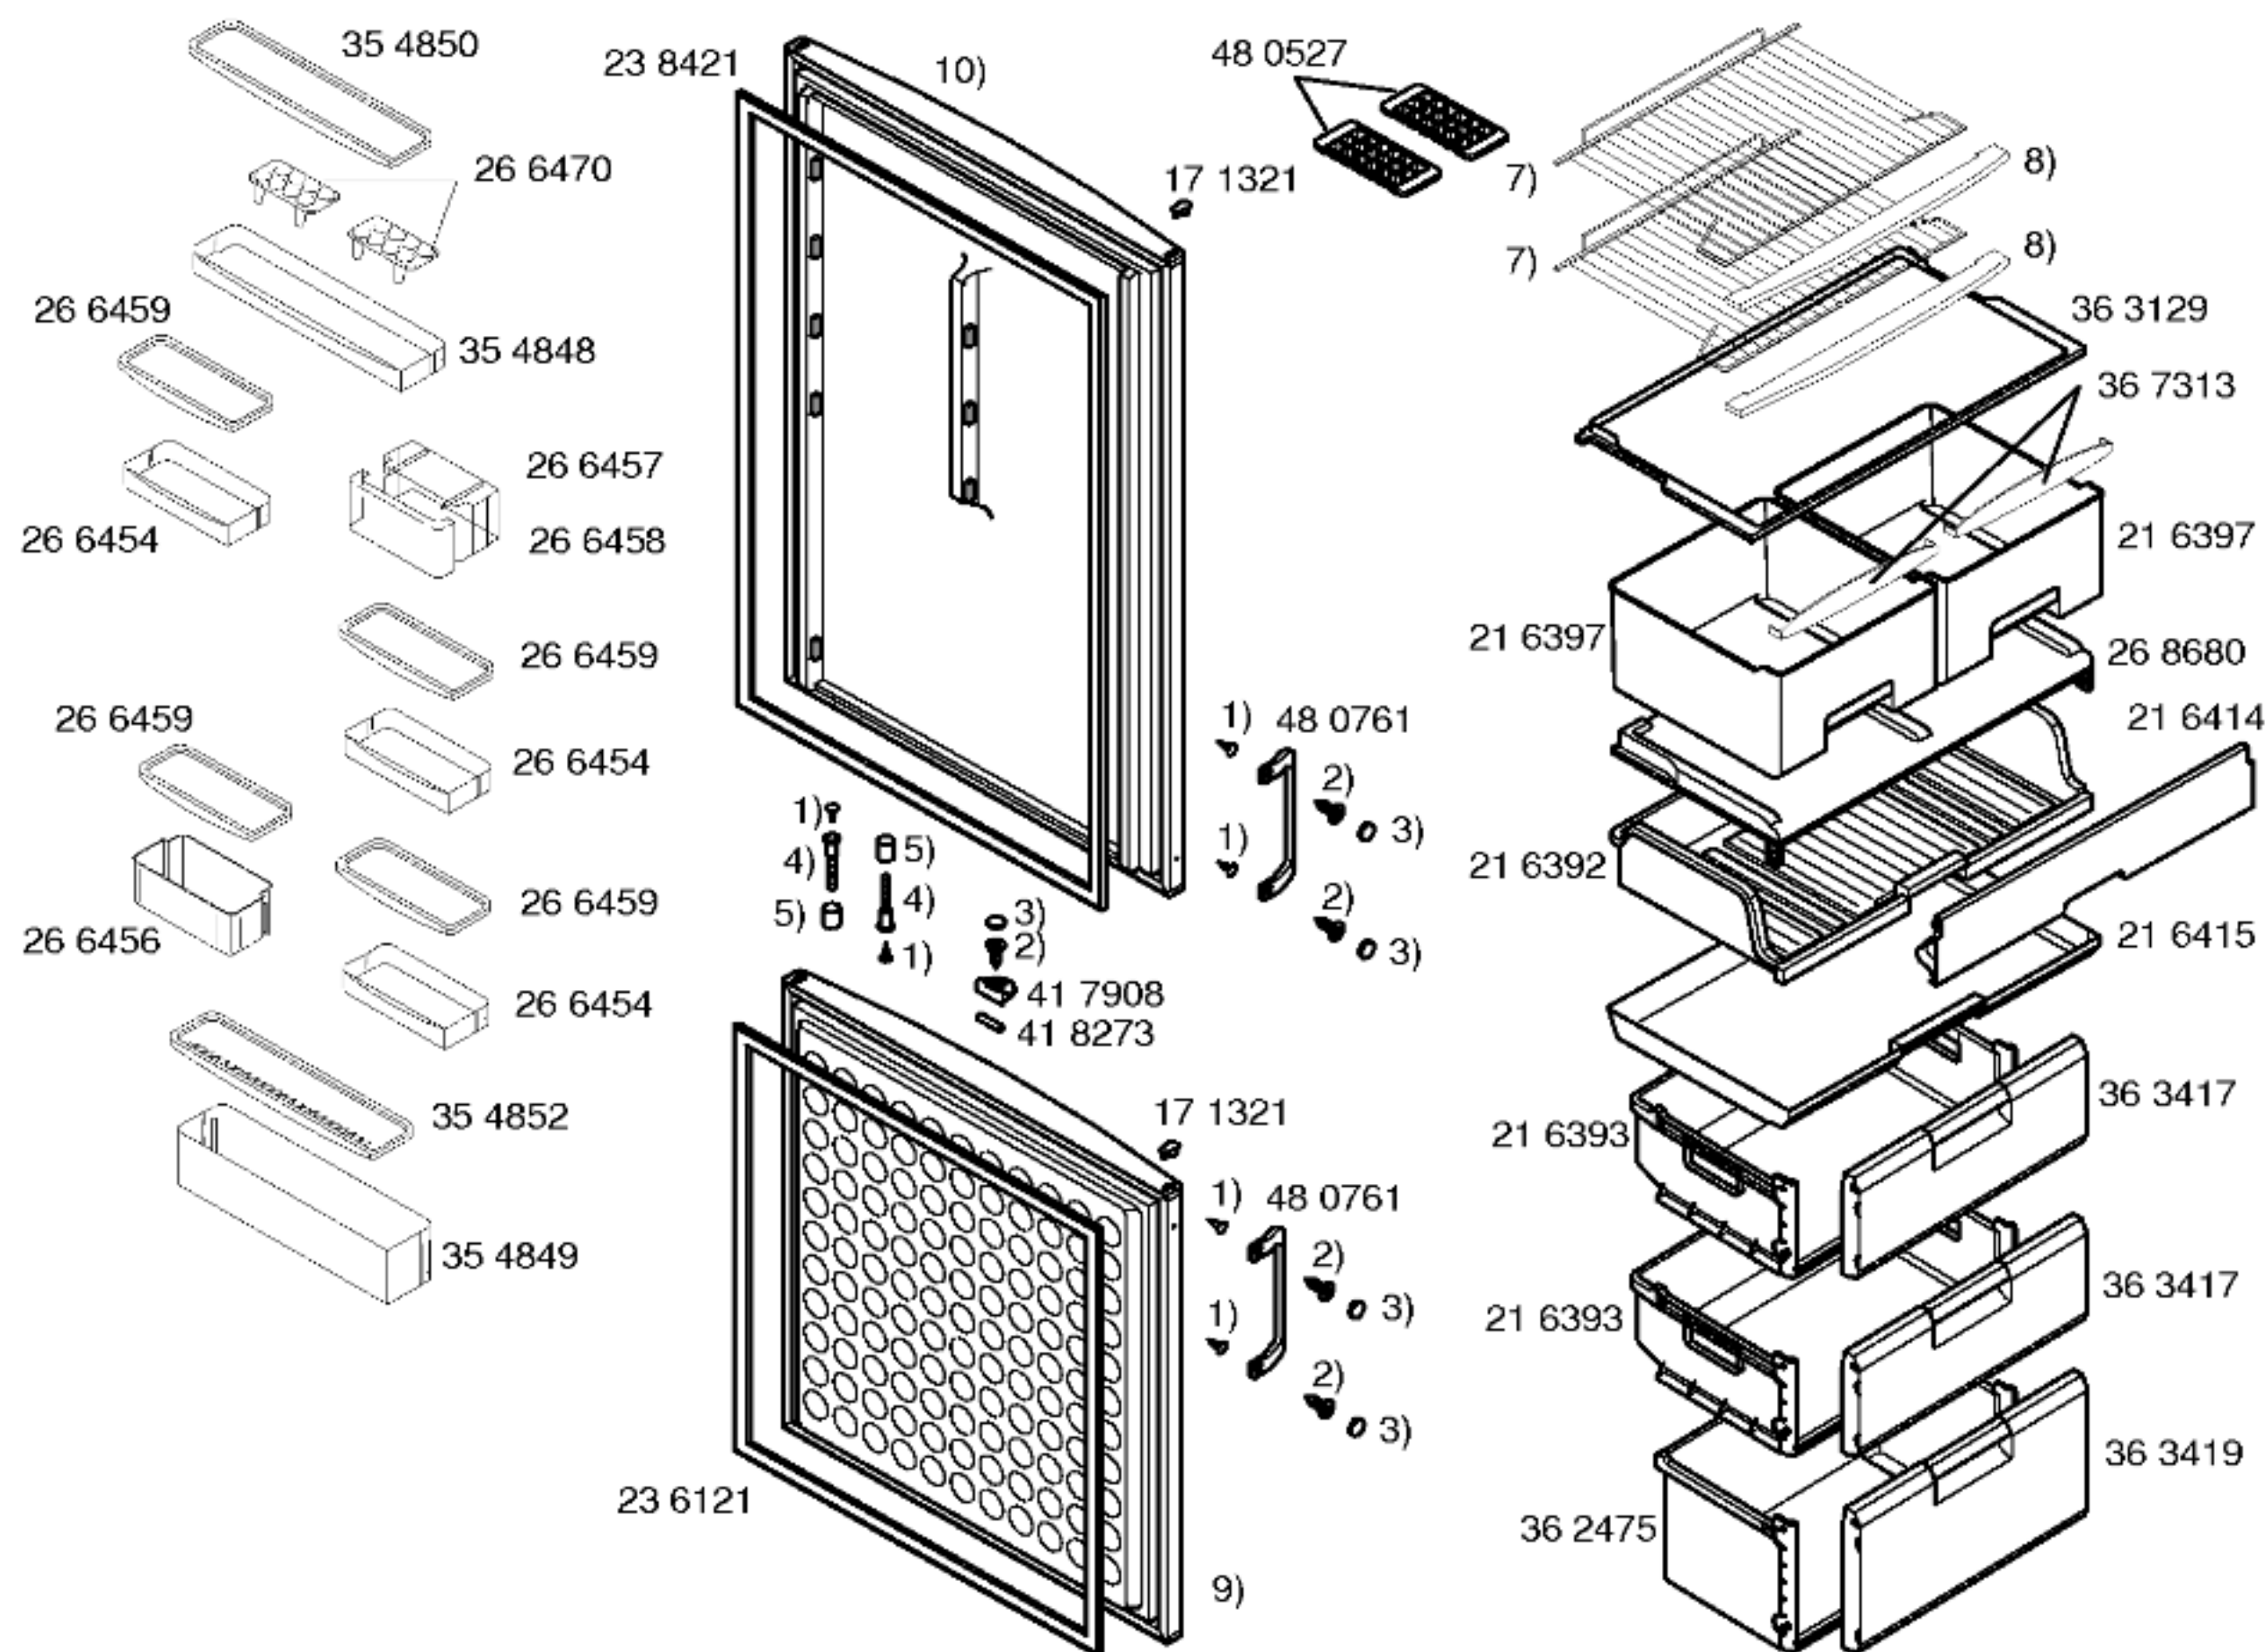



Mat. - Nr. - Konstante
3740

- 1) 16 6484
- 2) 17 2274
- 3) 16 5557
- 4) 18 8194
- 5) 18 8188
- 7) 35 4314
- 8) 35 4164
- 9) 47 0111
- V01
- 24 0666
- V02,V03
- 10) 23 9599
- V01,V02
- 24 1045
- V03

Mat. - Nr. - Konstante
3740

1) 43 2966

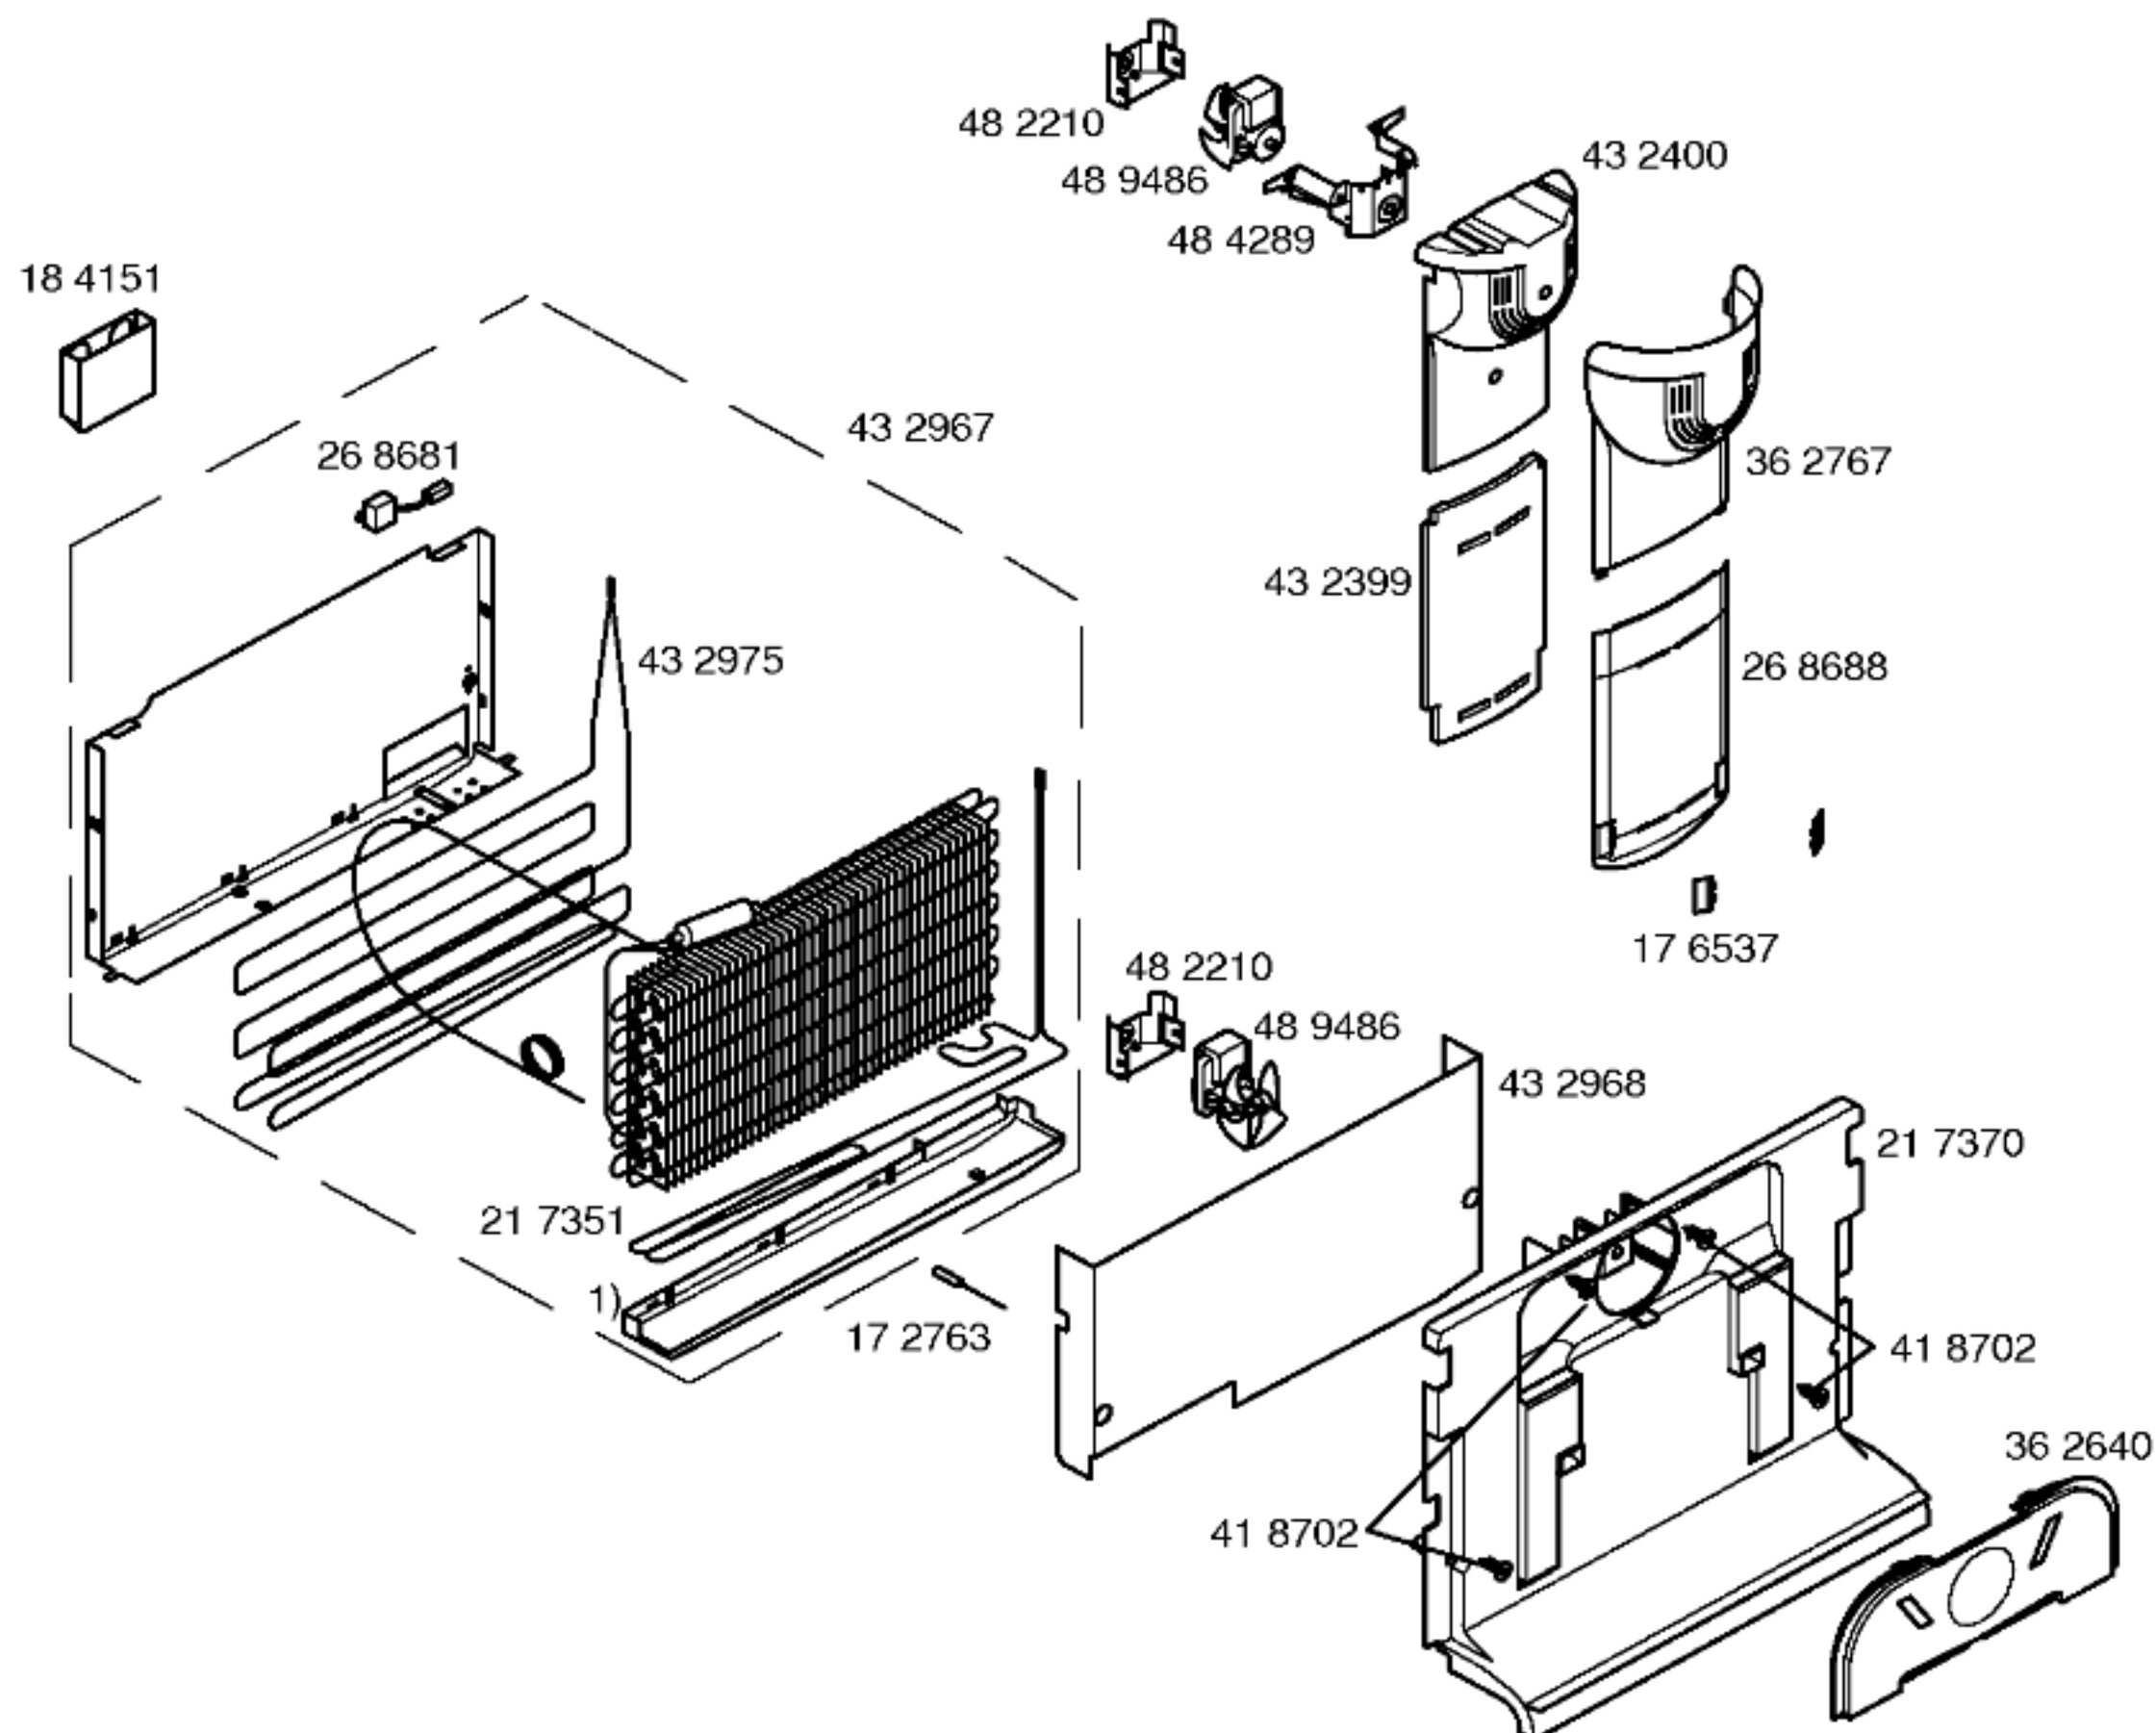

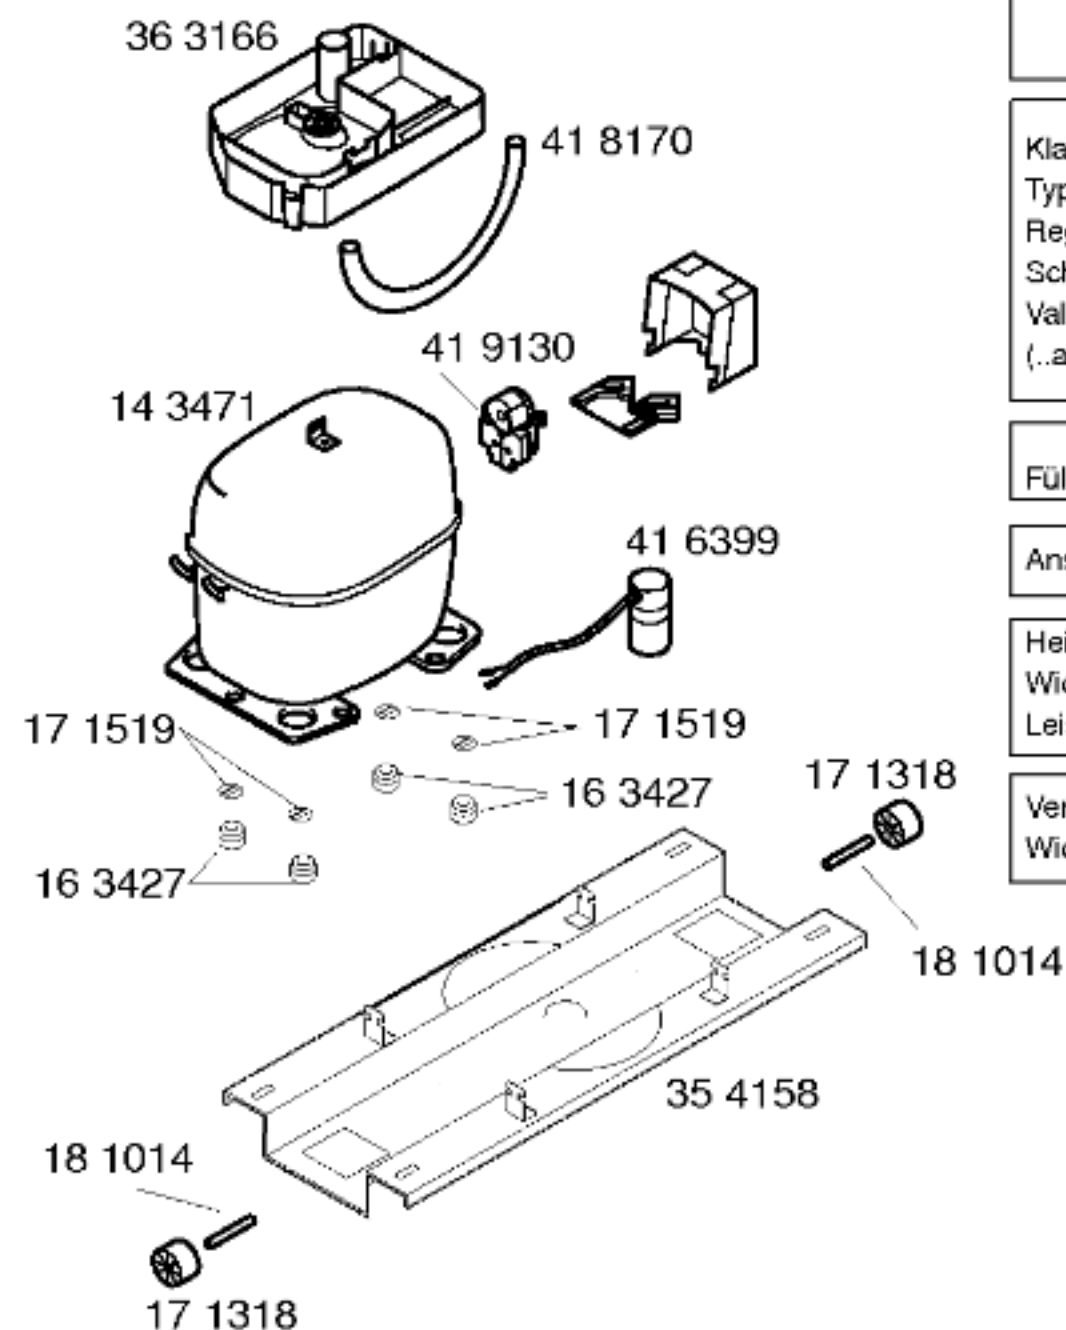

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Aspera NBU1118Y		
Klappe Therm./Thermostat/Termostat Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'			
Füllmenge/Fill. quantily/Charge/Carga R600	g	45	
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W		
Heizung/Heater/Chaufrage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia	KΩ W		4
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	KΩ	Verdichter	Verdampfer

Mat. – Nr. – Konstante
3740