


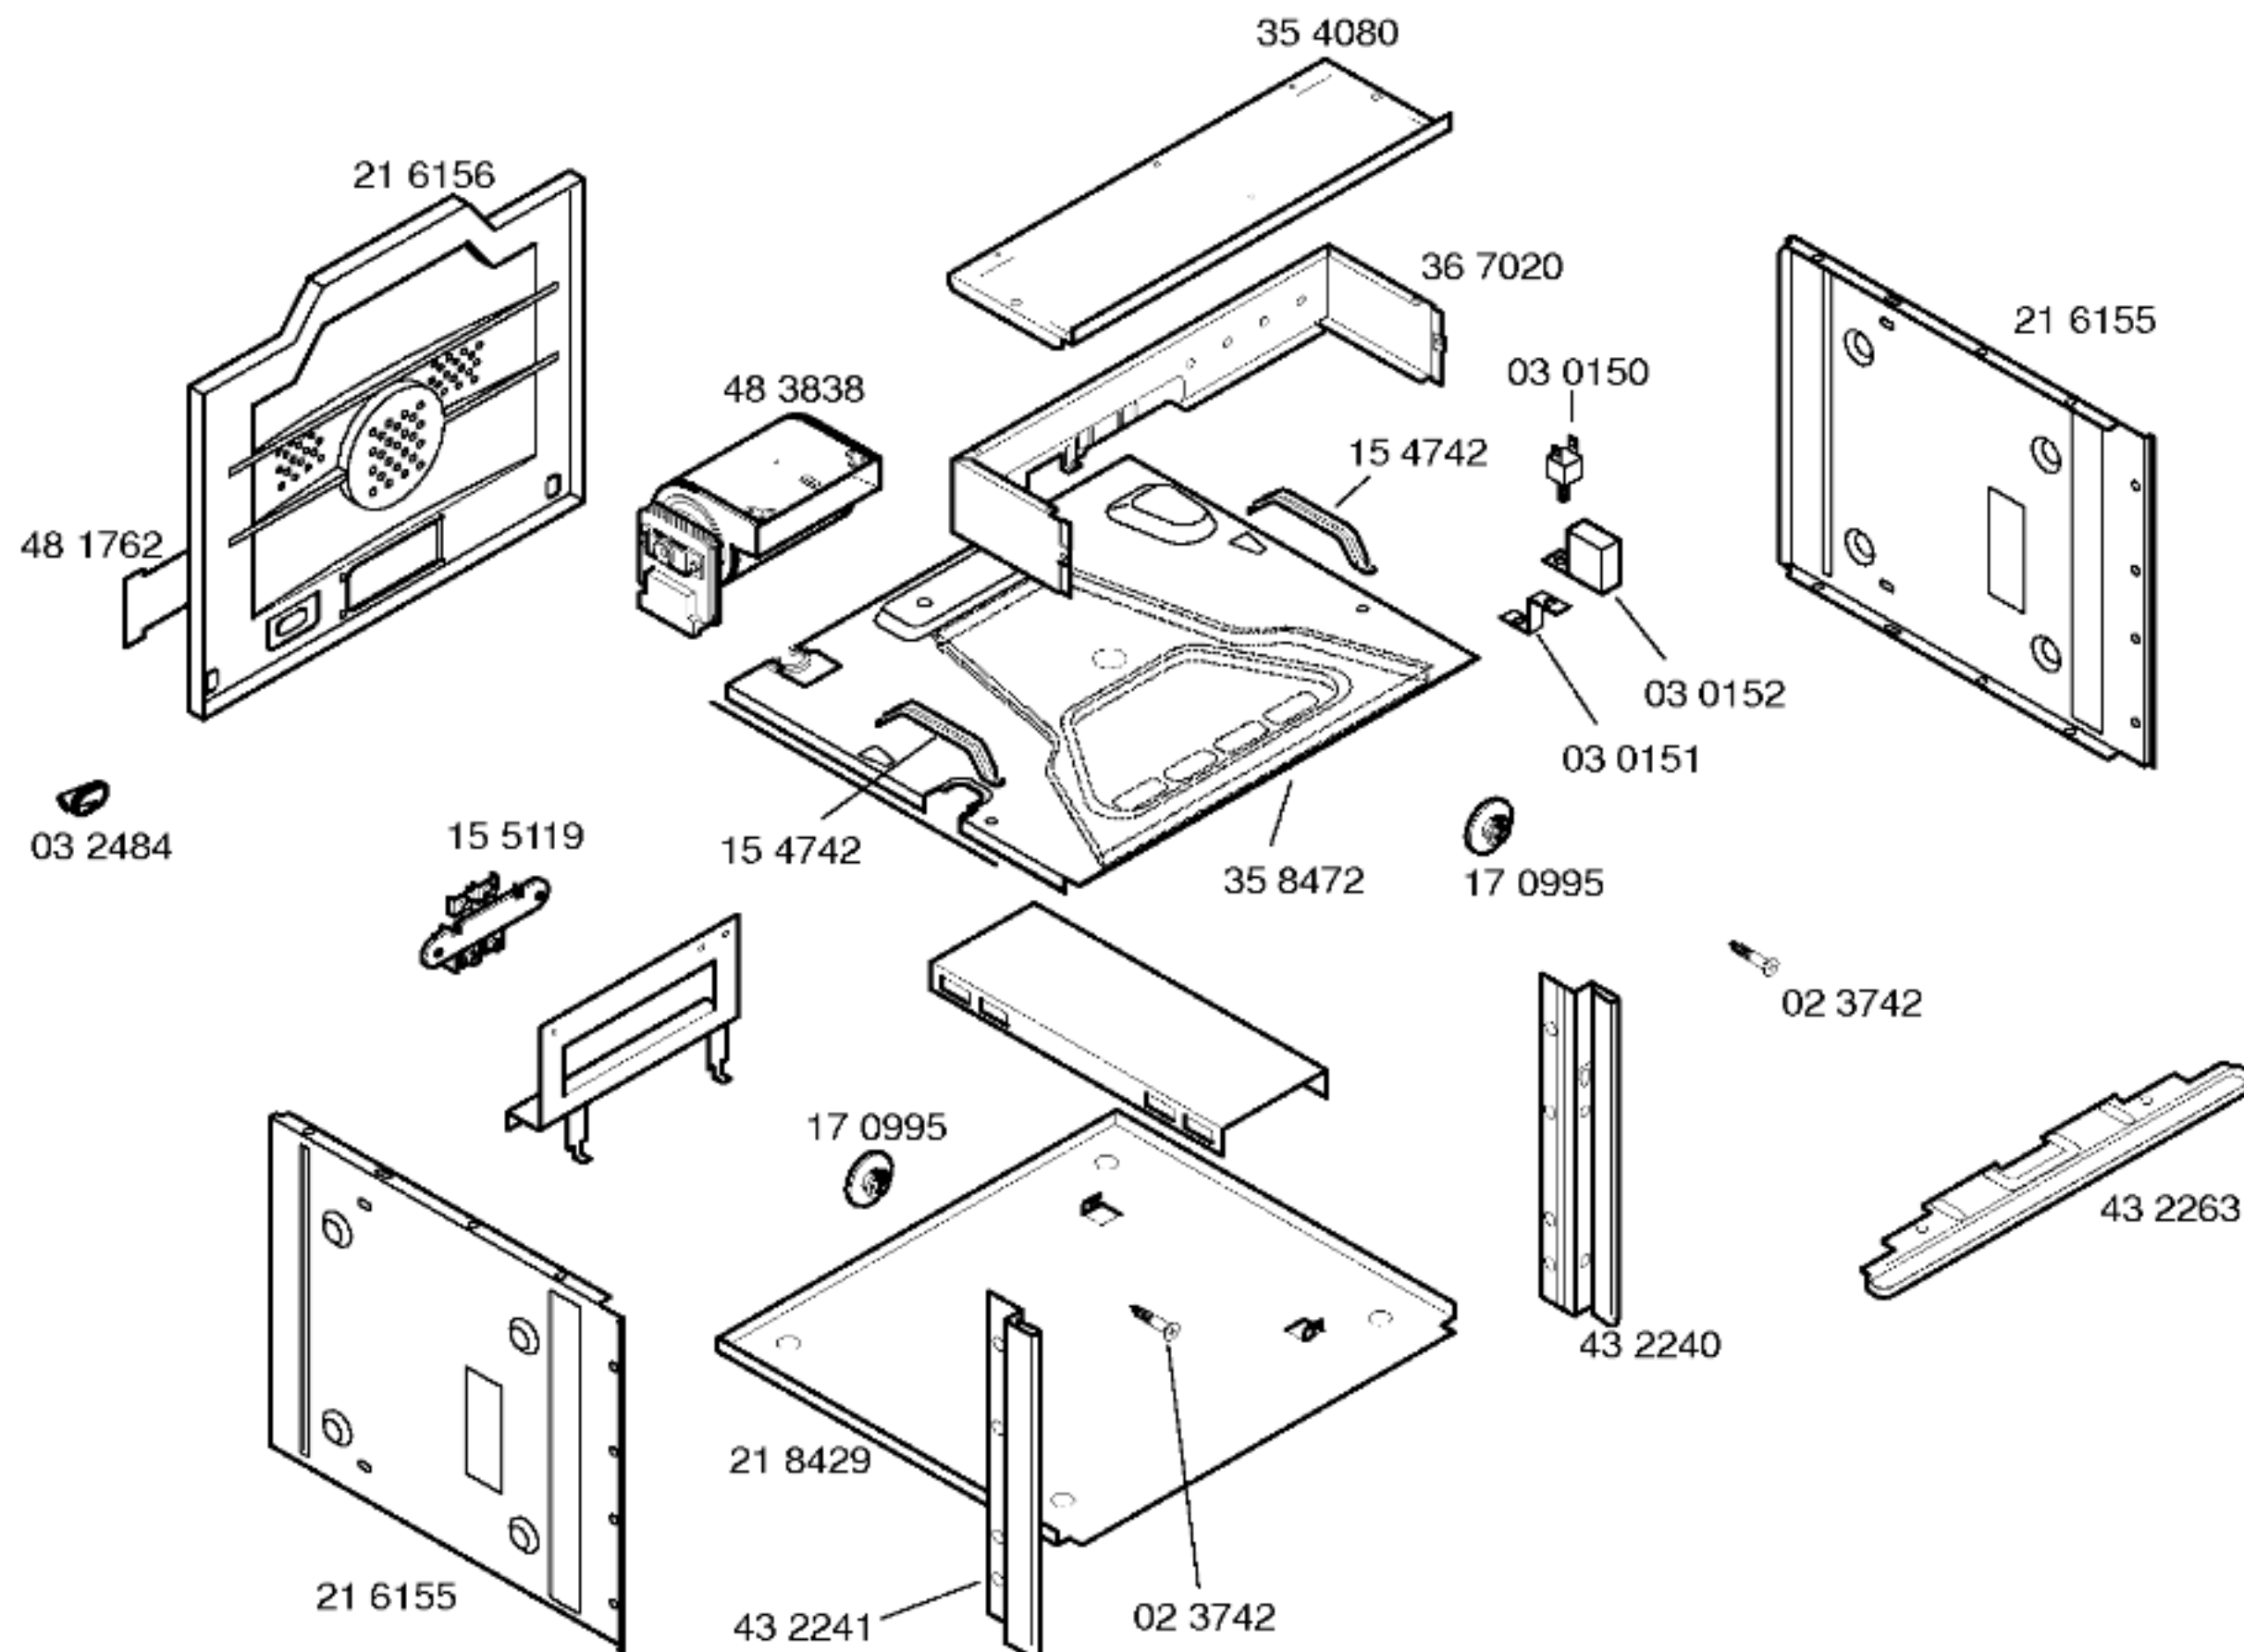


Gebrauchsanweisung
58 6316
(de,en)
Gebrauchsanweisung
58 6317
(fr,nl,it,es,el)
Montageanleitung
51 7991
(de,el,fr,nl,it,es,el)
Kochbuch
58 6292
(de,el,fr,nl,it,es)


Zubehör:

Dampfgarer
N8640X2


Bratrost engmaschig
Z1440X0
Bratrost gekröpft
Z1430X0
Backblech, Alu
Z1330X0
Backblech, email
Z1340X2
Bratenblech
Z1510X2
Brotbackstein
Z1910X0
Grillpfanne u. Bratrost
Z1230X2
Auflaufform
Z1270X2

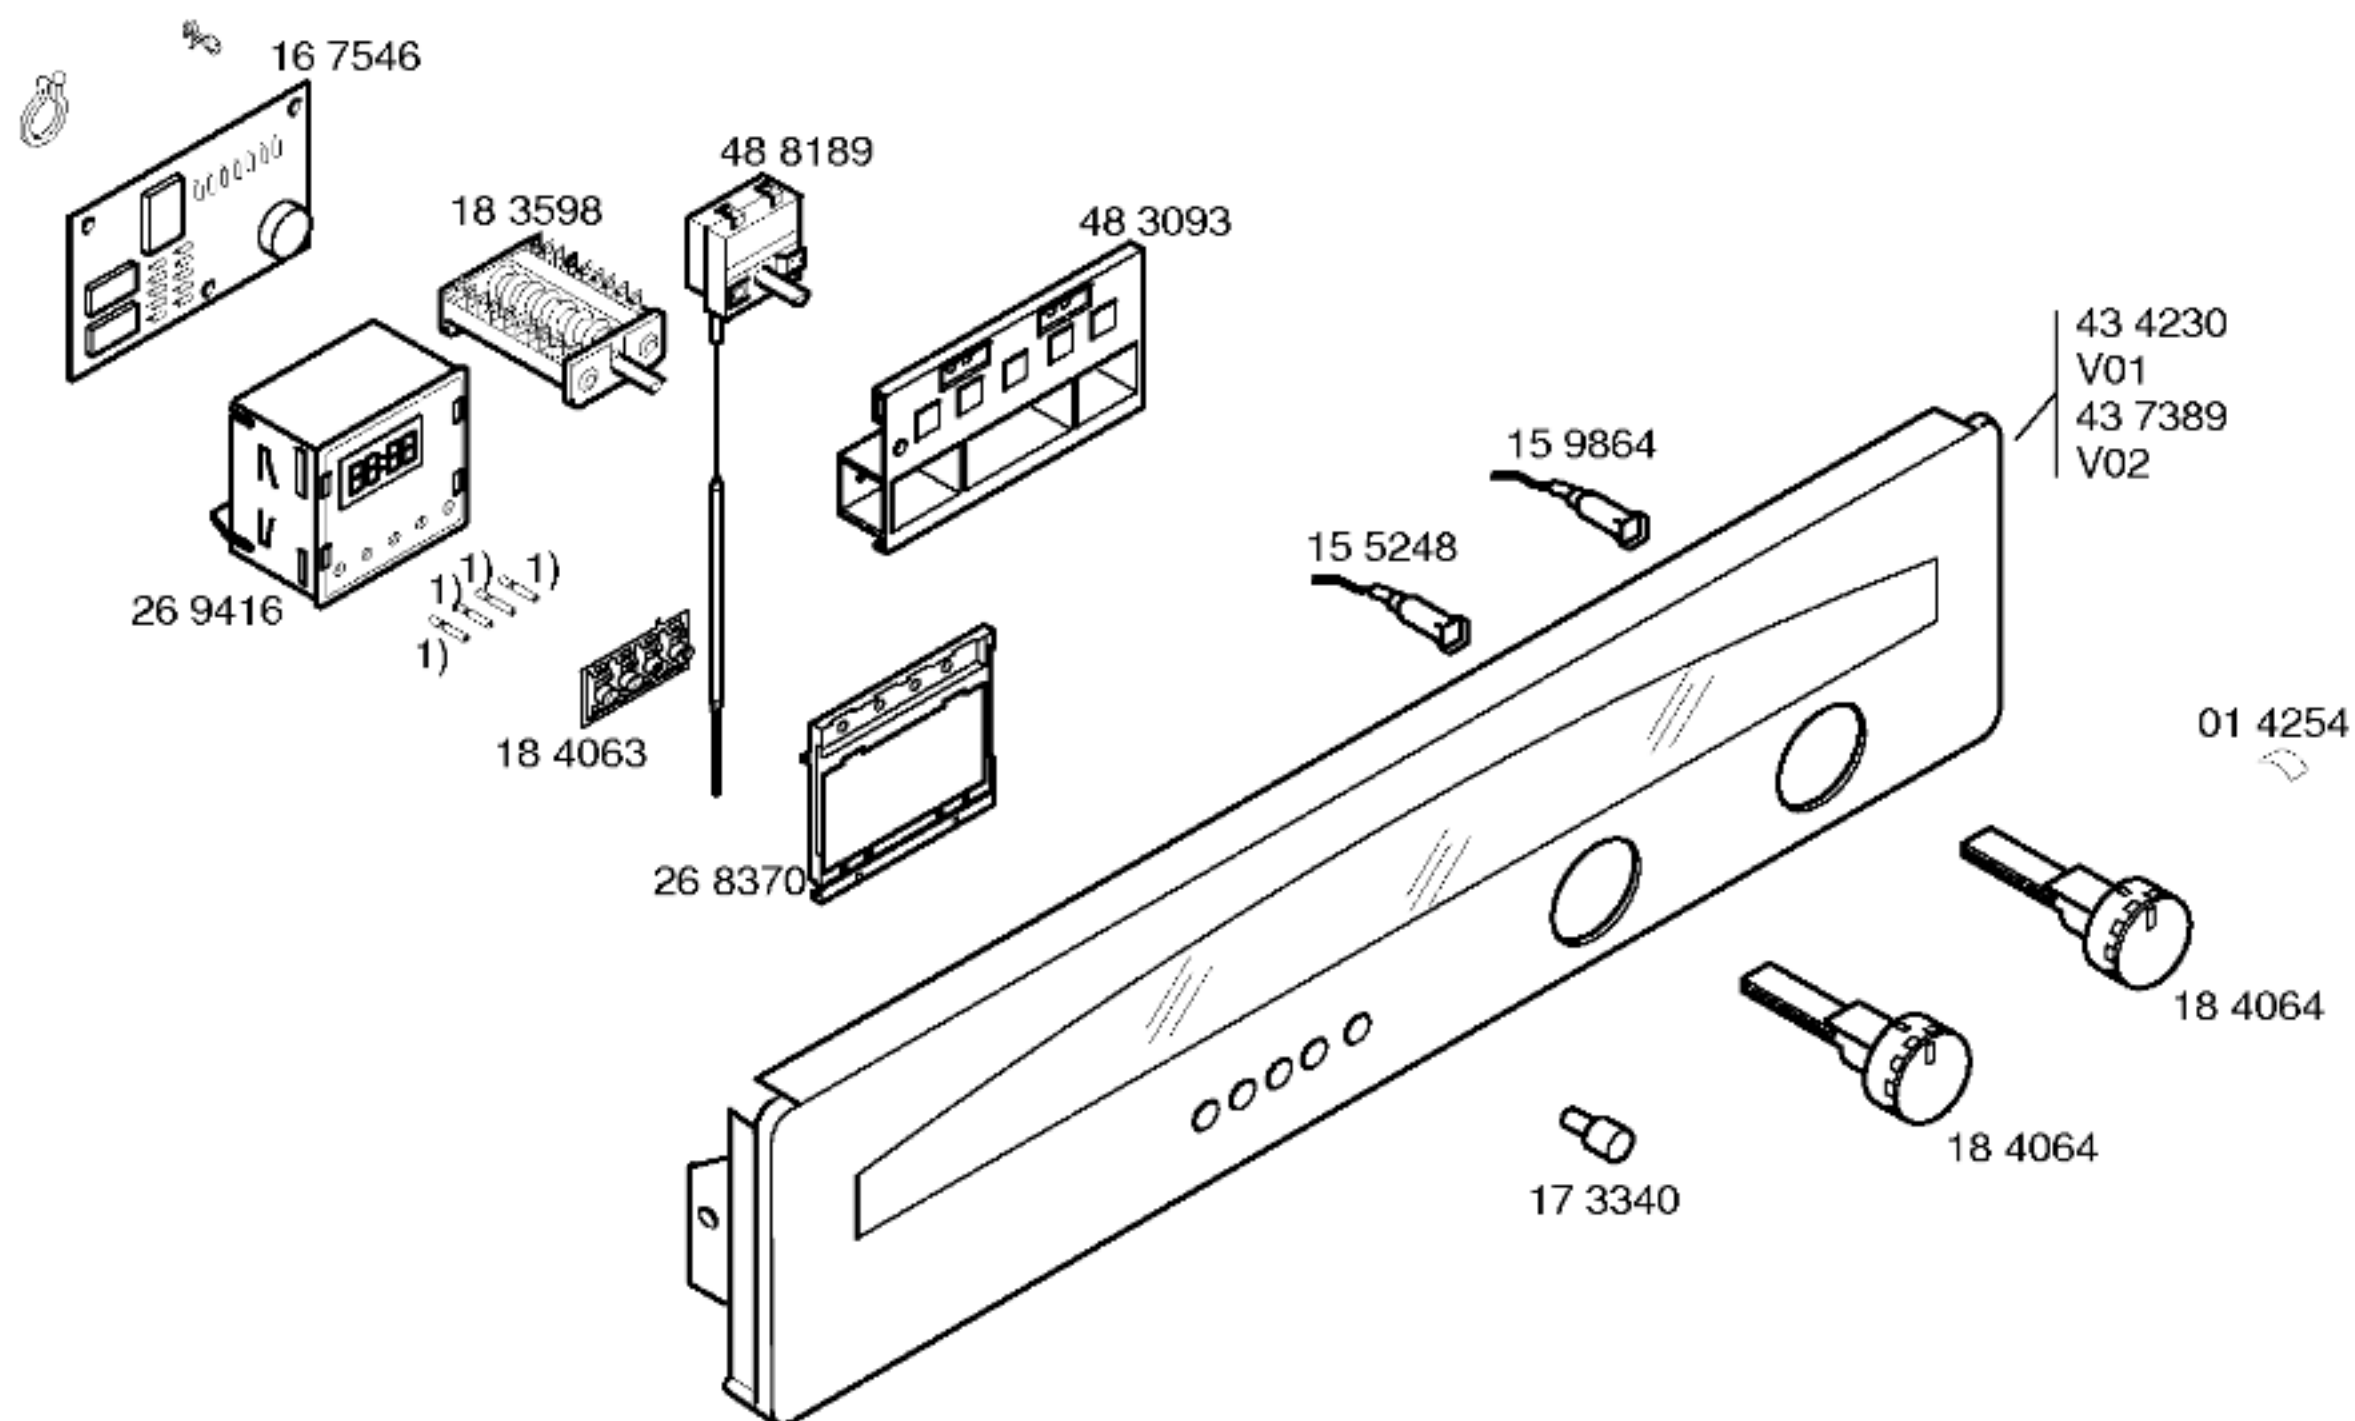

1) 16 8588

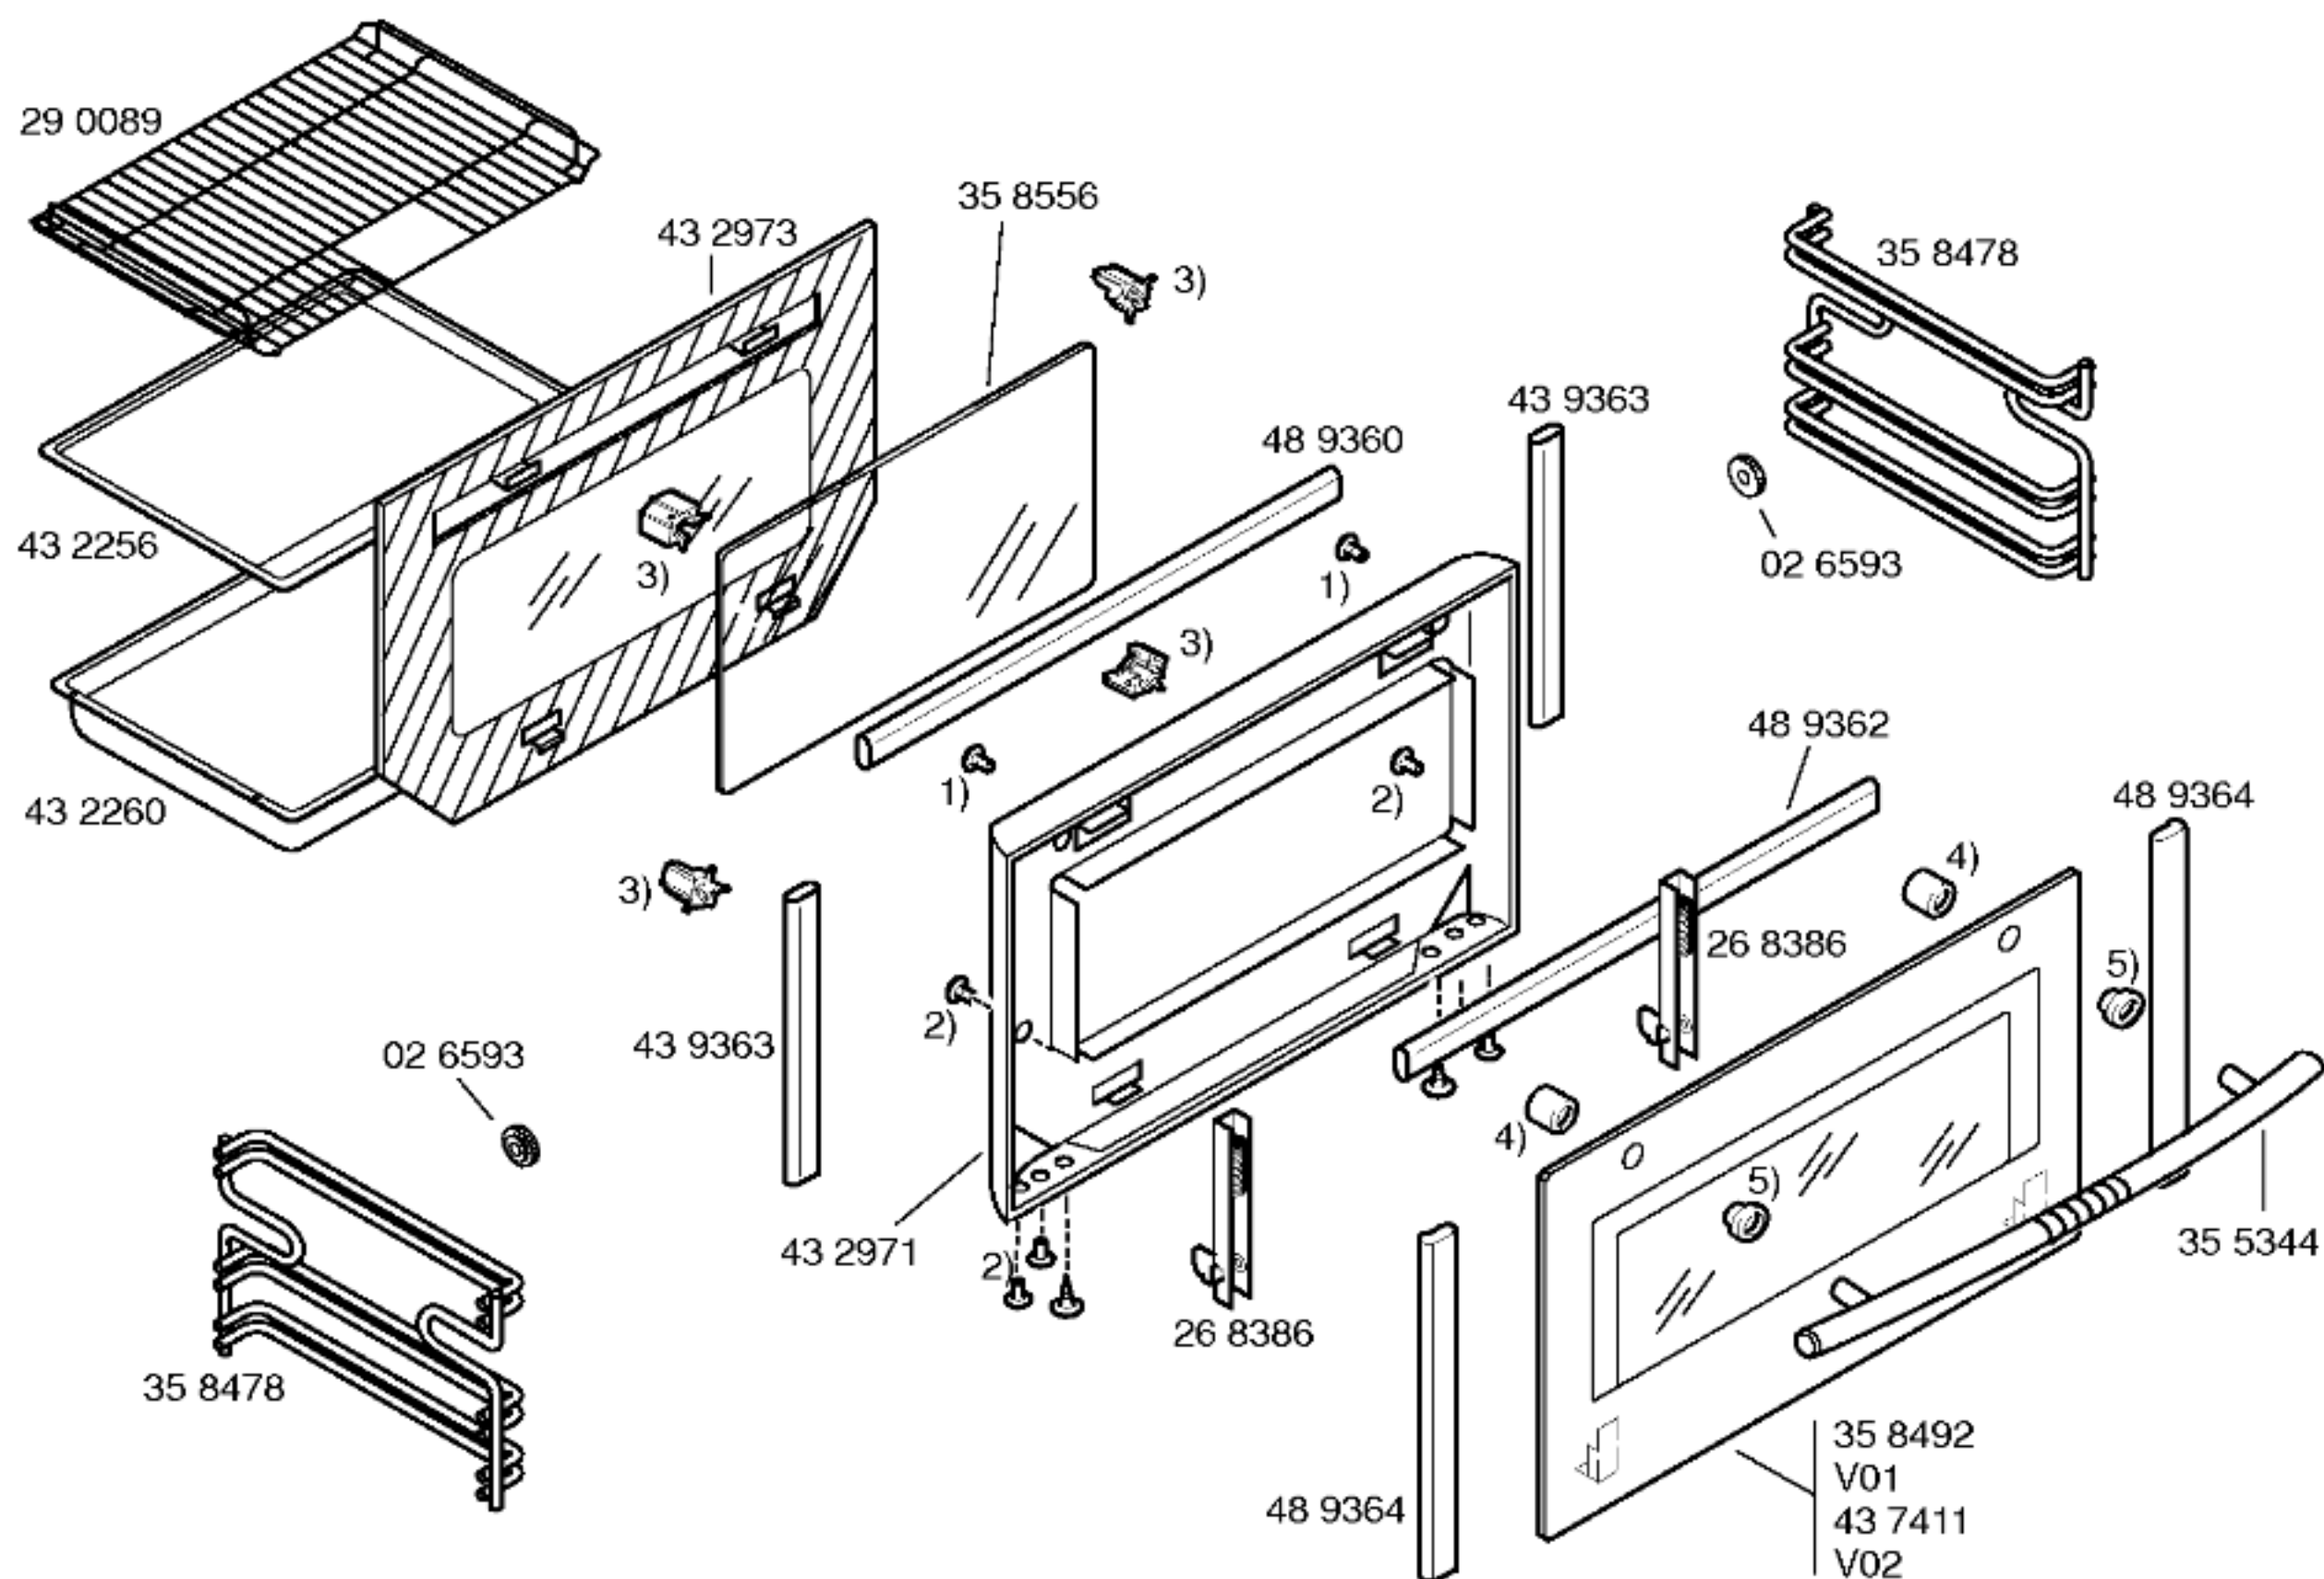

- 1) 17 2765
- 2) 17 2646
- 3) 41 8561
- 4) 17 2643
- 5) 17 2645

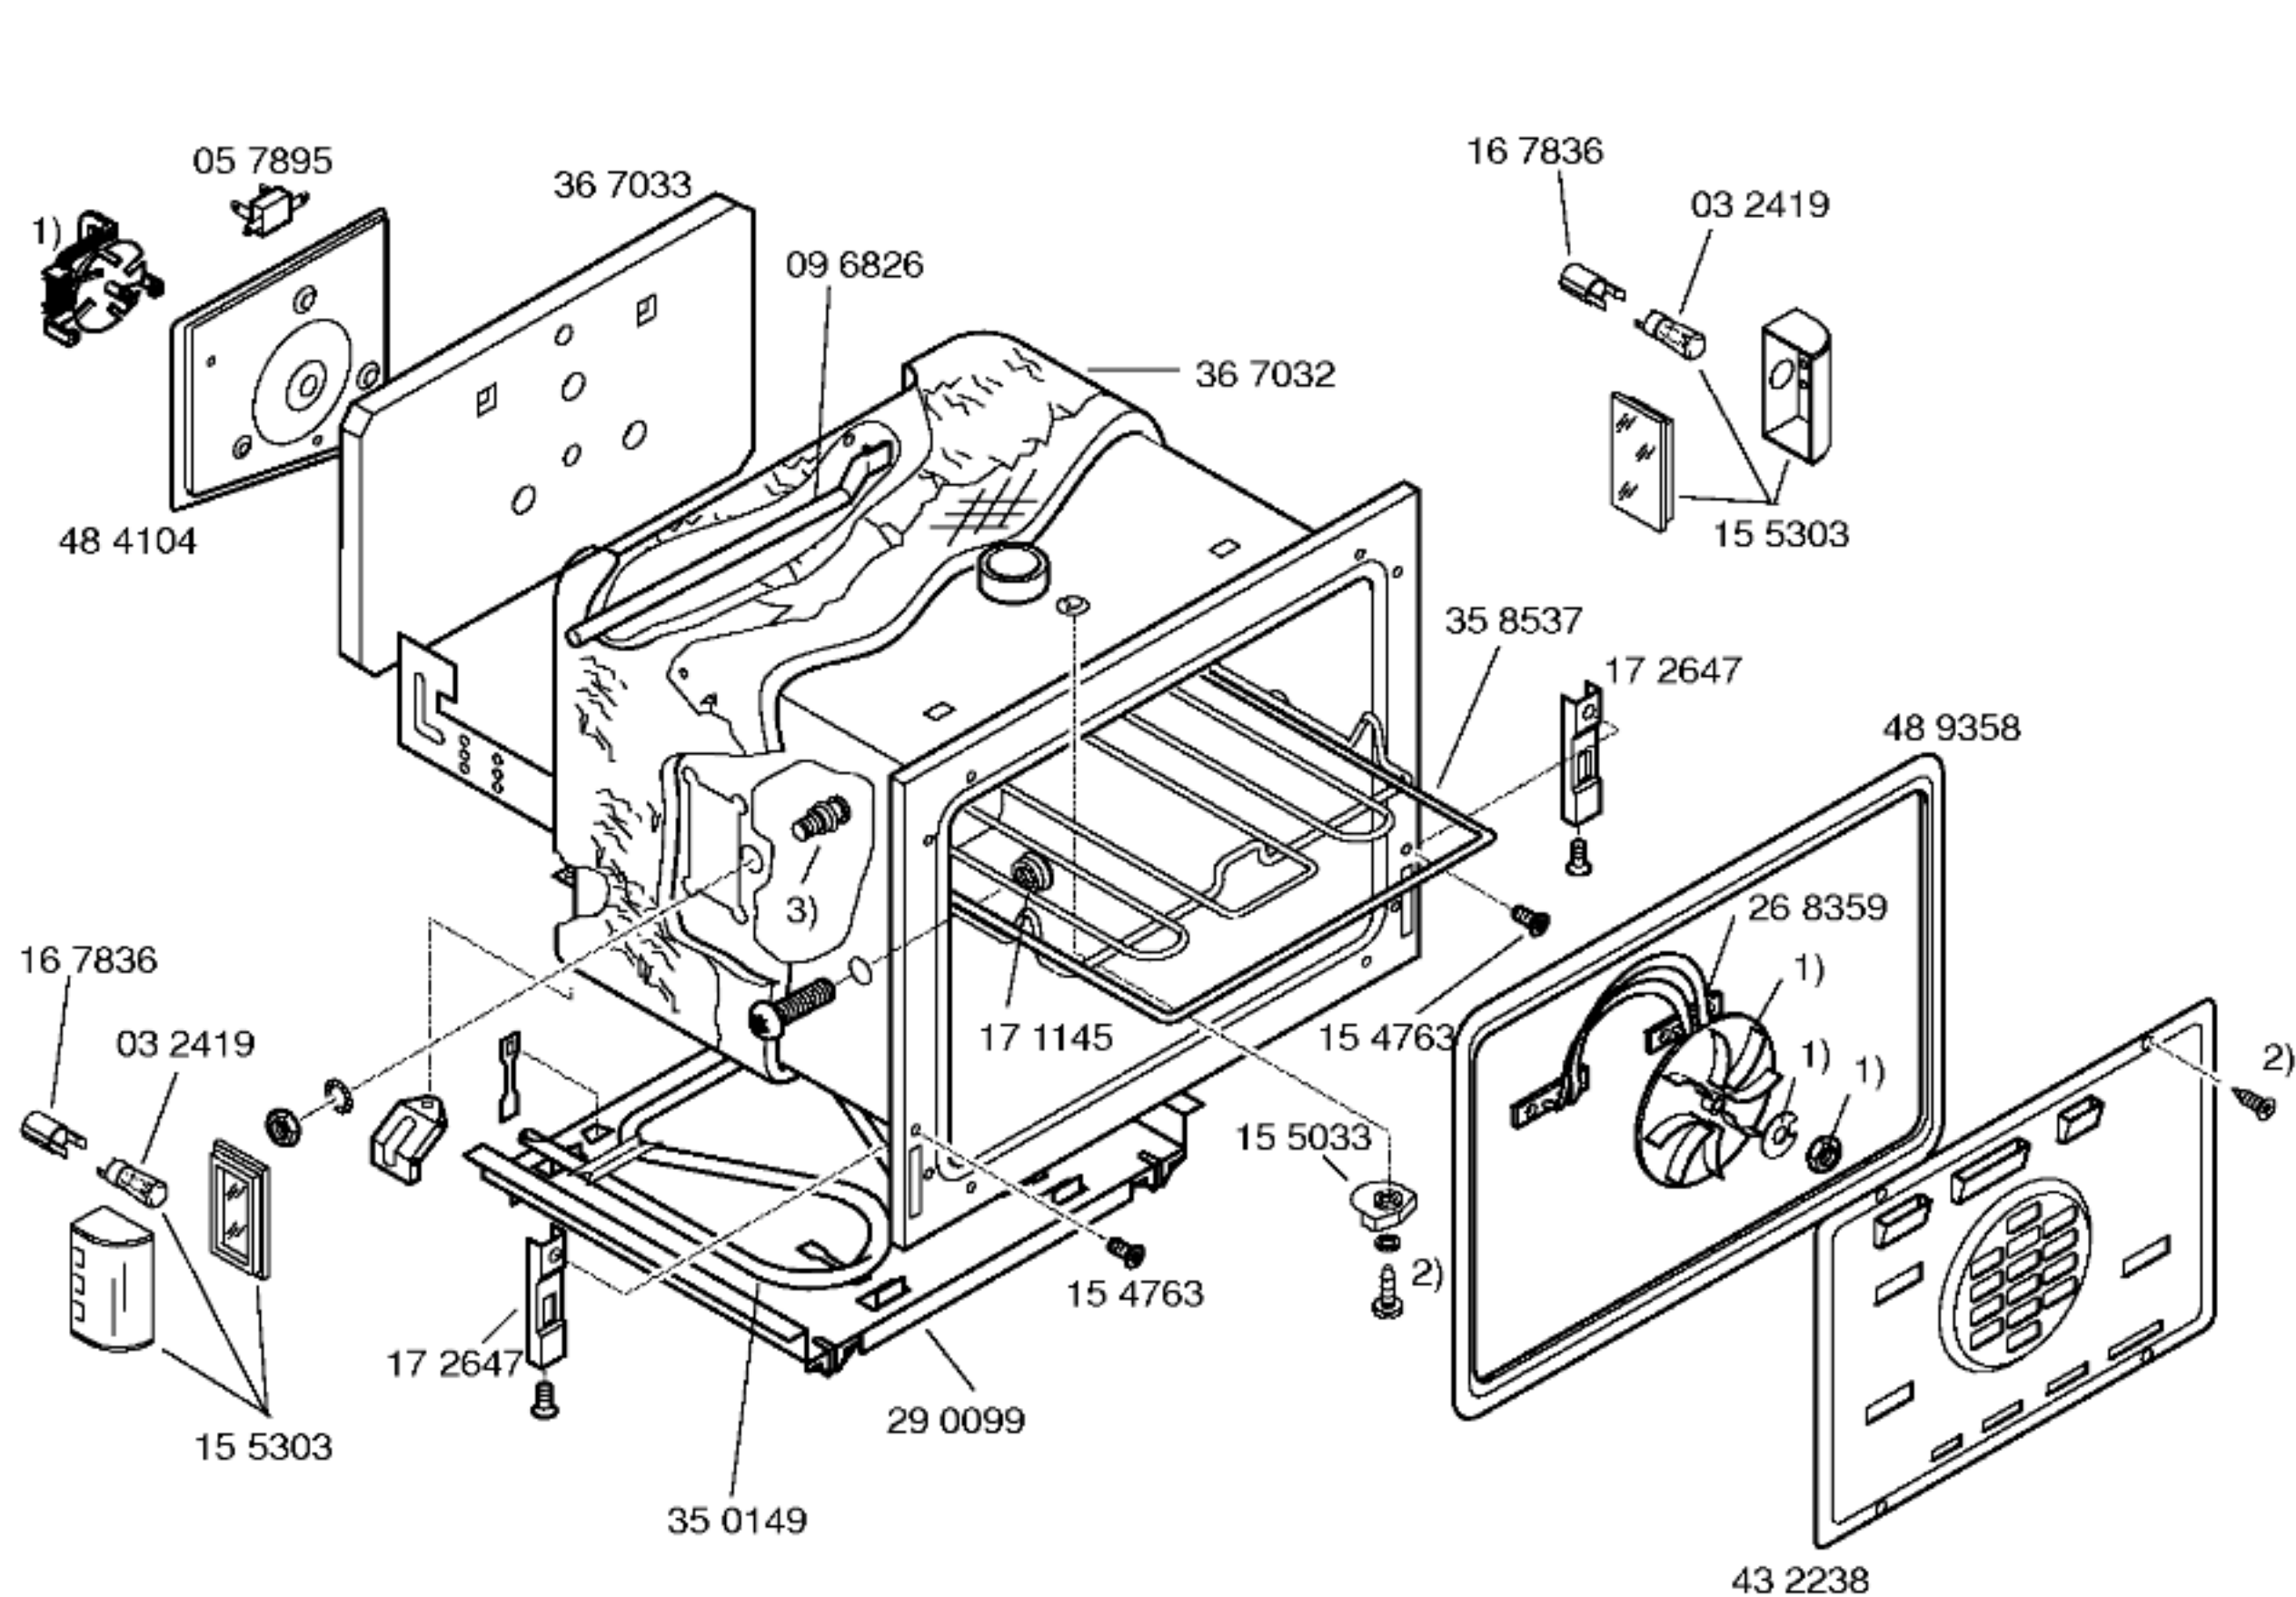

- 1) 48 3856
kompl.
2) 41 8562
3) 17 1146