


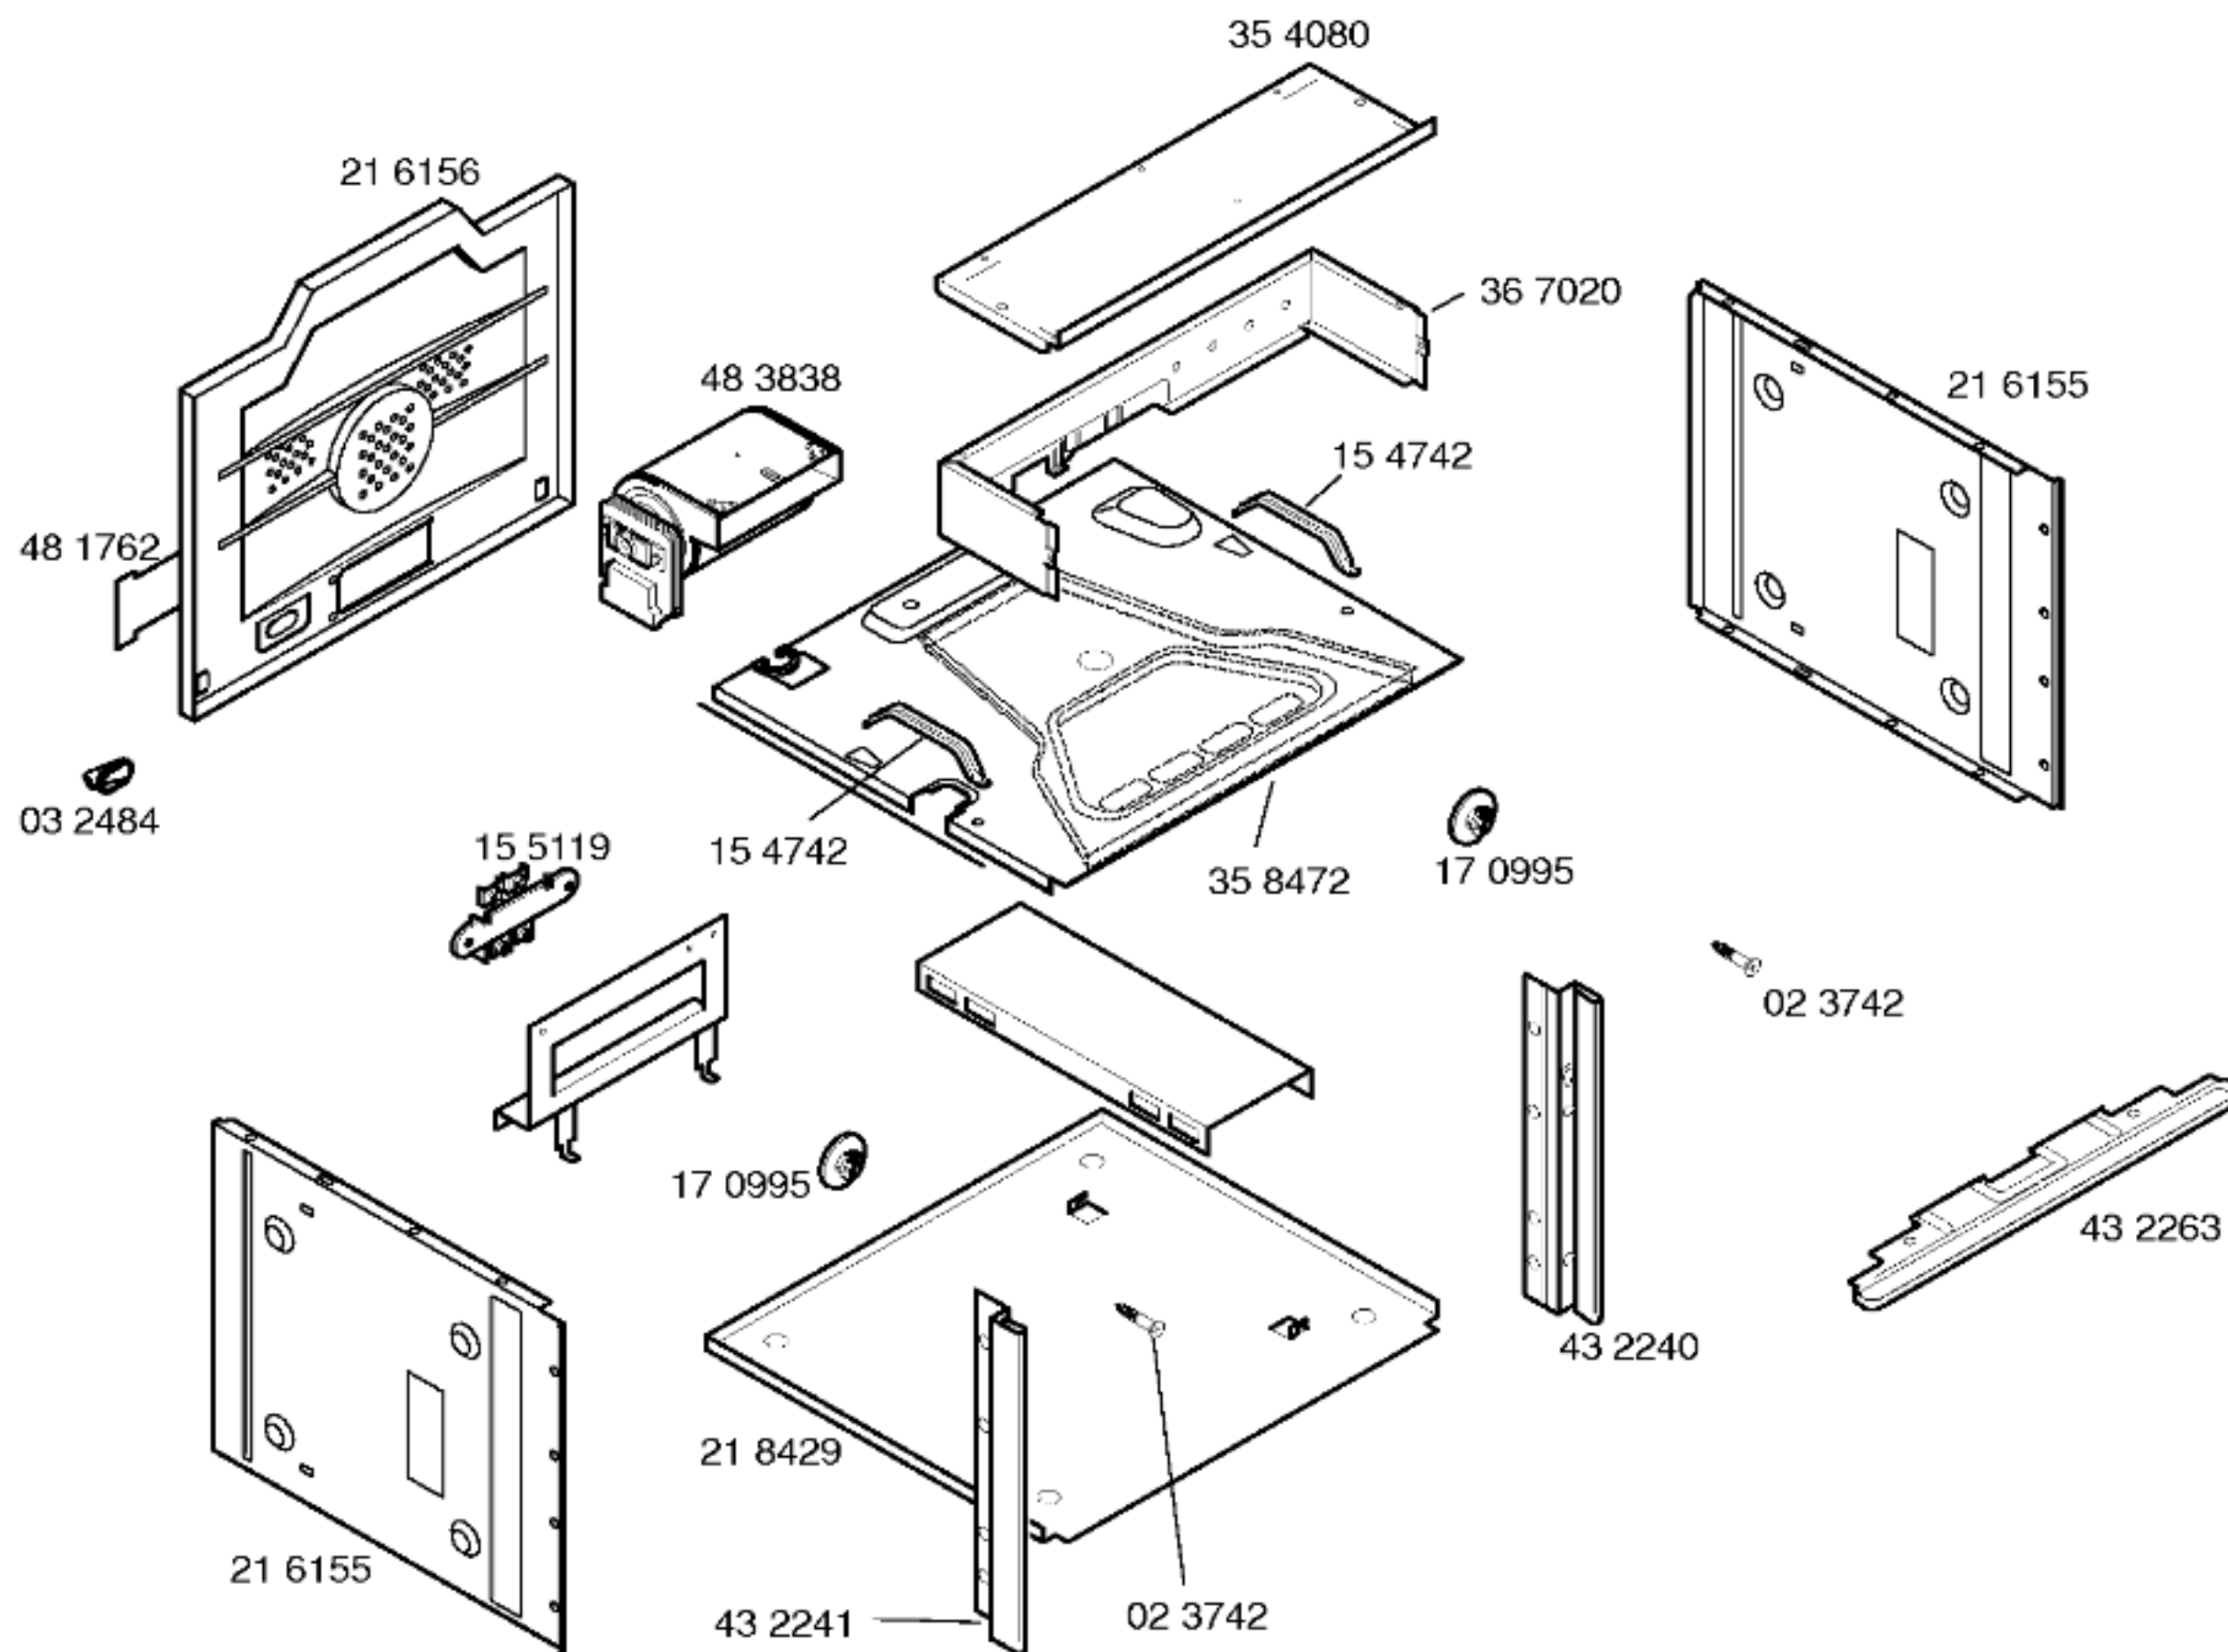


Gebrauchsanweisung
58 6319
(de,en)
Gebrauchsanweisung
58 6320
(fr,nl,it,es,el)
Montageanleitung
51 7991
(de,en,fr,nl,it,es,el)
Kochbuch
58 5532
(de)
Kochbuch
58 6292
(de,en,fr,nl,it,es)


Zubehör:

Dampfgarer
N8640X2


Bratrost engmaschig
Z1440X0
Bratrost gekröpft
Z1430X0
Backblech, Alu
Z1330X0
Backblech, email
Z1340X2
Bratenblech
Z1510X2
Brotbackstein
Z1910X0
Grillpfanne u. Bratrost
Z1230X2
Auflaufform
Z1270X2
Funkant.
Z1980X0

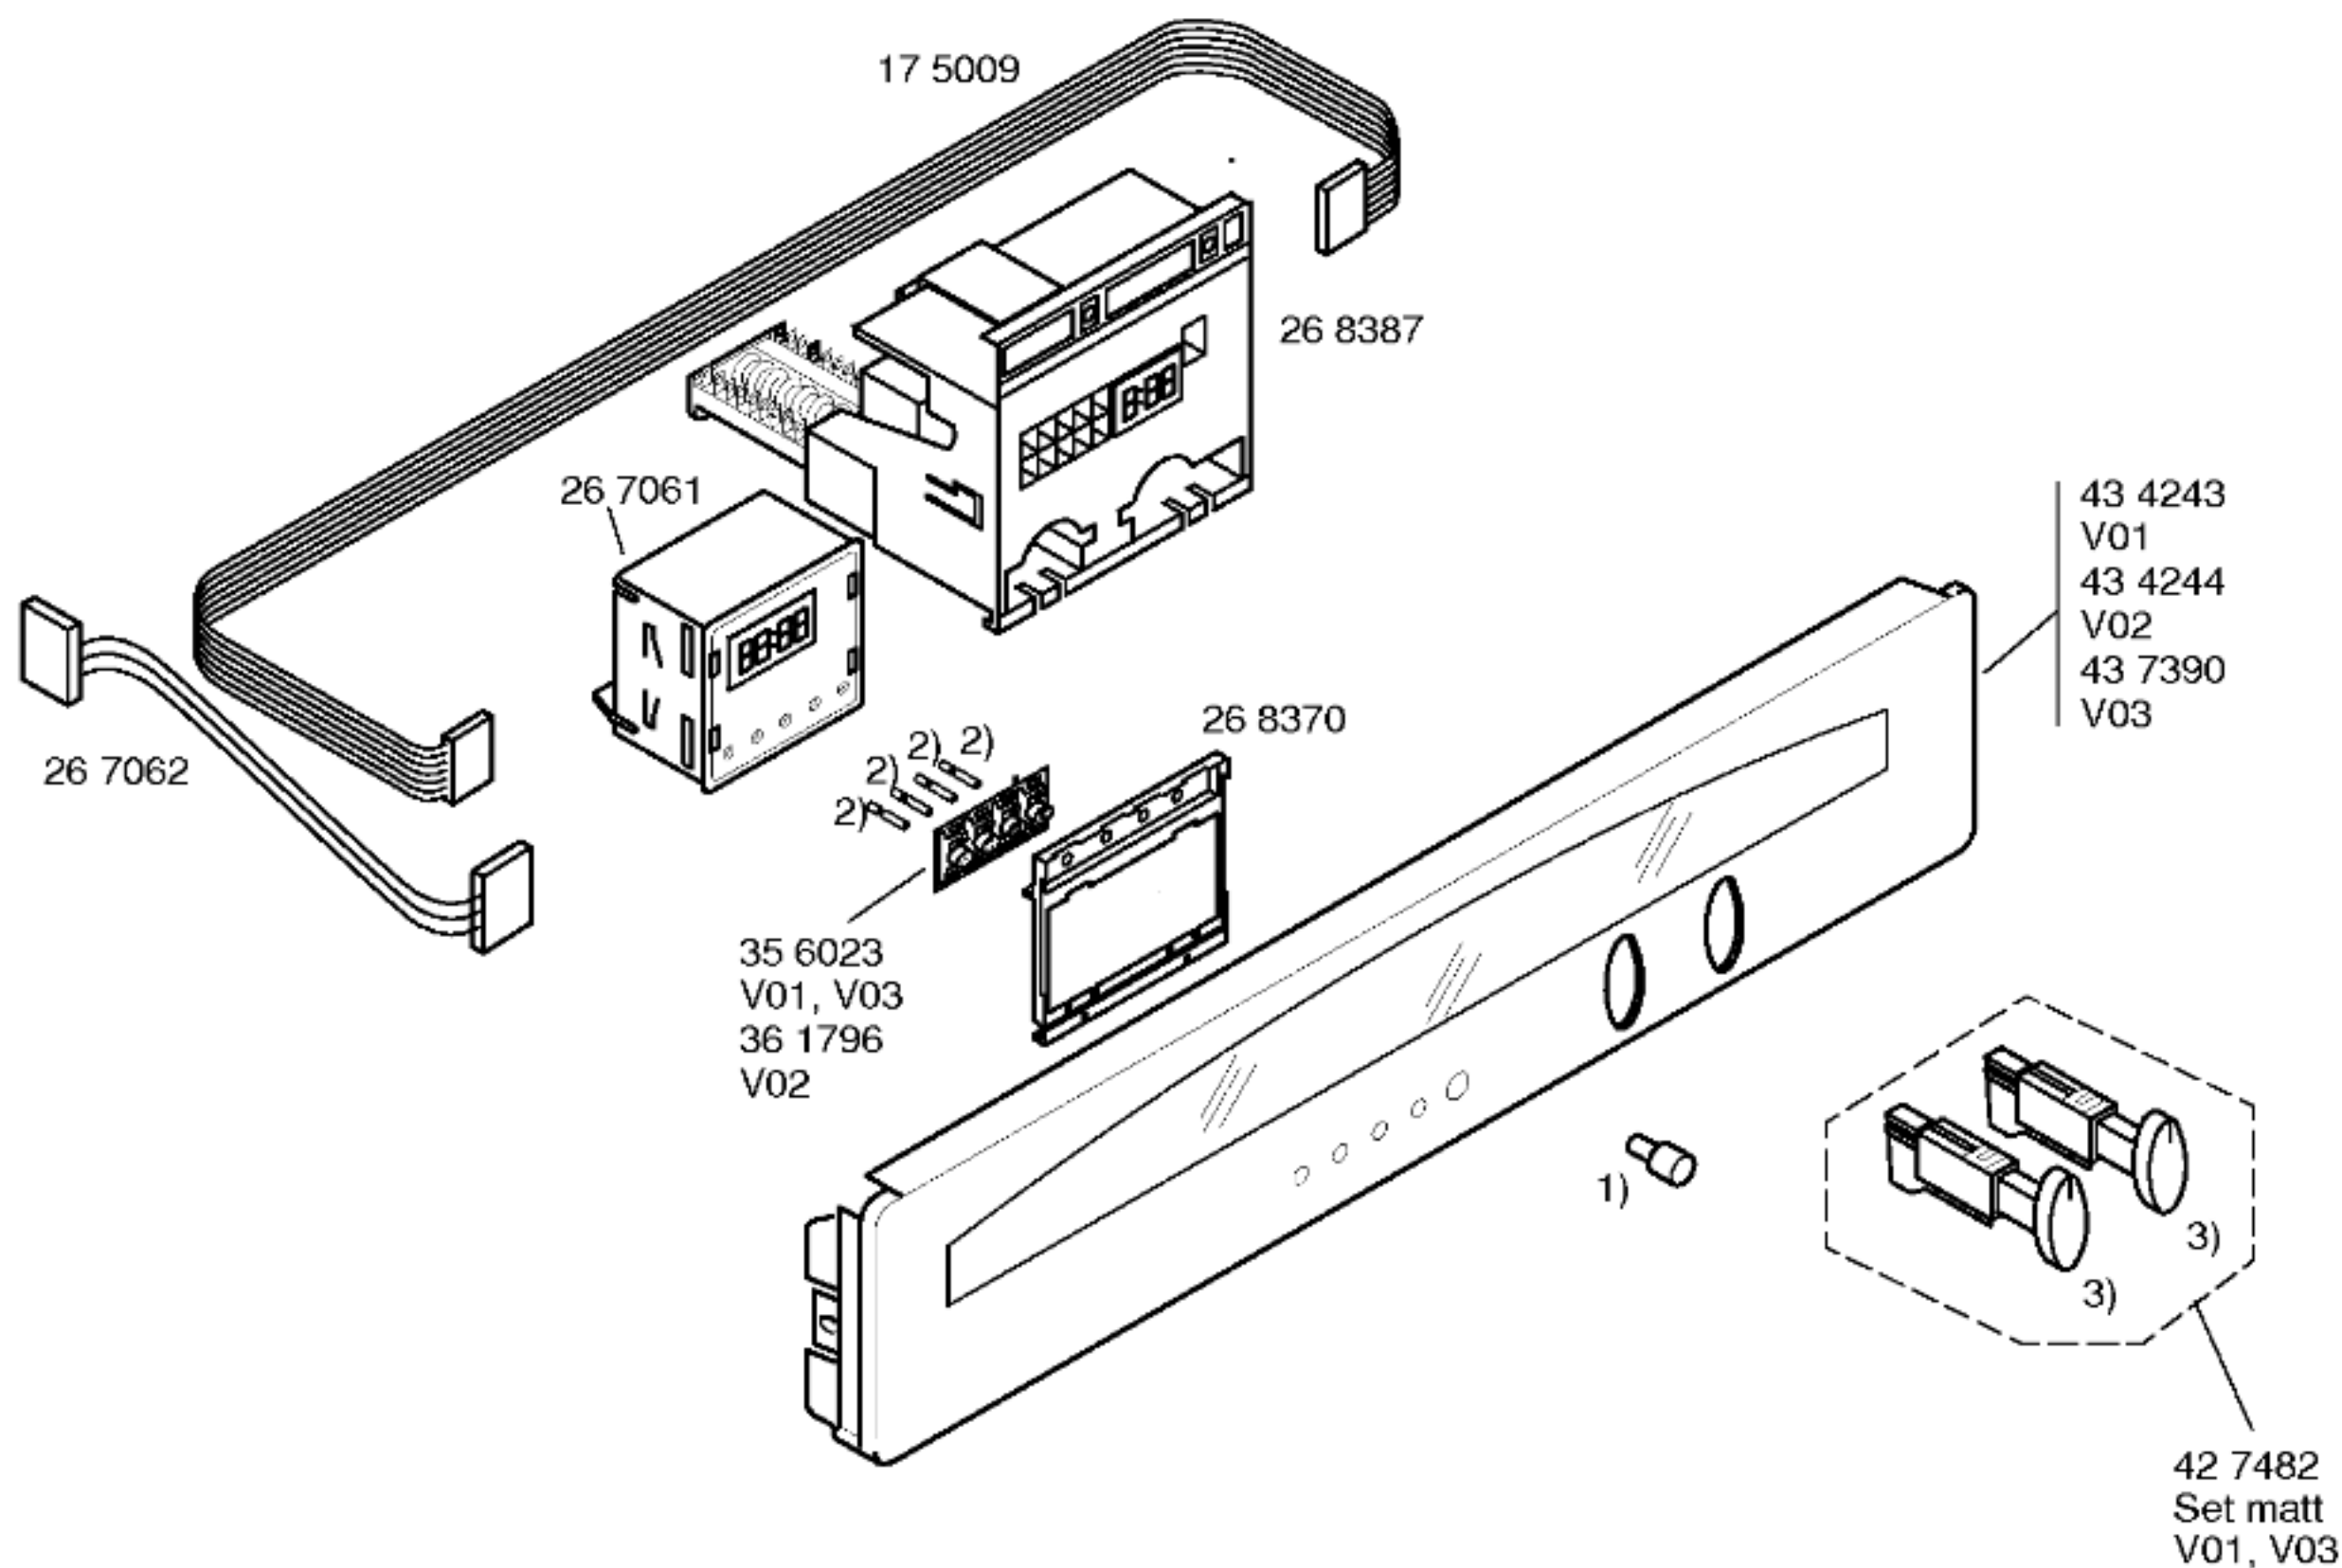

- 1) 17 3340
V01, V03
18 2808
V02
2) 16 8588
3) 17 3204
matt
V01, V03
(Original glaenzend
nicht mehr lieferbar)
18 2807
V02

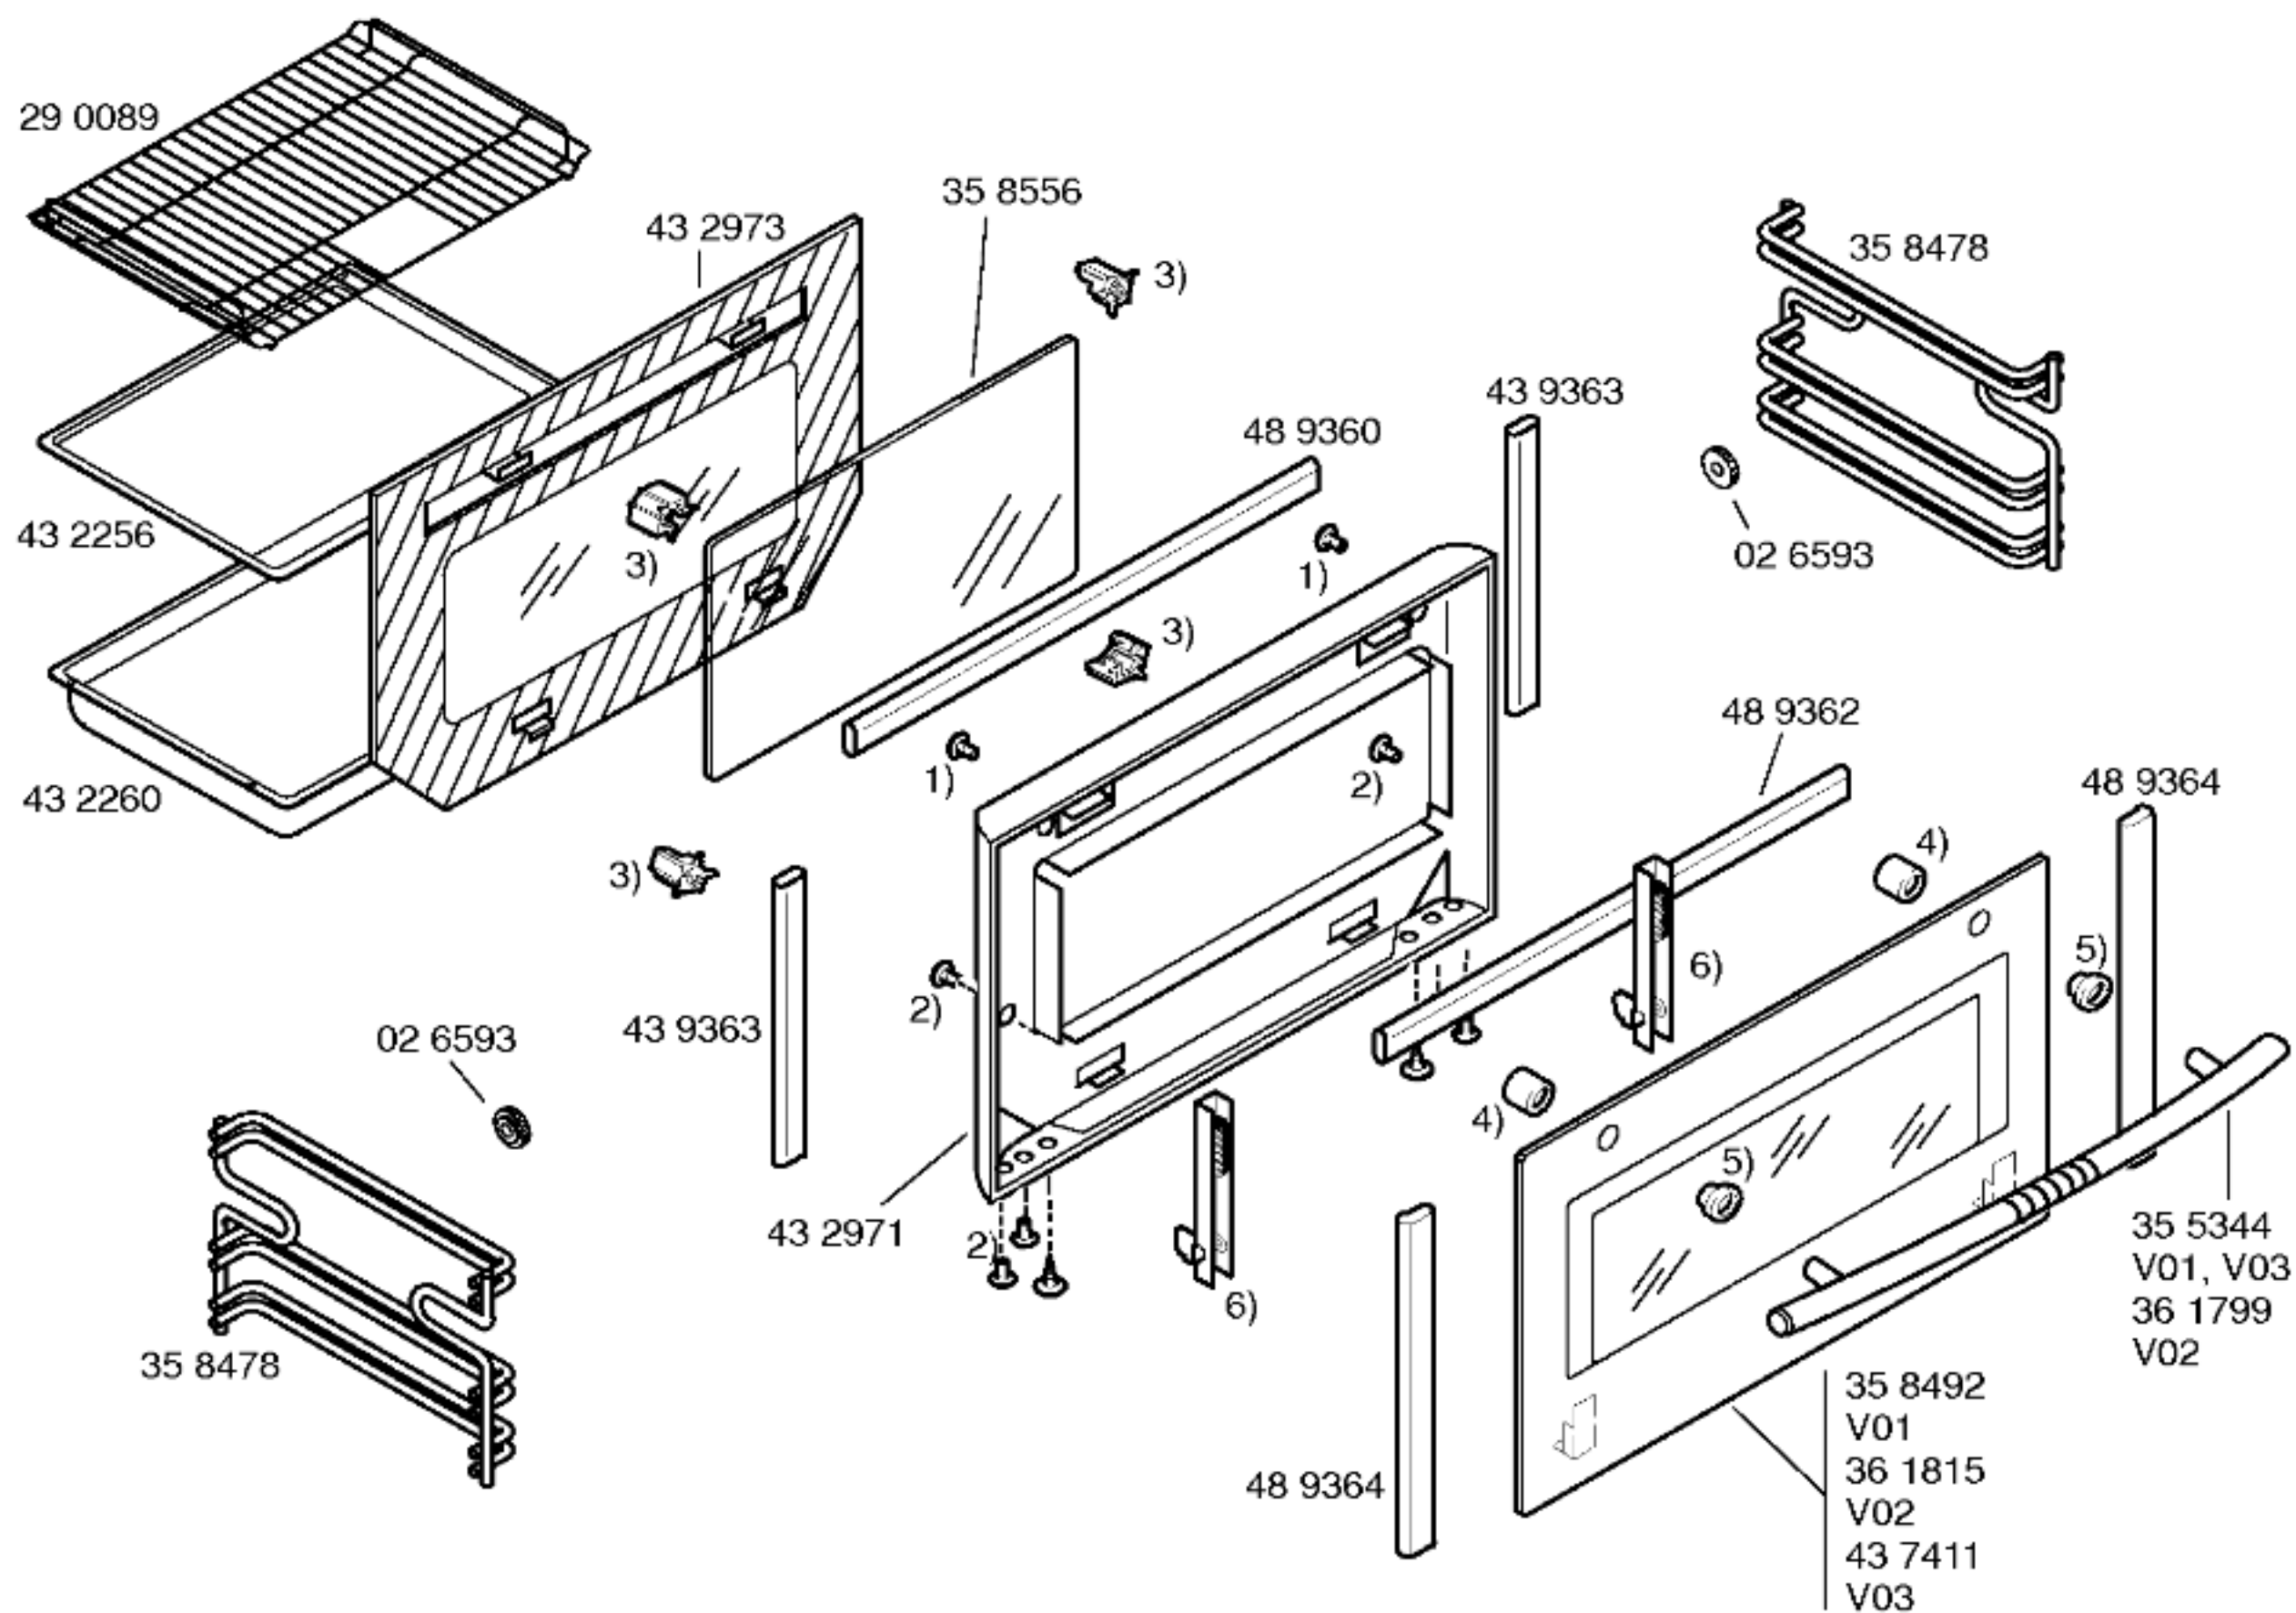

- 1) 17 2765
- 2) 17 2646
- 3) 41 8561
- 4) 17 2643
- 5) 17 2645
- 6) 26 8386
- V01, V03
- 26 8372
- V02

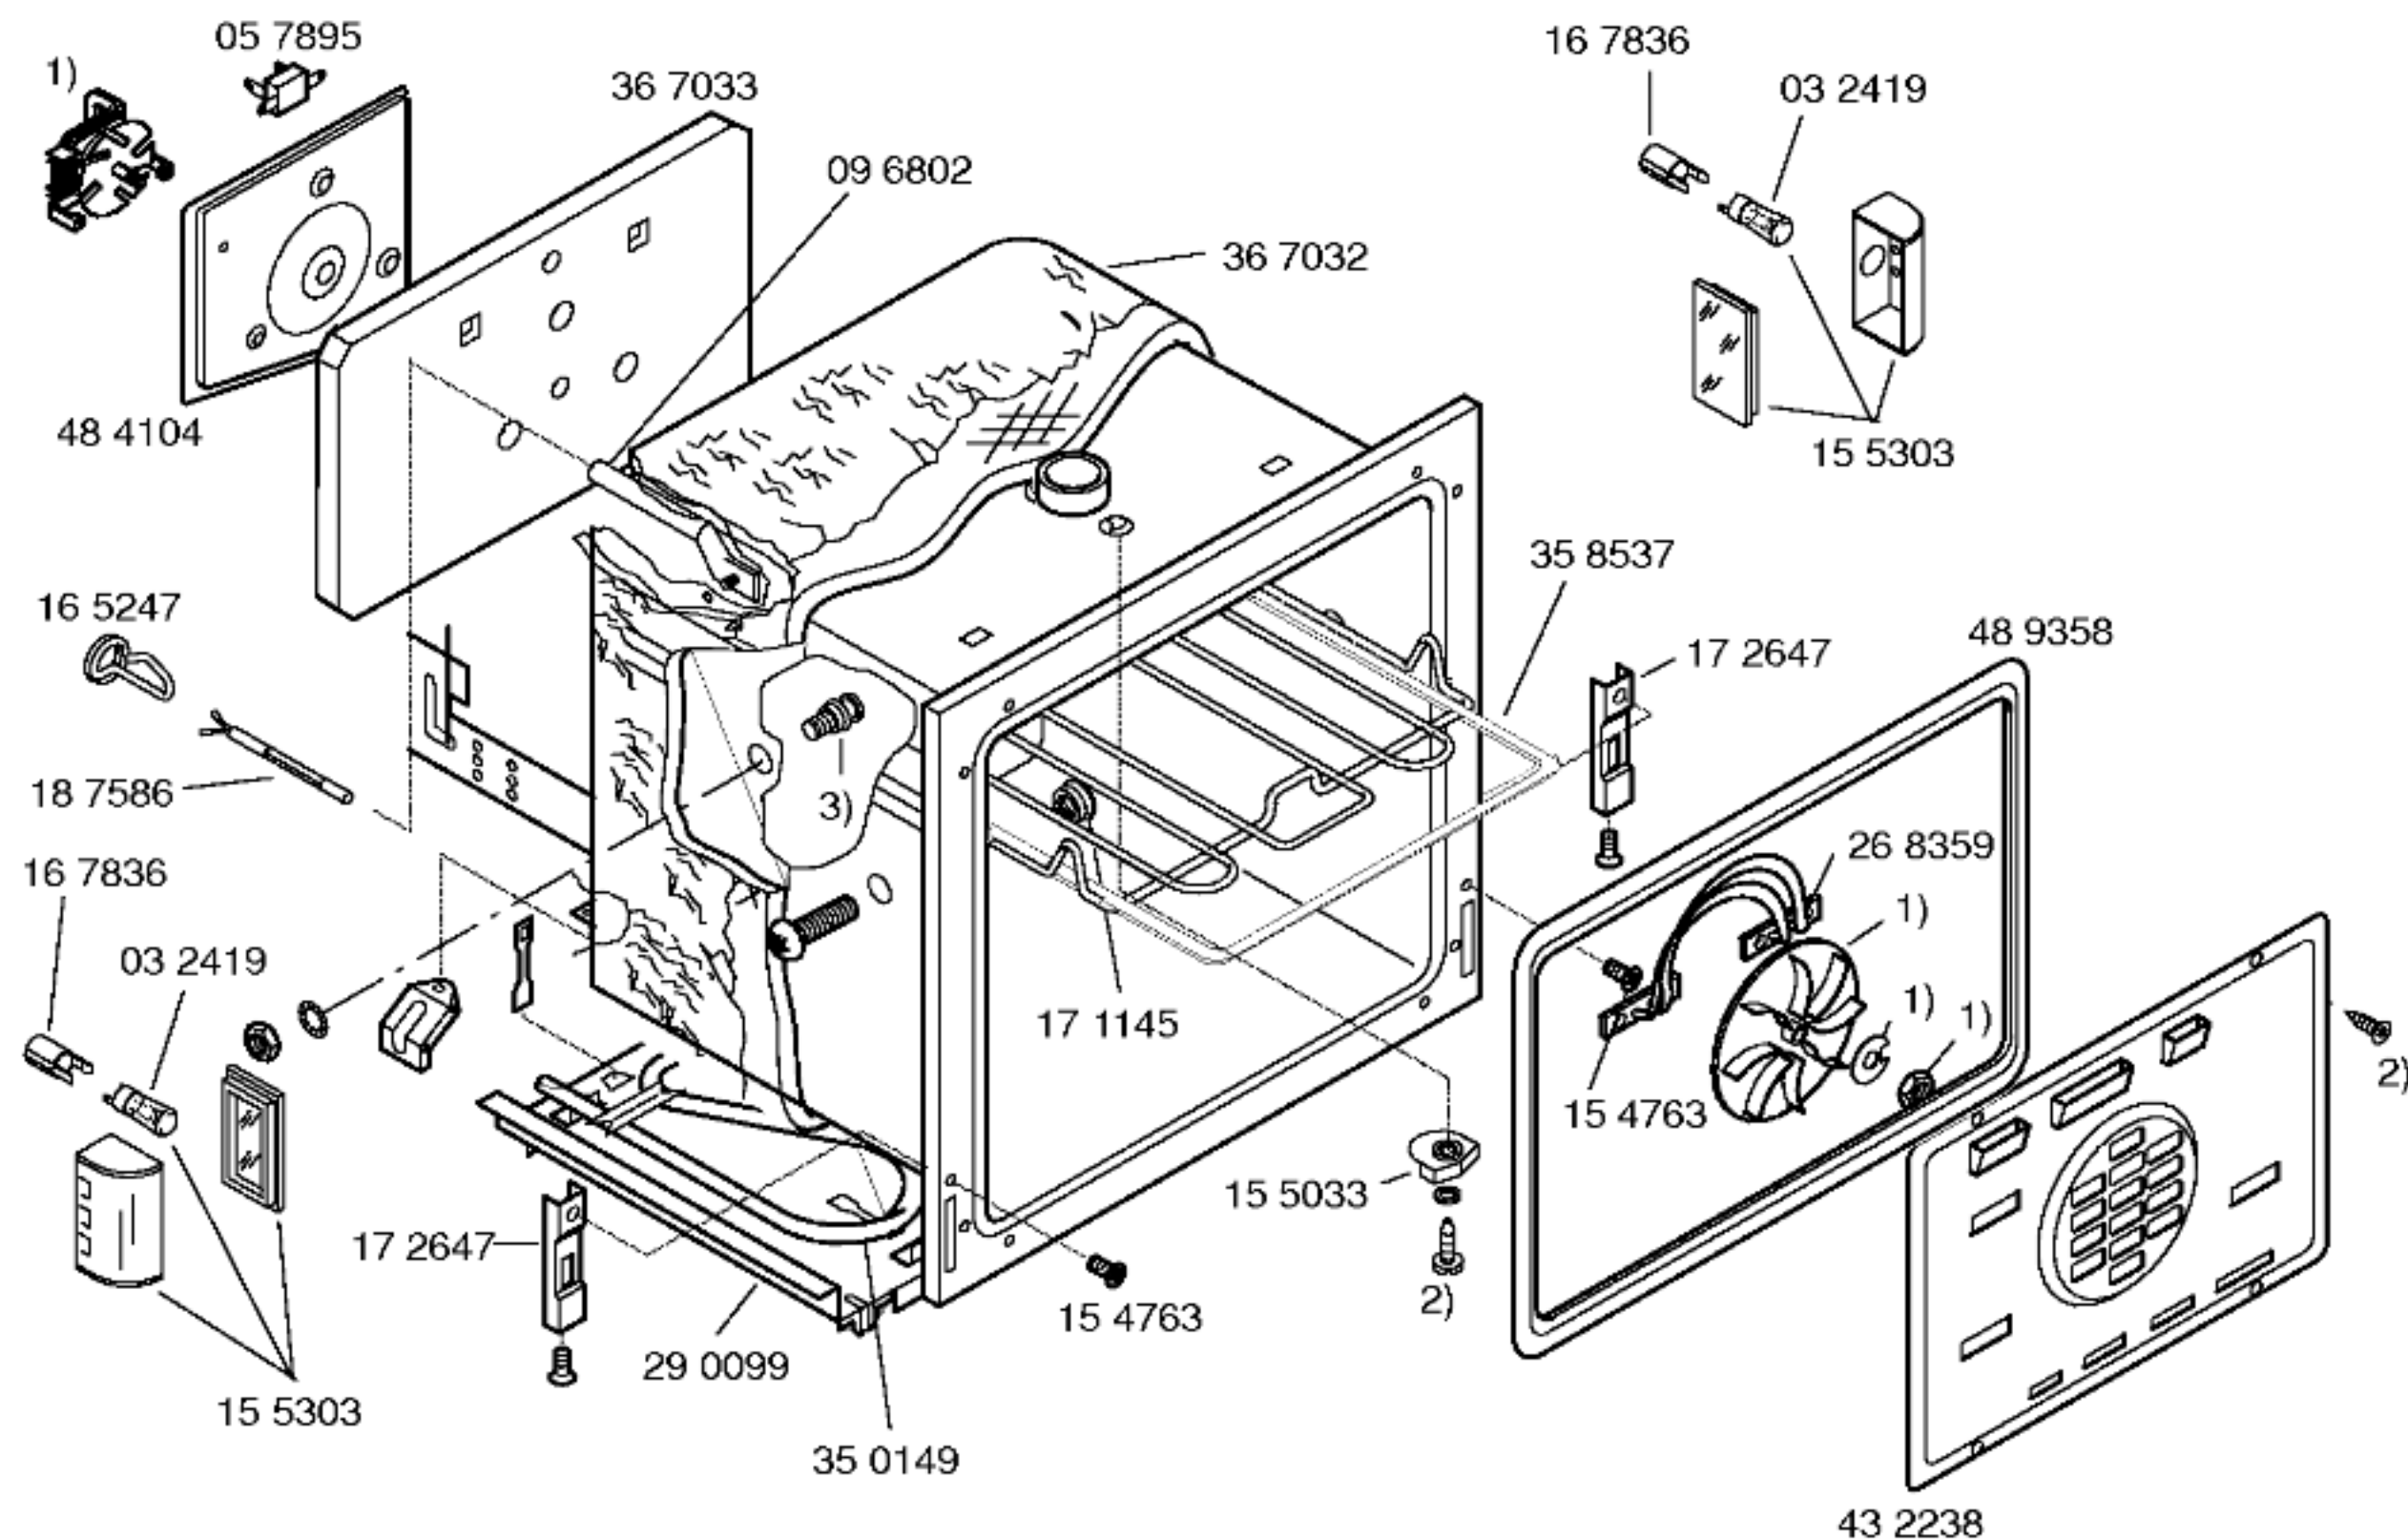

- 1) 48 3856
kompl.
2) 41 8562
3) 17 1146