 
 


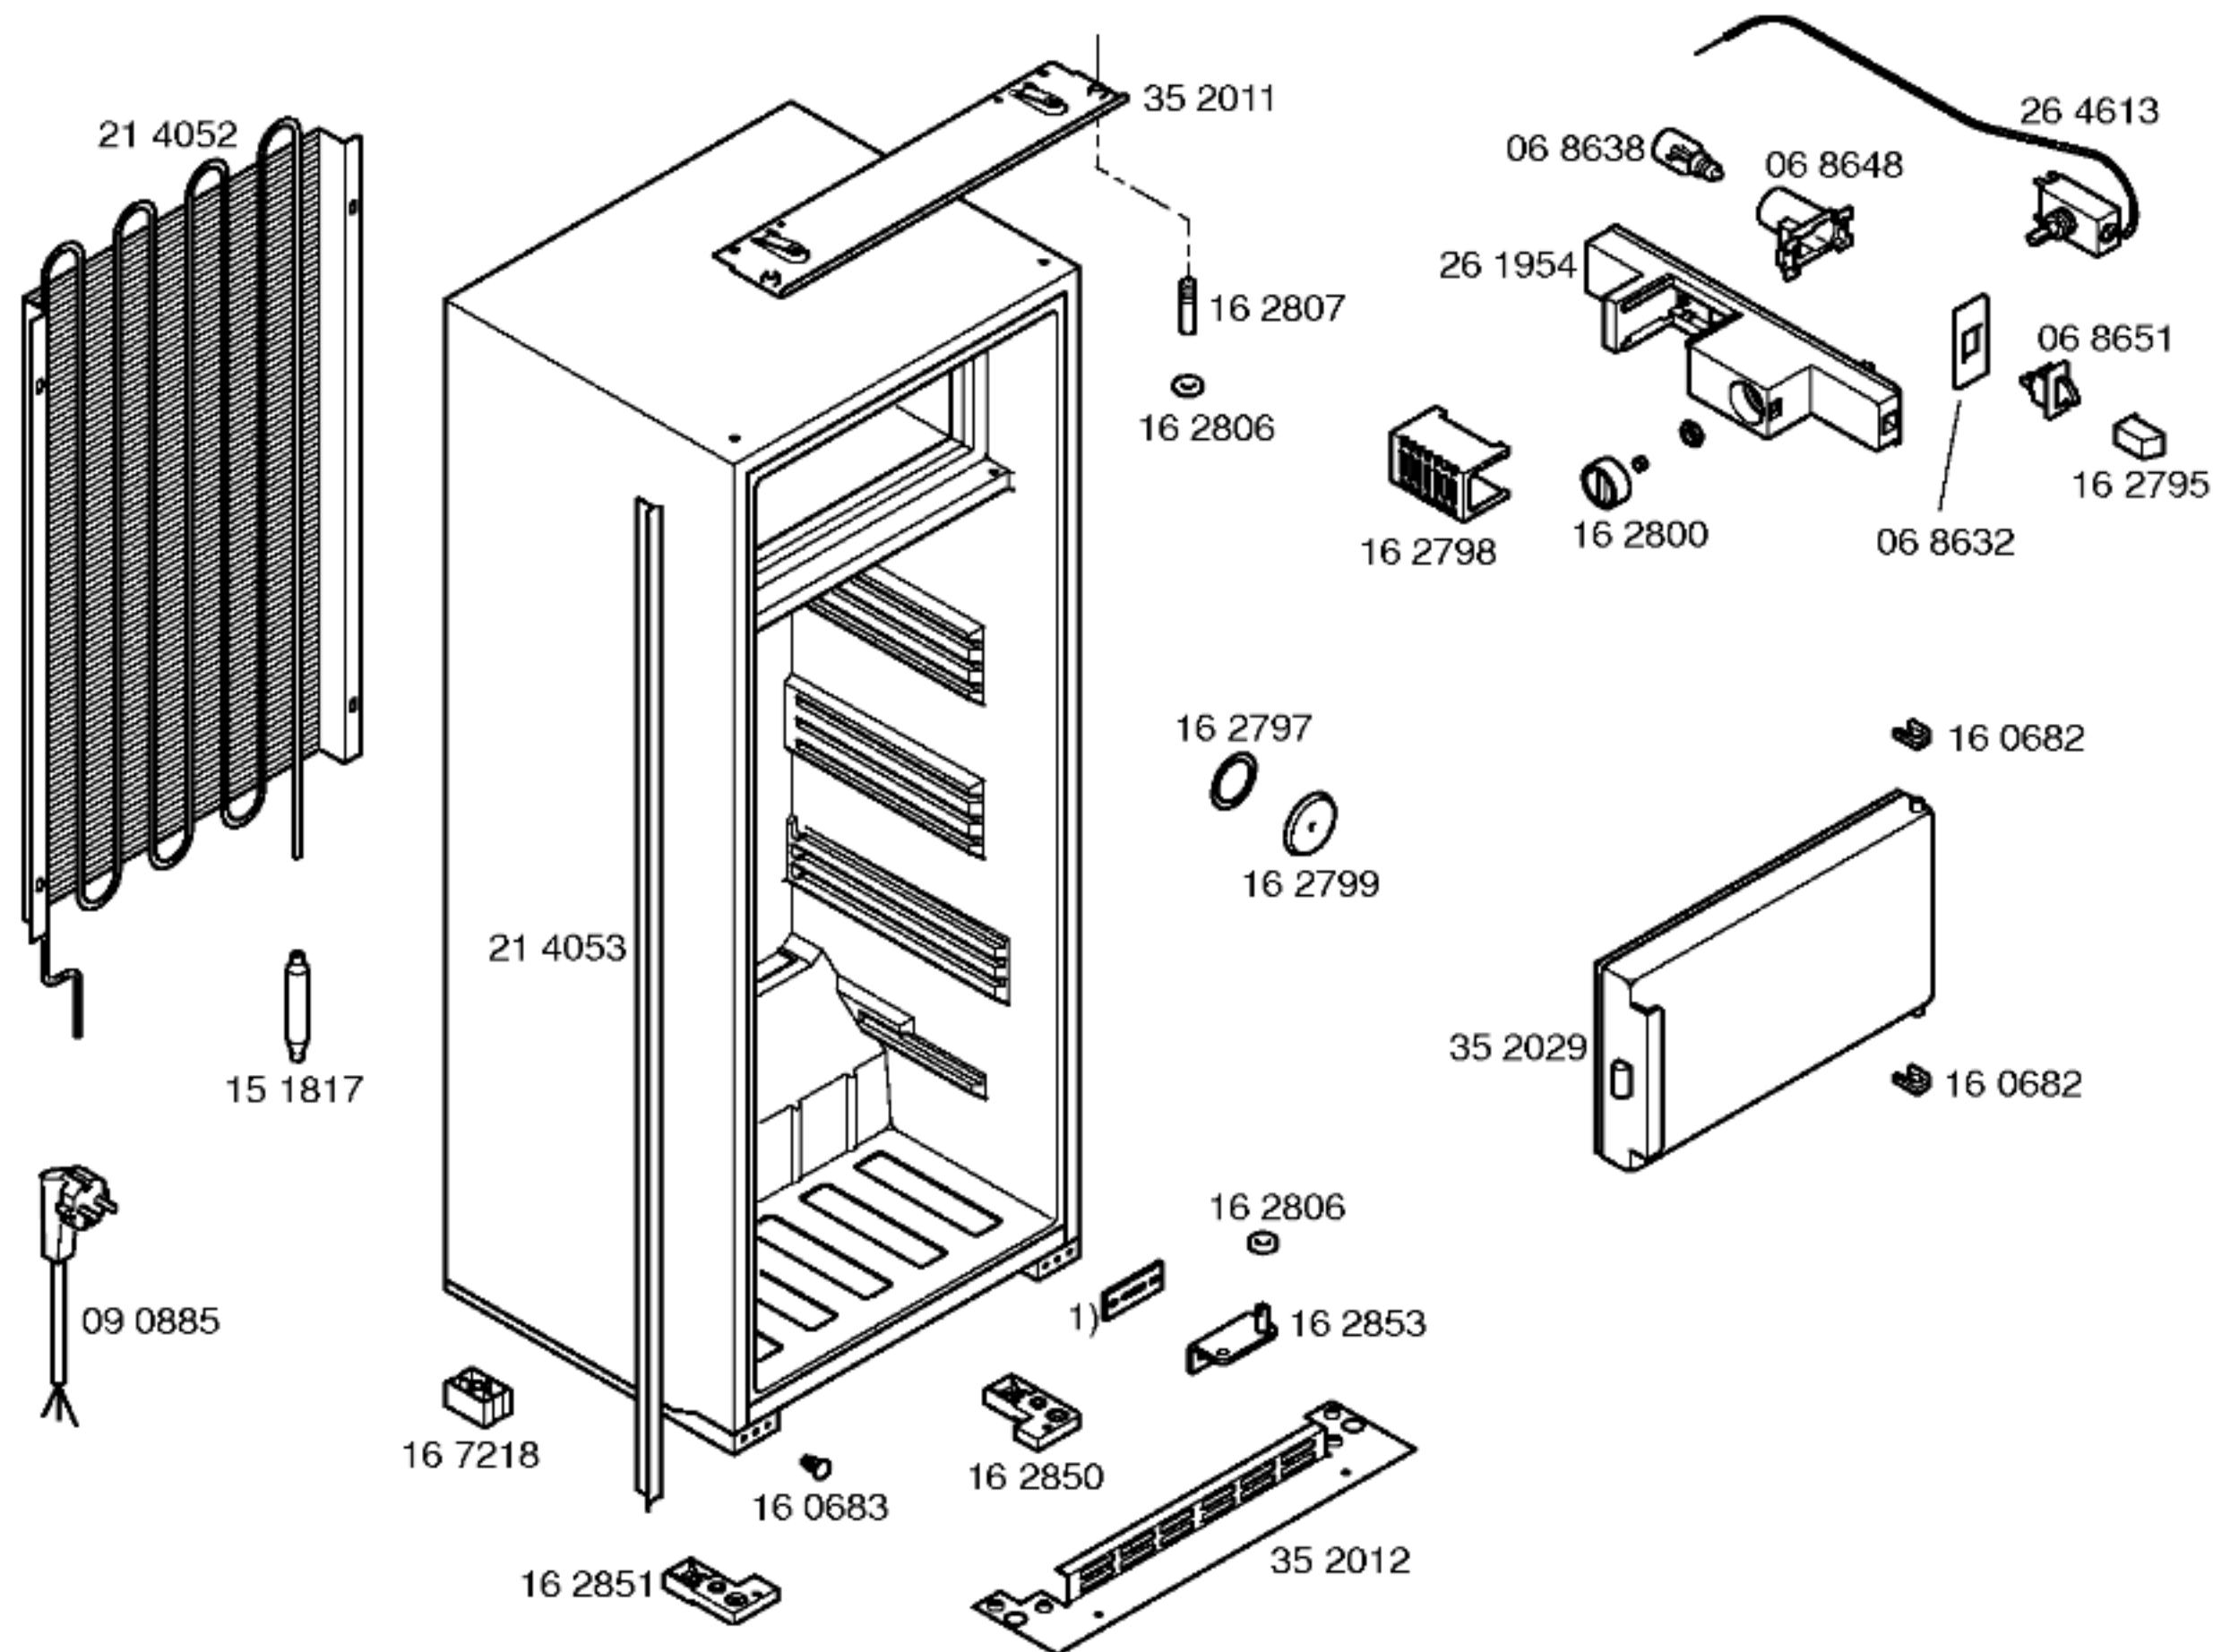 


Libro de instrucciones  
52 1521  
(E,F,I)

1) 16 9151

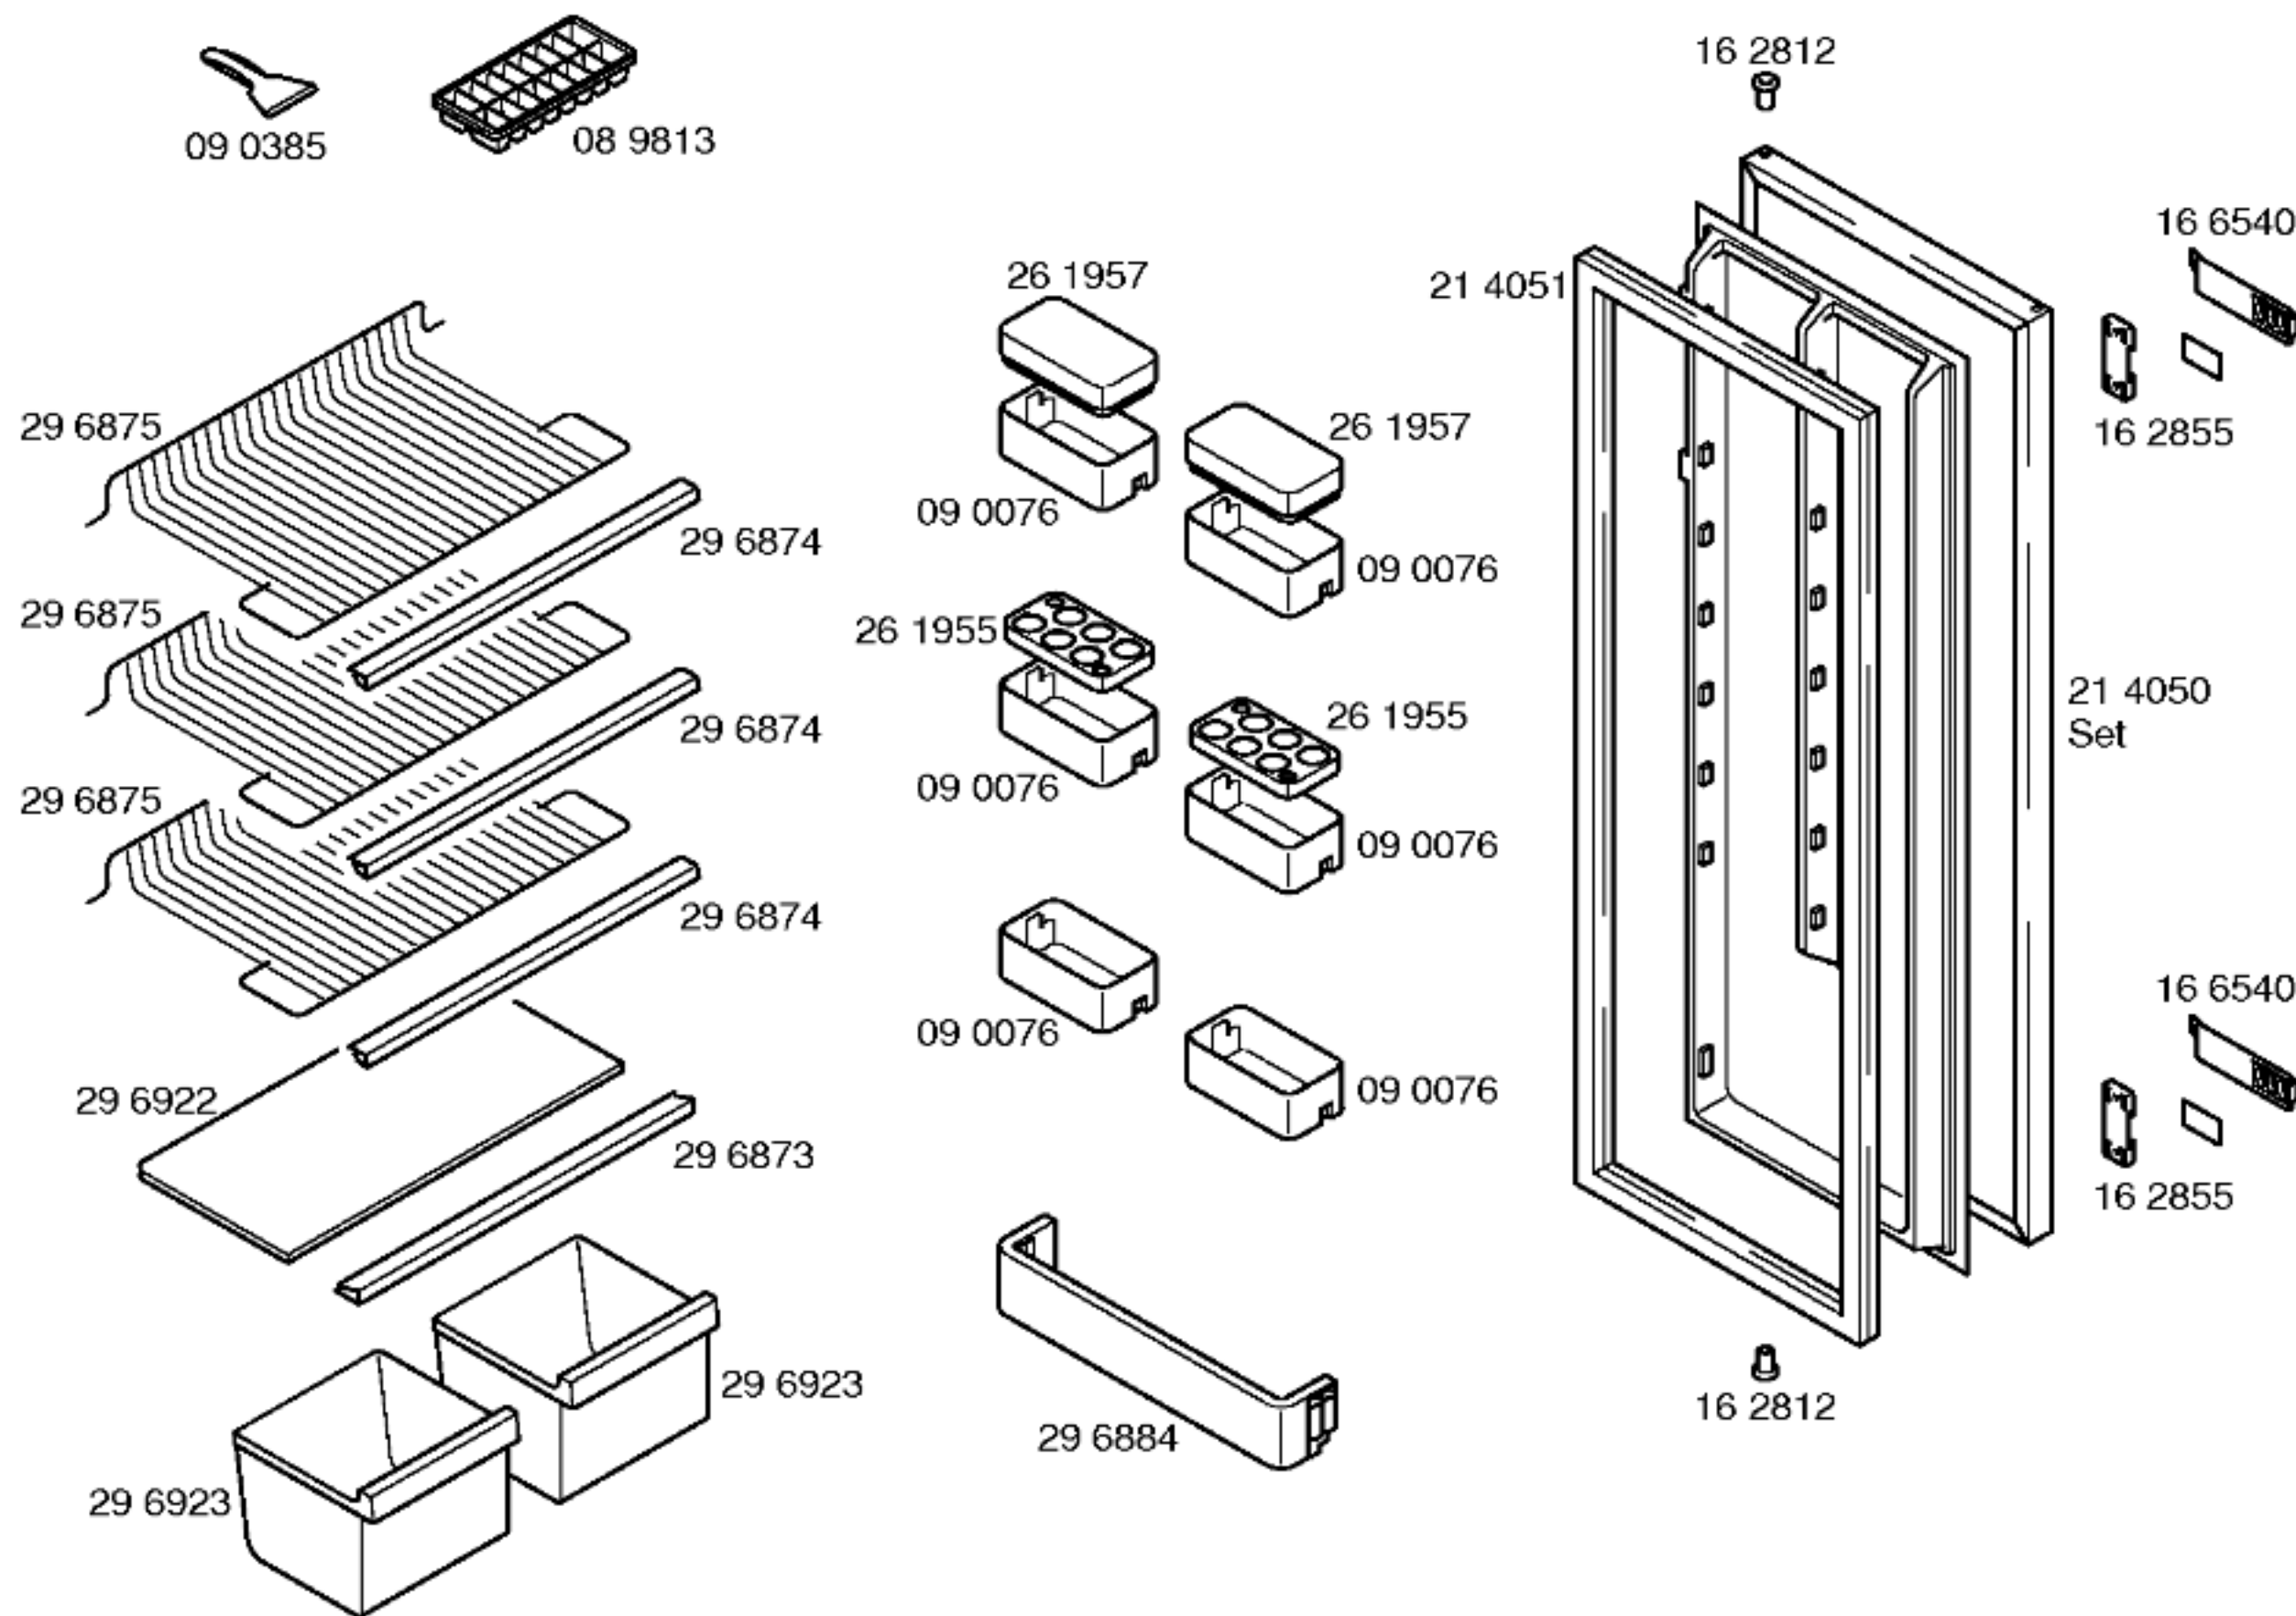

Accesorios panelación  
26 4786

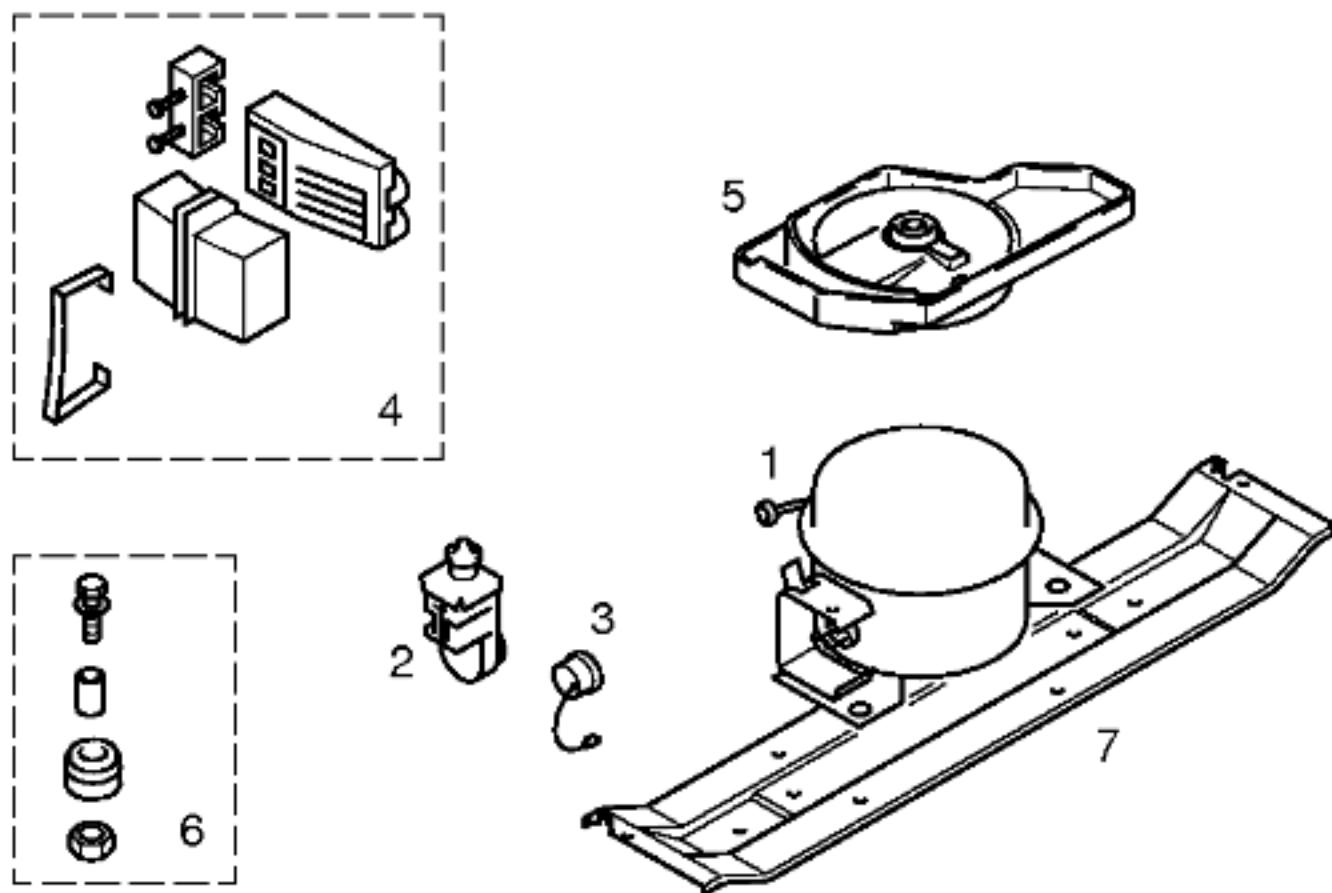

| Pos. | NECCHI  |  |  |  |
|------|---------|--|--|--|
|      | ETR5    |  |  |  |
| 1    | 14 1352 |  |  |  |
| 2    | 16 0676 |  |  |  |
| 3    | 16 1627 |  |  |  |
| 4    | 16 0681 |  |  |  |
| 5    | 26 4614 |  |  |  |
| 6    | 05 0166 |  |  |  |
| 7    | 29 6868 |  |  |  |
| 8    |         |  |  |  |
| 9    |         |  |  |  |
| 10   |         |  |  |  |
| 11   |         |  |  |  |
| 12   |         |  |  |  |
| 13   |         |  |  |  |

| TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS                                                                                                                                                                             |                                                   |  |  |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------|--|--|
| Verdichter/Compressor/Compresseur/Compresor<br>Typ/Type/Tipo<br>Förderleistung/Delivery/Debit/Aspiración l/h<br>Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A<br>Widerstand/Resistance/Resistencia. Hi/main/prin. Ohm<br>Hi/aux. | Necchi<br>ETR5                                    |  |  |
| Temp.Reyler/Thermostat/Termostato<br>Typ/Type/Tipo<br>Reglerstellung/Position/Conexión<br>Schaltwerte/Switching values/ ..ein/conex.°C<br>Valeurs de commutation/Desconex. ..aus"/descon.<br>(..abtaven' od) ..alarm'                         | Ranco<br>K54–L1962<br>MIN. MAX<br>5°<br>–12° –26° |  |  |
| Füllmenge/Fill. quantity/Charge/Carga R134a g                                                                                                                                                                                                 | *                                                 |  |  |
| Anschlusswert/Comm. load/Puiss. Connect./Potenc. W                                                                                                                                                                                            |                                                   |  |  |
| Heizung/Heater/Chauflage/Resistenc.descong.<br>Widerstand/Resistance/Resistencia Ohm<br>Leistung/Power/Puissance/Potencia W                                                                                                                   |                                                   |  |  |
| Ventilador/Blower/Ventilateur/Ventilador<br>Widerstand/Resistance/Resistencia Ohm                                                                                                                                                             |                                                   |  |  |
| Magnetventil/Magnetic valve/Electrovanne/Electrovalvula<br>Widerstand/Resistance/Resistencia Ohm<br>Spannung/Voltage/Tension/Tensión V                                                                                                        |                                                   |  |  |
| Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador                                                                                                                                                                       |                                                   |  |  |

\* Siehe Typenschild / See identification plate / Voir plaquette de caractéristiques /Ver plaqueta de caracteristicas