 
 
 


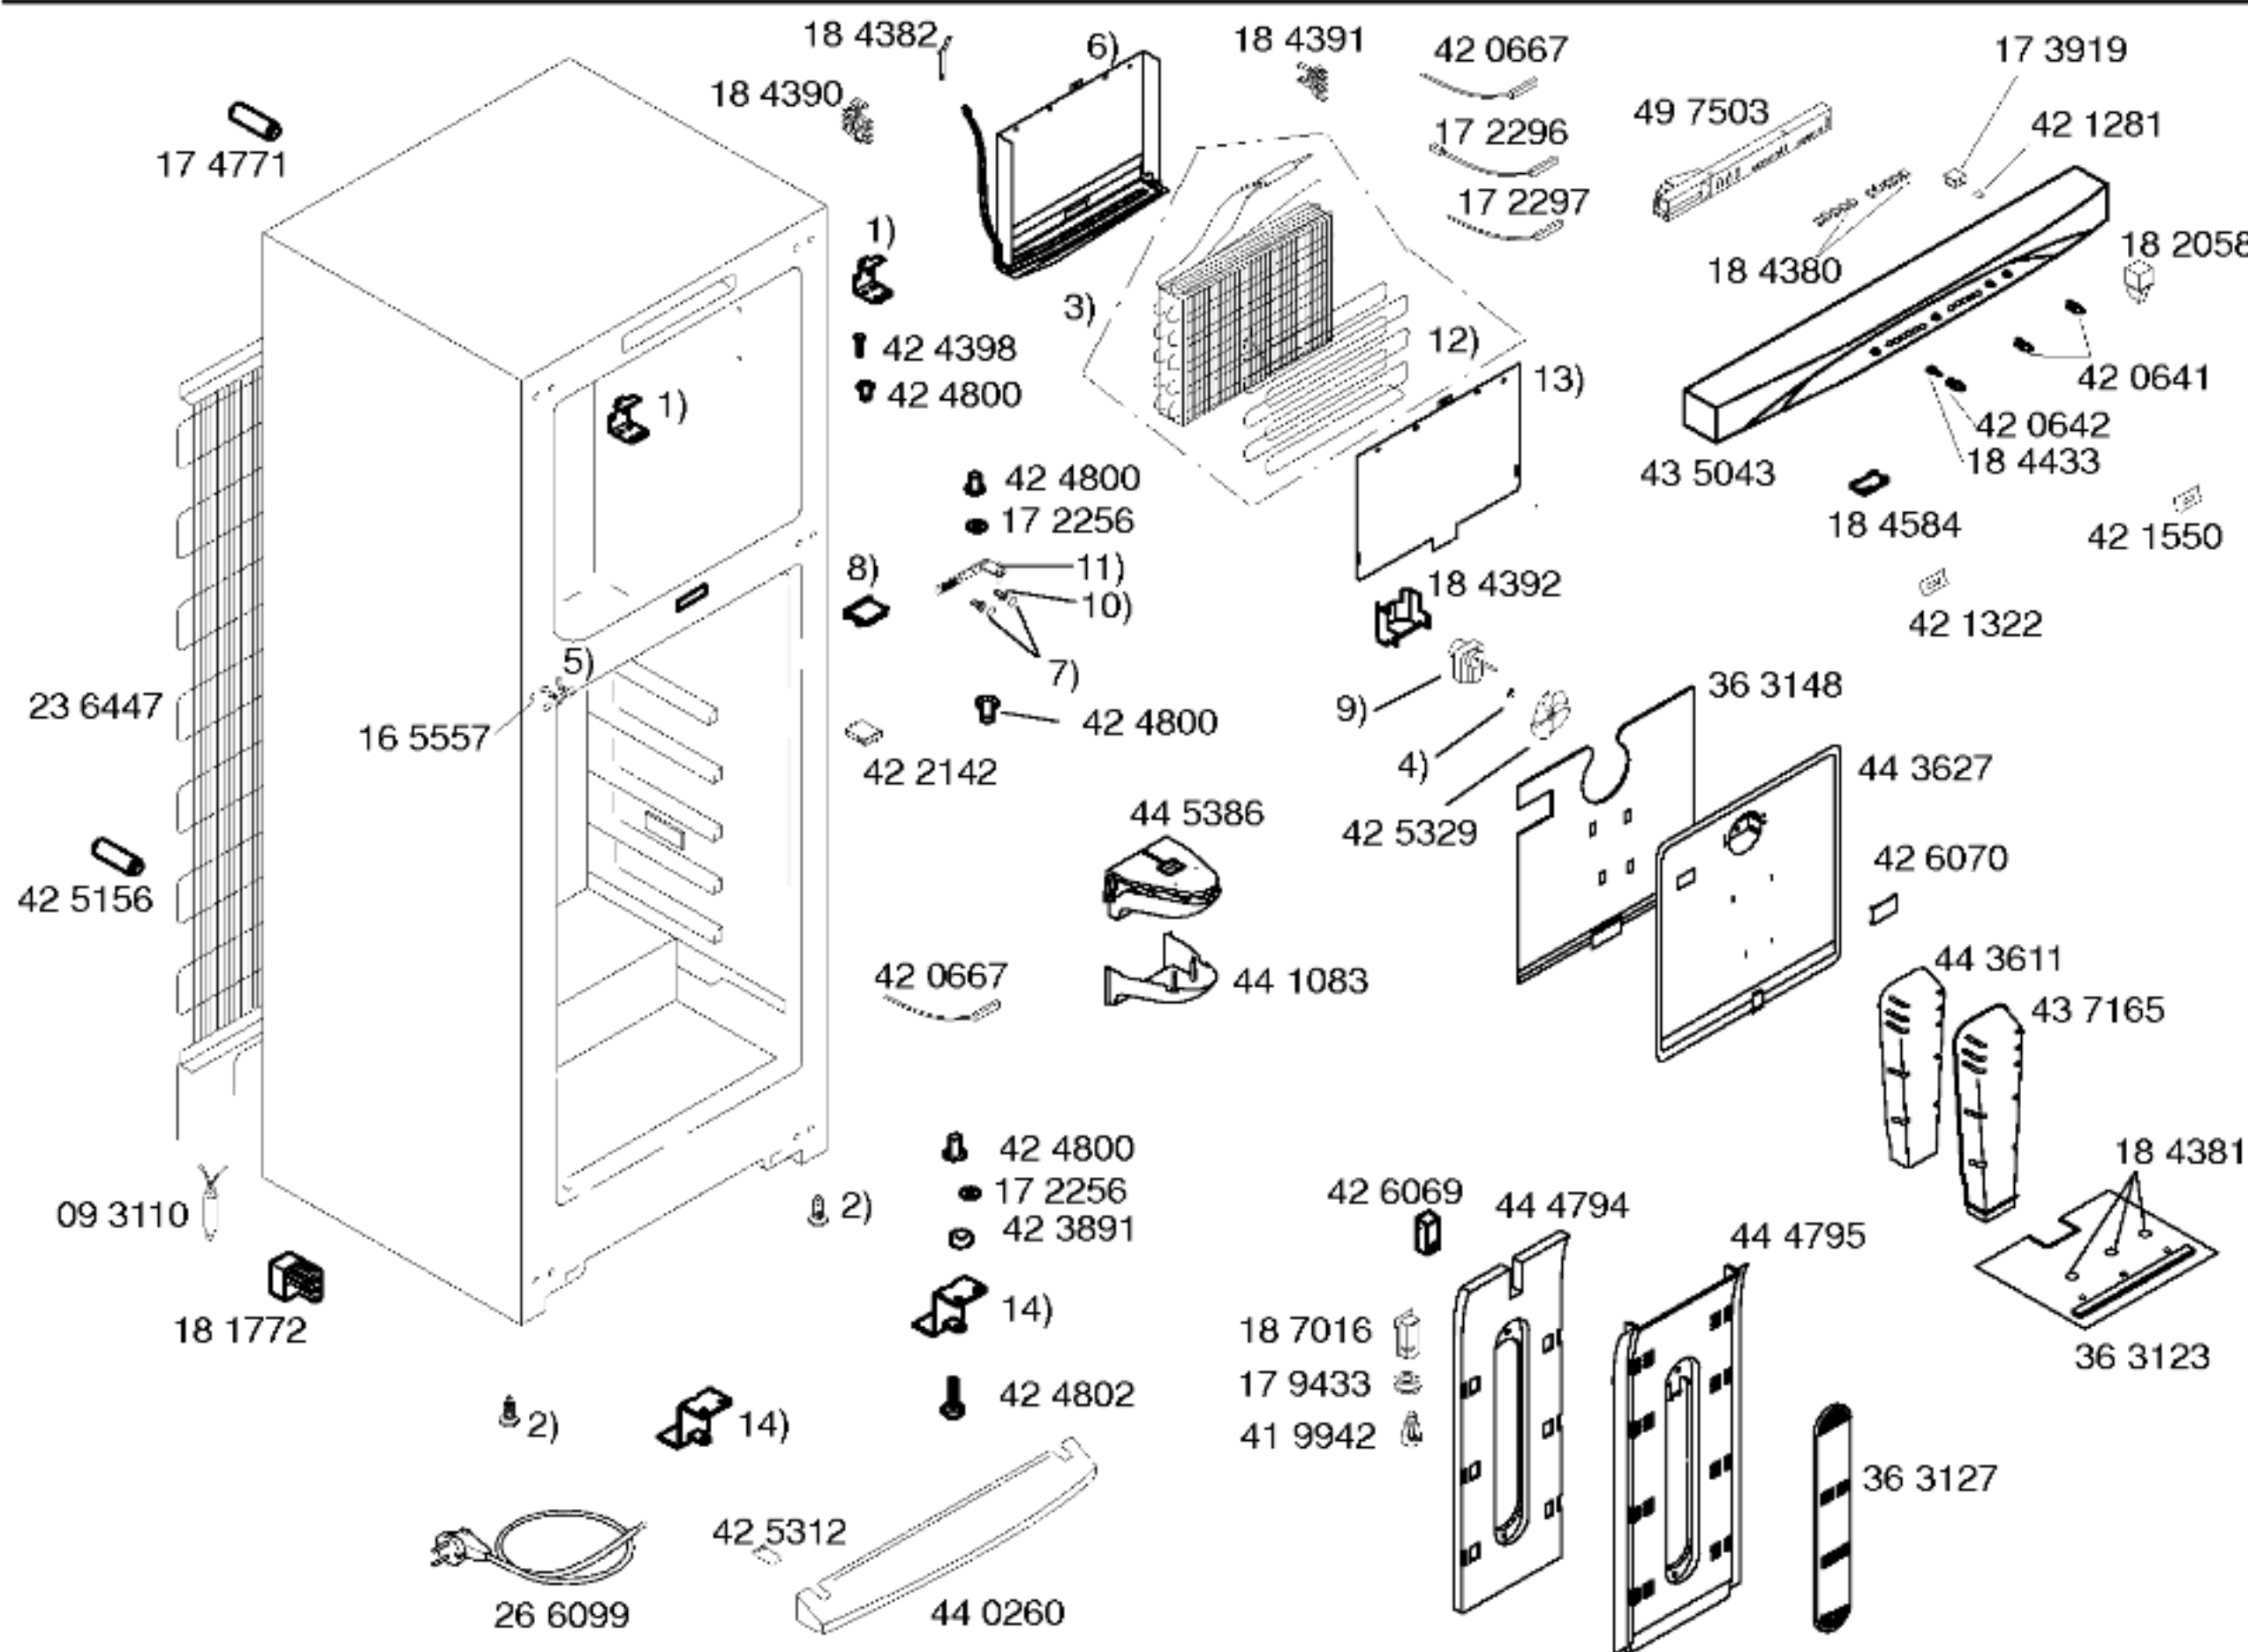

Gebrauchsanweisung
59 1154
(DE,GB,FR,ES,PT)

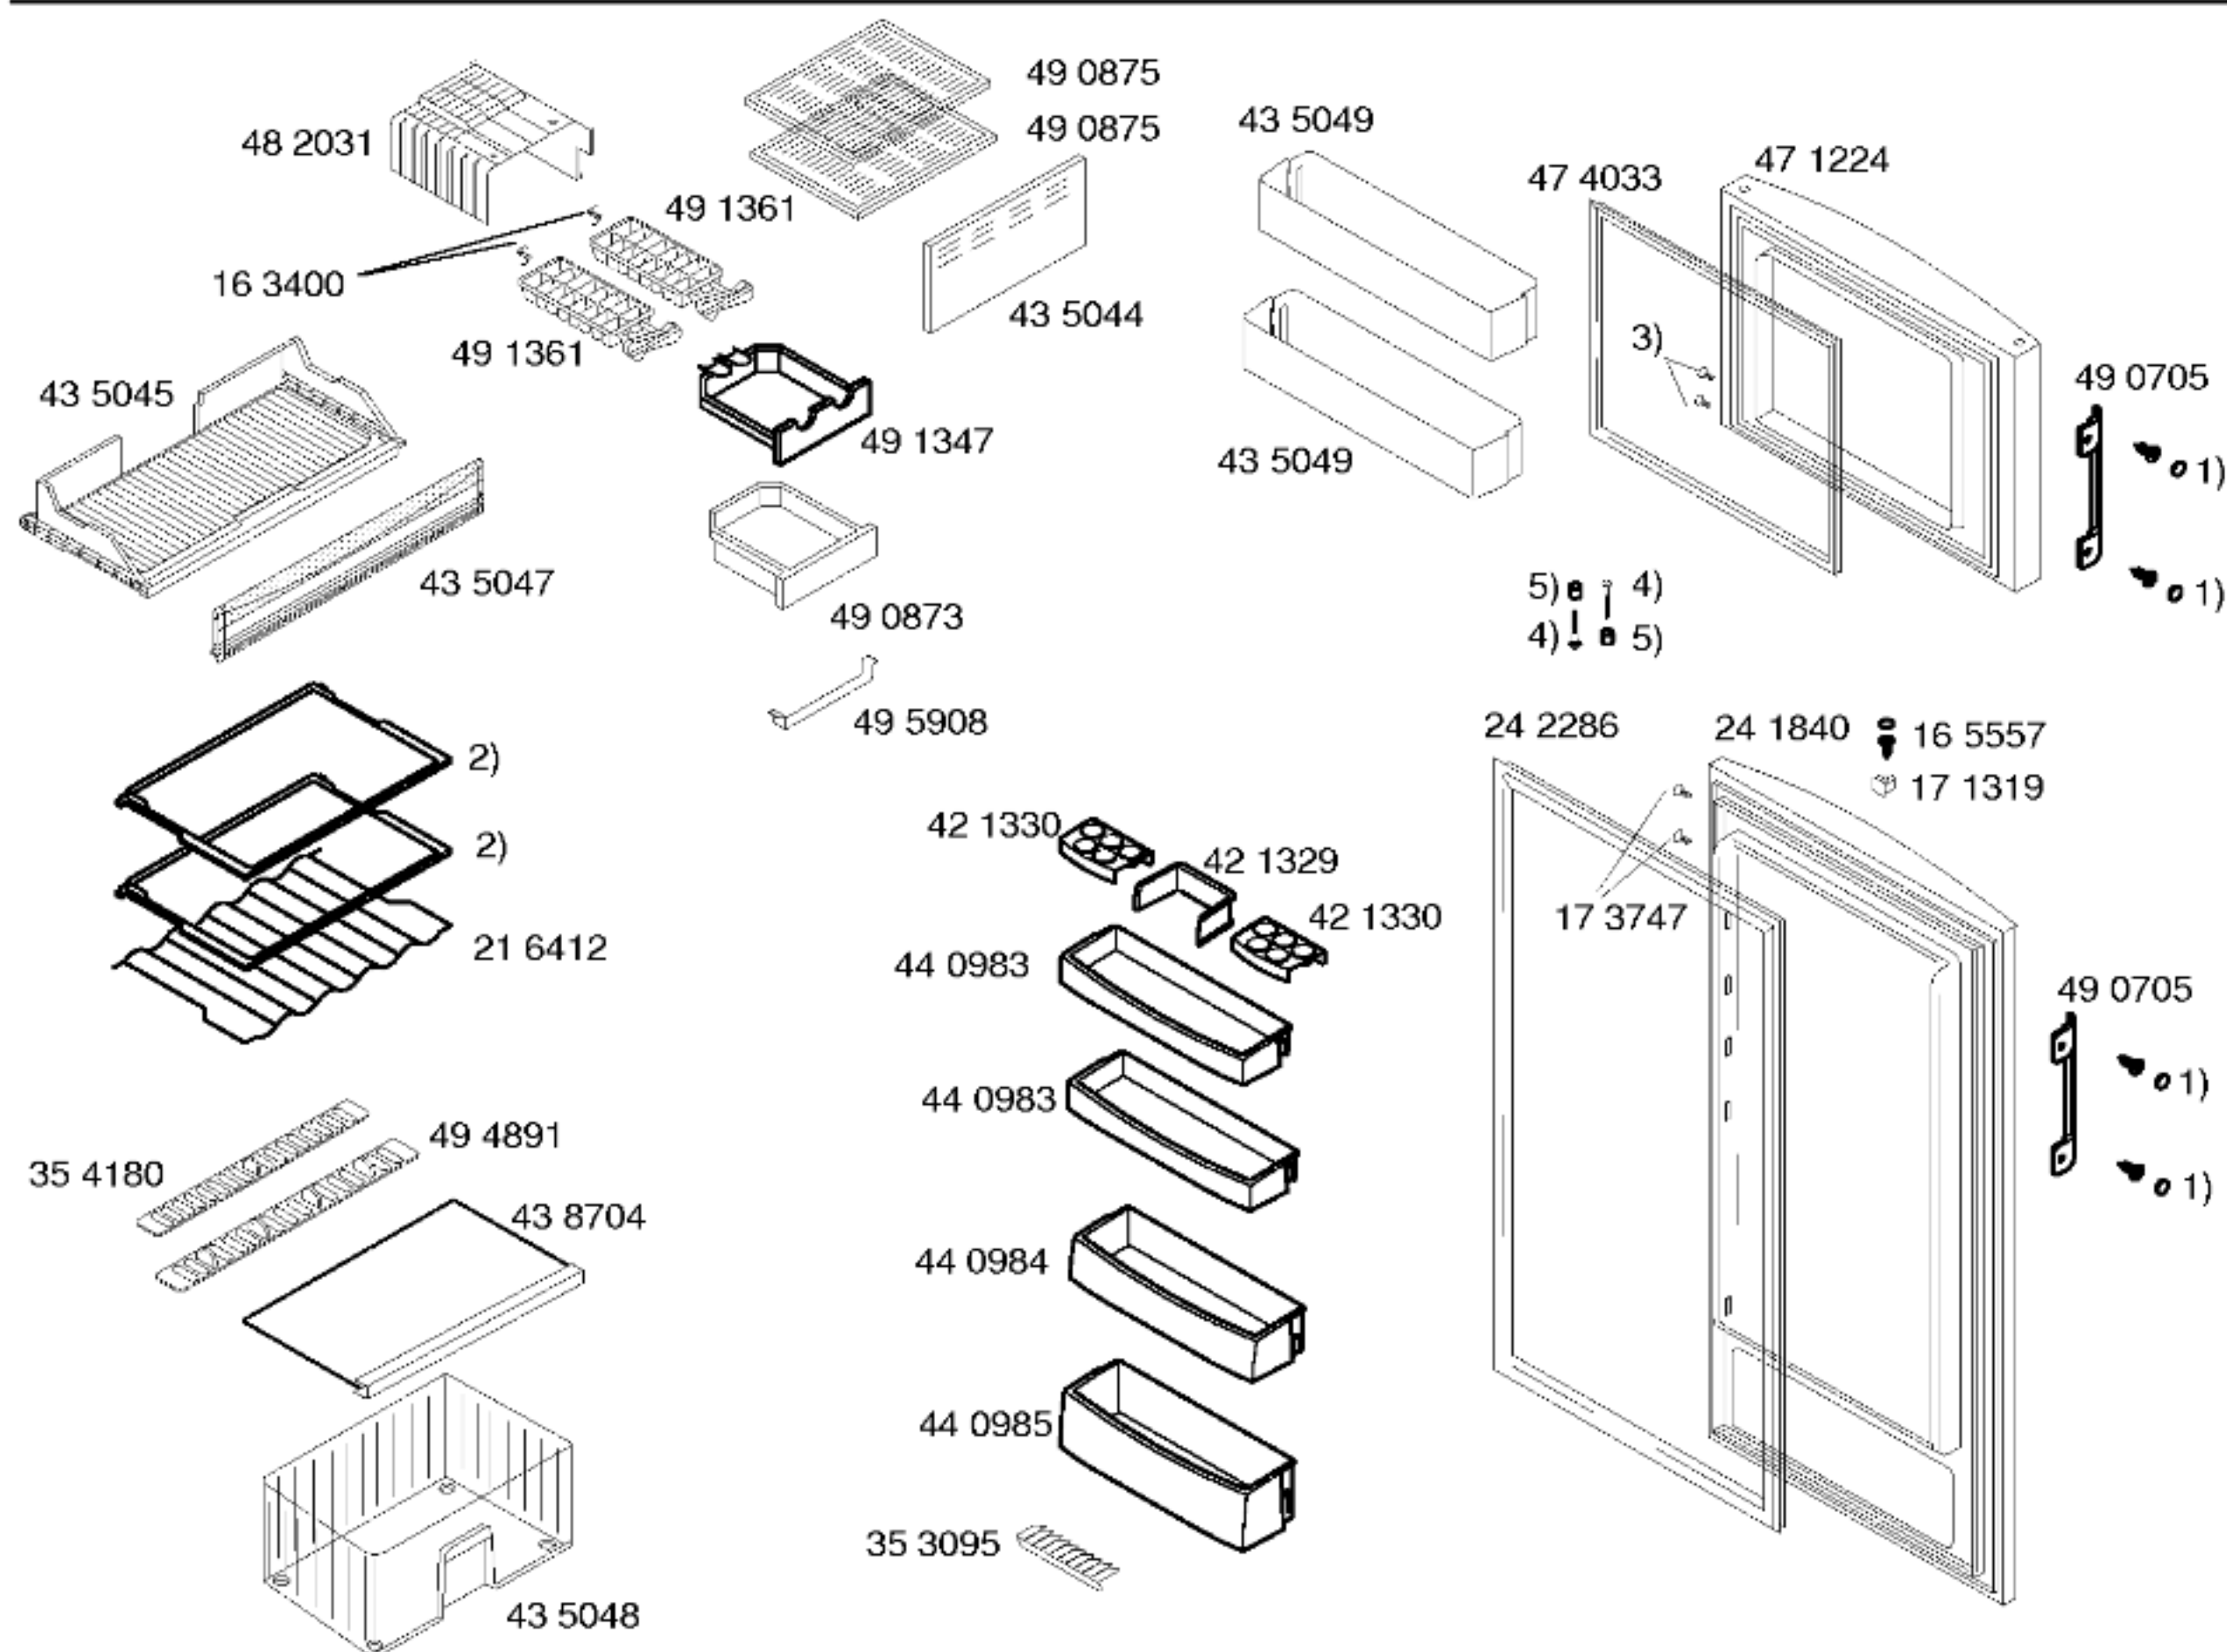

- 1) 16 5557
- 2) 44 0407
- 3) 17 3747
- 4) 18 8194
- 5) 18 8188

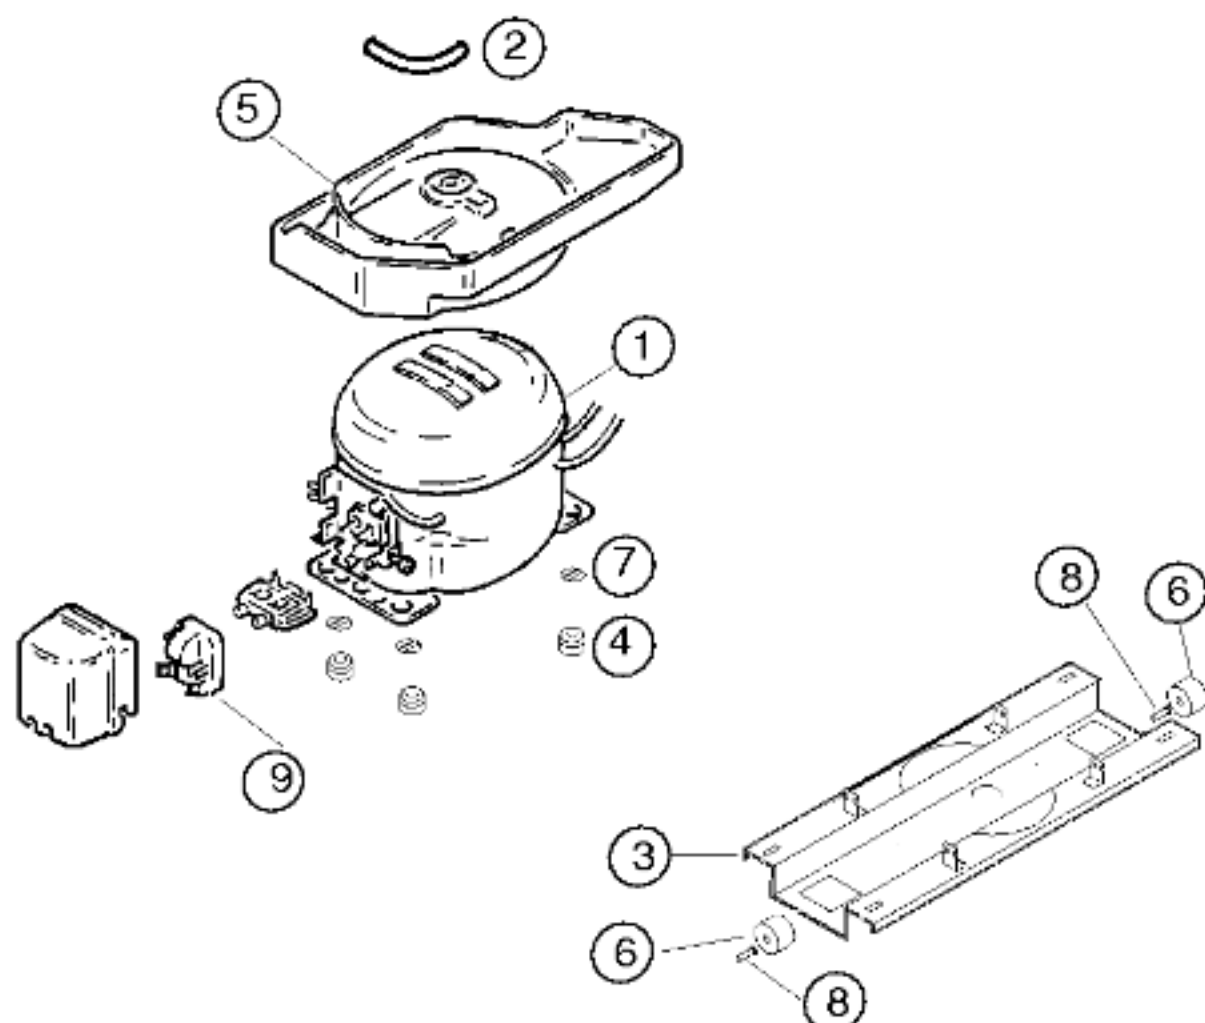

Pos.	Danfoss		
	NLE13KK3		
1	14 3864		
2	42 0376		
3	35 4158		
4	16 3427		
5	49 4671		
6	17 1318		
7	17 1519		
8	18 1014		
9	16 5570		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	Danfoss NLE13KK3		
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acta kapama degerleri Valeurs de commutation/Termostat degeri (.abtaven' od)	Elektronisch ..ein/acma °C ..aus"/kapama ..alam'		
Füllmenge/Fill. quantity/ Dolum miktarı	R600a	g	56
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc	W		
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans			
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

^ Siehe Typenschild/Mamul etiketine bakınız