



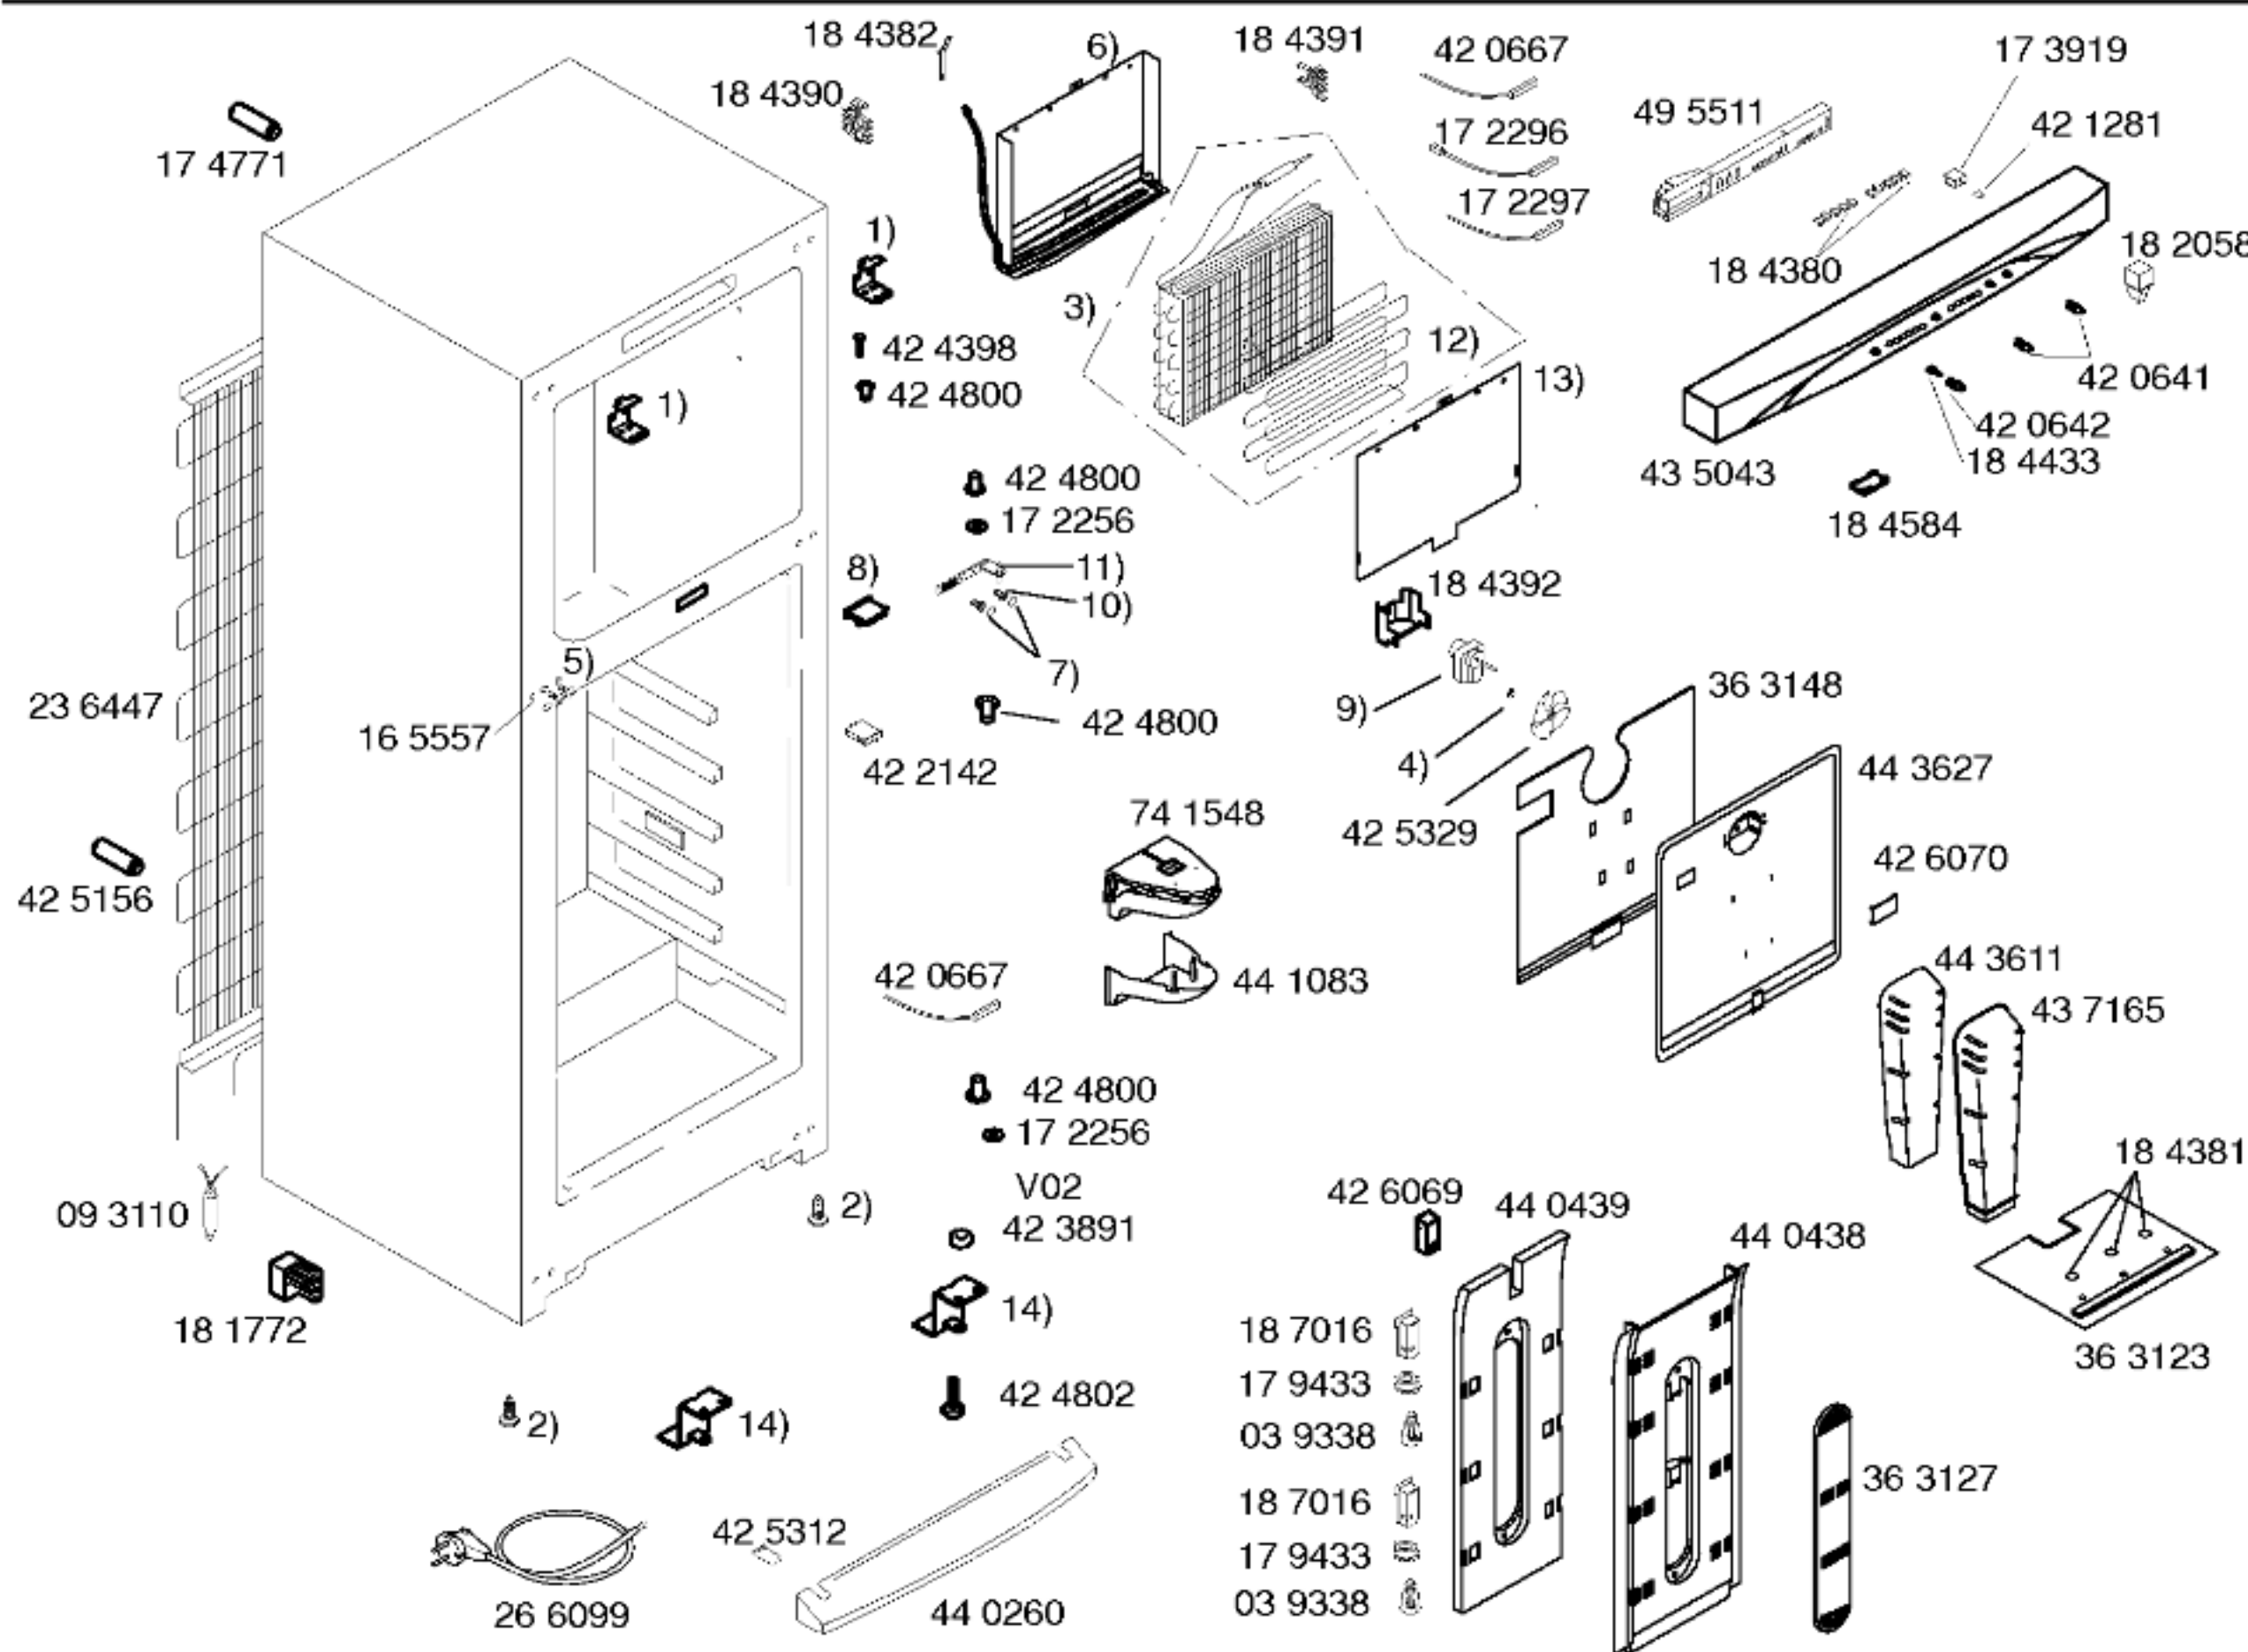


Gebrauchsanweisung
59 1154
(DE,GB,FR,ES,PT)

- 1) 17 1312
- 2) 42 4340
- 3) 43 8724
- 4) 17 1508
- 5) 16 5552
- 6) 36 9510
- 7) 17 6137
- 8) 41 8128
- 9) 49 1665
- 10) 18 8196
- 11) 42 4824
- 12) 36 9821
- 13) 36 6904
- 14) 42 4801

V01
42 8184
V02

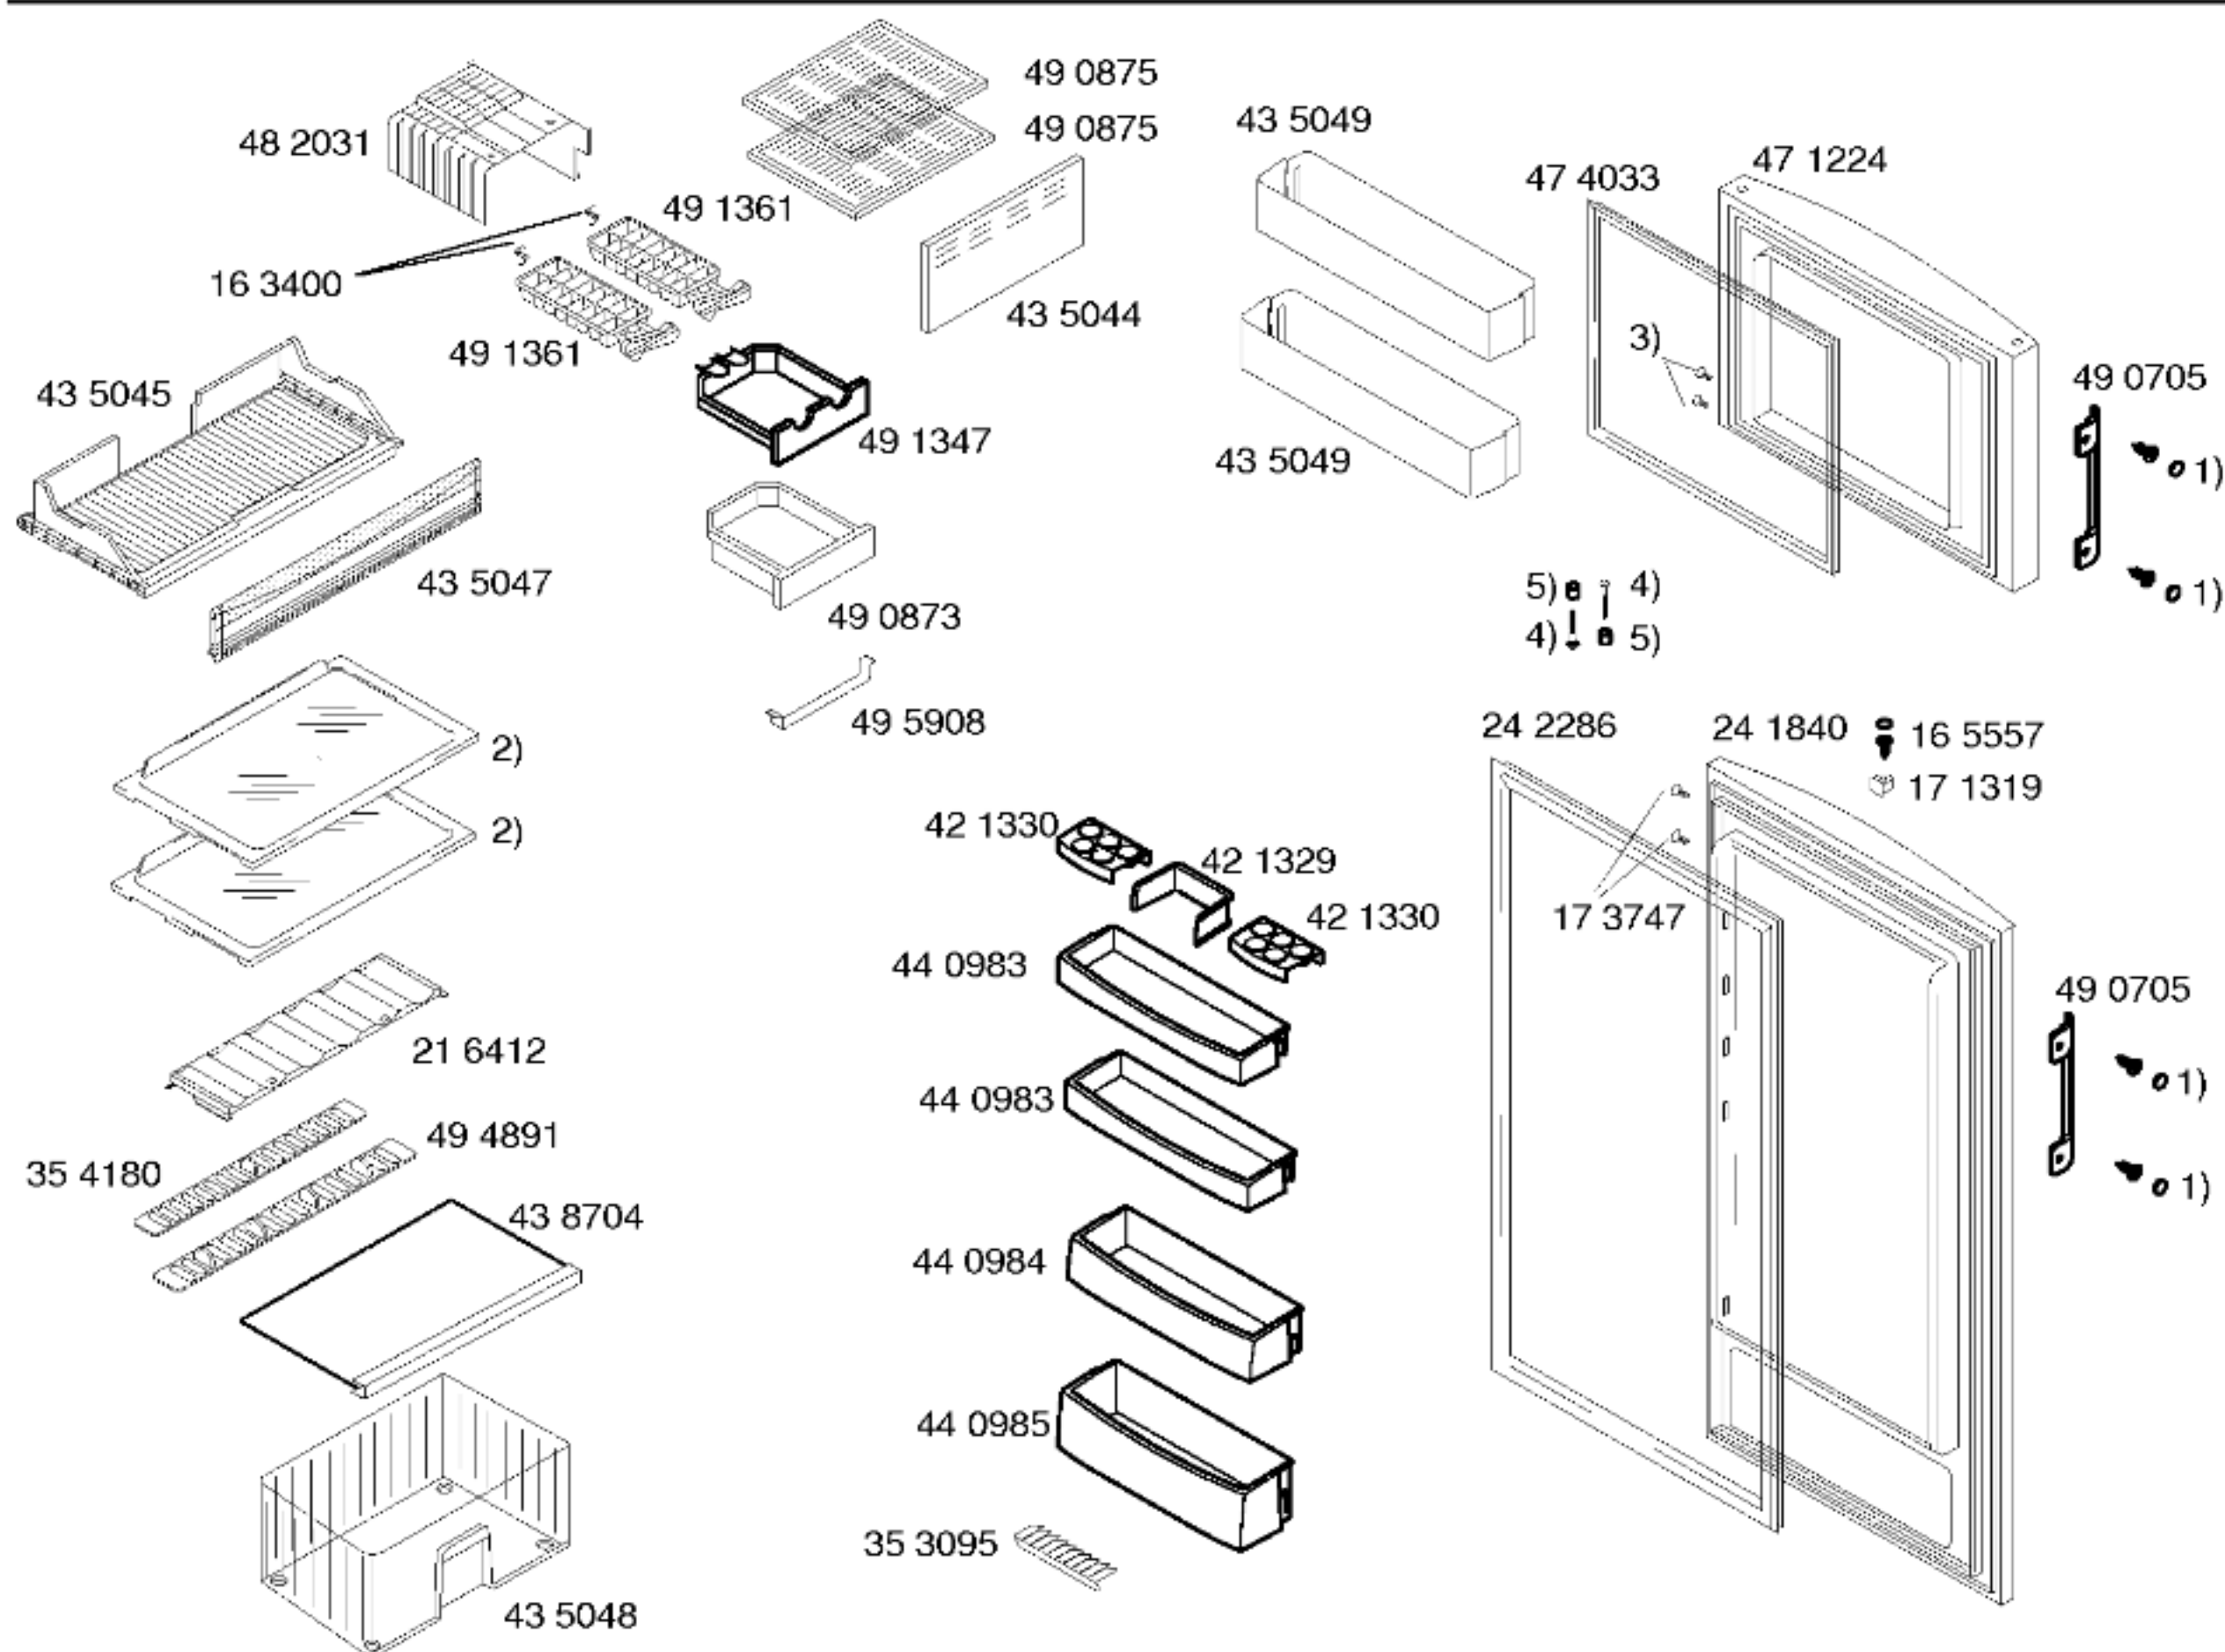

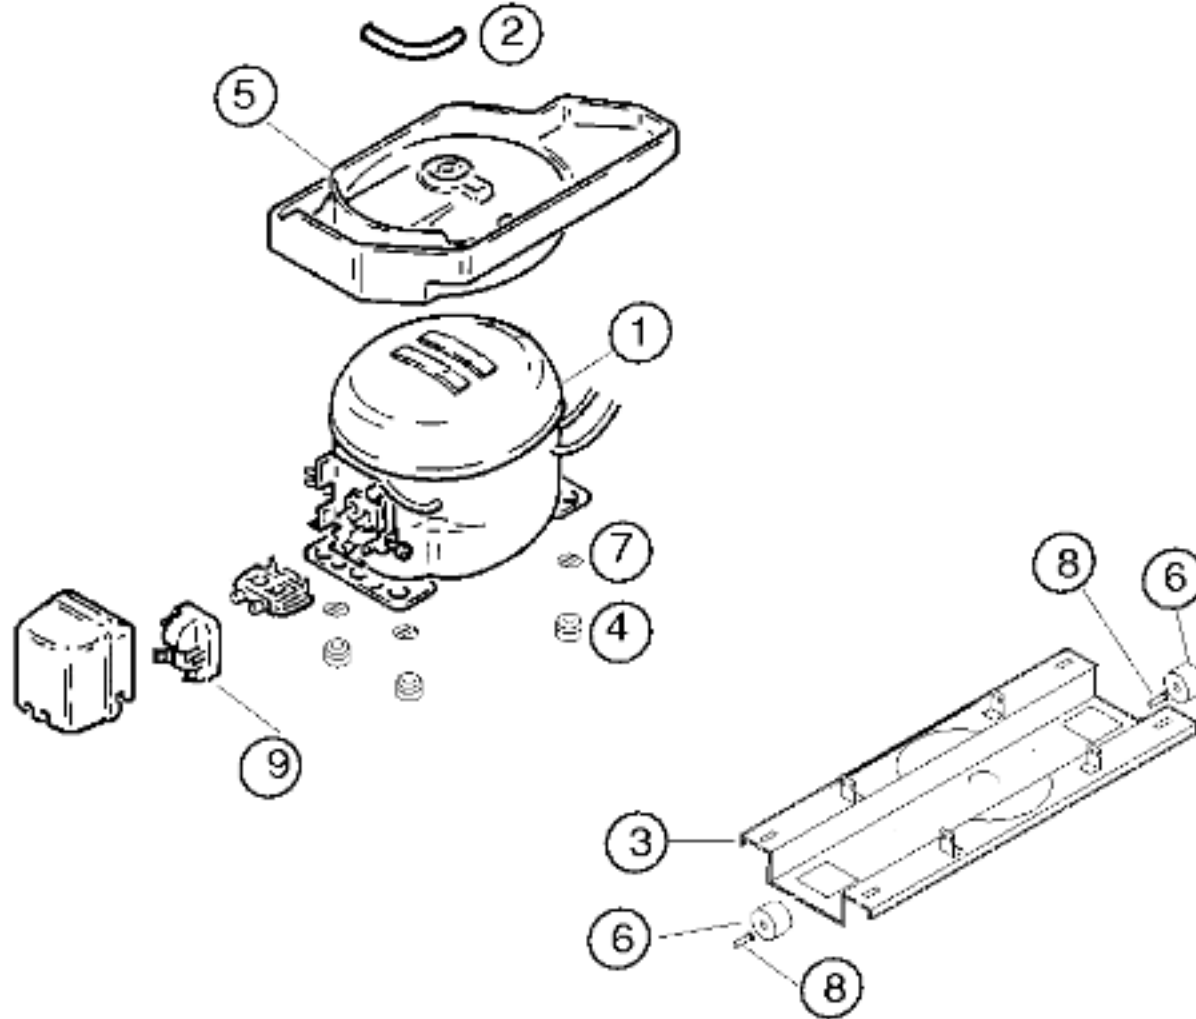

Pos.	Danfoss		
	NLE13KK3		
1	14 3864		
2	42 0376		
3	35 4158		
4	16 3427		
5	49 4671		
6	17 1318		
7	17 1519		
8	18 1014		
9	16 5570		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	Danfoss NLE13KK3		
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acma kapama degerleri Valeurs de commutation/Termostat degeri (.abtaven' od)	Elektronisch		
Füllmenge/Fill. quantity/ Dolum miktarı	R600a	g	56
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc	W		
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans			
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

^ Siehe Typenschild/Mamul etiketine bakınız