


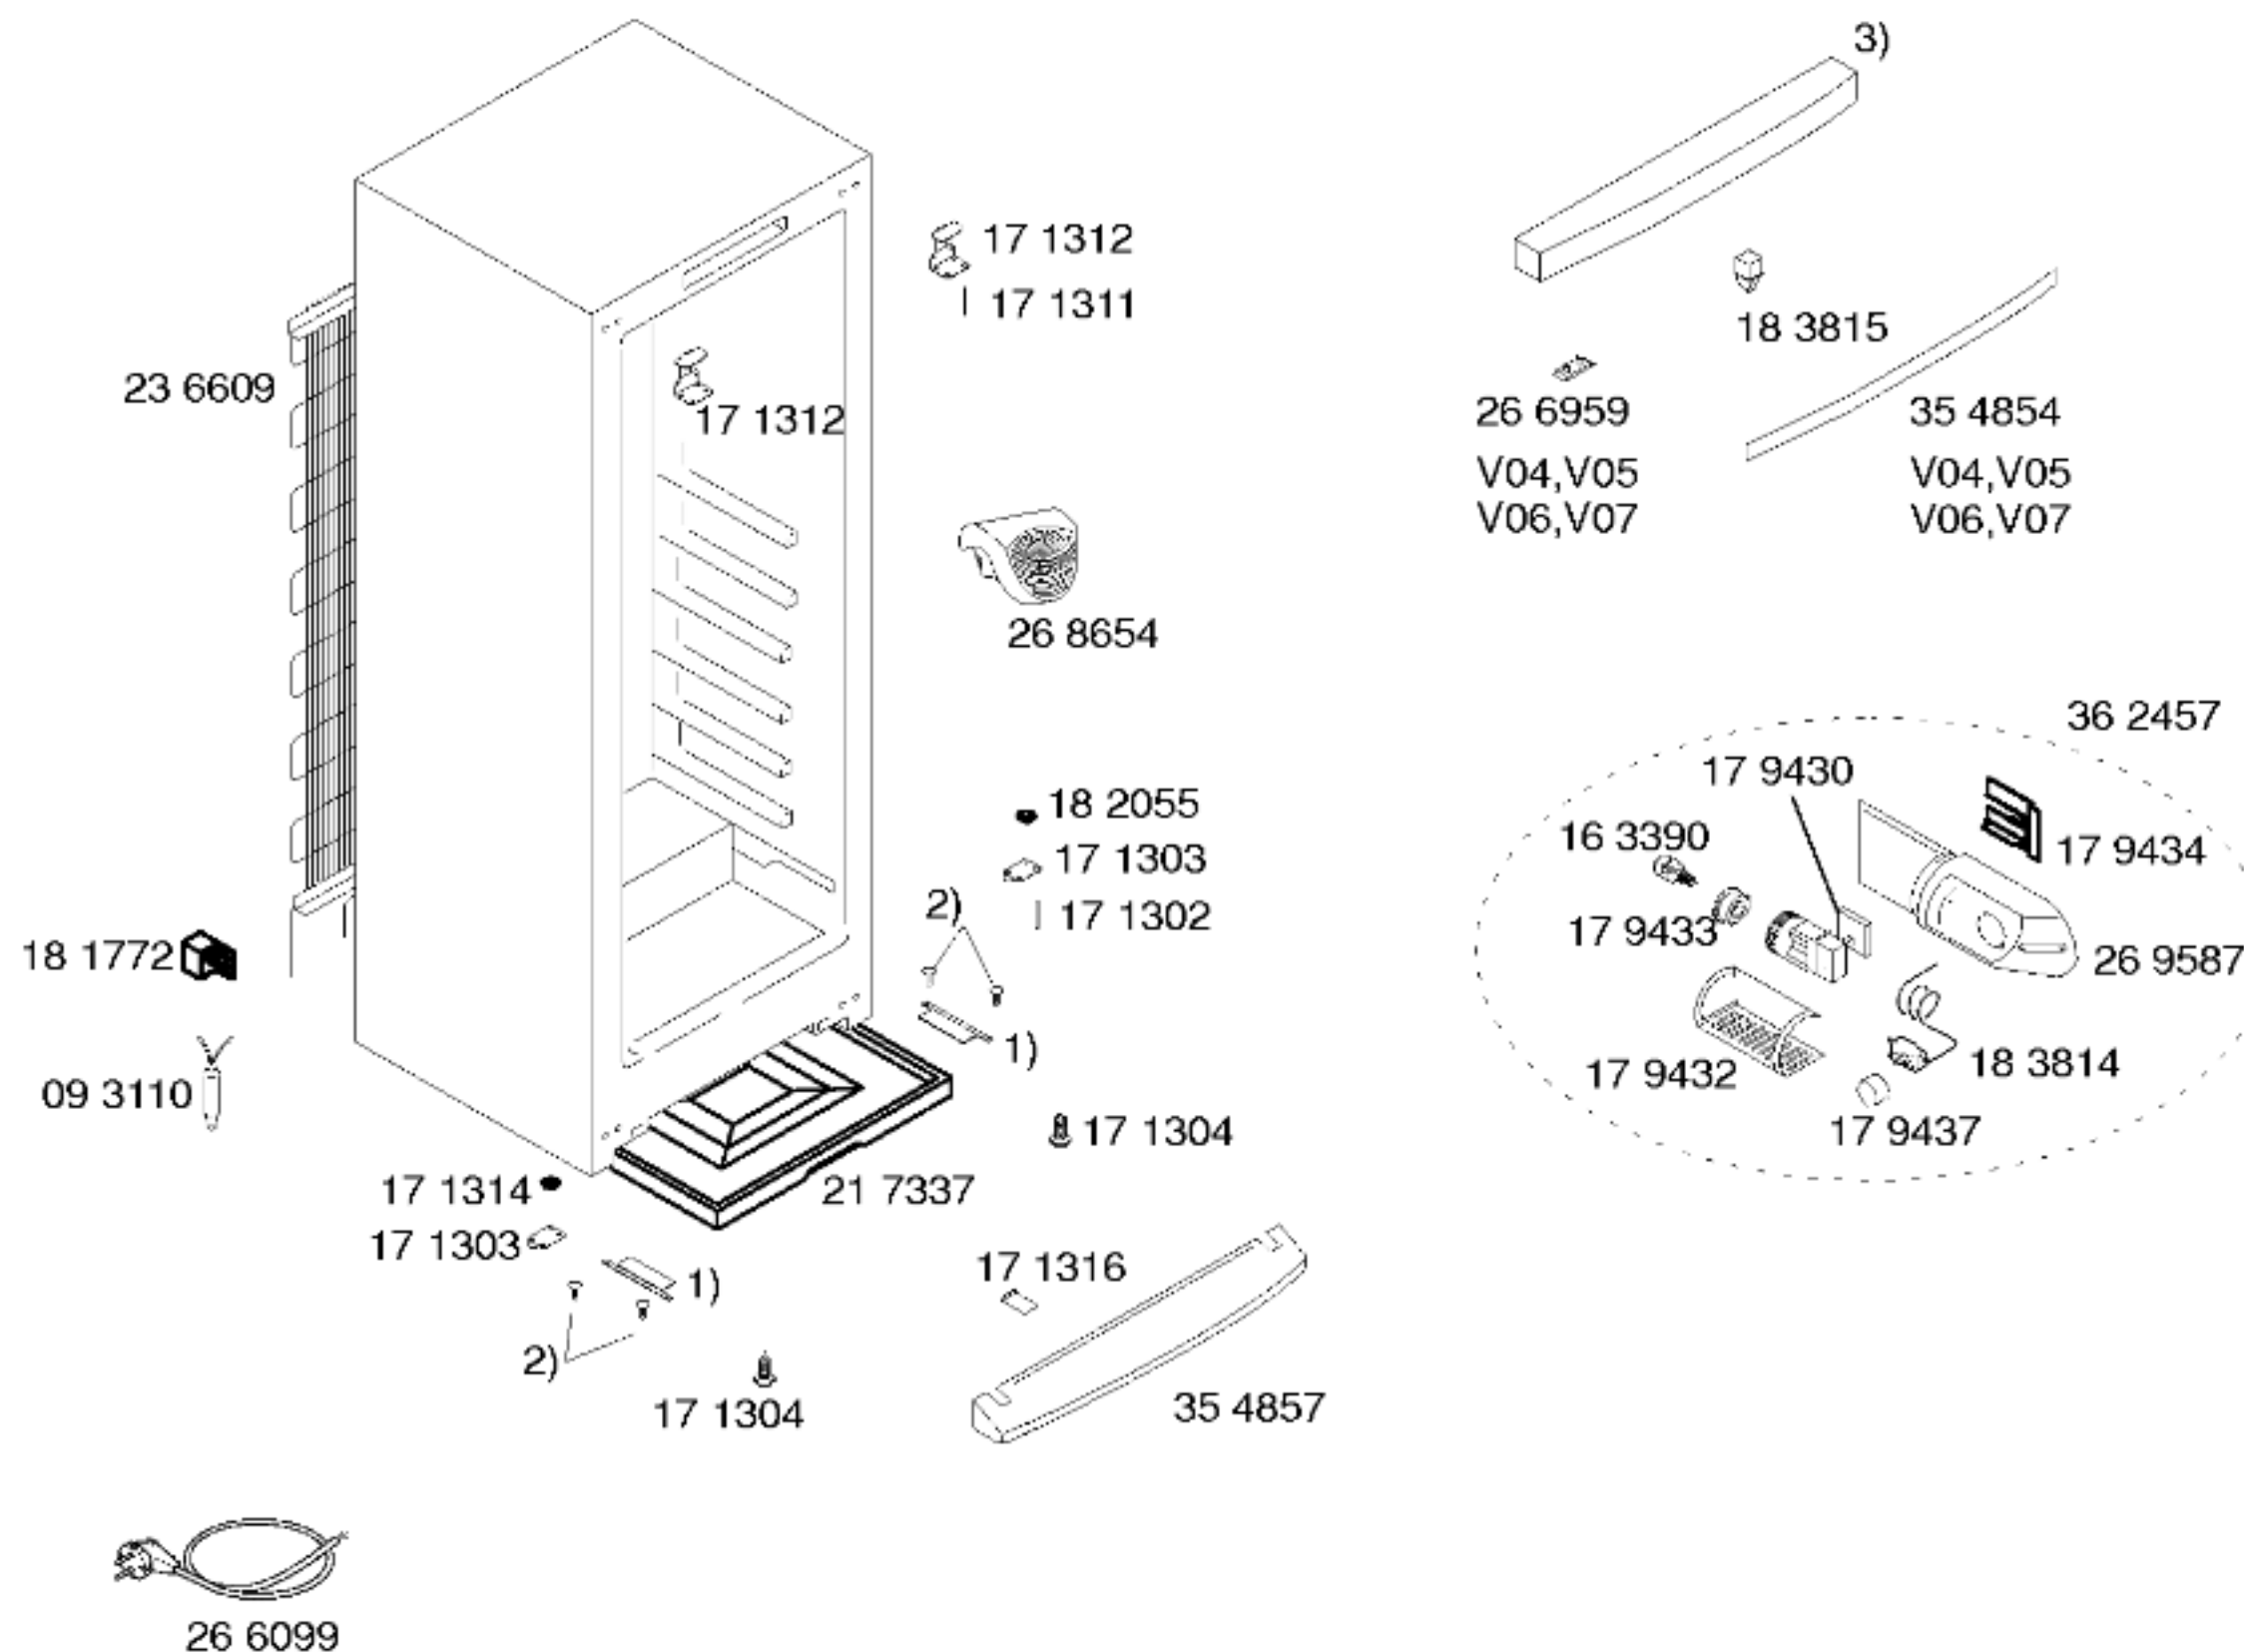

Gebrauchsanweisung
 52 8868

V01,V02,V03

58 2075

V04,V05

1) 48 1783

V02,V03

2) 16 3505

V02,V03,V04,V05

V06,V07

3) 36 2458


V01,V02

36 6620


V03

36 7440

V04,V05,V06,V07

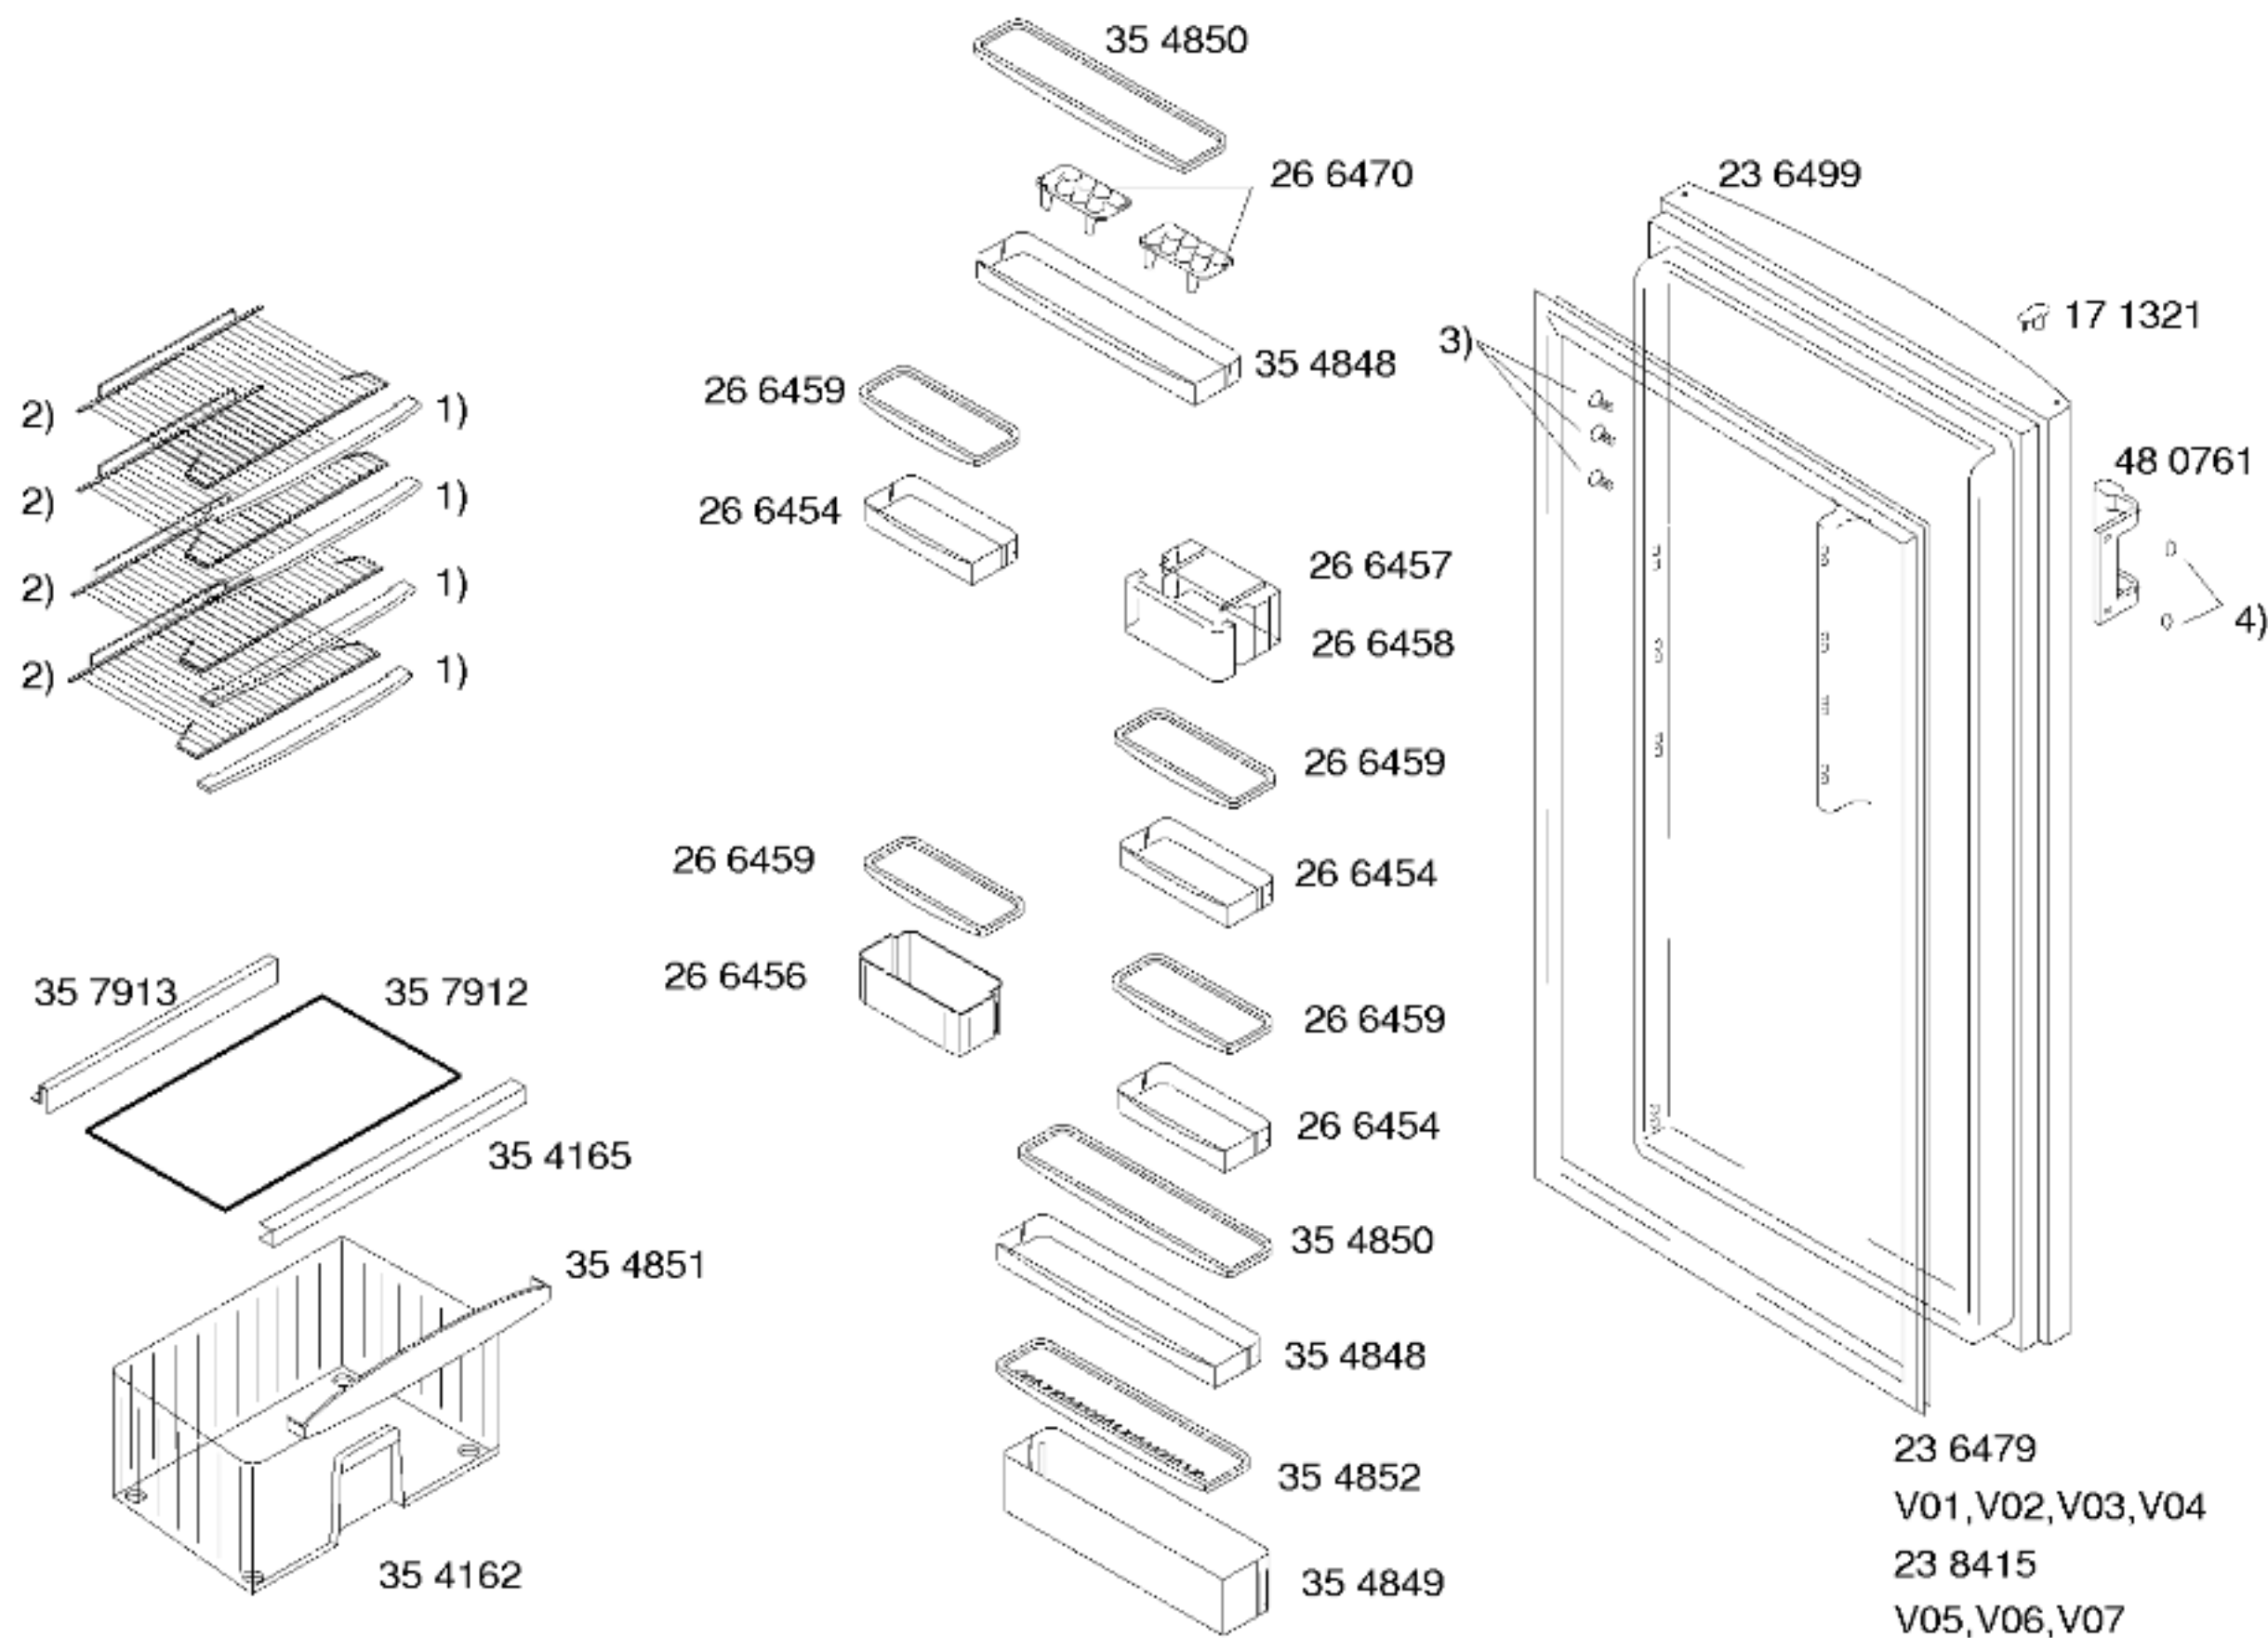

- 1) 35 4855
- 2) 35 4166
- 3) 16 6484
- 4) 16 5557

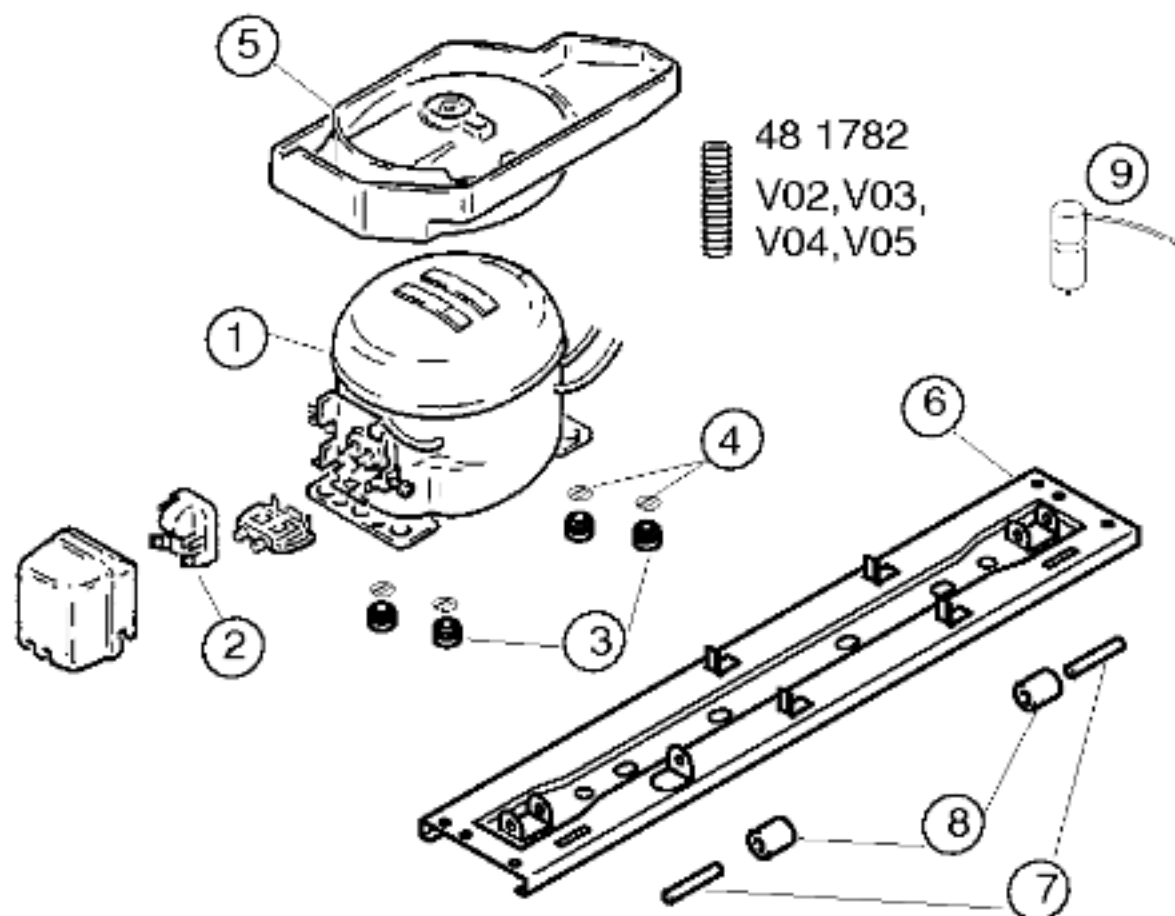

Pos.	V01	V06	V07
	Danfoss	Matsushita	Danfoss
	TLES6KK2	ESS60	TLYKK2
1	14 2166	14 3383	14 3519
2	16 5570		
3	16 3427		
4	17 1519		
5	48 1658	48 8771	48 9208
6	35 4158		
7	18 1014		
8	17 1318		
9			17 4093
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
	V01	V02,3,4,5	V06
Verdichter/Compressor/Kompresör	Danfoss		Danfoss
Typ/Type/Tip	TLES6KK2		TLYKK2
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi	2.9		
Widerstand/Resistance/Rezistans Ha/Hi/aux.	25.7		
	18.7		
Temp.Reyler/Thermostat/Termostat	Danfoss		
Typ/Type/Tip	077B52		
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Actua kapama degerleri	+4 +10.5		
Valeurs de commutation/Termostat degeri	-21.4 -10.7		
(..abtafen' od)			
Füllmenge/Fill. quantily/ Dolum miktari	R600a		
	g		
Anschlusswert/Comm. load/Giris gucu	W		
Heizung/Heater/Rezistans			
Widerstand/Resistance/Direnc	Ohm		
Leistung/Power/Guc	W		
Ventilador/Blower/Vantilatör			
Widerstand/Resistance/Rezistans	Ohm		
Magnetventil/Magnetic valve/Manyetik valf			
Widerstand/Resistance/Rezistans	Ohm		
Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz