



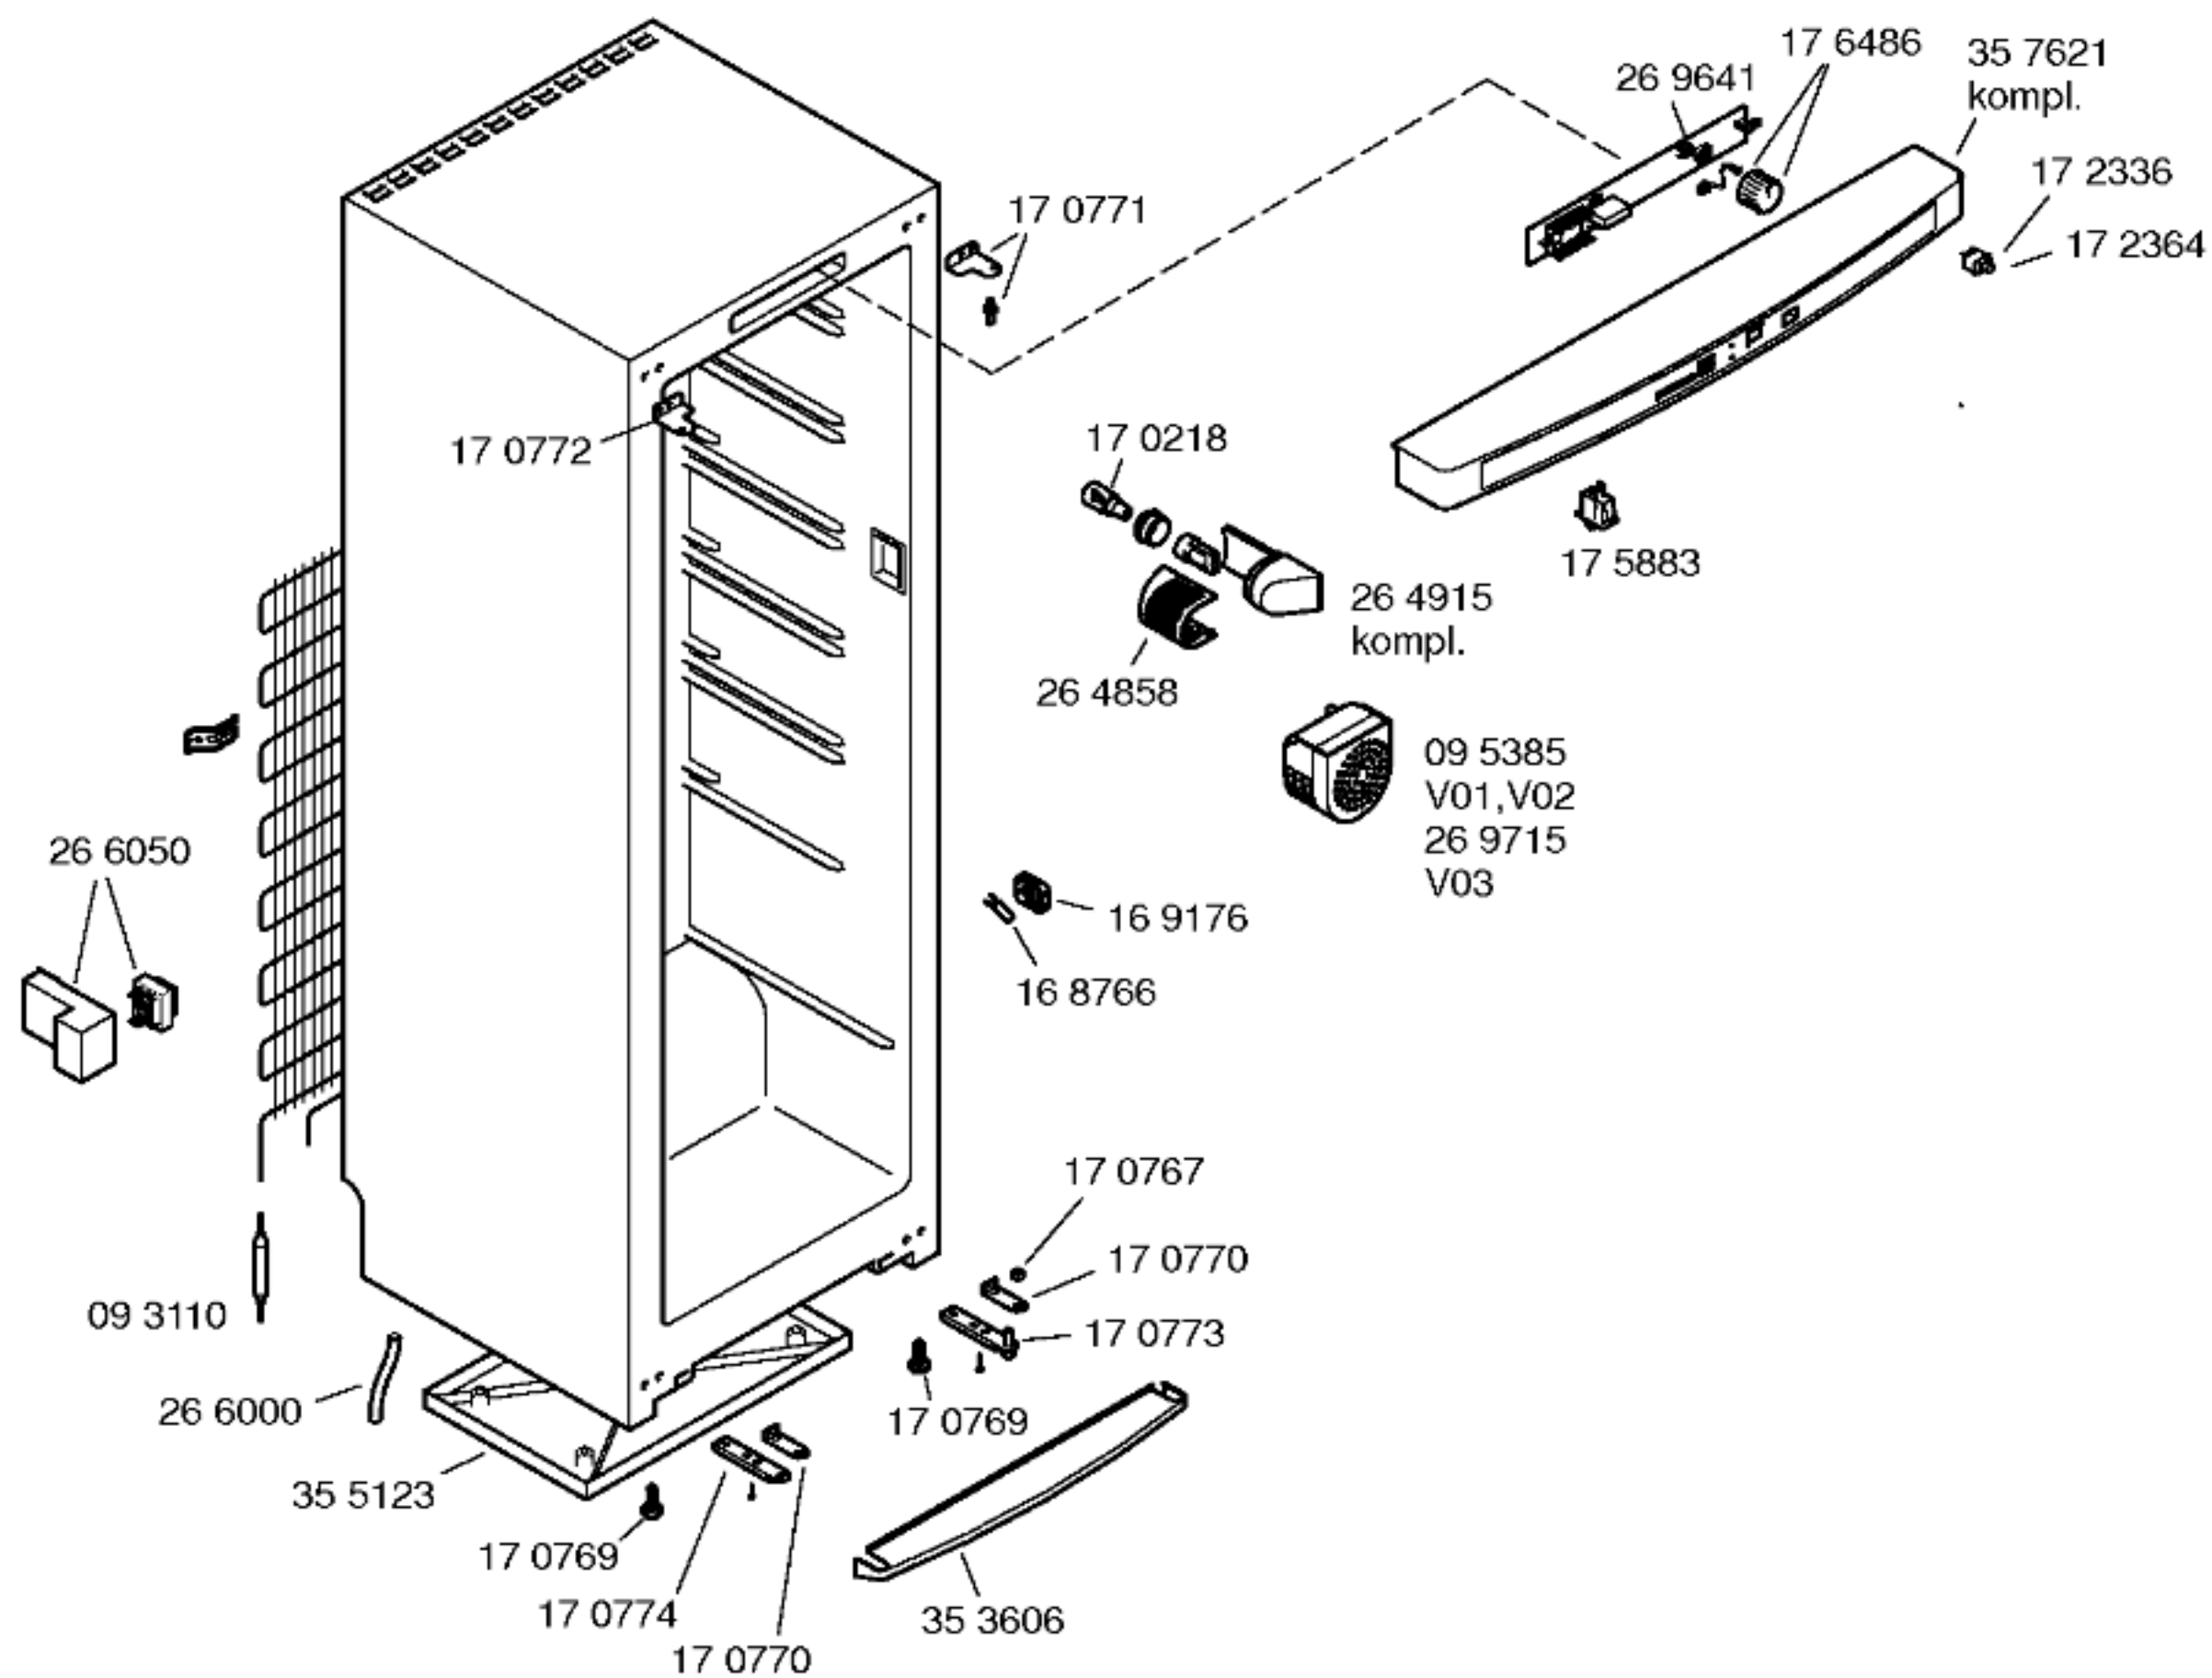


Libro de instrucciones
52 5311

Instrucciones de
montaje
52 2772

Cjto. panelación
26 5627

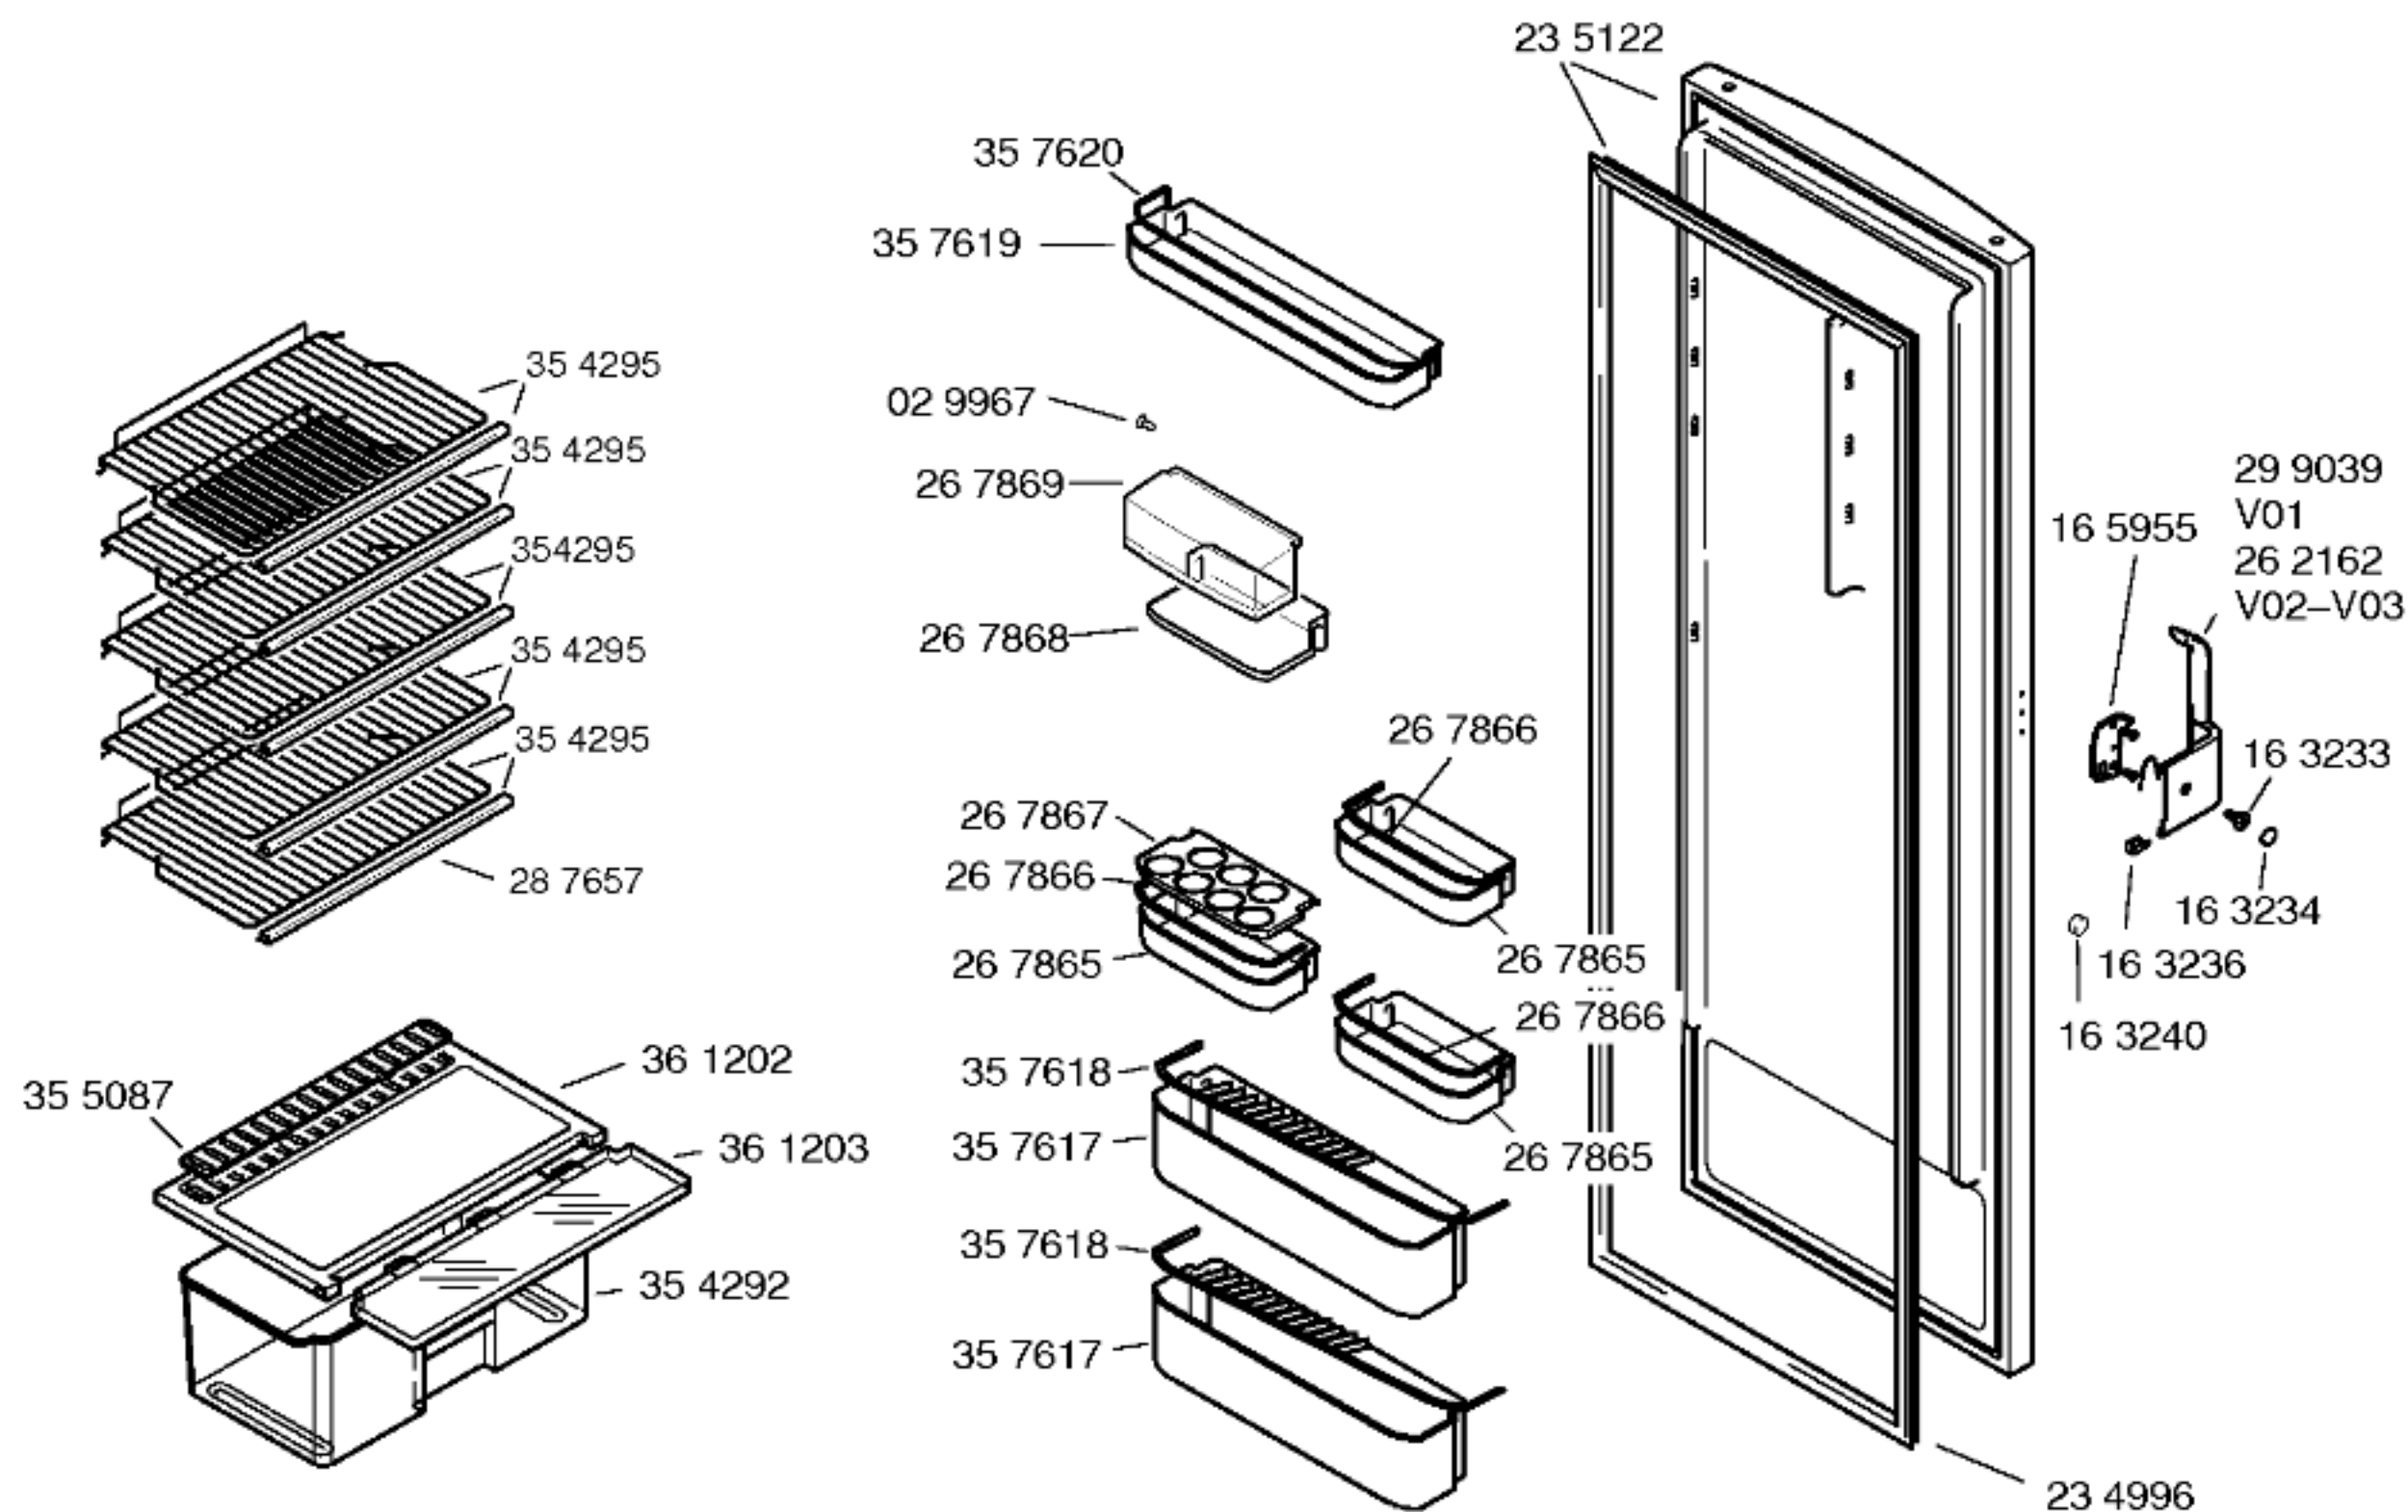

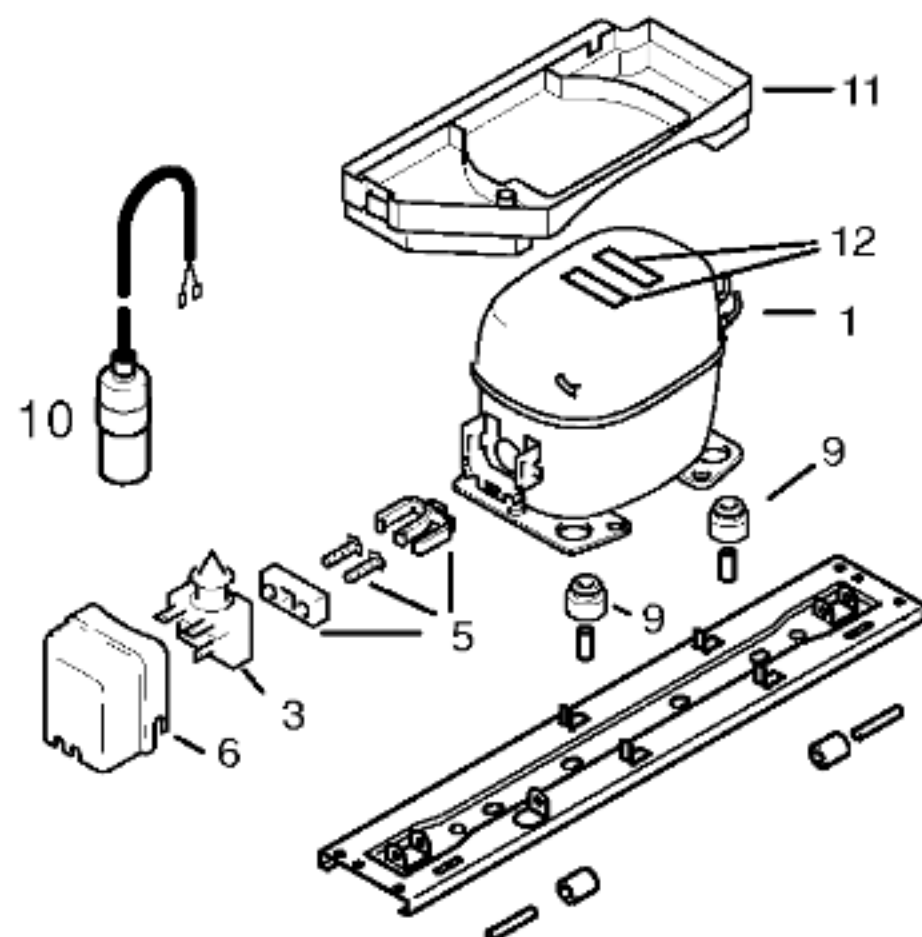

Pos.	V01, V02		
	Danfoss		
	TLES 5 KK2		
1	14 1633		
2			
3	15 1055		
4	15 1053		
5	15 0760		
6	15 1072		
7	16 9319		
8	26 4879		
9	05 0166		
10	16 5852		
11	08 4744		
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES5KK2		
Förderleistung/Delivery/Débit	l/h	914		
Anlaufstrom/Starting current/Cour de démarrage	A	2,9		
Widerstand/Resistance/Résistance	Ha/main/prin	Ω	25,7	
	Hi/aux	Ω	15,7	
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values	"warm"			
Valeurs de commutation	"kalt"			
	"alarm"			
Füllmenge/Fill.quantity/Charge	R600a	*		
Anschlußwert/Conn.load/Puiss. connectée	W	56		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
NTC-Fühler / Sensor		°C	kΩ	°C
		+10	9,95 ±0,18	-18
		+5	12,70 ±0,18	-22
		0	16,33 ±0,16	-26
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
	V			

* siehe Typenschild