

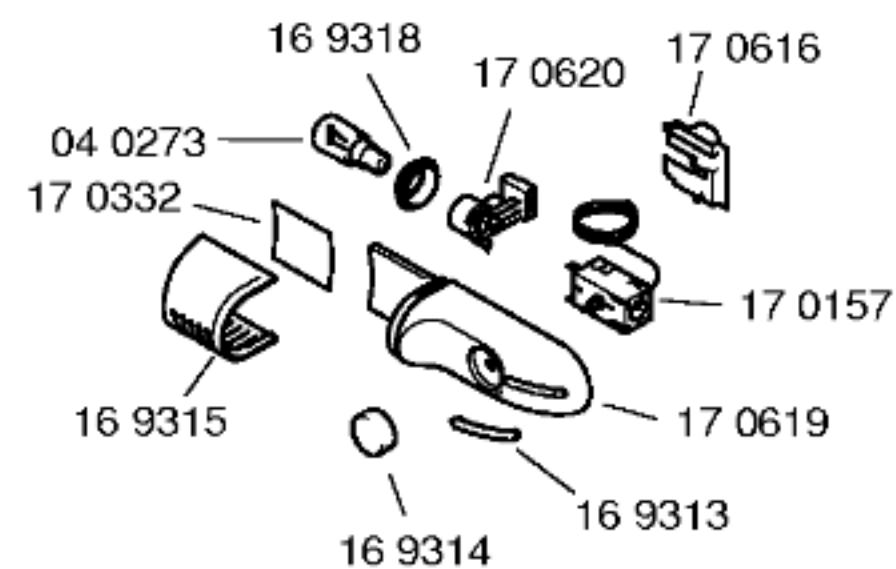


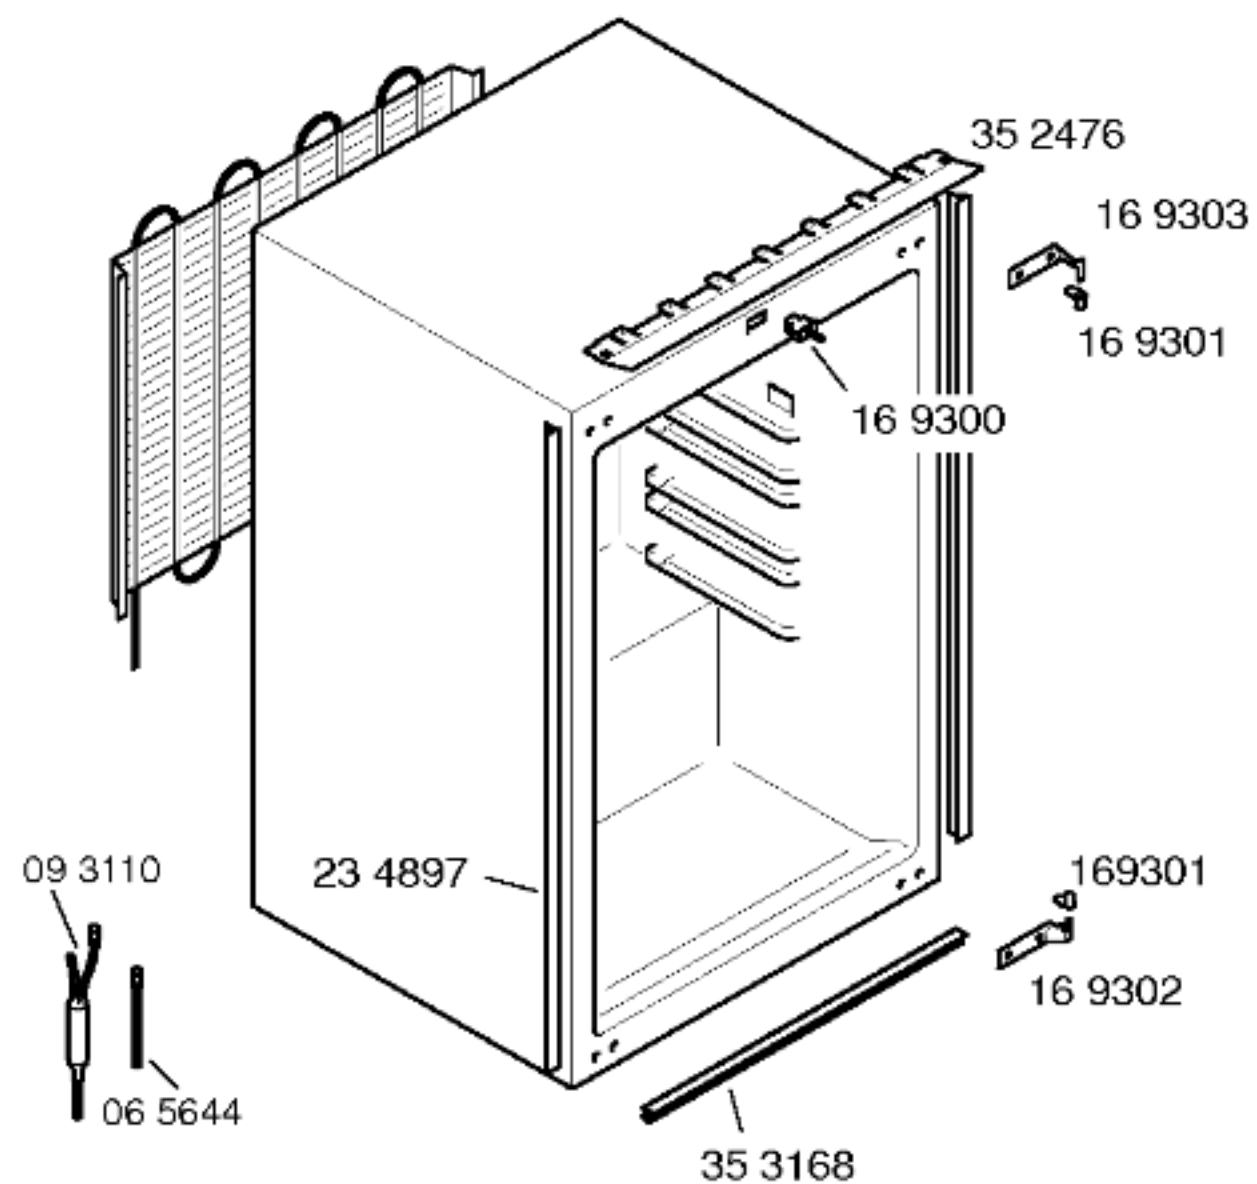


Gebrauchsanweisung
52 3550
(D,GB,F,I,NL)

Montageanleitung
52 1893
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 4862

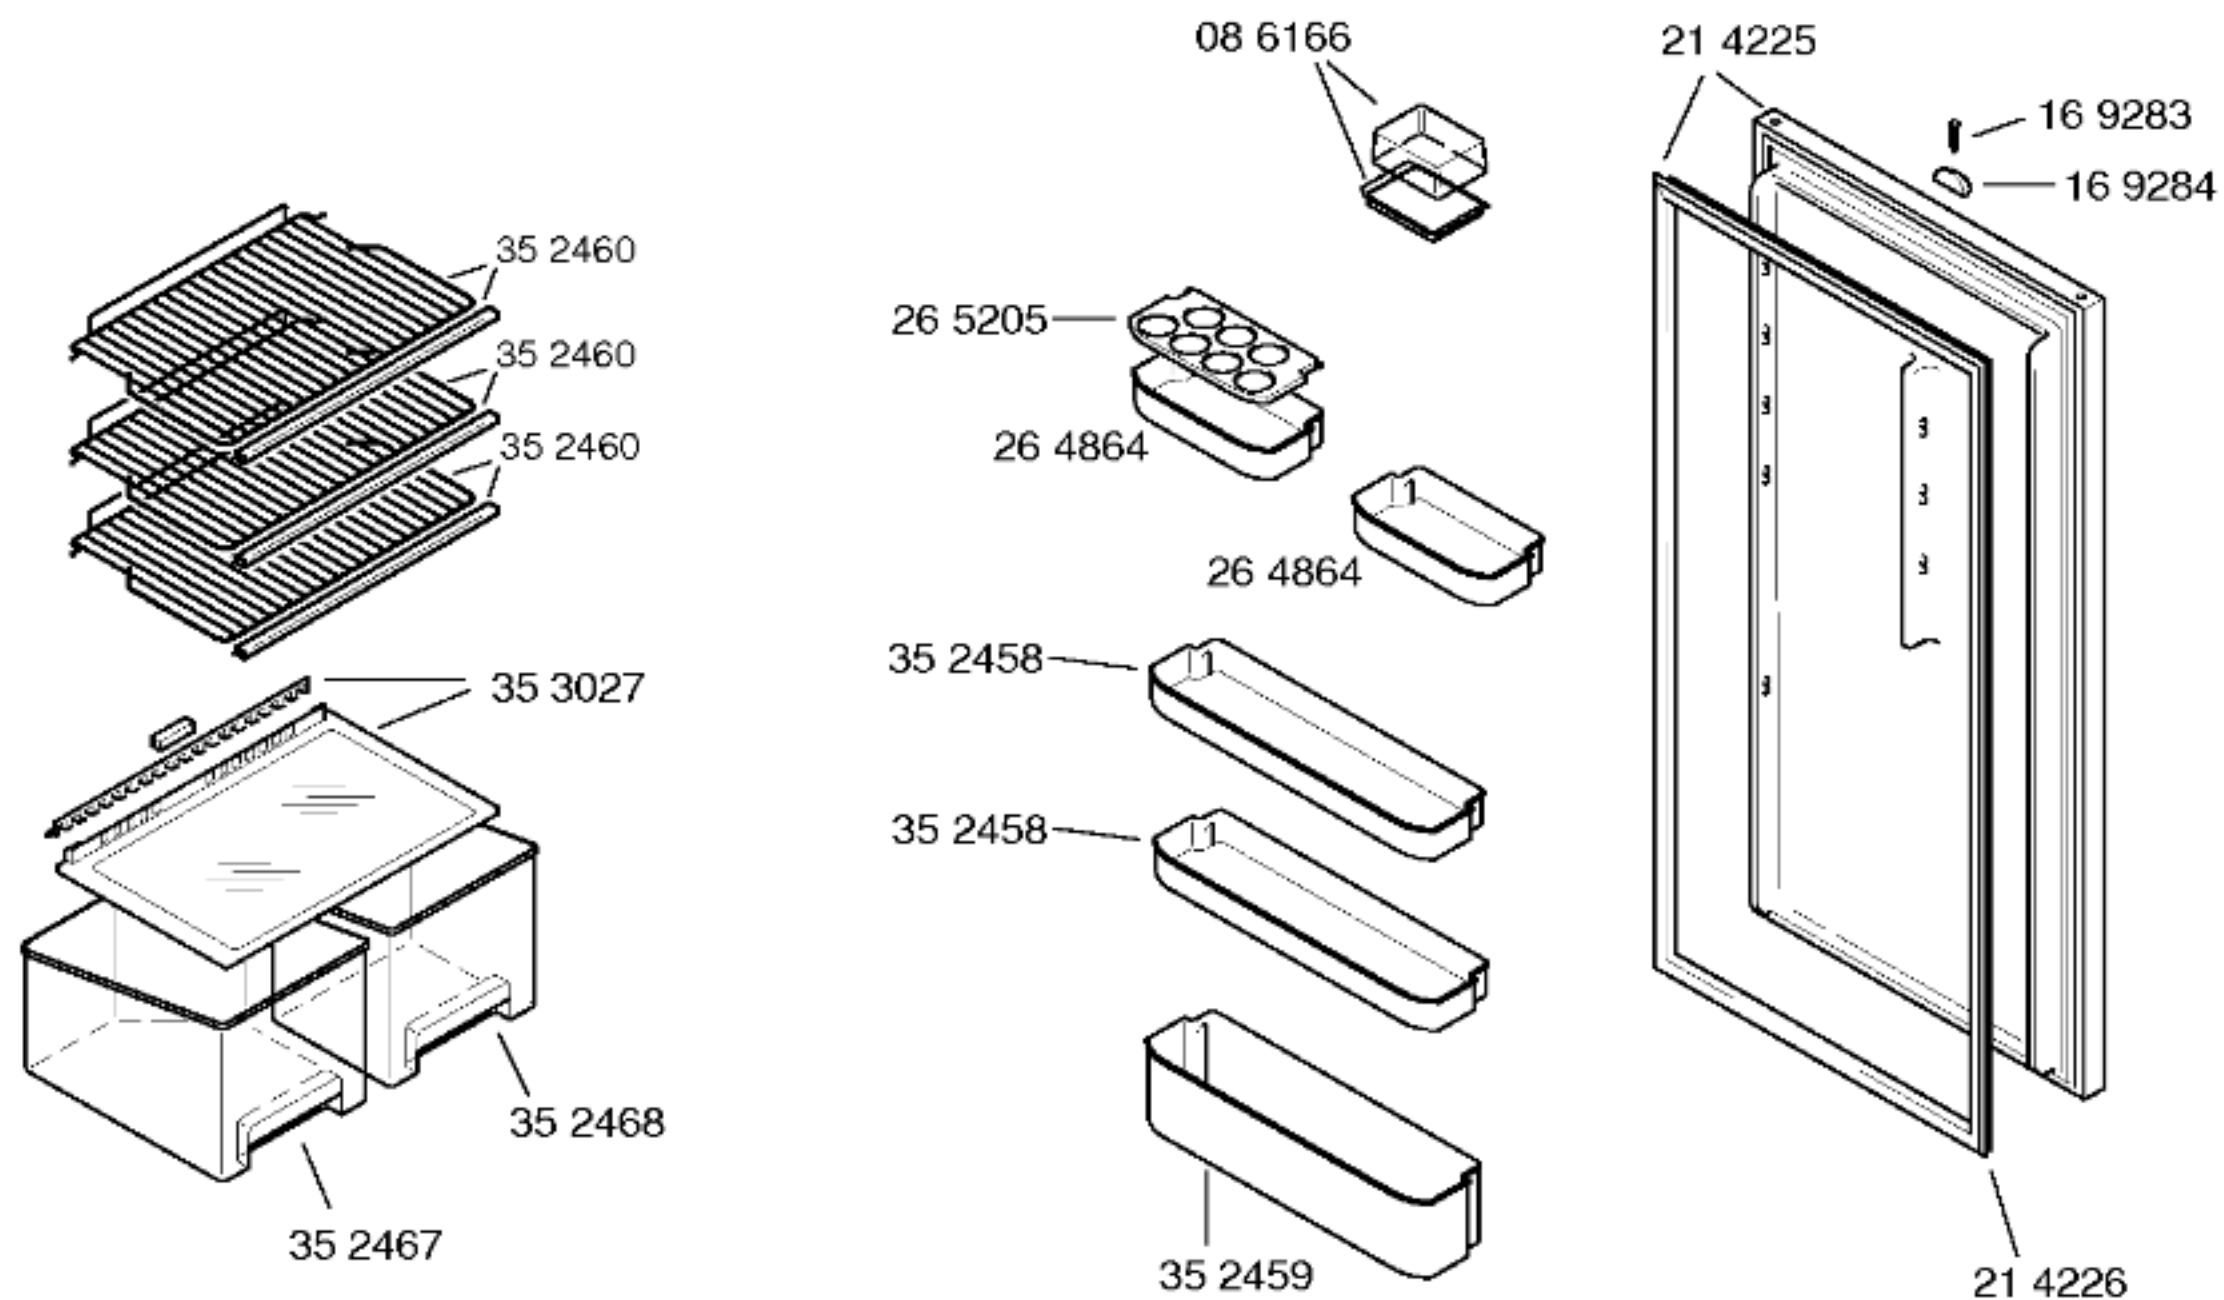

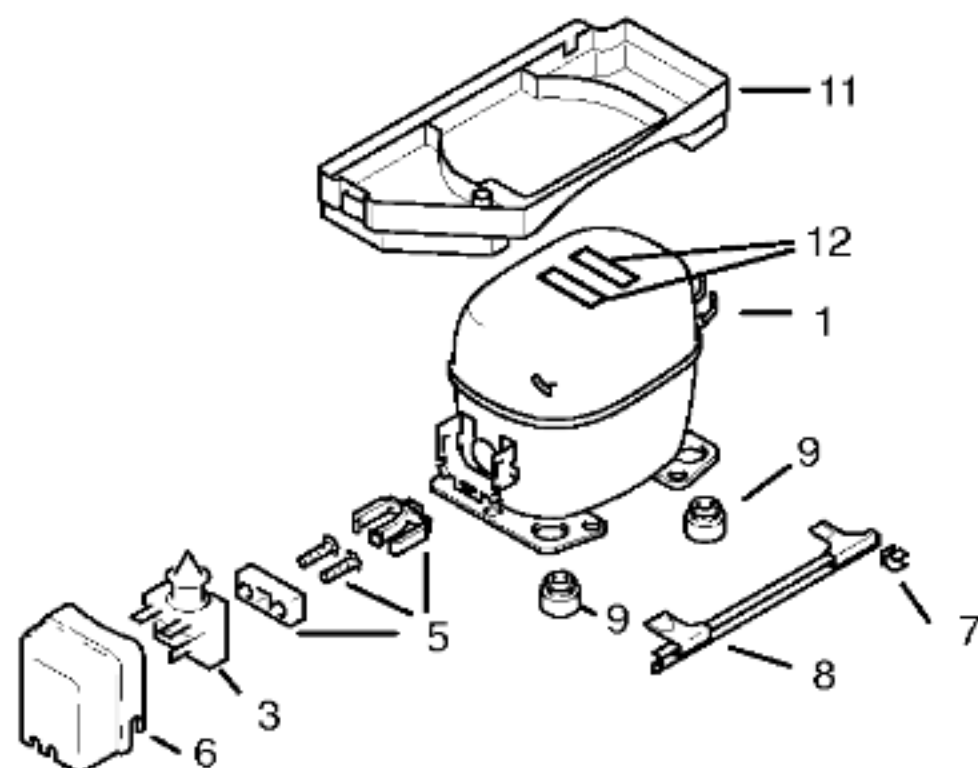

	V01	V02	
Pos.	Danfoss TLES6K	Aspera BPK1072Y	
1	14 1905	14 2100	
2			
3	15 1055	18 0756	
4			
5	15 0760	17 0882	
6	15 1072	17 0881	
7	16 9319	16 9319	
8	26 4879	26 4879	
9	050166	050166	
10			
11	26 4878	35 4549	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss	Aspera	
Typ/Type		TLES6K	BPK1072Y	
Förderleistung/Delivery/Débit		l/h	1026	1010
Anlaufstrom/Starting current/Cour de démarrage		A	8,5	2,8
Widerstand/Resistance/Résistance Ha/main/prin		Ω	25,7	33,1
Hi/aux		Ω	15,7	34,7
Temp.-Regler/Thermostat		Ranco		
Typ/Type		K59		
Regelstellung/Position		kalt	warm	
Schaltwerte/Switching values		"warm"	+5,0	+5,0
Valeurs de commutation		"kalt"	-25,0	-10,0
Füllmenge/Fill.quantity/Charge		R600a	*	
Anschlußwert/Conn.load/Puiss. connectée		W	69	68
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Temp.-Regler/Thermostat				
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild