



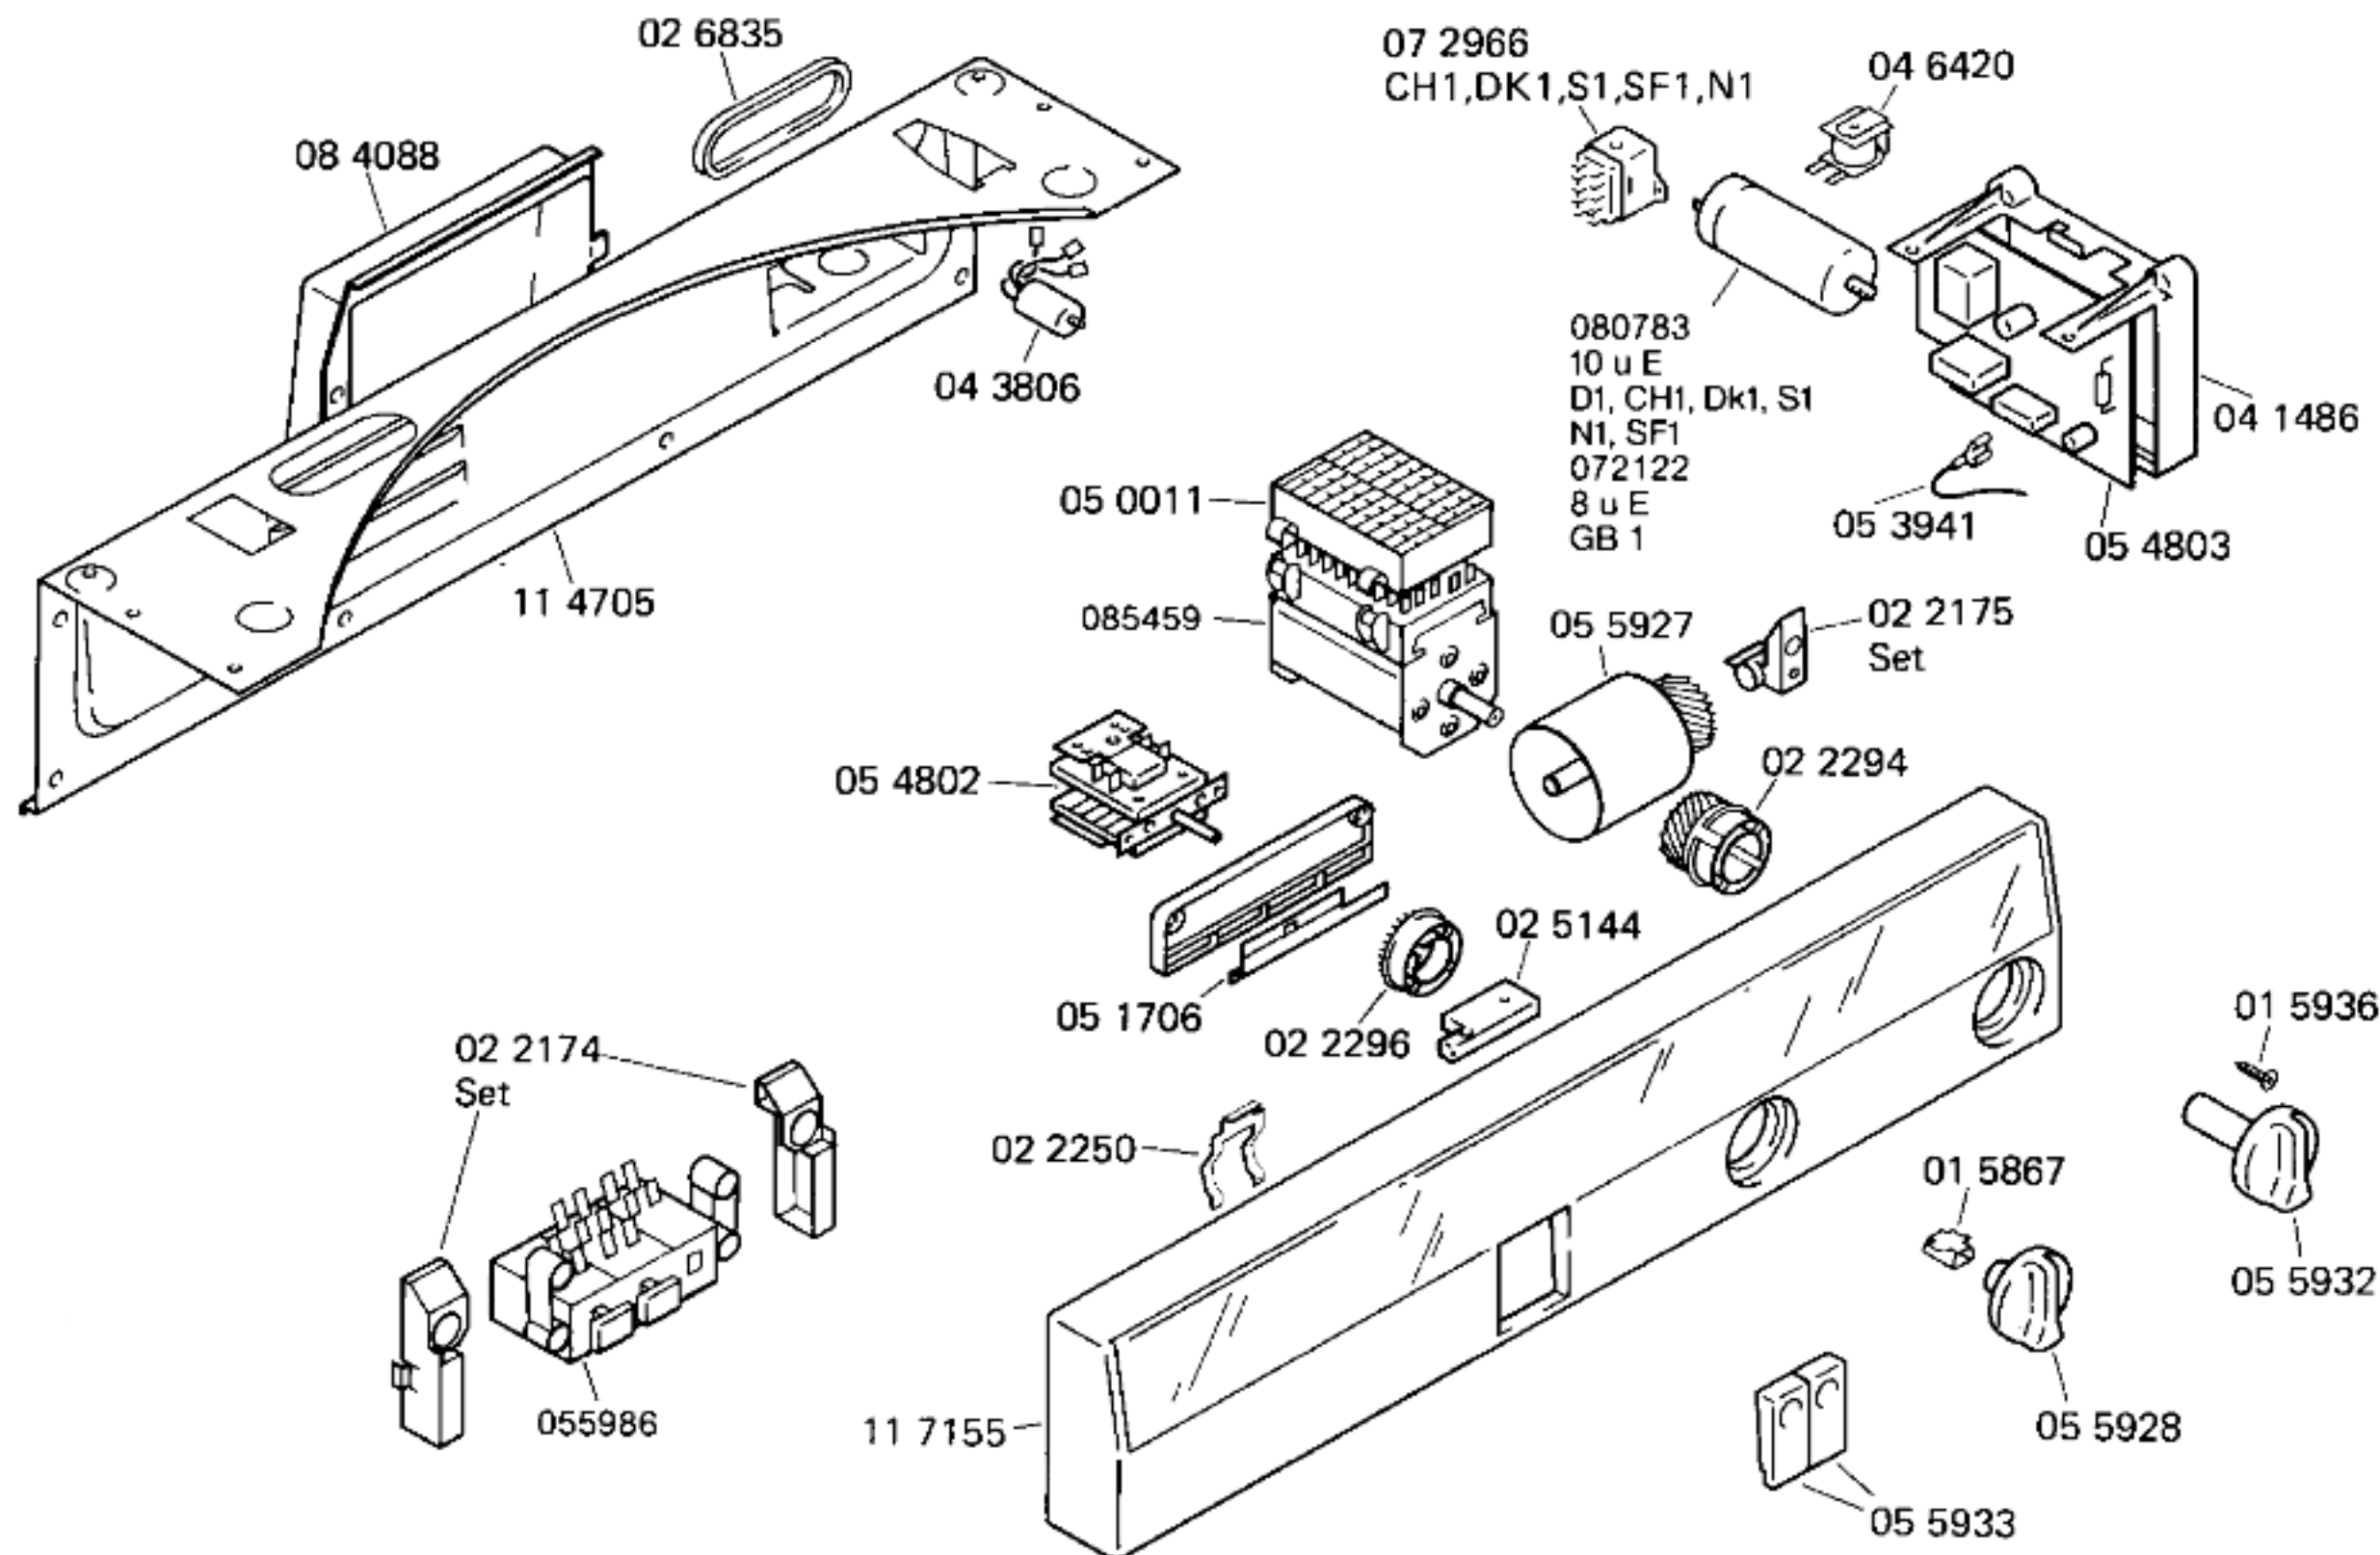

Gebrauchsanweisungen  
 51 1964  
 (D, GB, F, I, NL)  
 51 1965  
 (D, F, I, DK, S)  
 51 1966  
 (SF, N)

Aufstellanweisungen  
 51 1967  
 (D, GB, F, I, NL)  
 513114  
 (D, GB, F, DK, S)  
 513115  
 (N, SF)

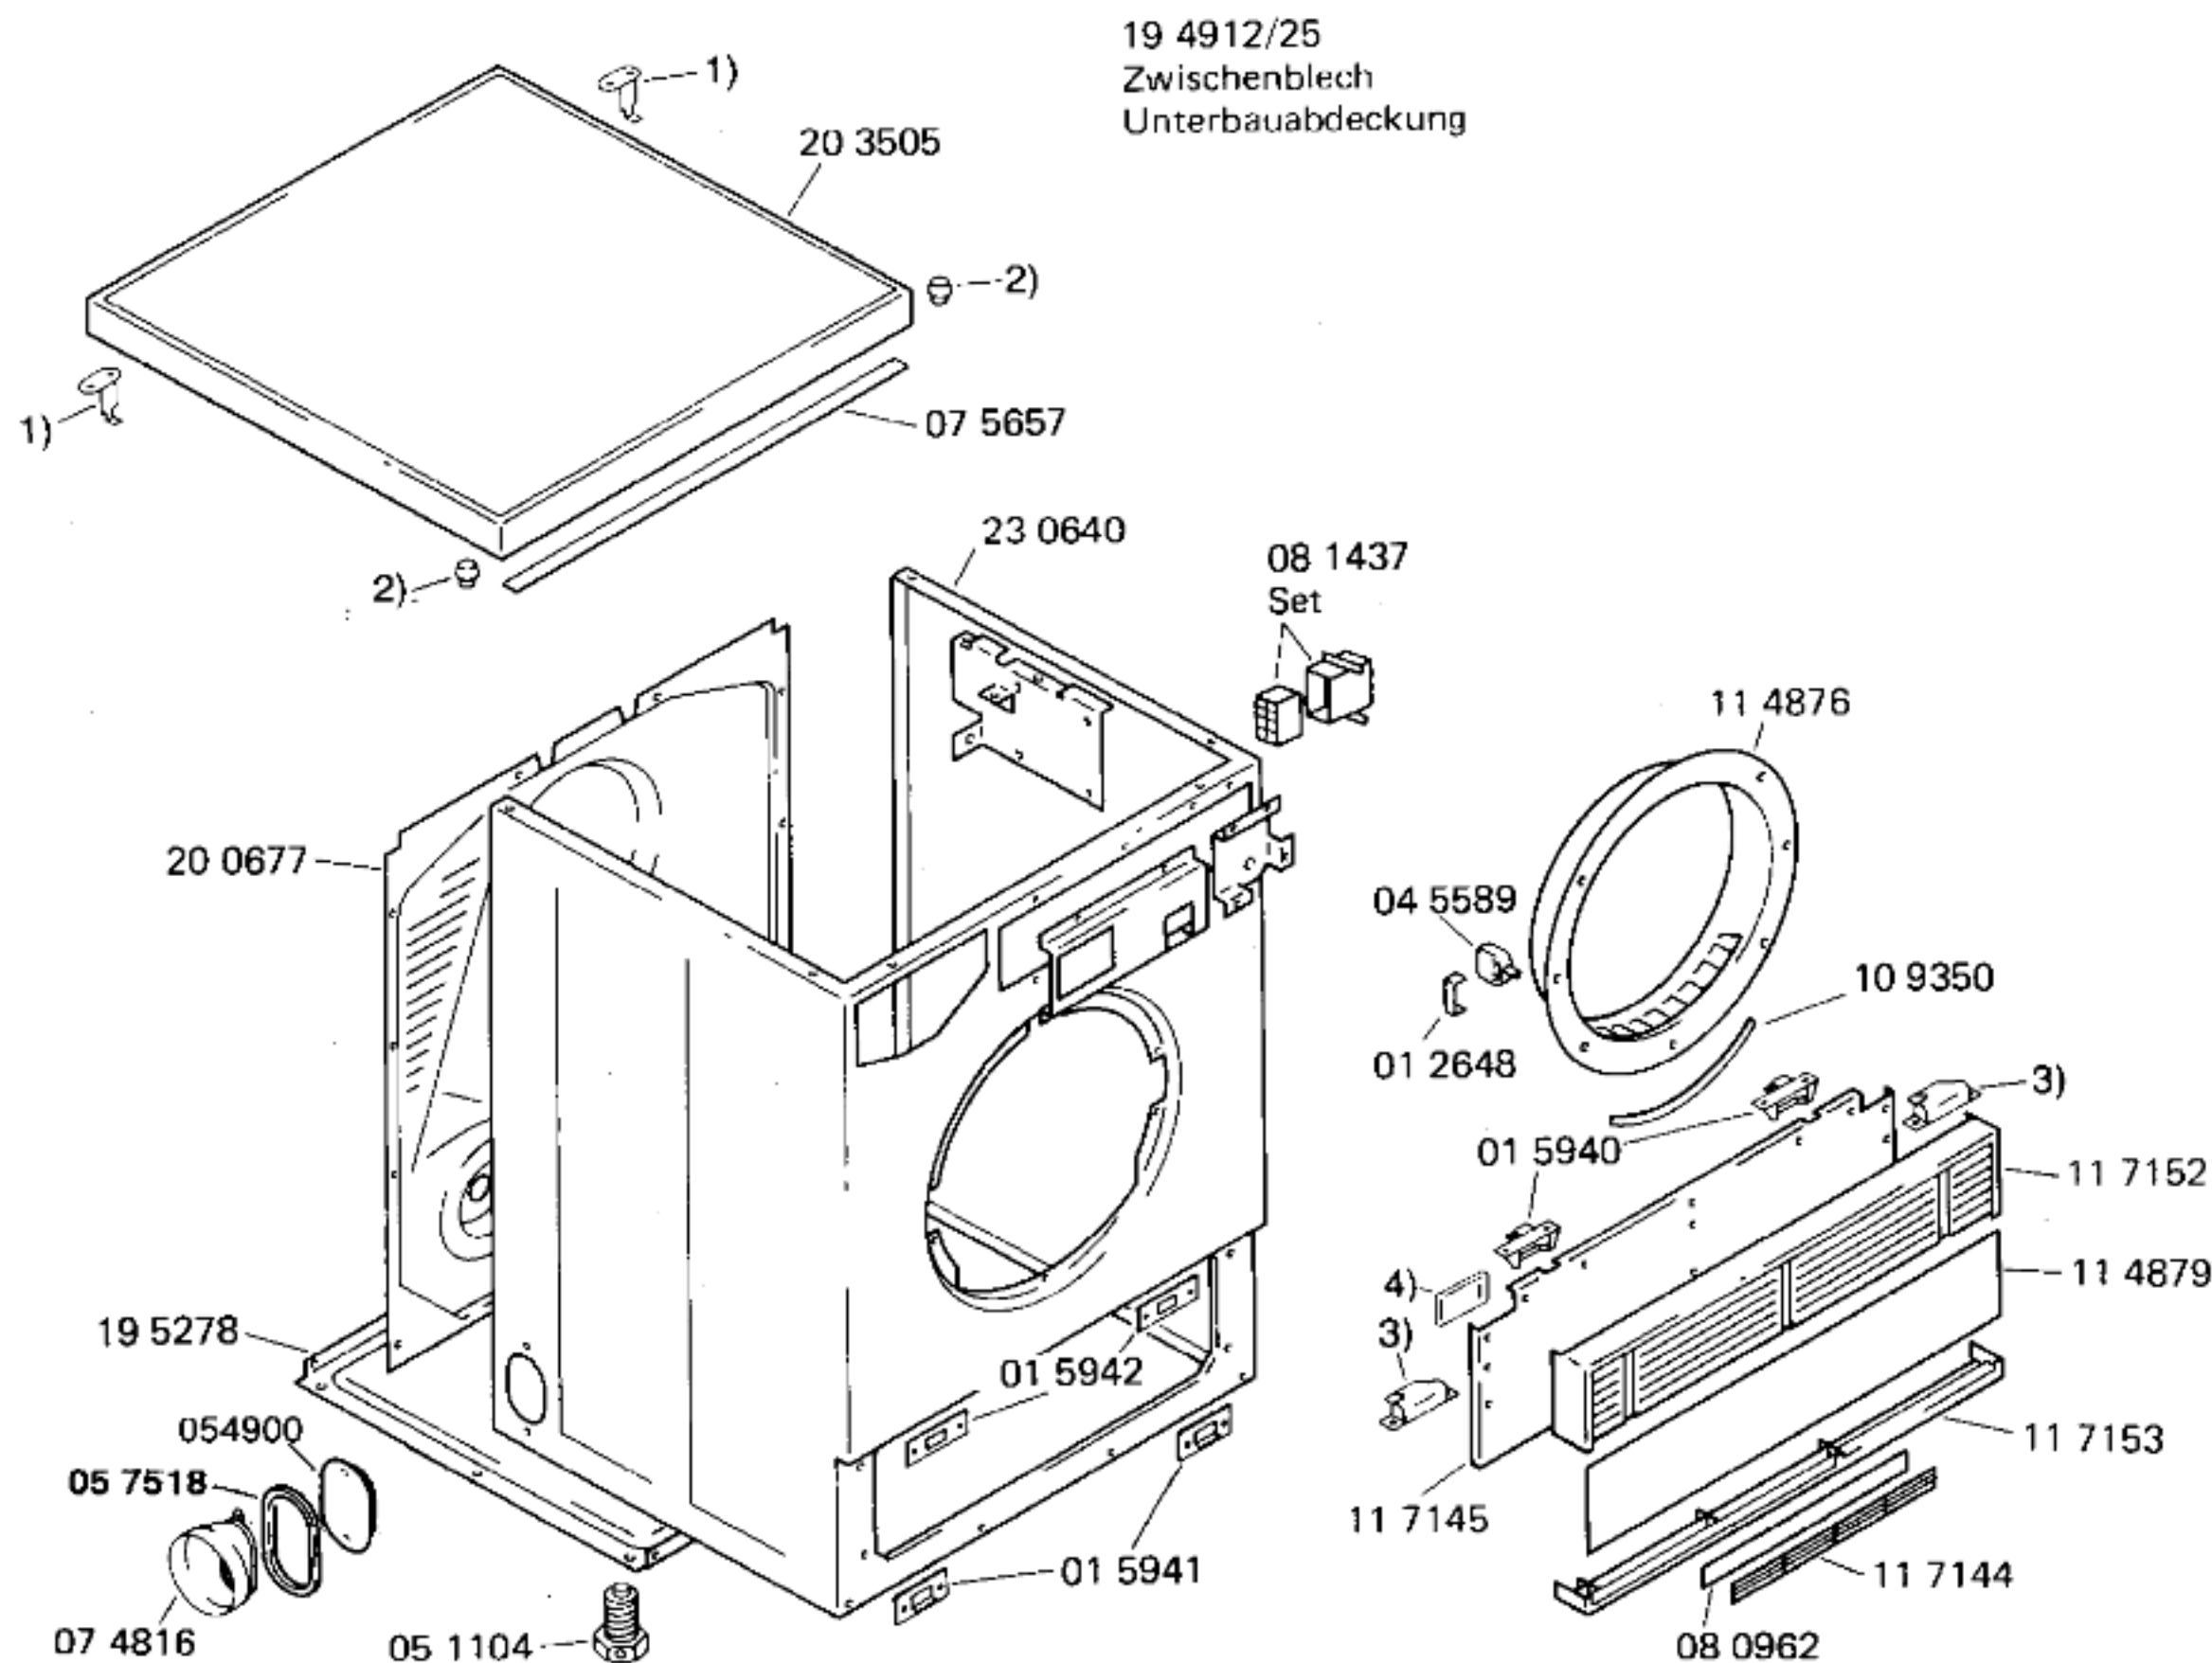

**BOSCH**

BOSCH T 610 – 0728144 102 – D1  
– 0728144 103 – GB1  
– 0728144 104 – SF1, N1  
– 0728144 105 – CH1, Dk1, S1


WASCHGERÄTE  
Trockner


Ident-Nummern-Konstante  
3740 .. .. .

1) 05 3943

2) 05 3944

3) 05 4942

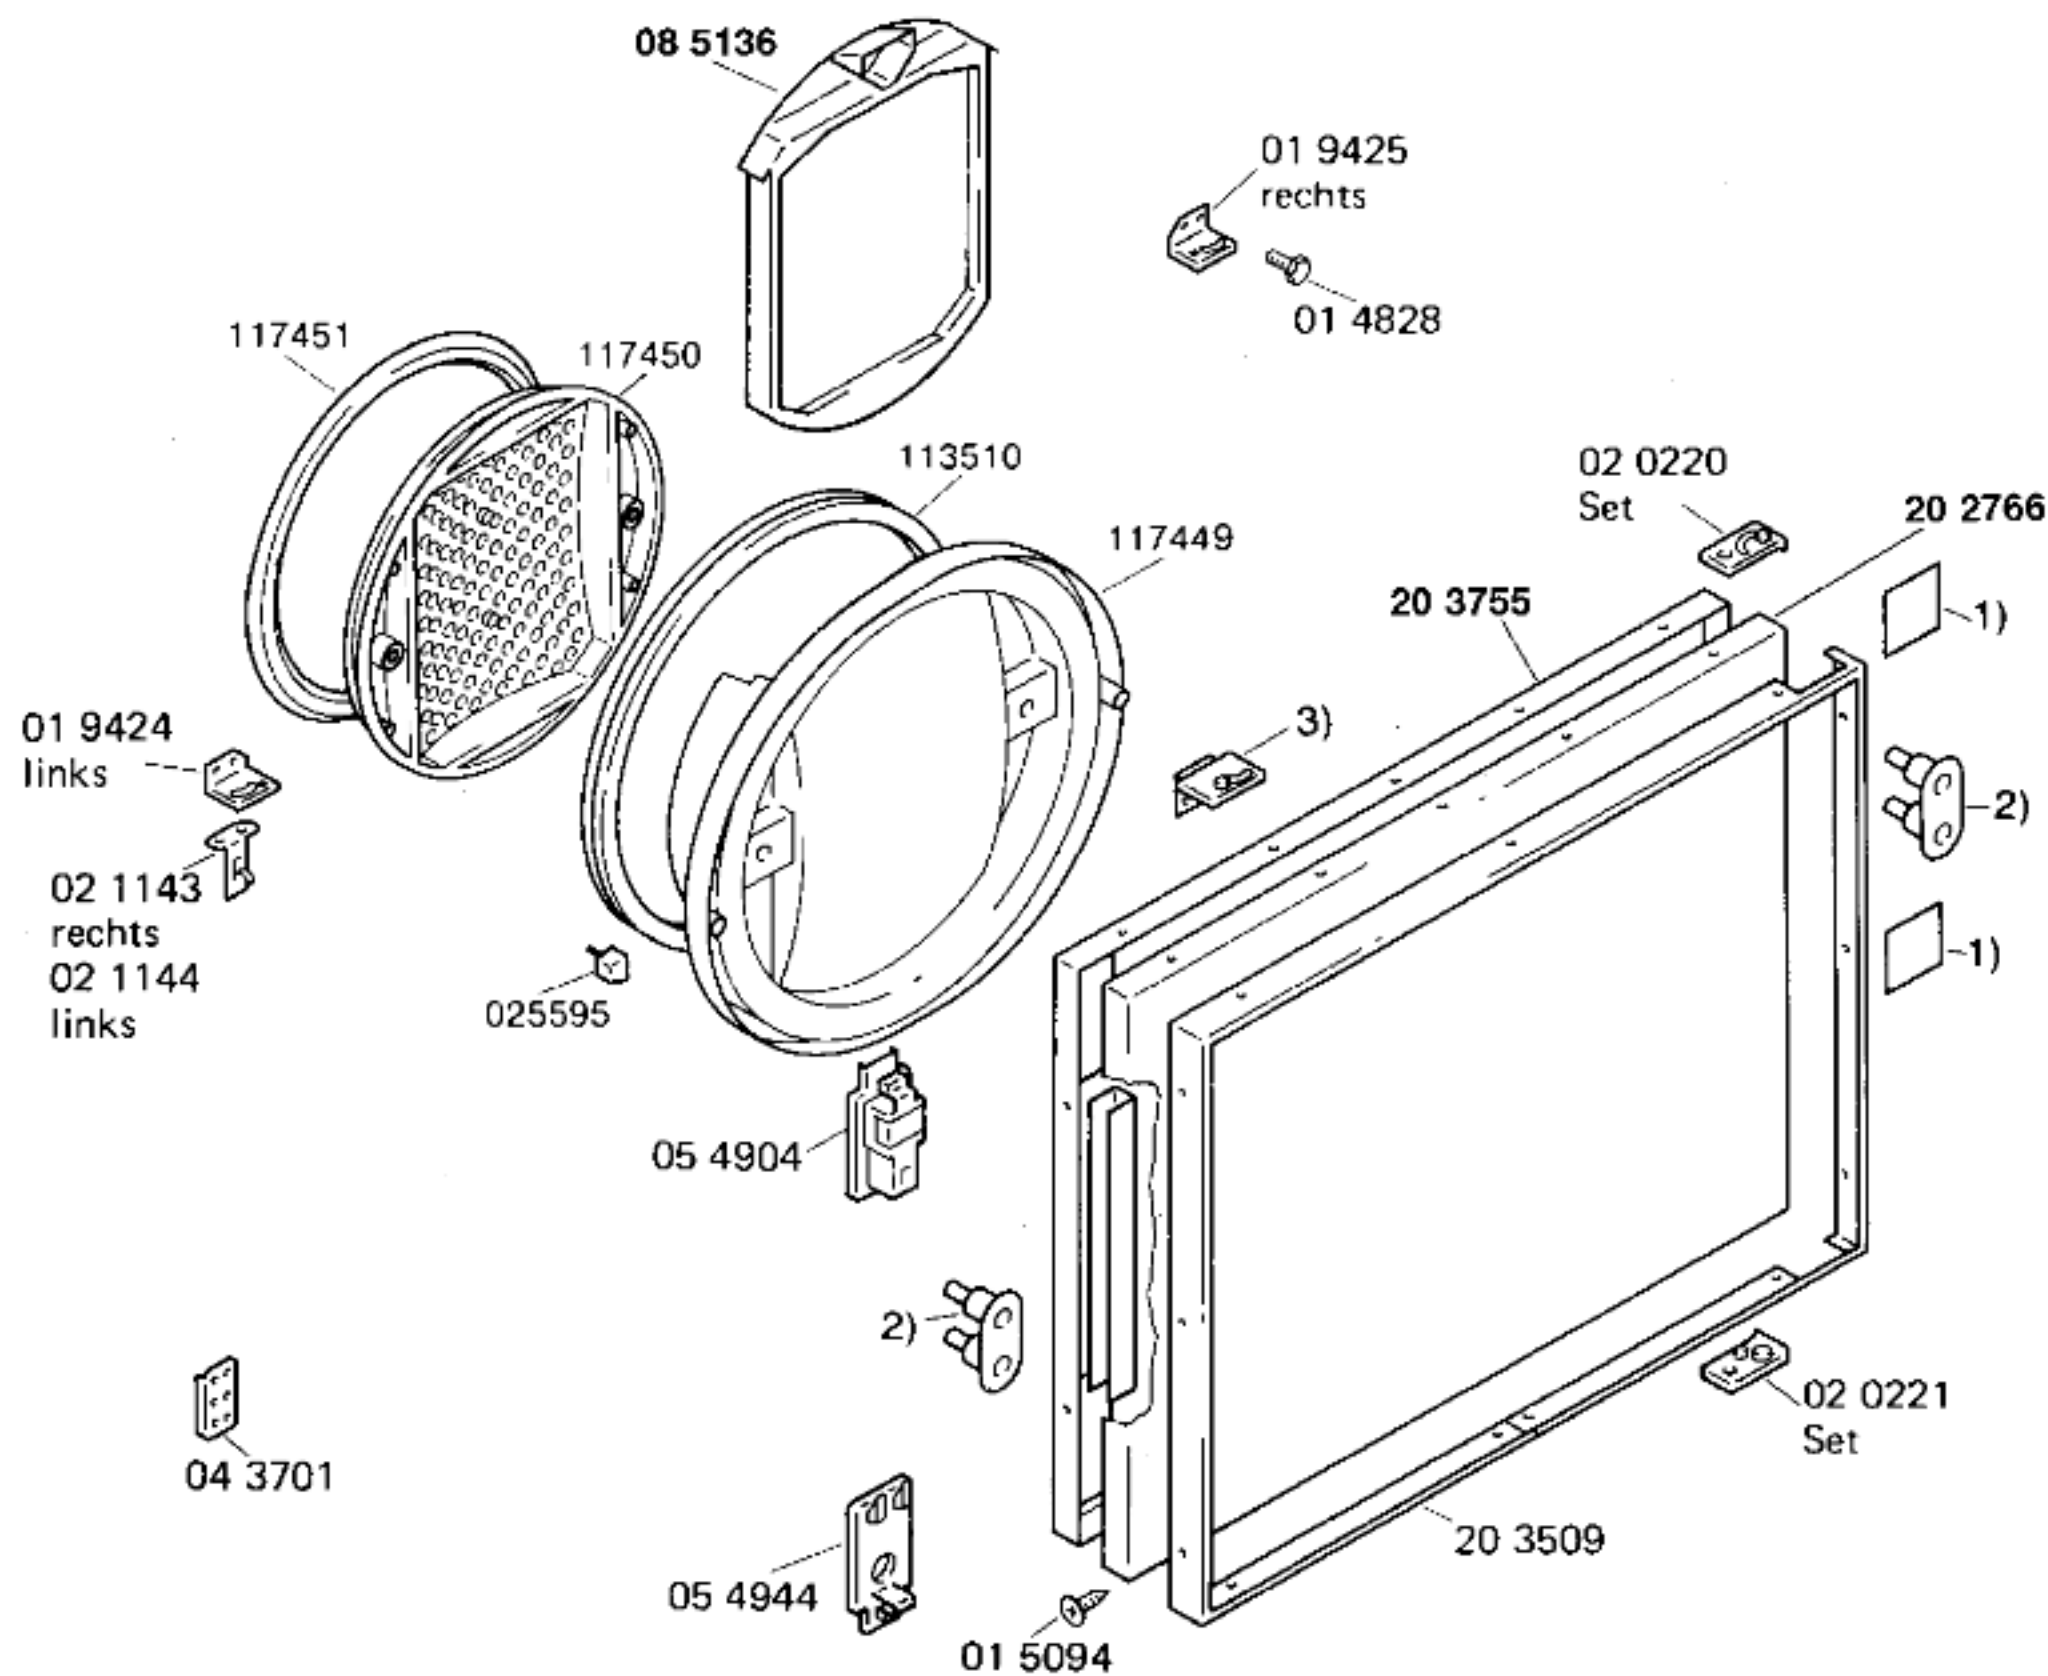

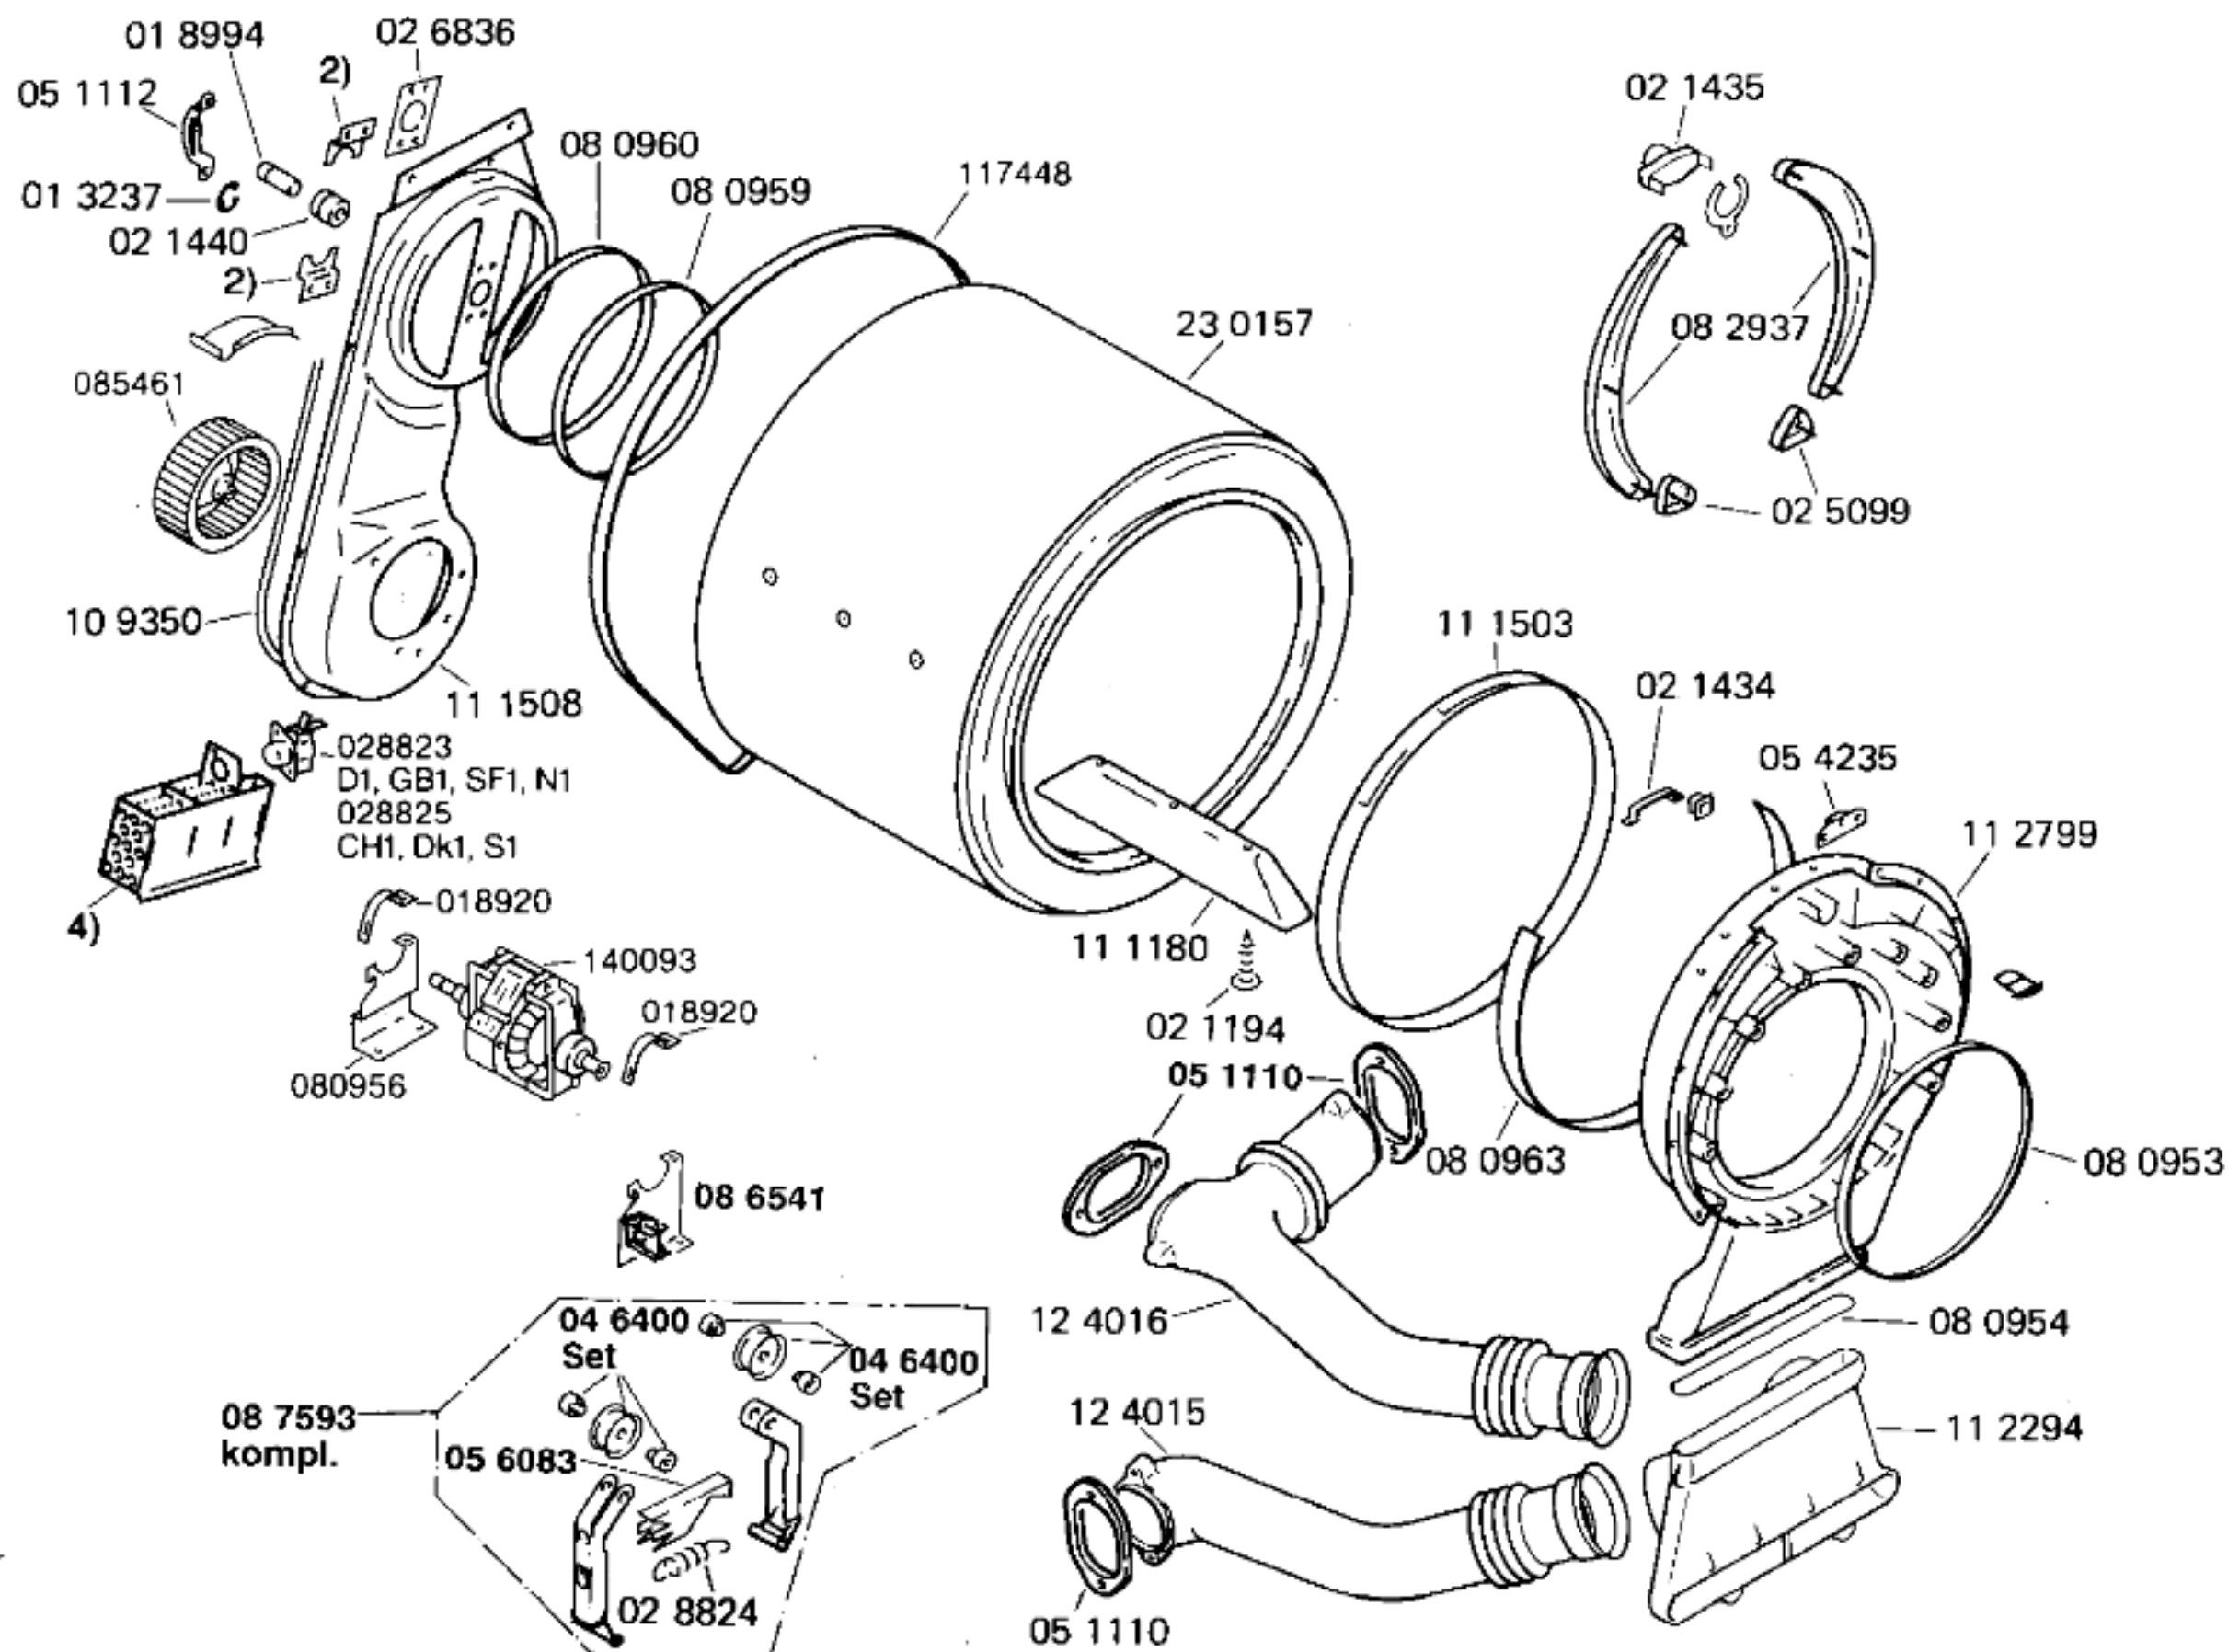

- 2) 02 1439

- 4) 08 7191  
D1,N1,SF1  
08 1638  
GB1  
08 5462  
CH1,DK1,S1