


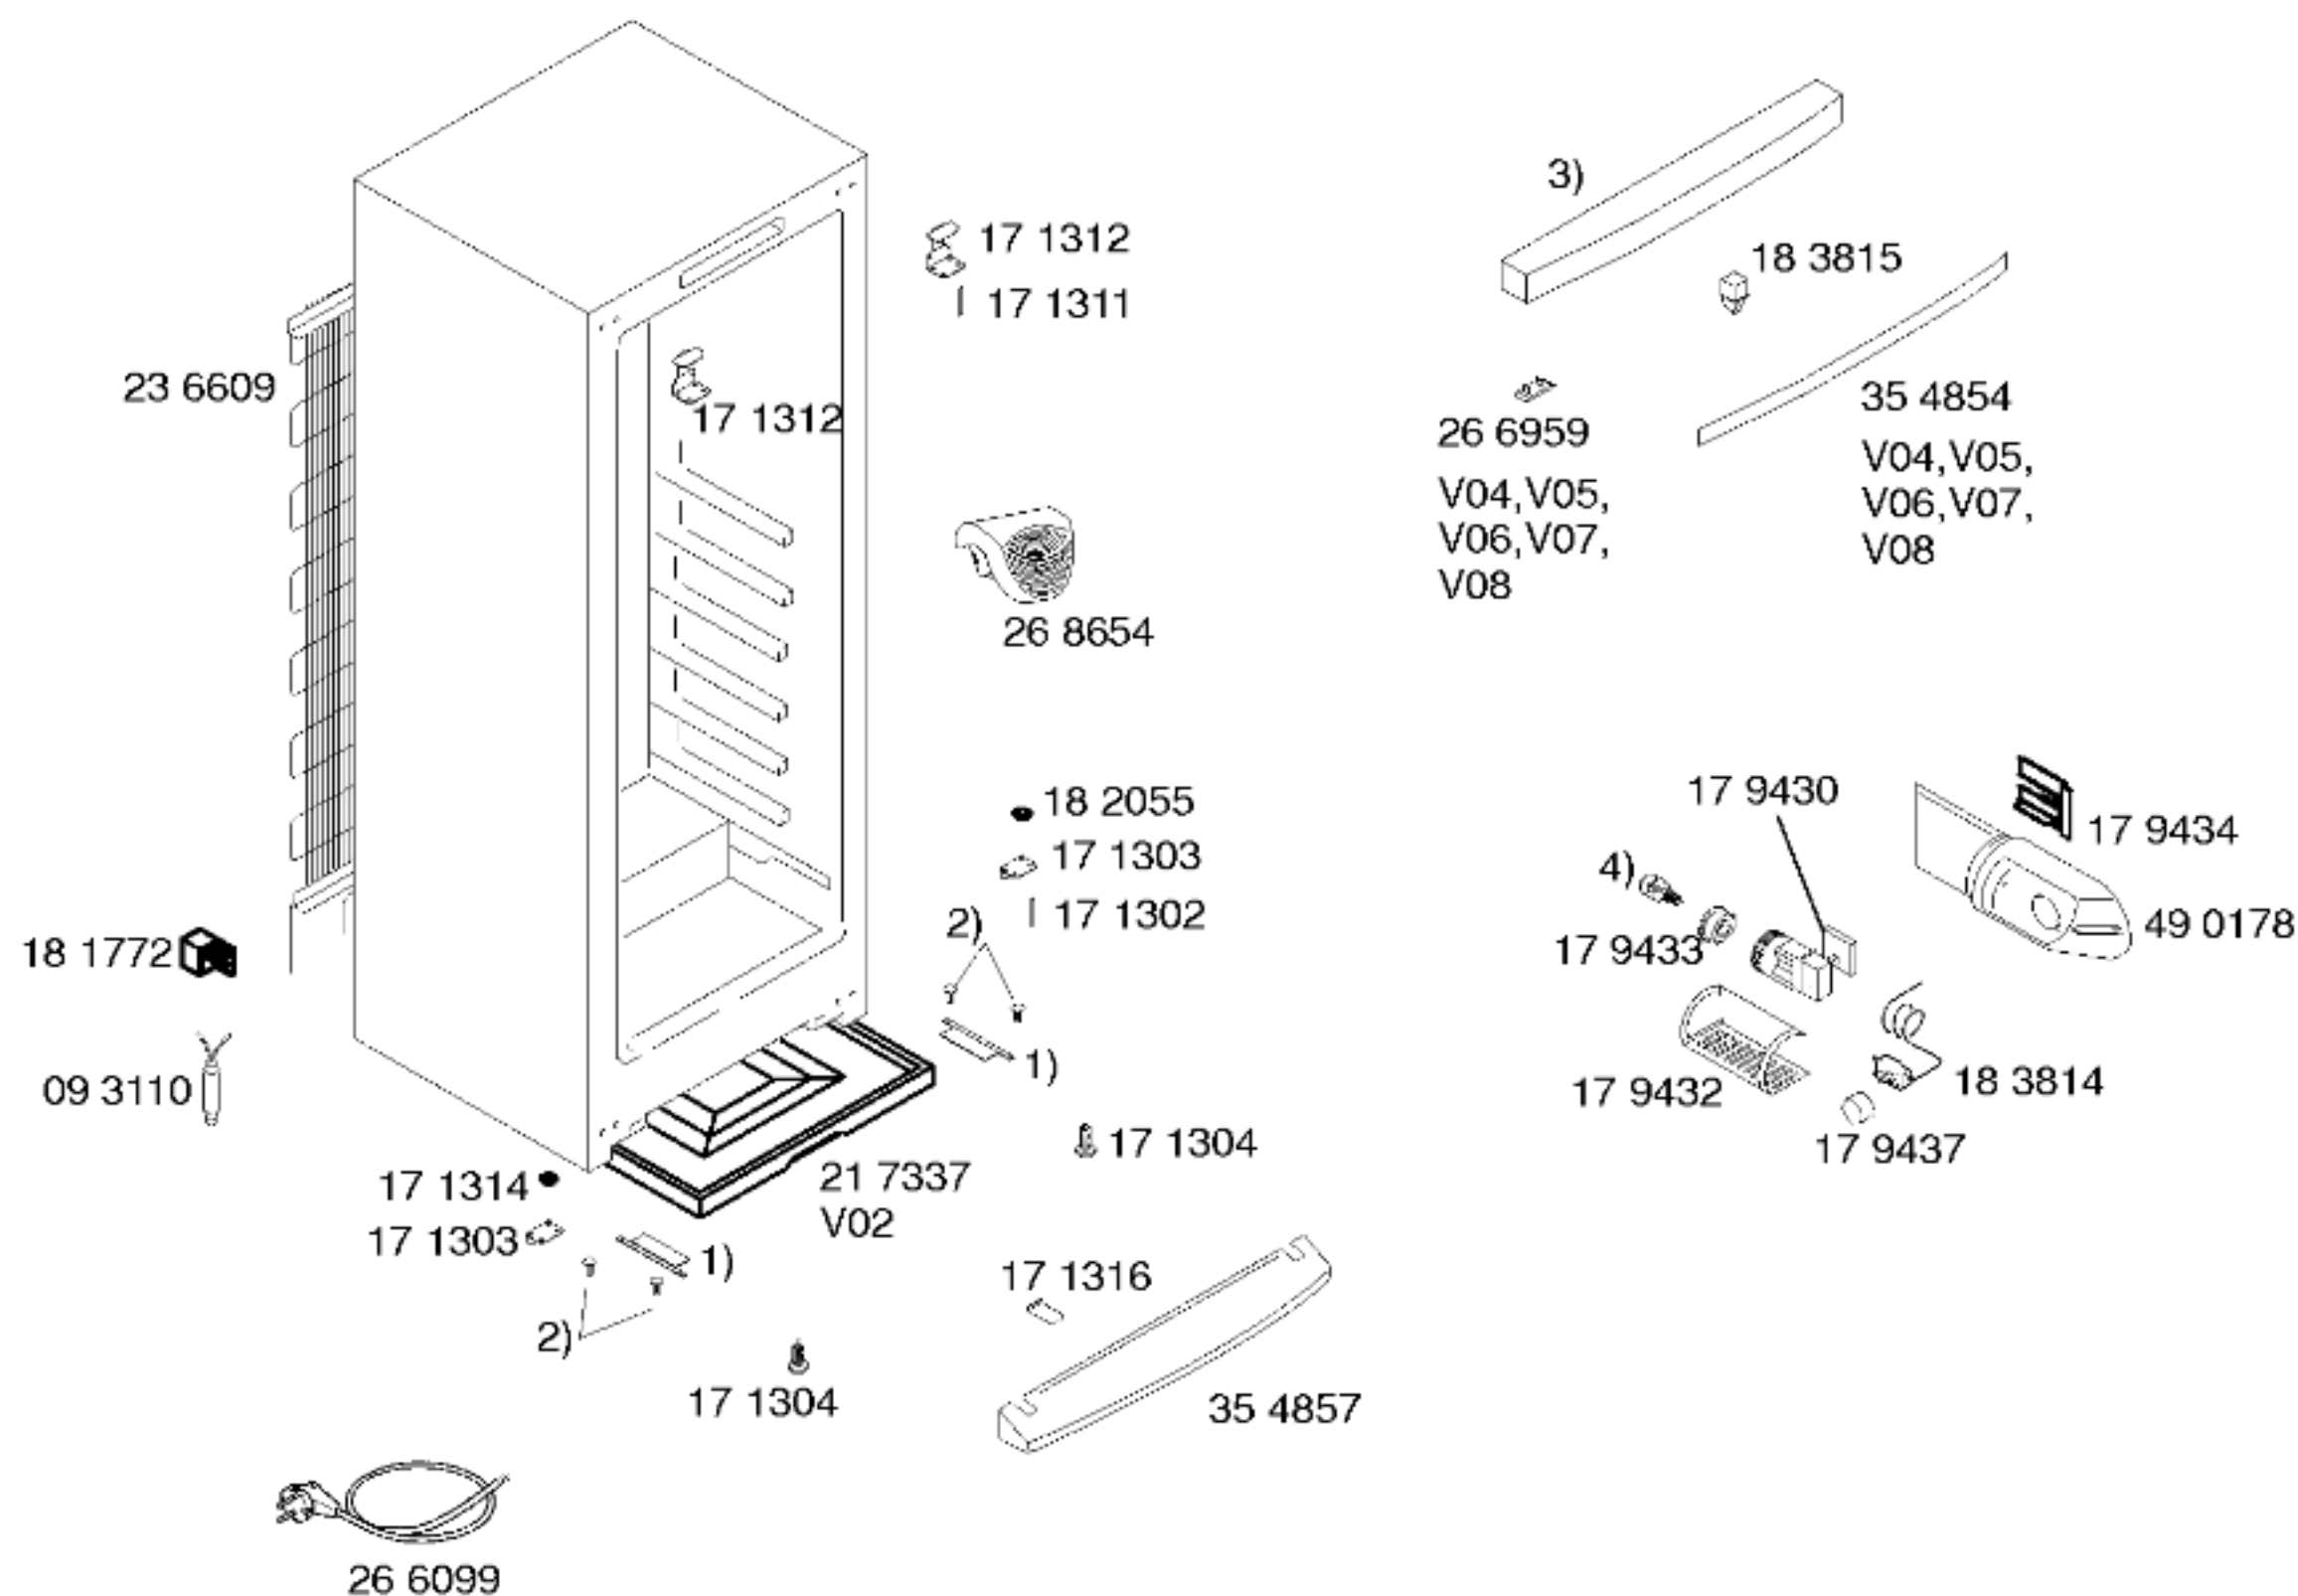

Gebrauchsanweisung

52 8868

V01, V02, V03

58 2075

V04, V05, V06, V07, V08

1) 48 1783
 V02, V03, V04, V05

V06, V07, V08

2) 16 3505
 V02, V03, V04, V05
 V06, V07, V08

3) 36 2458

V01, V02

36 6620

V03

36 7440

V04, V04, V05, V06
 V07, V08


4) 16 3390

V01, V02, V03, V04


V05, V06, V07

41 9942

V08

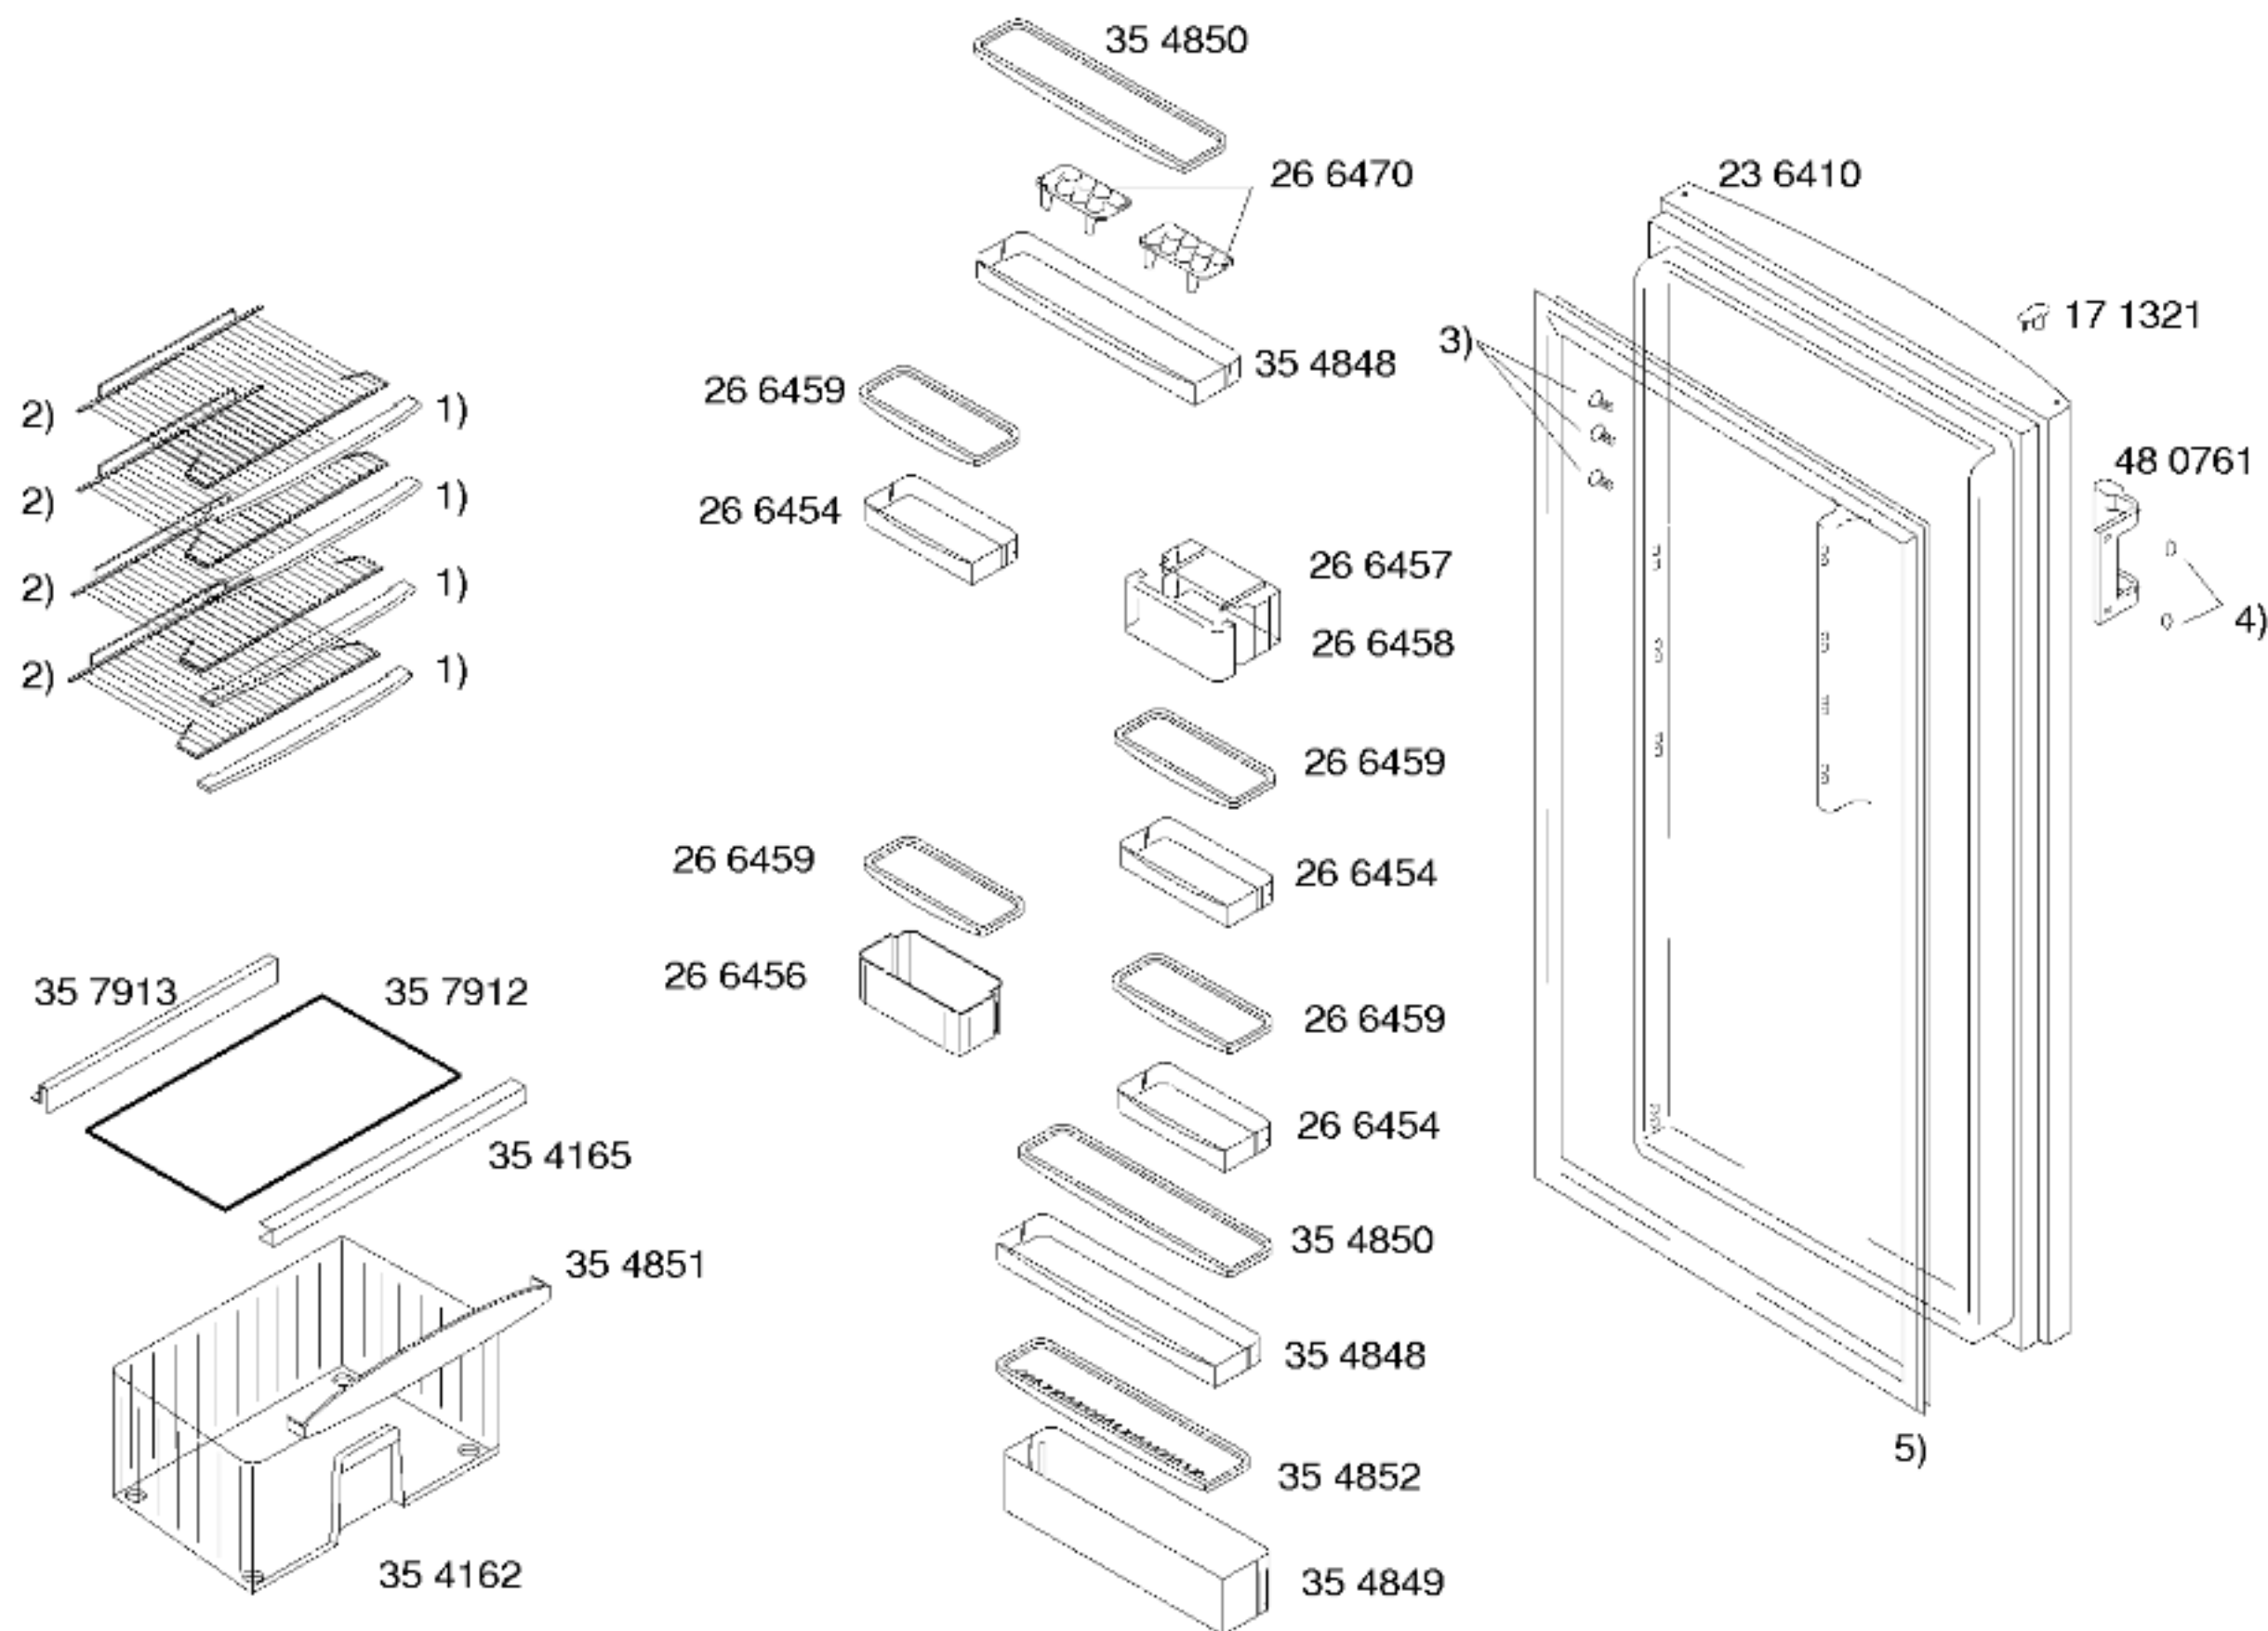

- 1) 35 4855
 2) 35 4166
 3) 16 6484
 4) 16 5557
 5) 23 6408
 V01,V02,V03,V04
 23 8414
 V05,V06,V07,V08

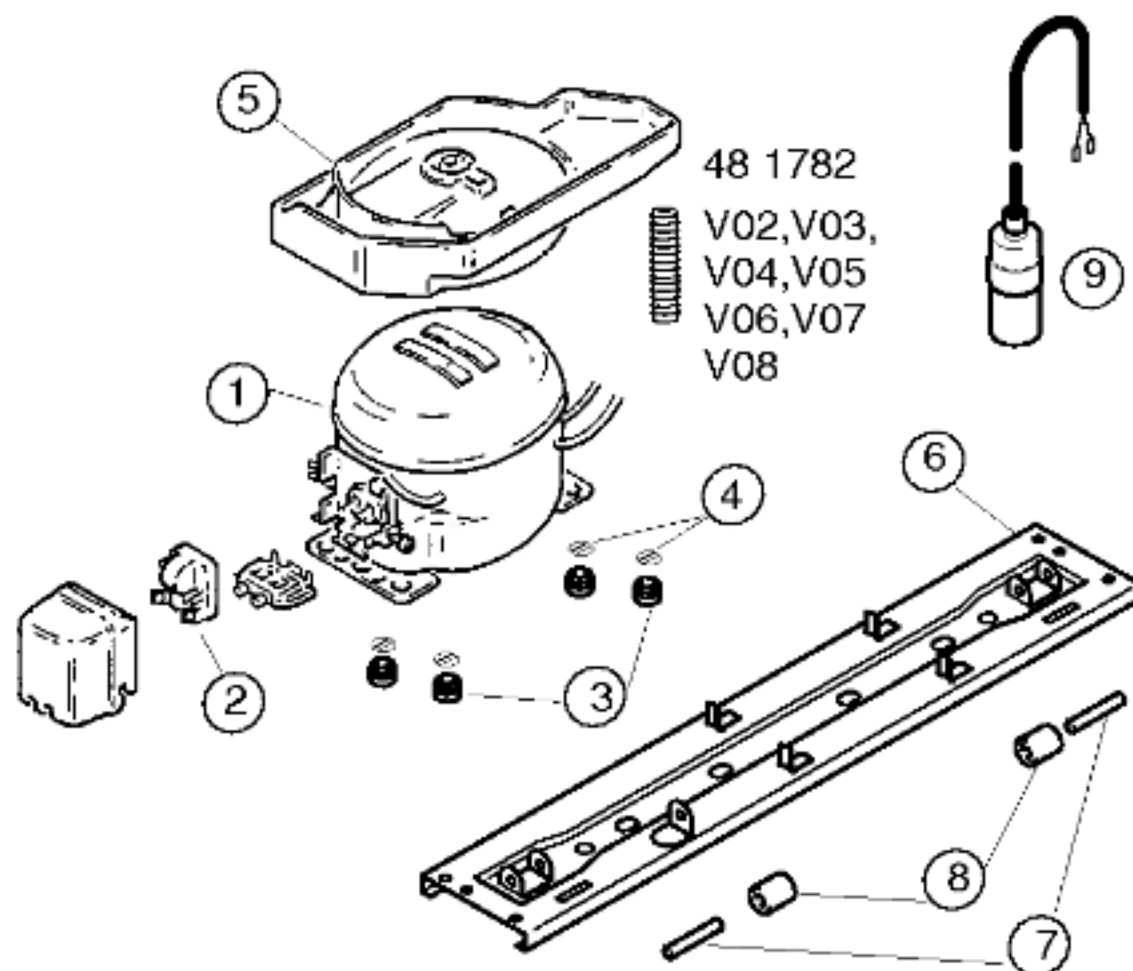

	V01,V05	V06	V07
Pos.	Danfoss	Matsushita	Danfoss
	TLES7KK2	ESS60E	TLY7KK2
1	14 2167	14 3383	14 3519
2	16 5570	—	
3	16 3427		
4	17 1519		
5	48 1658		
6	35 4158	48 9208	
7	18 1014		
8	17 1318		
9			17 4093
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
	V01-V05	V06	V07
Verdichter/Compressor/Kompresör	Danfoss	Matsushita	Danfoss
Typ/Type/Tip	TLES7KK2	ESS60E	TLES7KK2
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi	4	5.5	2.3
Widerstand/Resistance/Rezistans Ha/Hi/aux.	18.9		
	15.3		
Temp.Reyler/Thermostat/Termostat	Danfoss		
Typ/Type/Tip	077B52		
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Actua kapama degerleri	+4 +10.5		
Valeurs de commutation/Termostat degeri	-21 -10.7		
(..abtaven' od)	..aus"/kapama		
	..alam'		
Füllmenge/Fill. quantily/ Dolum miktarı	R600a		
	g		
Anschlusswert/Comm. load/Giris gucu	W		
Heizung/Heater/Rezistans			
Widerstand/Resistance/Direnc	Ohm		
Leistung/Power/Guc	W		
Ventilador/Blower/Vantilatör			
Widerstand/Resistance/Rezistans	Ohm		
Magnetventil/Magnetic valve/Manyetik valf			
Widerstand/Resistance/Rezistans	Ohm		
Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakınız