


**BOSCH**

BOSCH T 620 – 0 728 144 054–D1
 – 0 728 144 067–GB1
 – 0 728 144 068–N1, SF1
 – 0 728 144 069–CH1, DK1, S1

WASCHGERÄTE
 Trockner

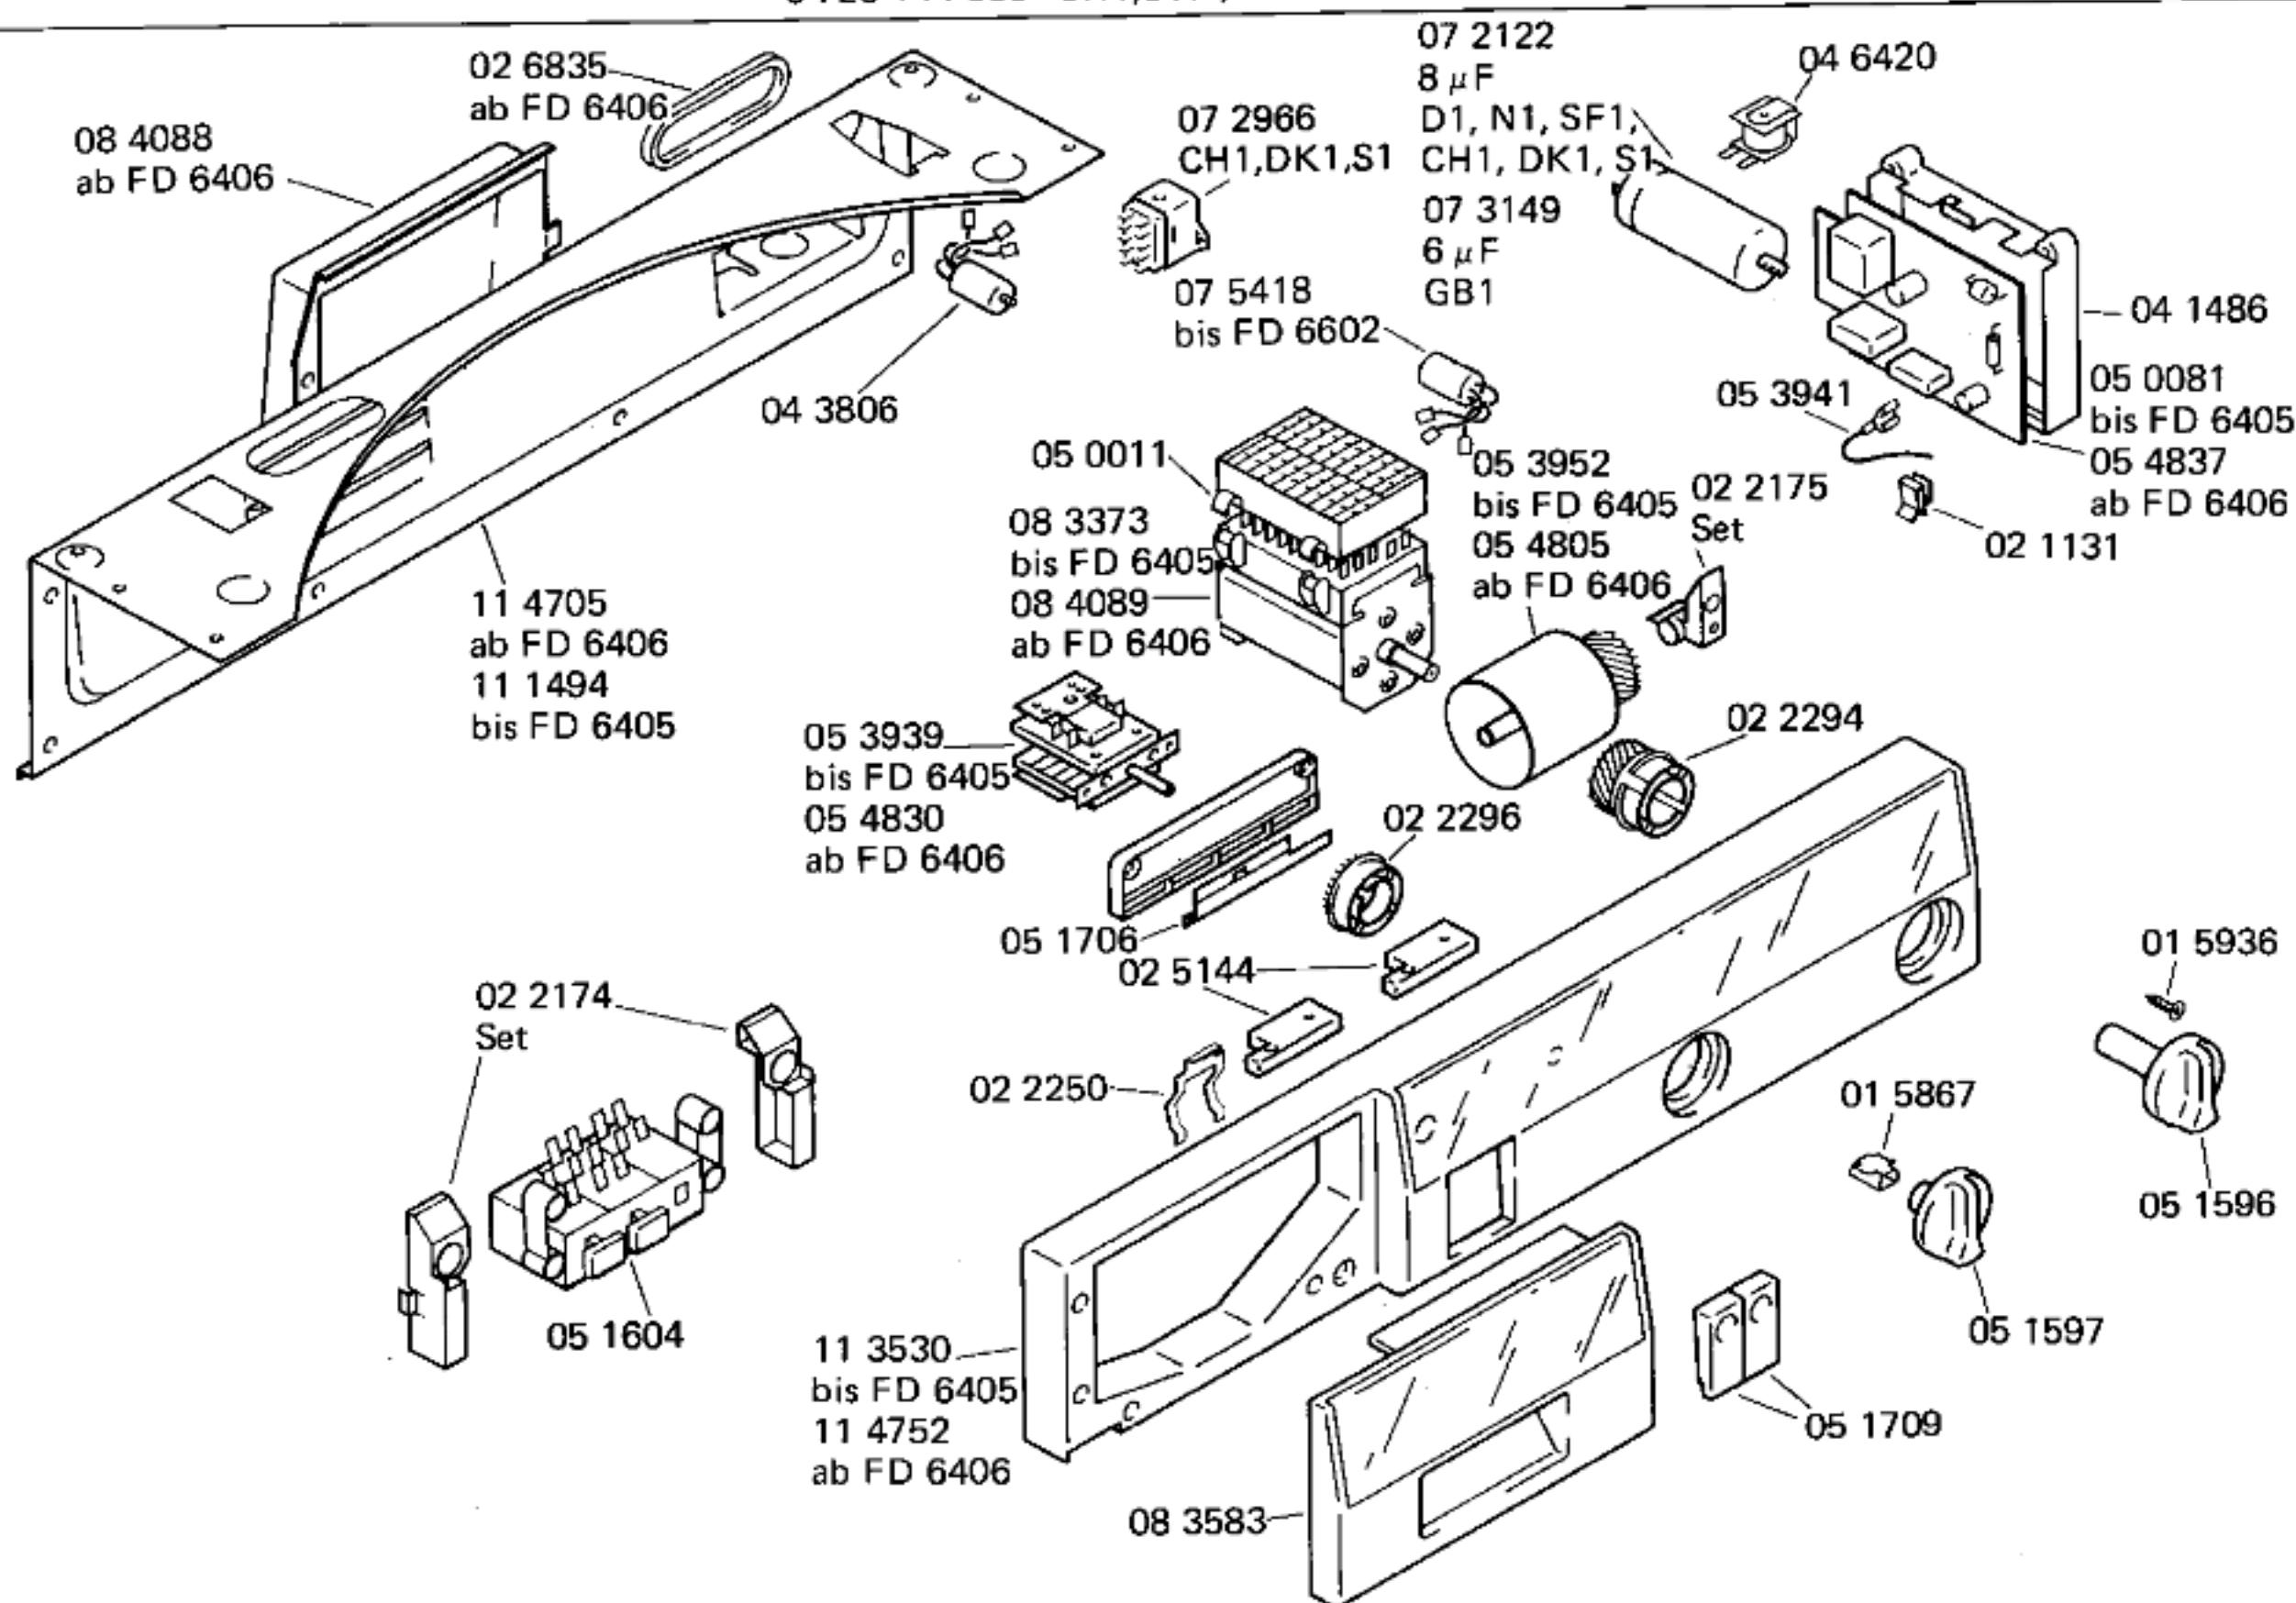

Ident-Nummern-Konstante
 3740

Aufstellanweisungen

51 1537
 (D, GB, F, I, NL, E)
 51 1972
 (SF, N)
 bis FD 6509
 51 1968
 (D, GB, F, I, NL, E)
 51 1752
 (SF, N)
 51 2531
 (D, F, I, DK, S)
 ab FD 6510
 SF, N
 ab FD 6406

Gebrauchsanweisungen


51 1538
 D, GB, F, I, NL
 51 1786
 D, F, I, DK, S
 51 1787
 SF, N
 bis FD 6405
 51 2640
 (D, GB, F, NL, I)
 51 2532
 (D, F, I, DK, S)
 51 1993
 (SF, N)
 ab FD 6406

**BOSCH**


BOSCH T 620 — 0 728 144 054—D1
 — 0 728 144 067—GB1
 — 0 728 144 068—N1, SF1
 — 0 728 144 069—CH1, DK1, S1

WASCHGERÄTE
 Trockner


Ident-Nummern-Konstante
 3740

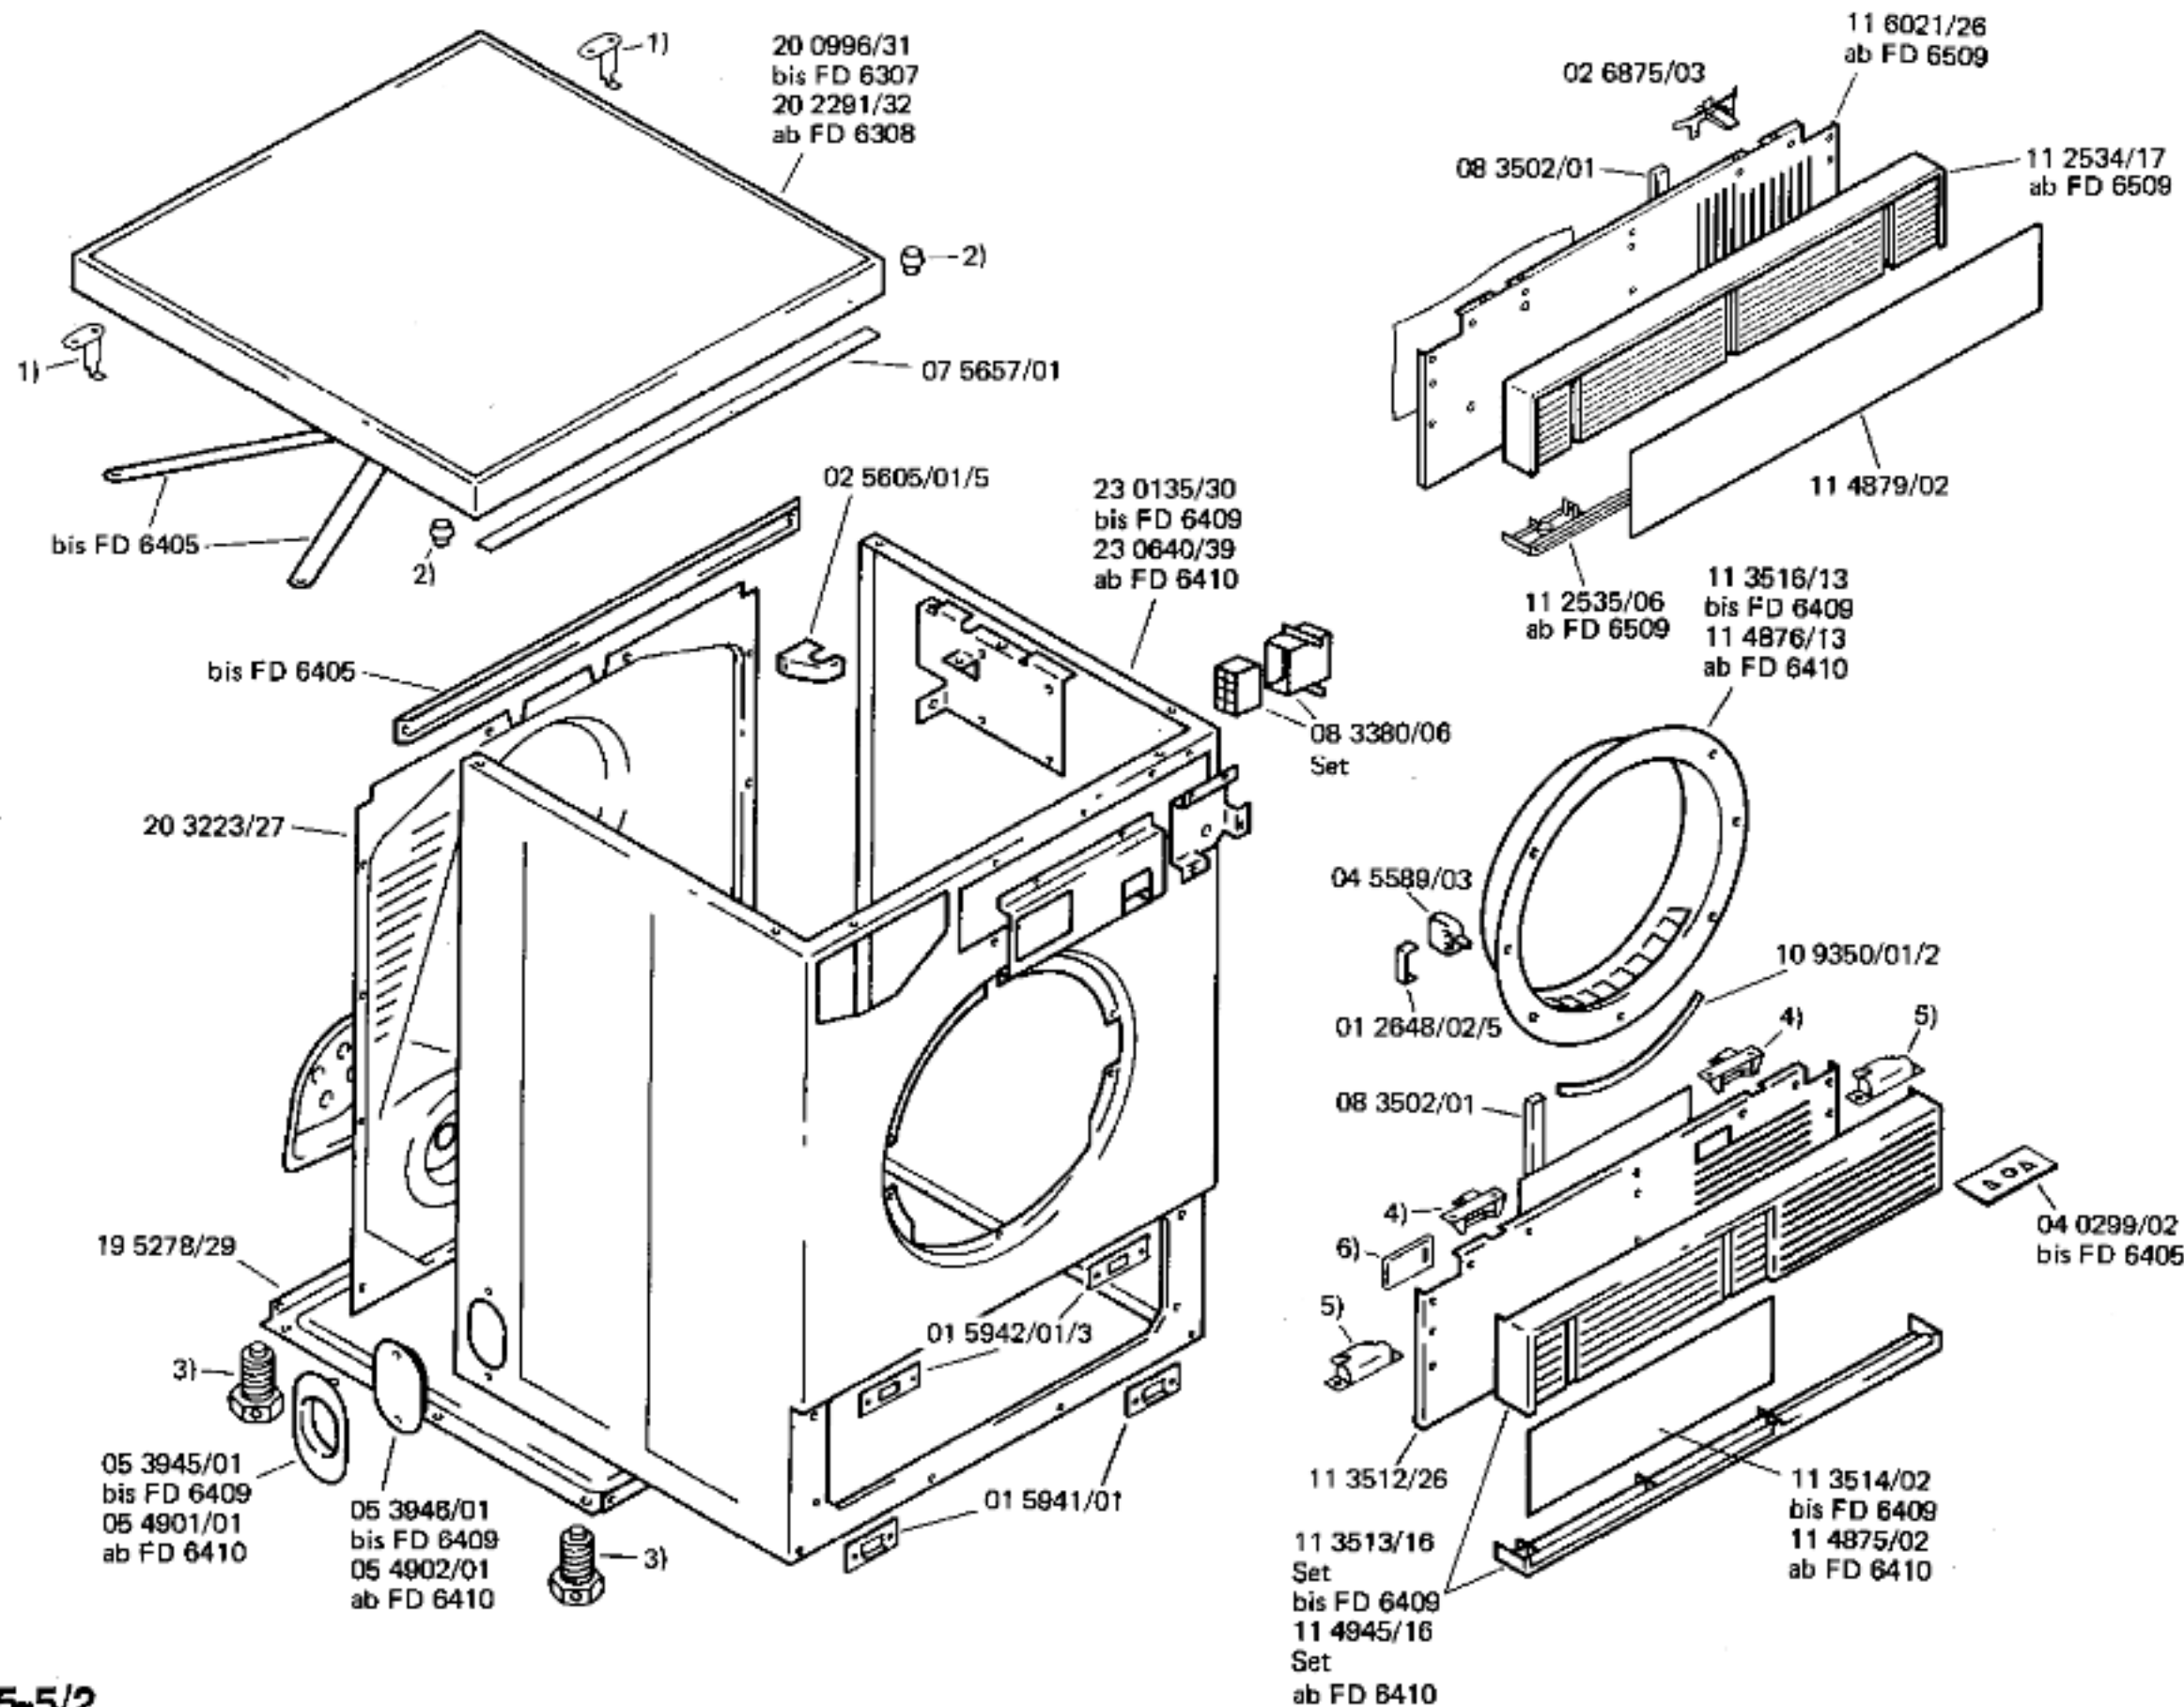

- 1) 02 0159/01/6
- 2) 01 5938/01/5
- 3) 05 1104/01
- 4) 01 5940/02
 bis FD 6405
 02 6875/03
 ab FD 6406
- 5) 01 5939/02
- 6) 02 6876/01

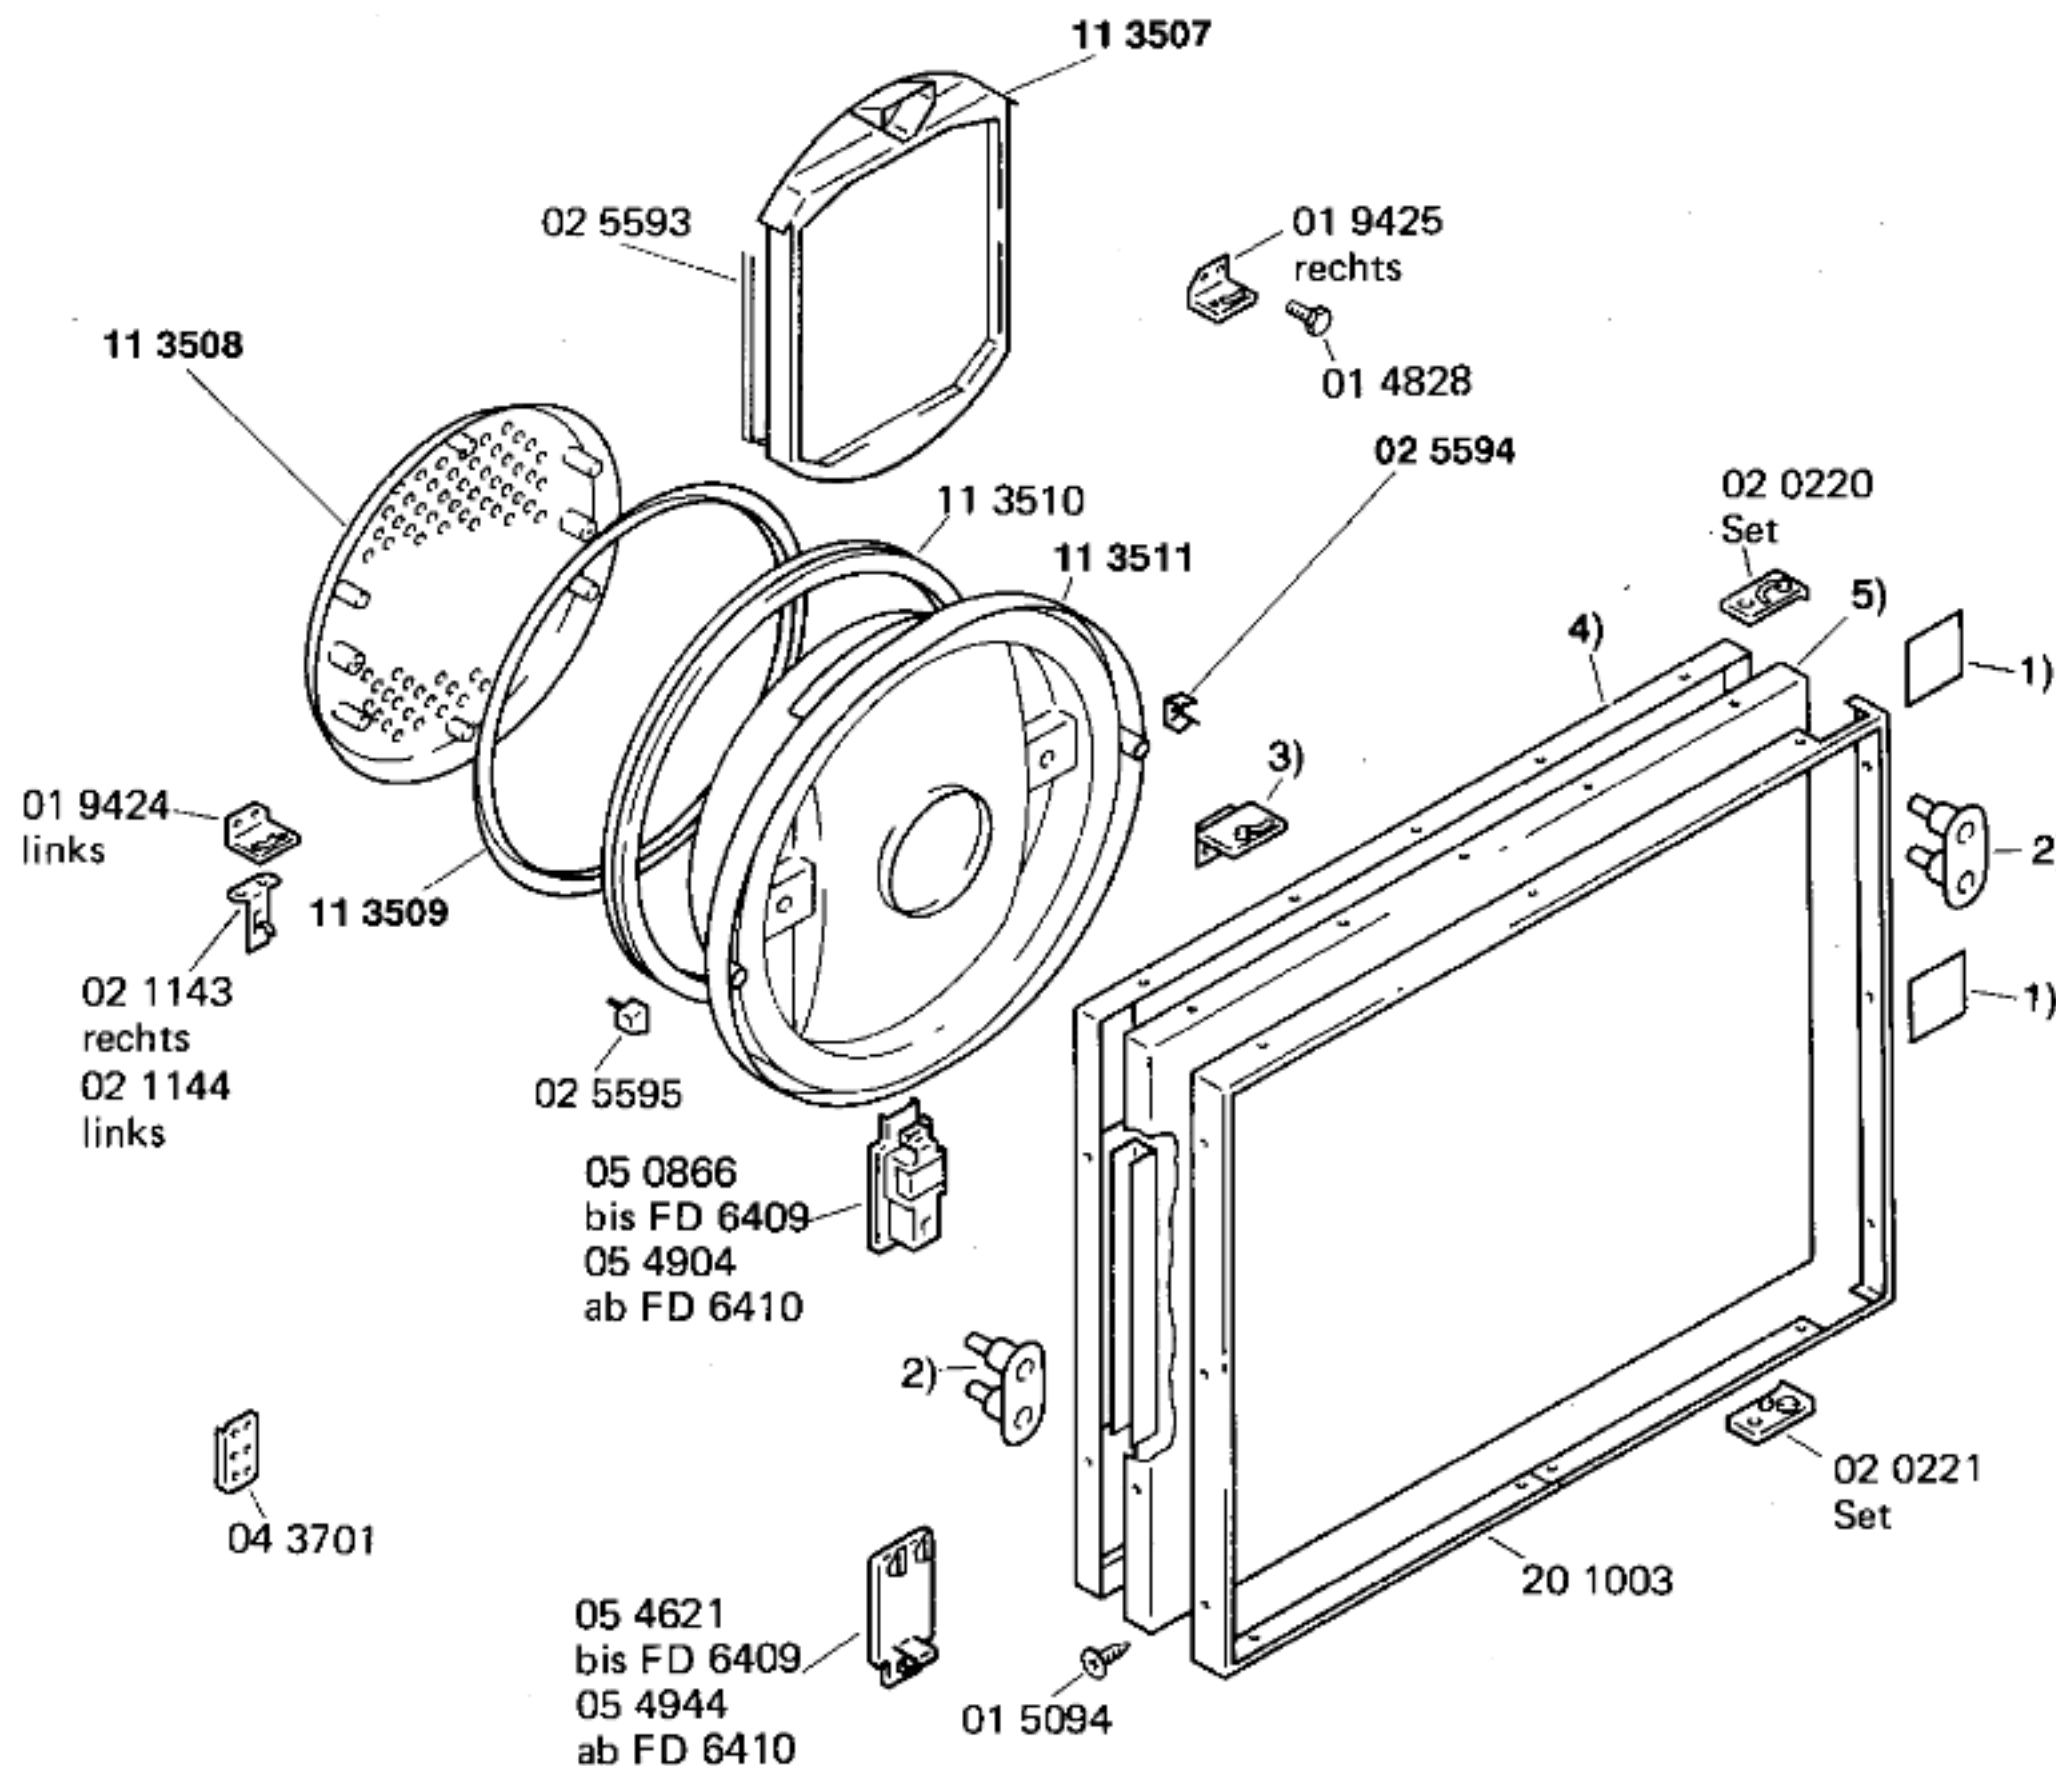

- 1) 05 3943
- 2) 05 3944
- 3) 05 0119
Set links
bis FD 6408
05 0120
Set rechts
bis FD 6408
05 4942
Set links und rechts
ab FD 6409
- 4) 20 2232
bis FD 6409
20 3755
ab FD 6410
- 5) 20 2231
bis FD 6409
20 2766
ab FD 6410

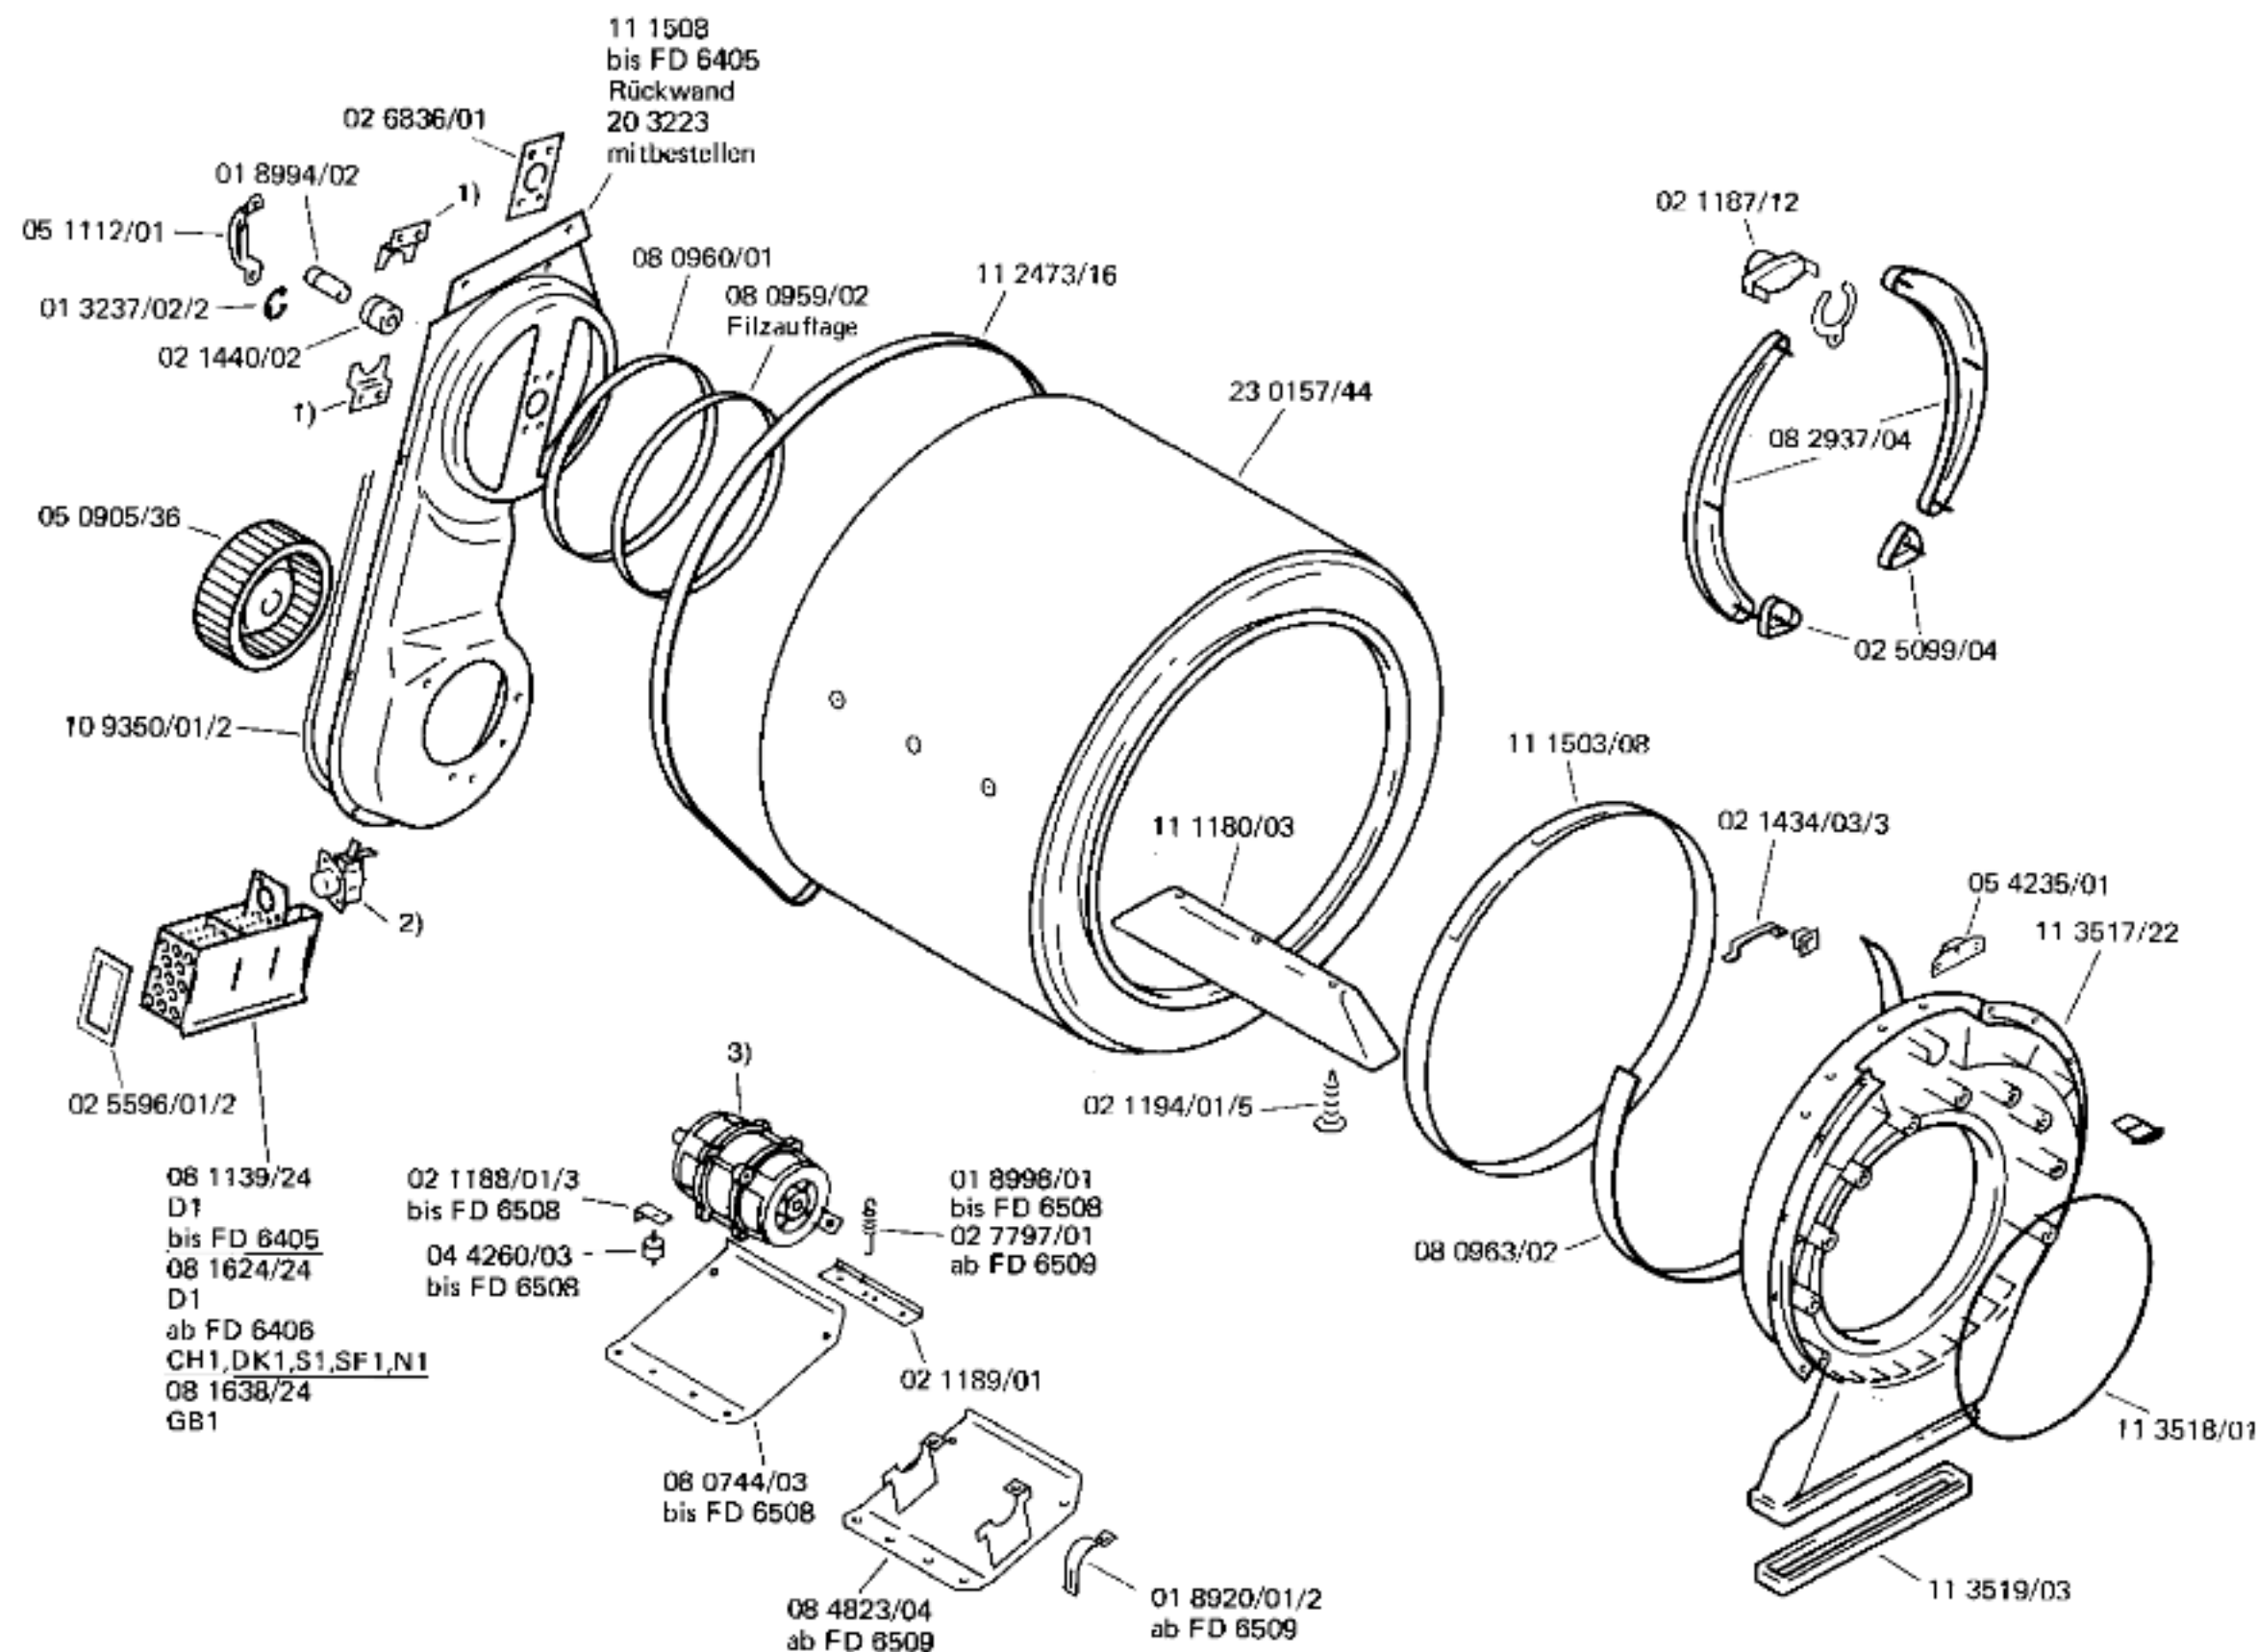Ident-Nummern-Konstante
3740 .. .

- 1) 02 1439/01
2) 02 1749/12
D1
bis FD 6405
02 7014/12
D1
ab FD 6406
02 7014/12
GB1, N1, SF1
02 5756/12
CH1, DK1, S1
- 3) 14 0015/44
D1,CH1,DK1,S1,N1,SF1
14 0309/44
GB1
bis FD 6508
14 0368/40
D1,CH1,DK1,S1,N1,SF1
14 0369/40
GB1
ab FD 6509

1) 11 3525

