



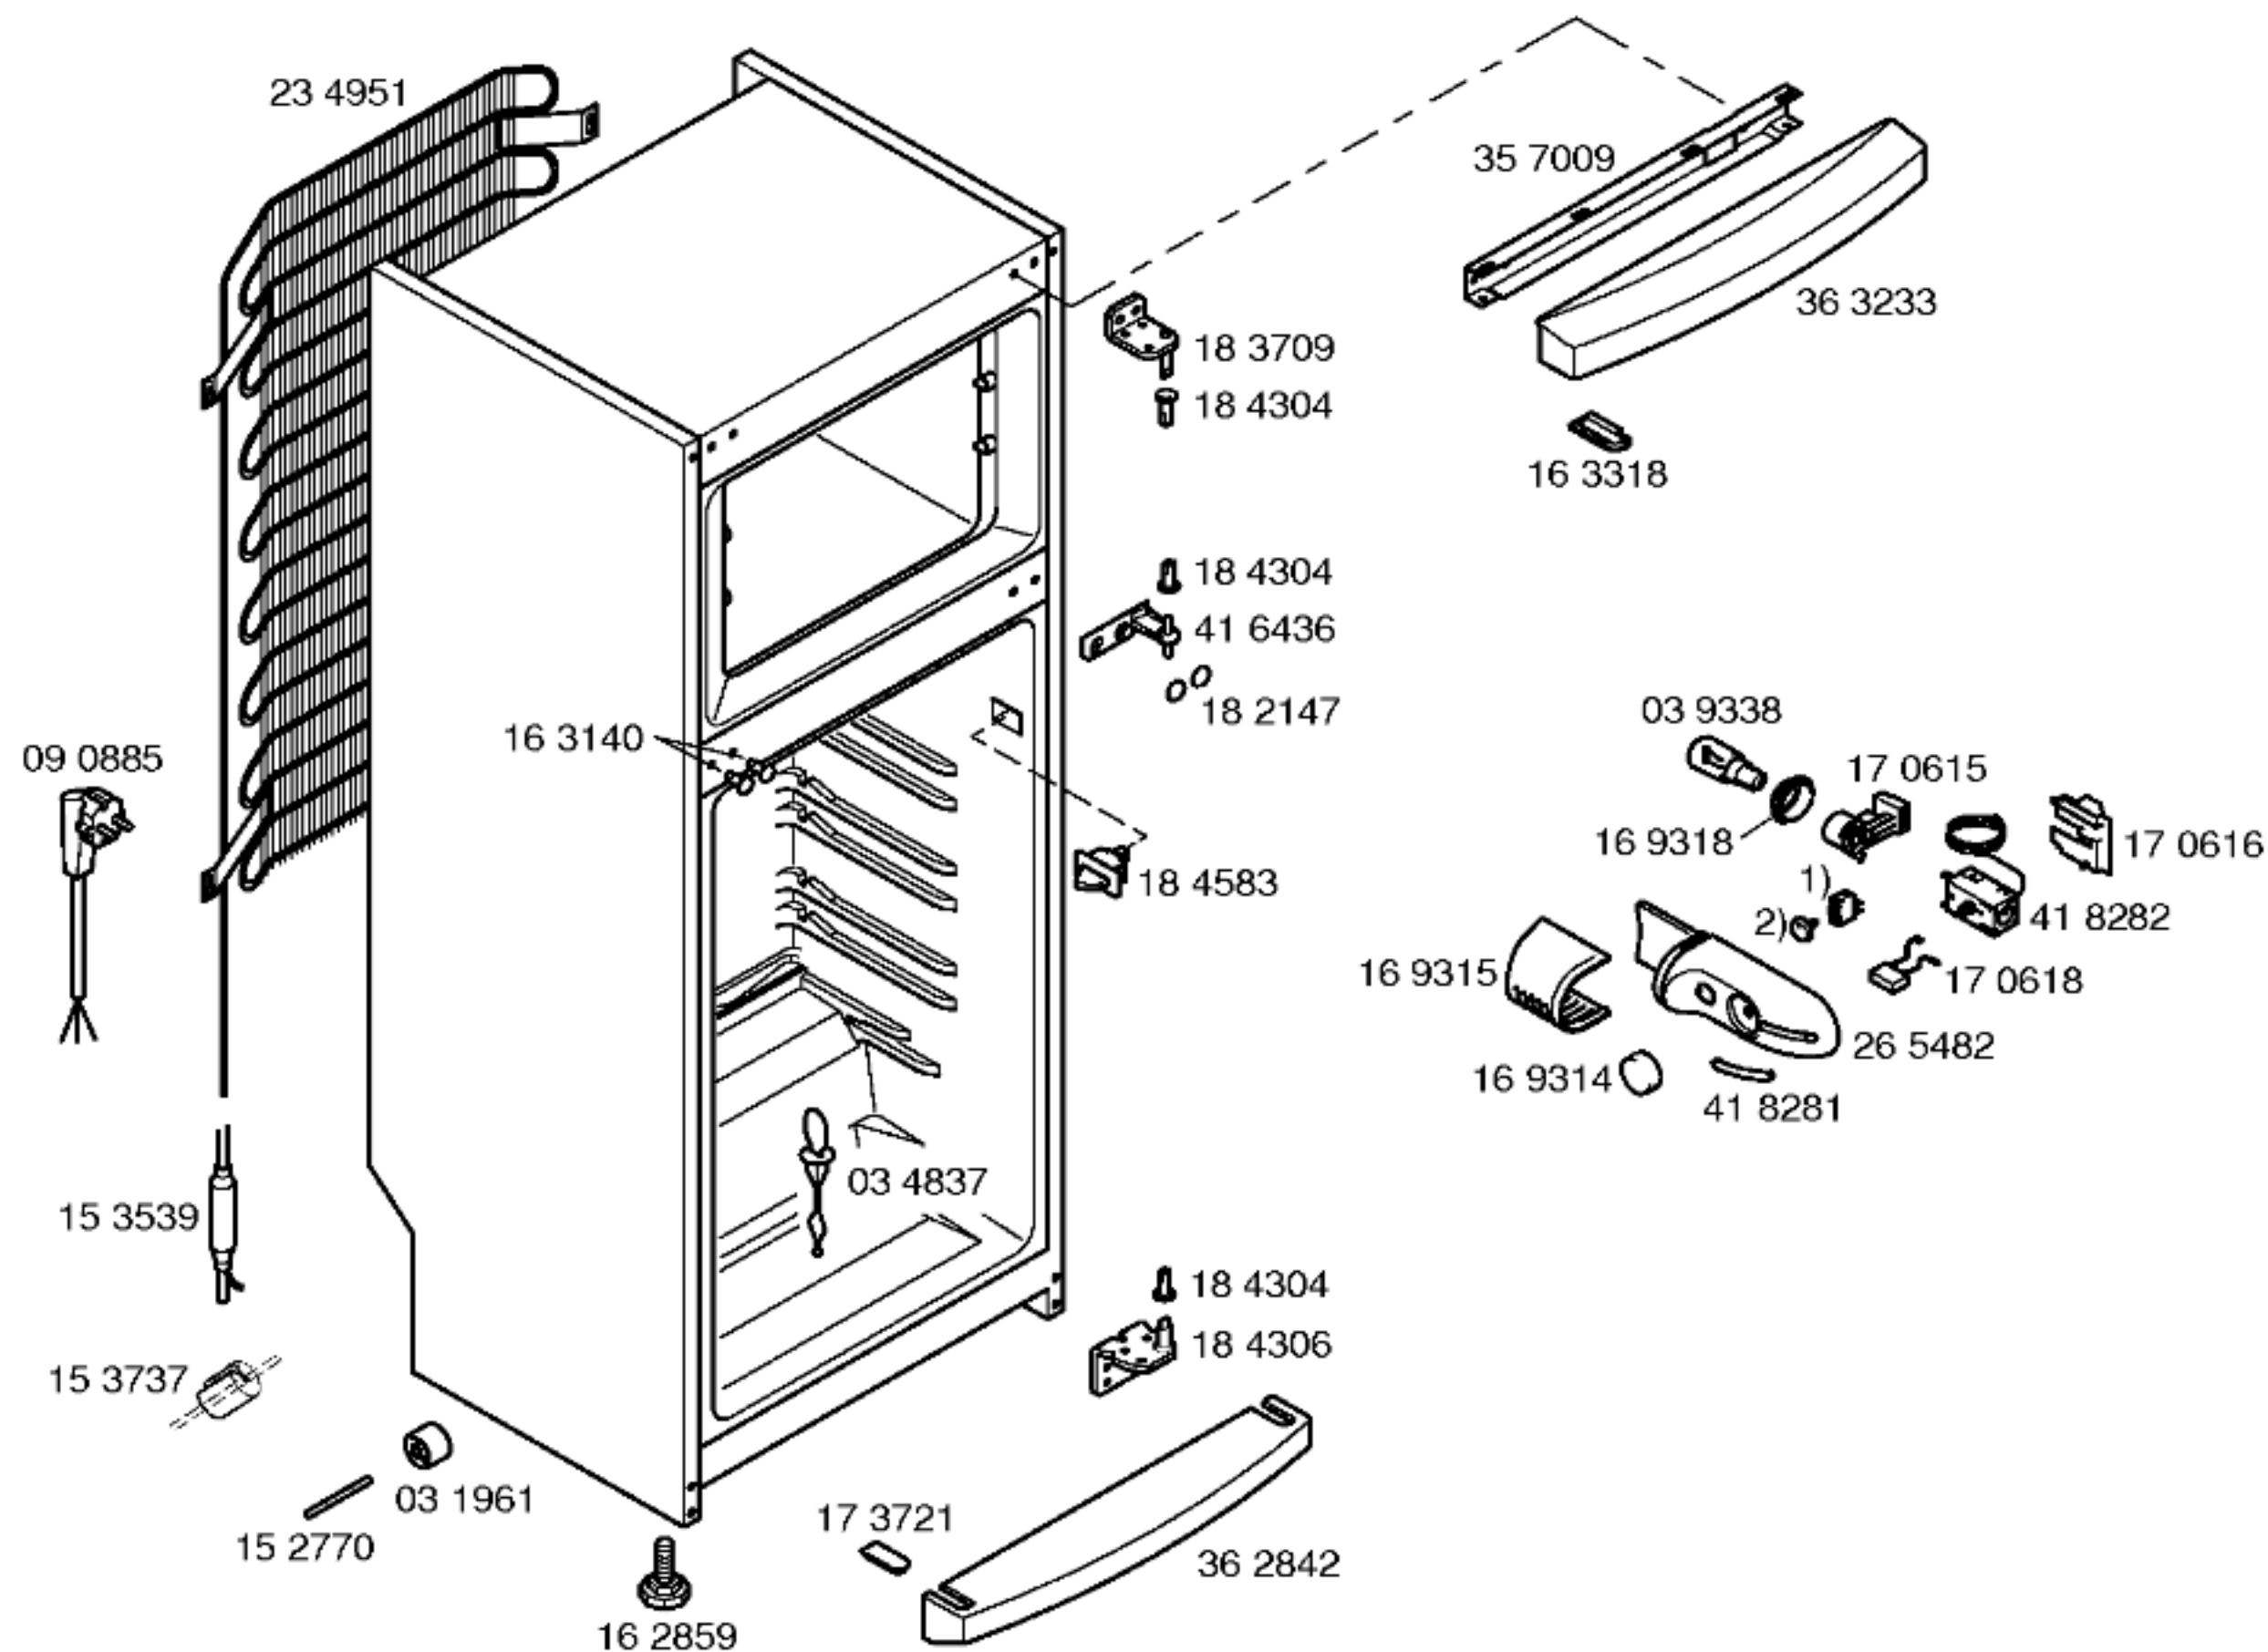


Libro de instrucciones
52 9548
(de,en,fr,es,pt)

Instrucc. de montaje
52 2313
(de,en,fr,nl,es,it,pt,el,sv,
no,fi,da,ru)

1) 17 0617
2) 17 3206

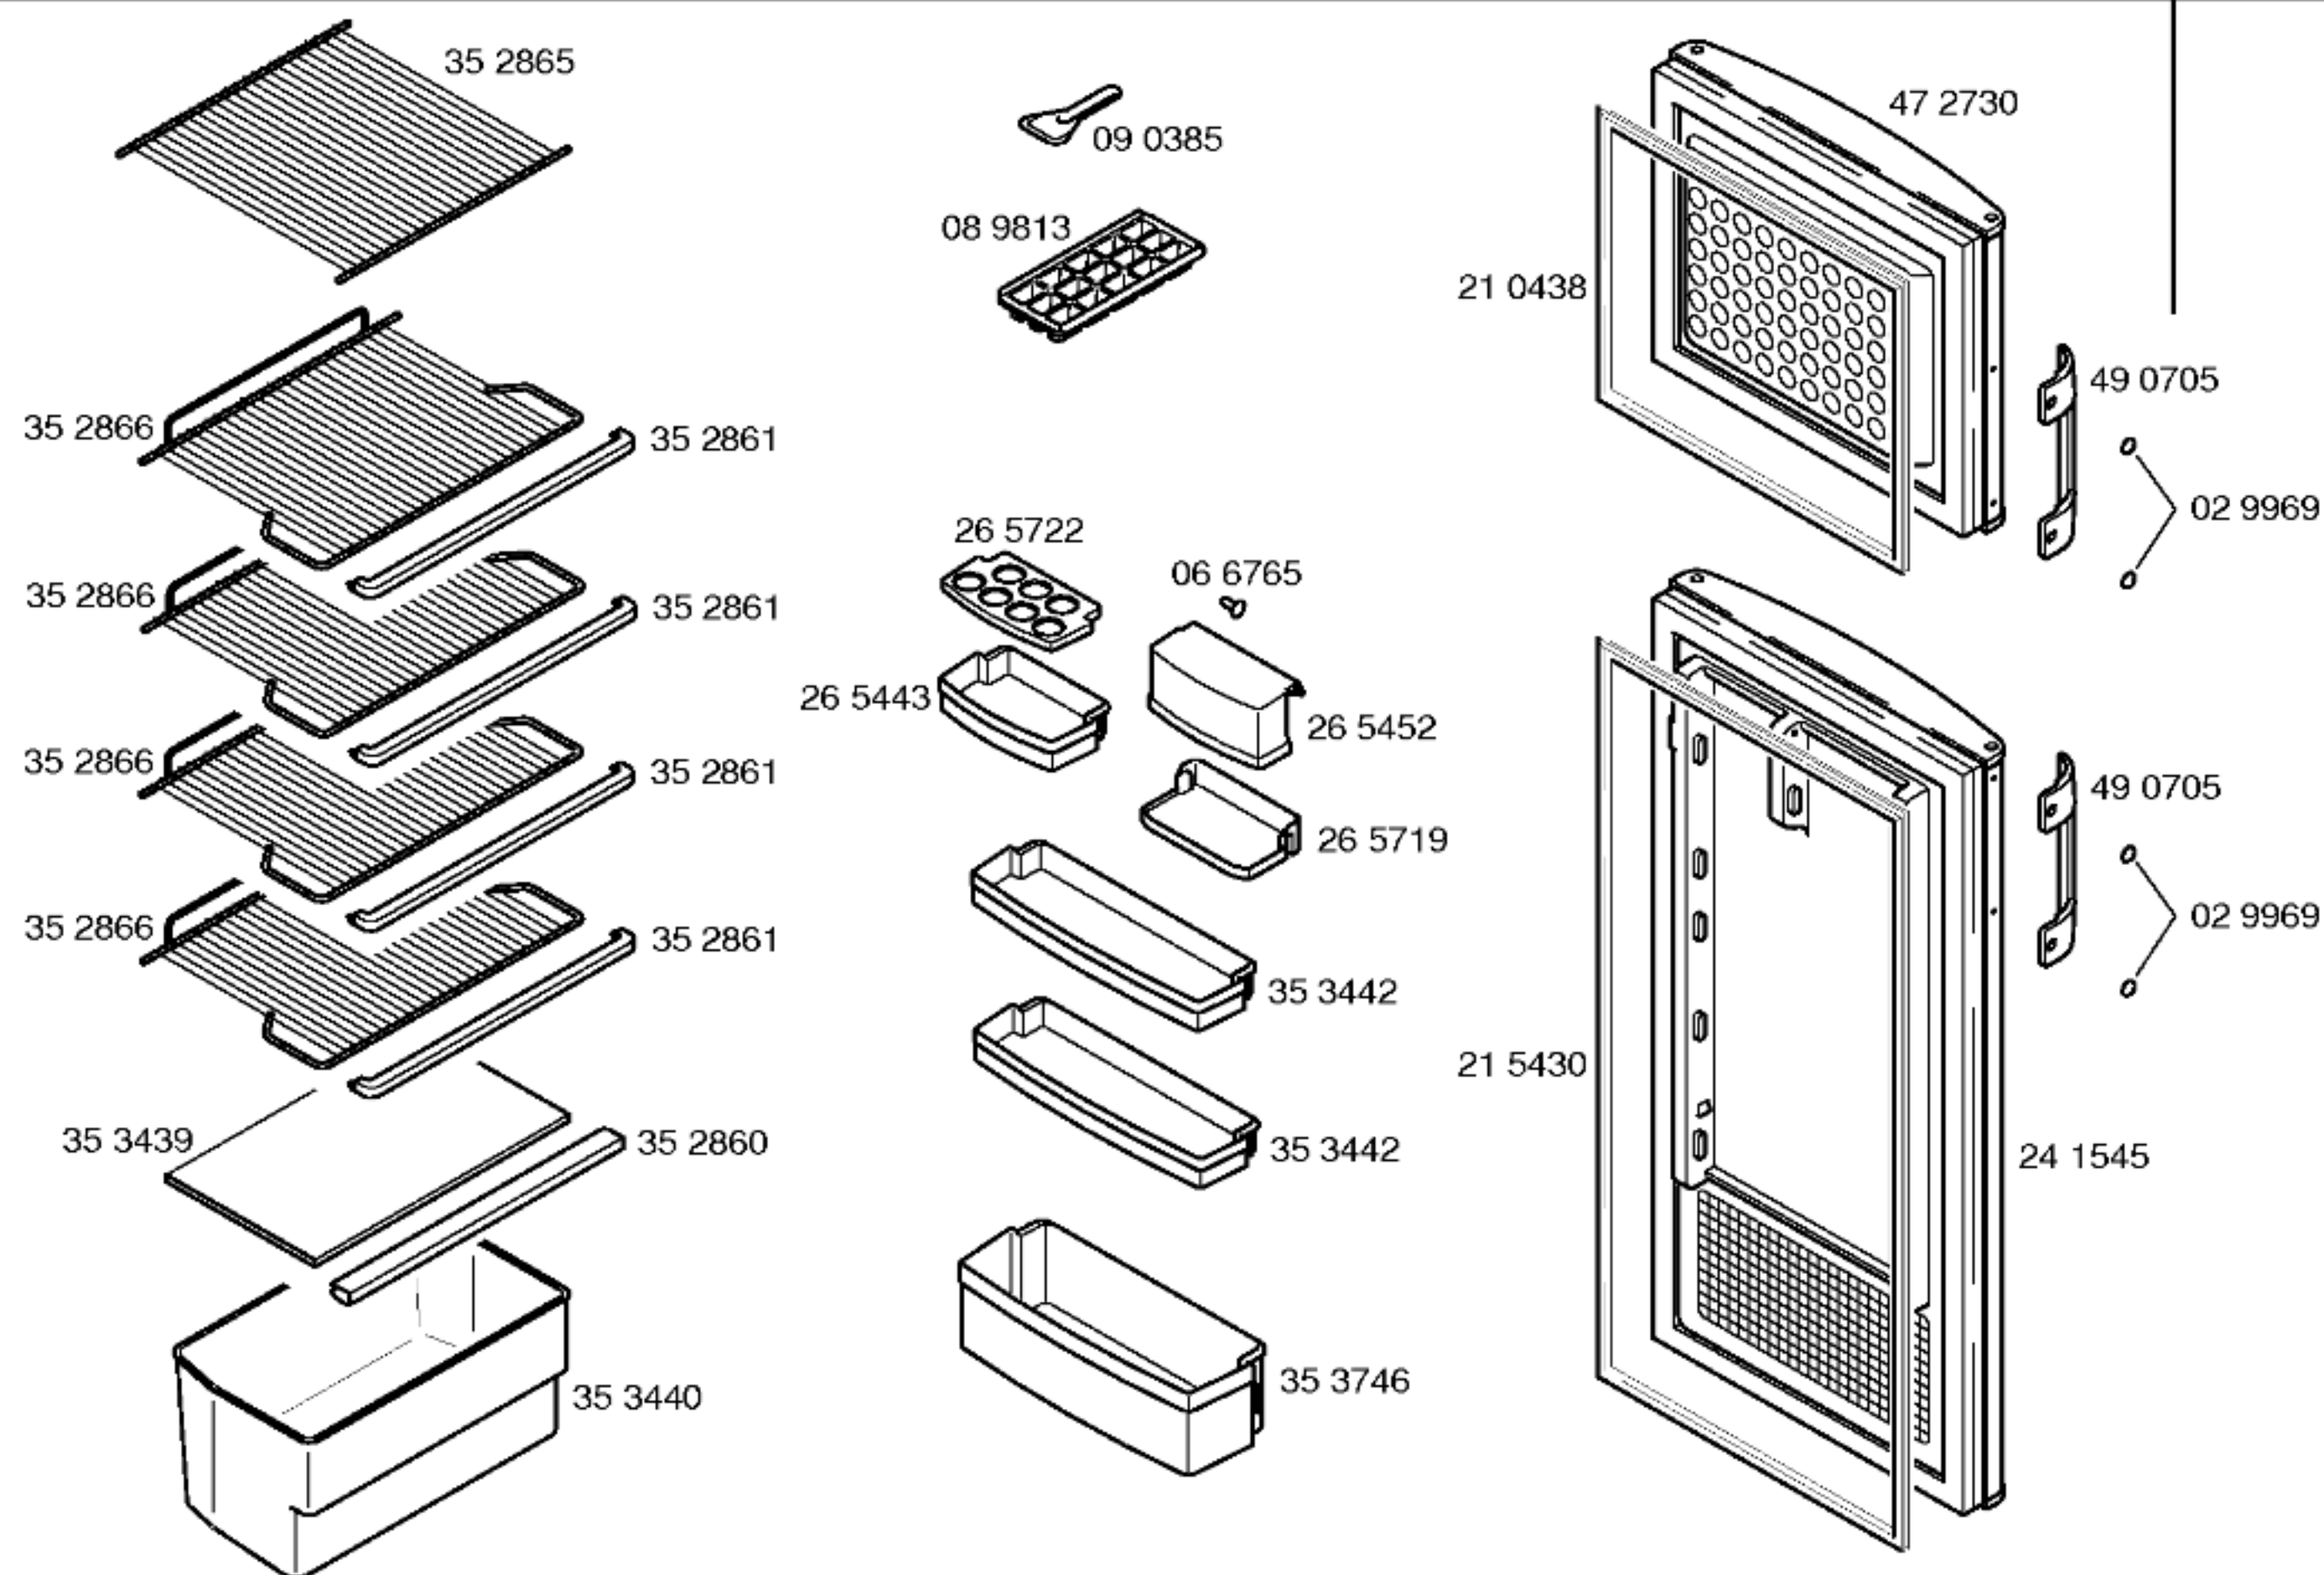

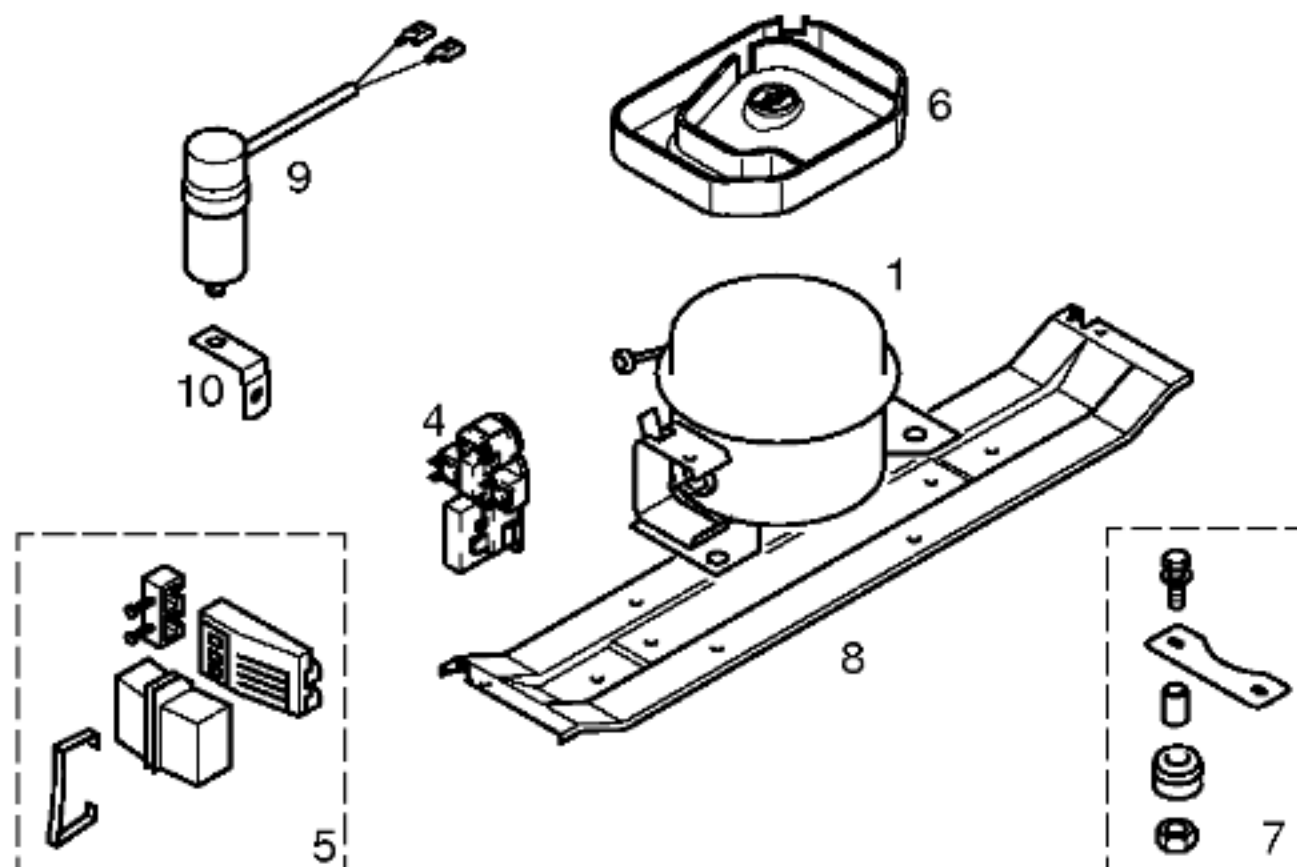

Pos.	Matsushita			
	DC110E			
1	14 2002			
2				
3				
4	17 4431			
5				
6	48 1077			
7	05 0166			
8	43 2652			
9	18 1236			
10	18 1237			
11				
12				

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES / DATOS TECNICOS				
Verdichter/Compressor/Compresseur/Compresor		Matsushita		
Typ/Type/Tipo		DC110E		
Förderleistung/Delivery/Debit/Aspiración l/h				
Anlaufstrom/Starting current/Cour.démarrage/Int.arranq. A		8,50		
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm		14,19		
Hi/aux. Ohm		12,80		
Temp.Reyler/Thermostat/Termostato		Danfoss		
Typ/Type/Tipo		077B6733		
Reglerstellung/Position/Conexión		MIN. MAX.		
Schaltwerte/Switching values/ ..ein/conex. °C		+5		
Valeurs de commutation/Desconex. ..aus"/descon. °C		-22 -34		
(..abtaven' od) ..alarm' °C				
Füllmenge/Fill. quantity/Charge/Carga R600a.		g	*	
Anschlusswert/Comm. load/Puiss. Connect./Potenc.		W	129	
Heizung/Heater/Chauflage/Resistenc.descong.				
Widerstand/Resistance/Resistencia Ohm				
Leistung/Power/Puissance/Potencia W				
Ventilador/Blower/Ventilateur/Ventilador				
Widerstand/Resistance/Resistencia Ohm				
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula				
Widerstand/Resistance/Resistencia Ohm				
Spannung/Voltage/Tension/Tensión V				
Temp.Reyler/Thermostat/Termostato ambiente				

* Siehe Typenschild / See identification plate / Voir plaque de caractéristiques / Ver plaqueta de características