



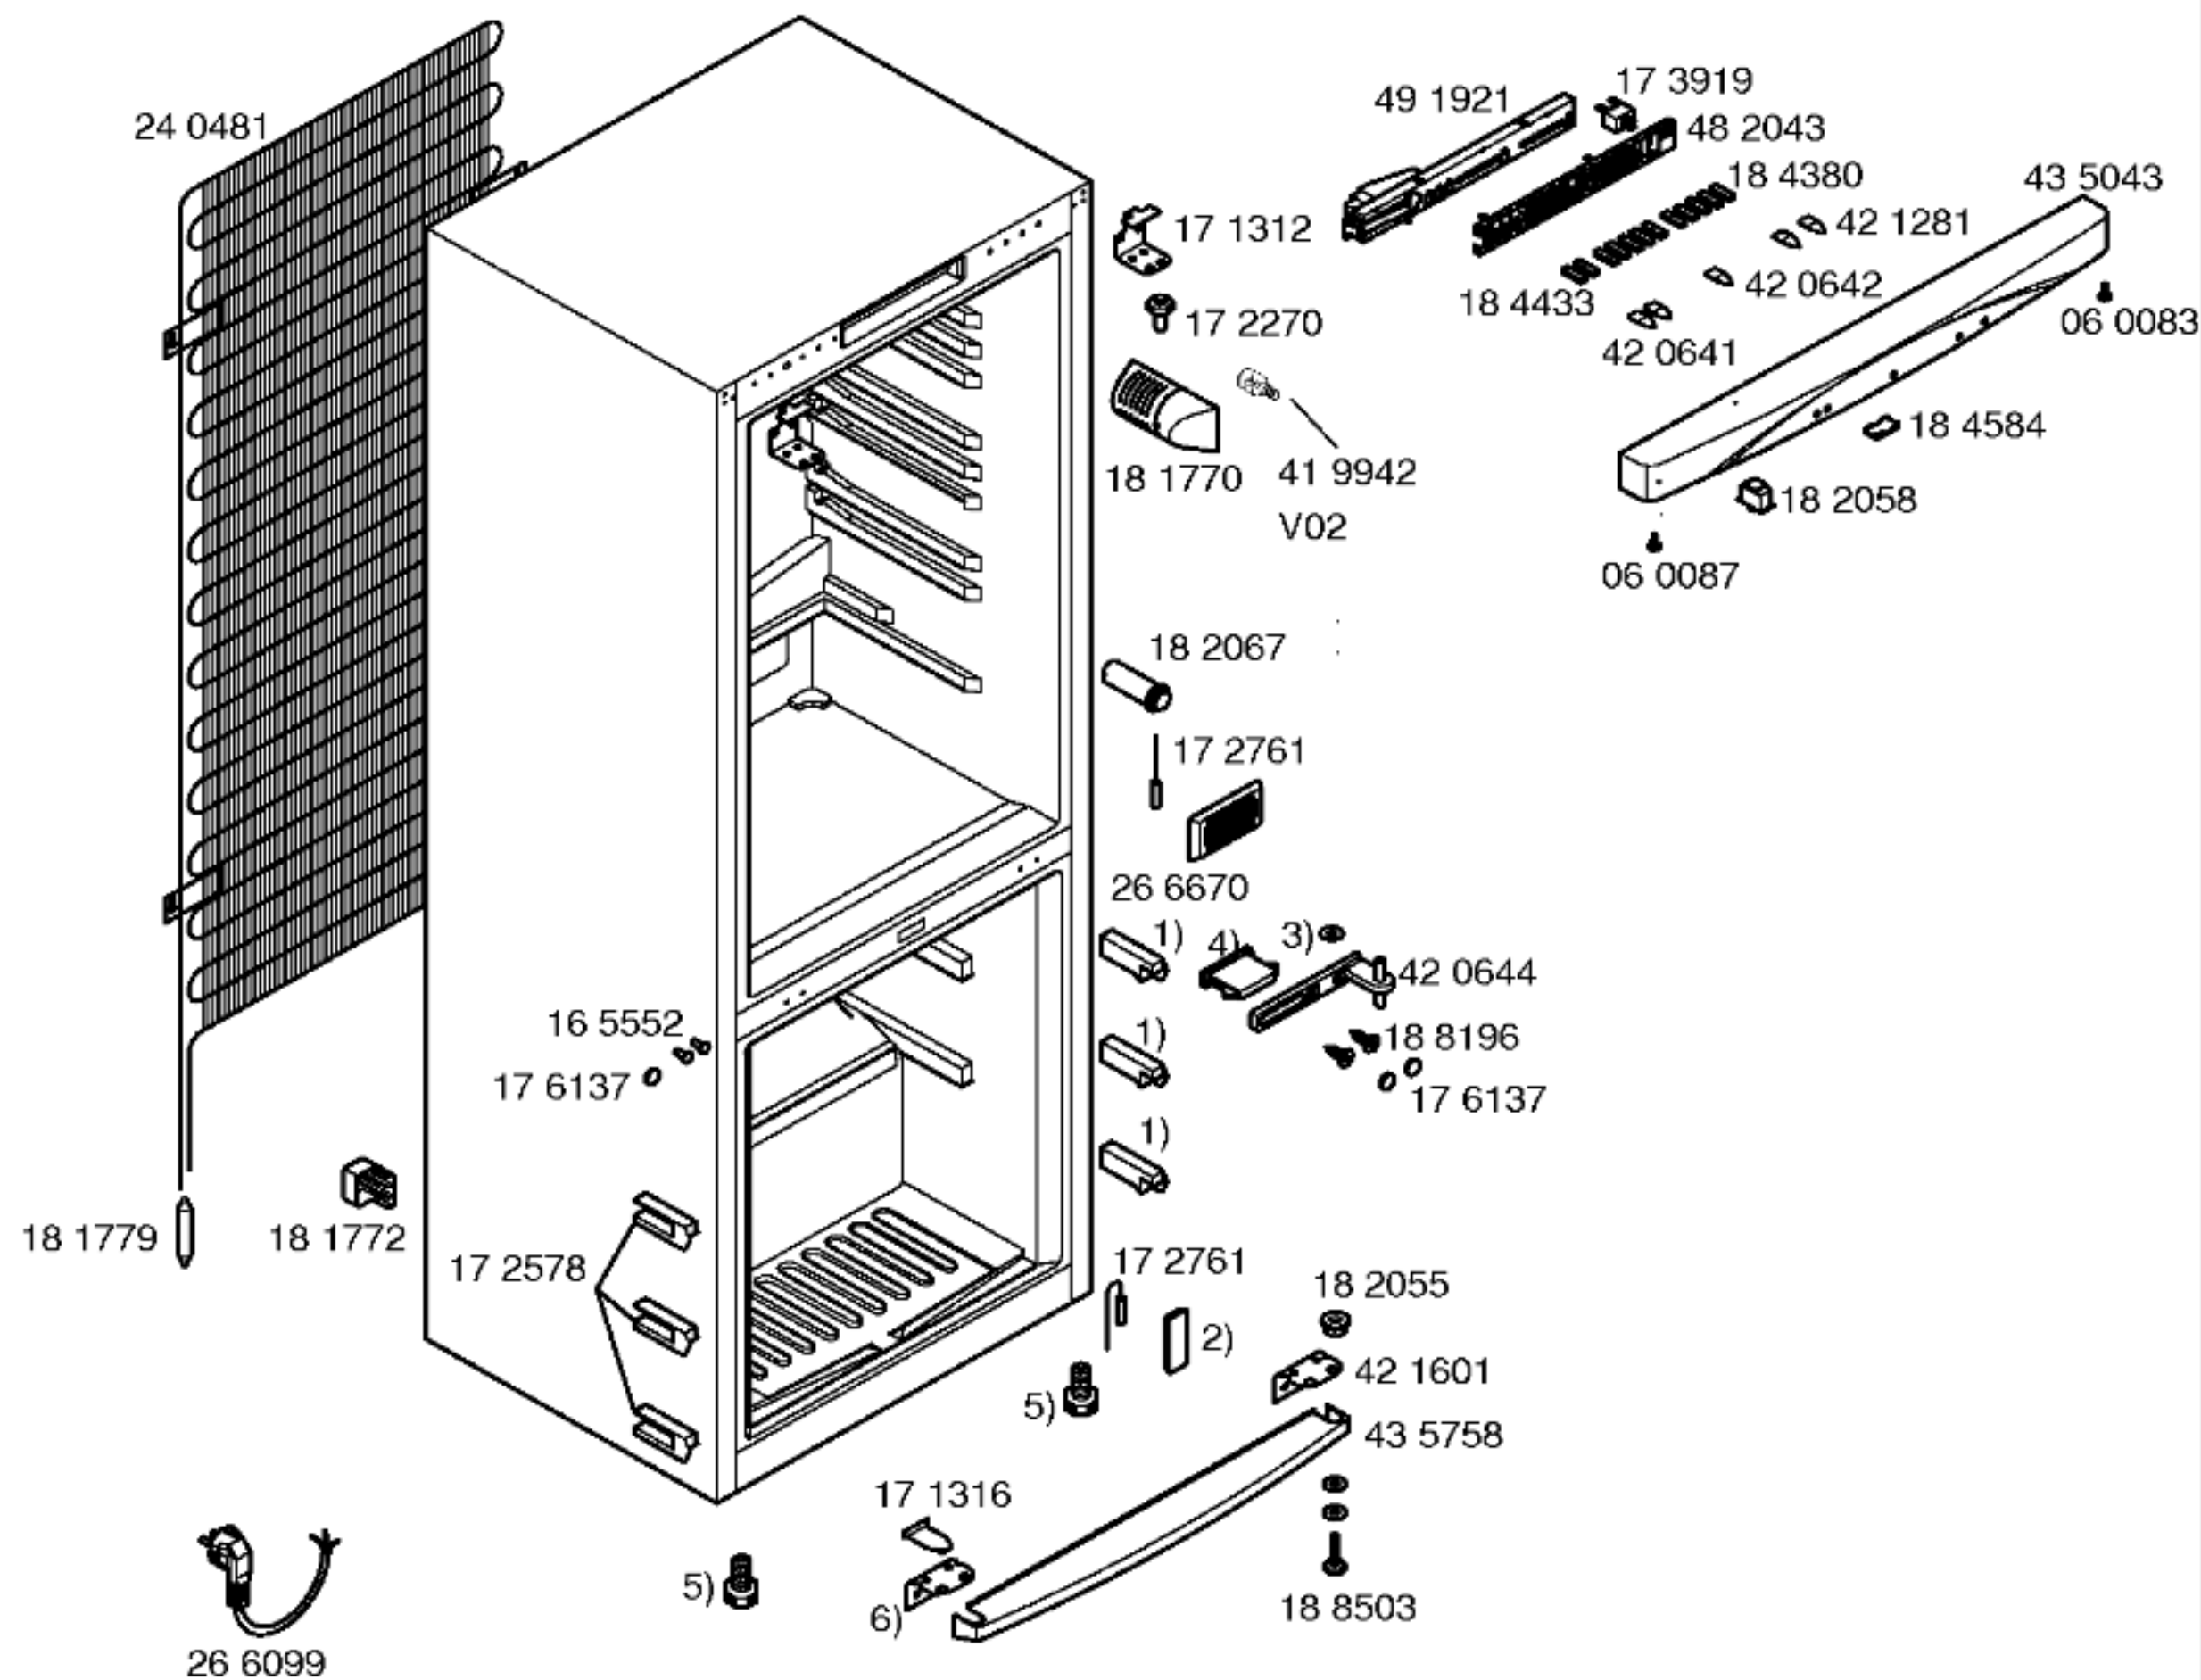


Gebrauchsanweisung
58 7225


- 1) 17 2579
- 2) 17 2293
- 3) 17 2256
- 4) 41 8128
- 5) 42 1516
- 6) 42 1602

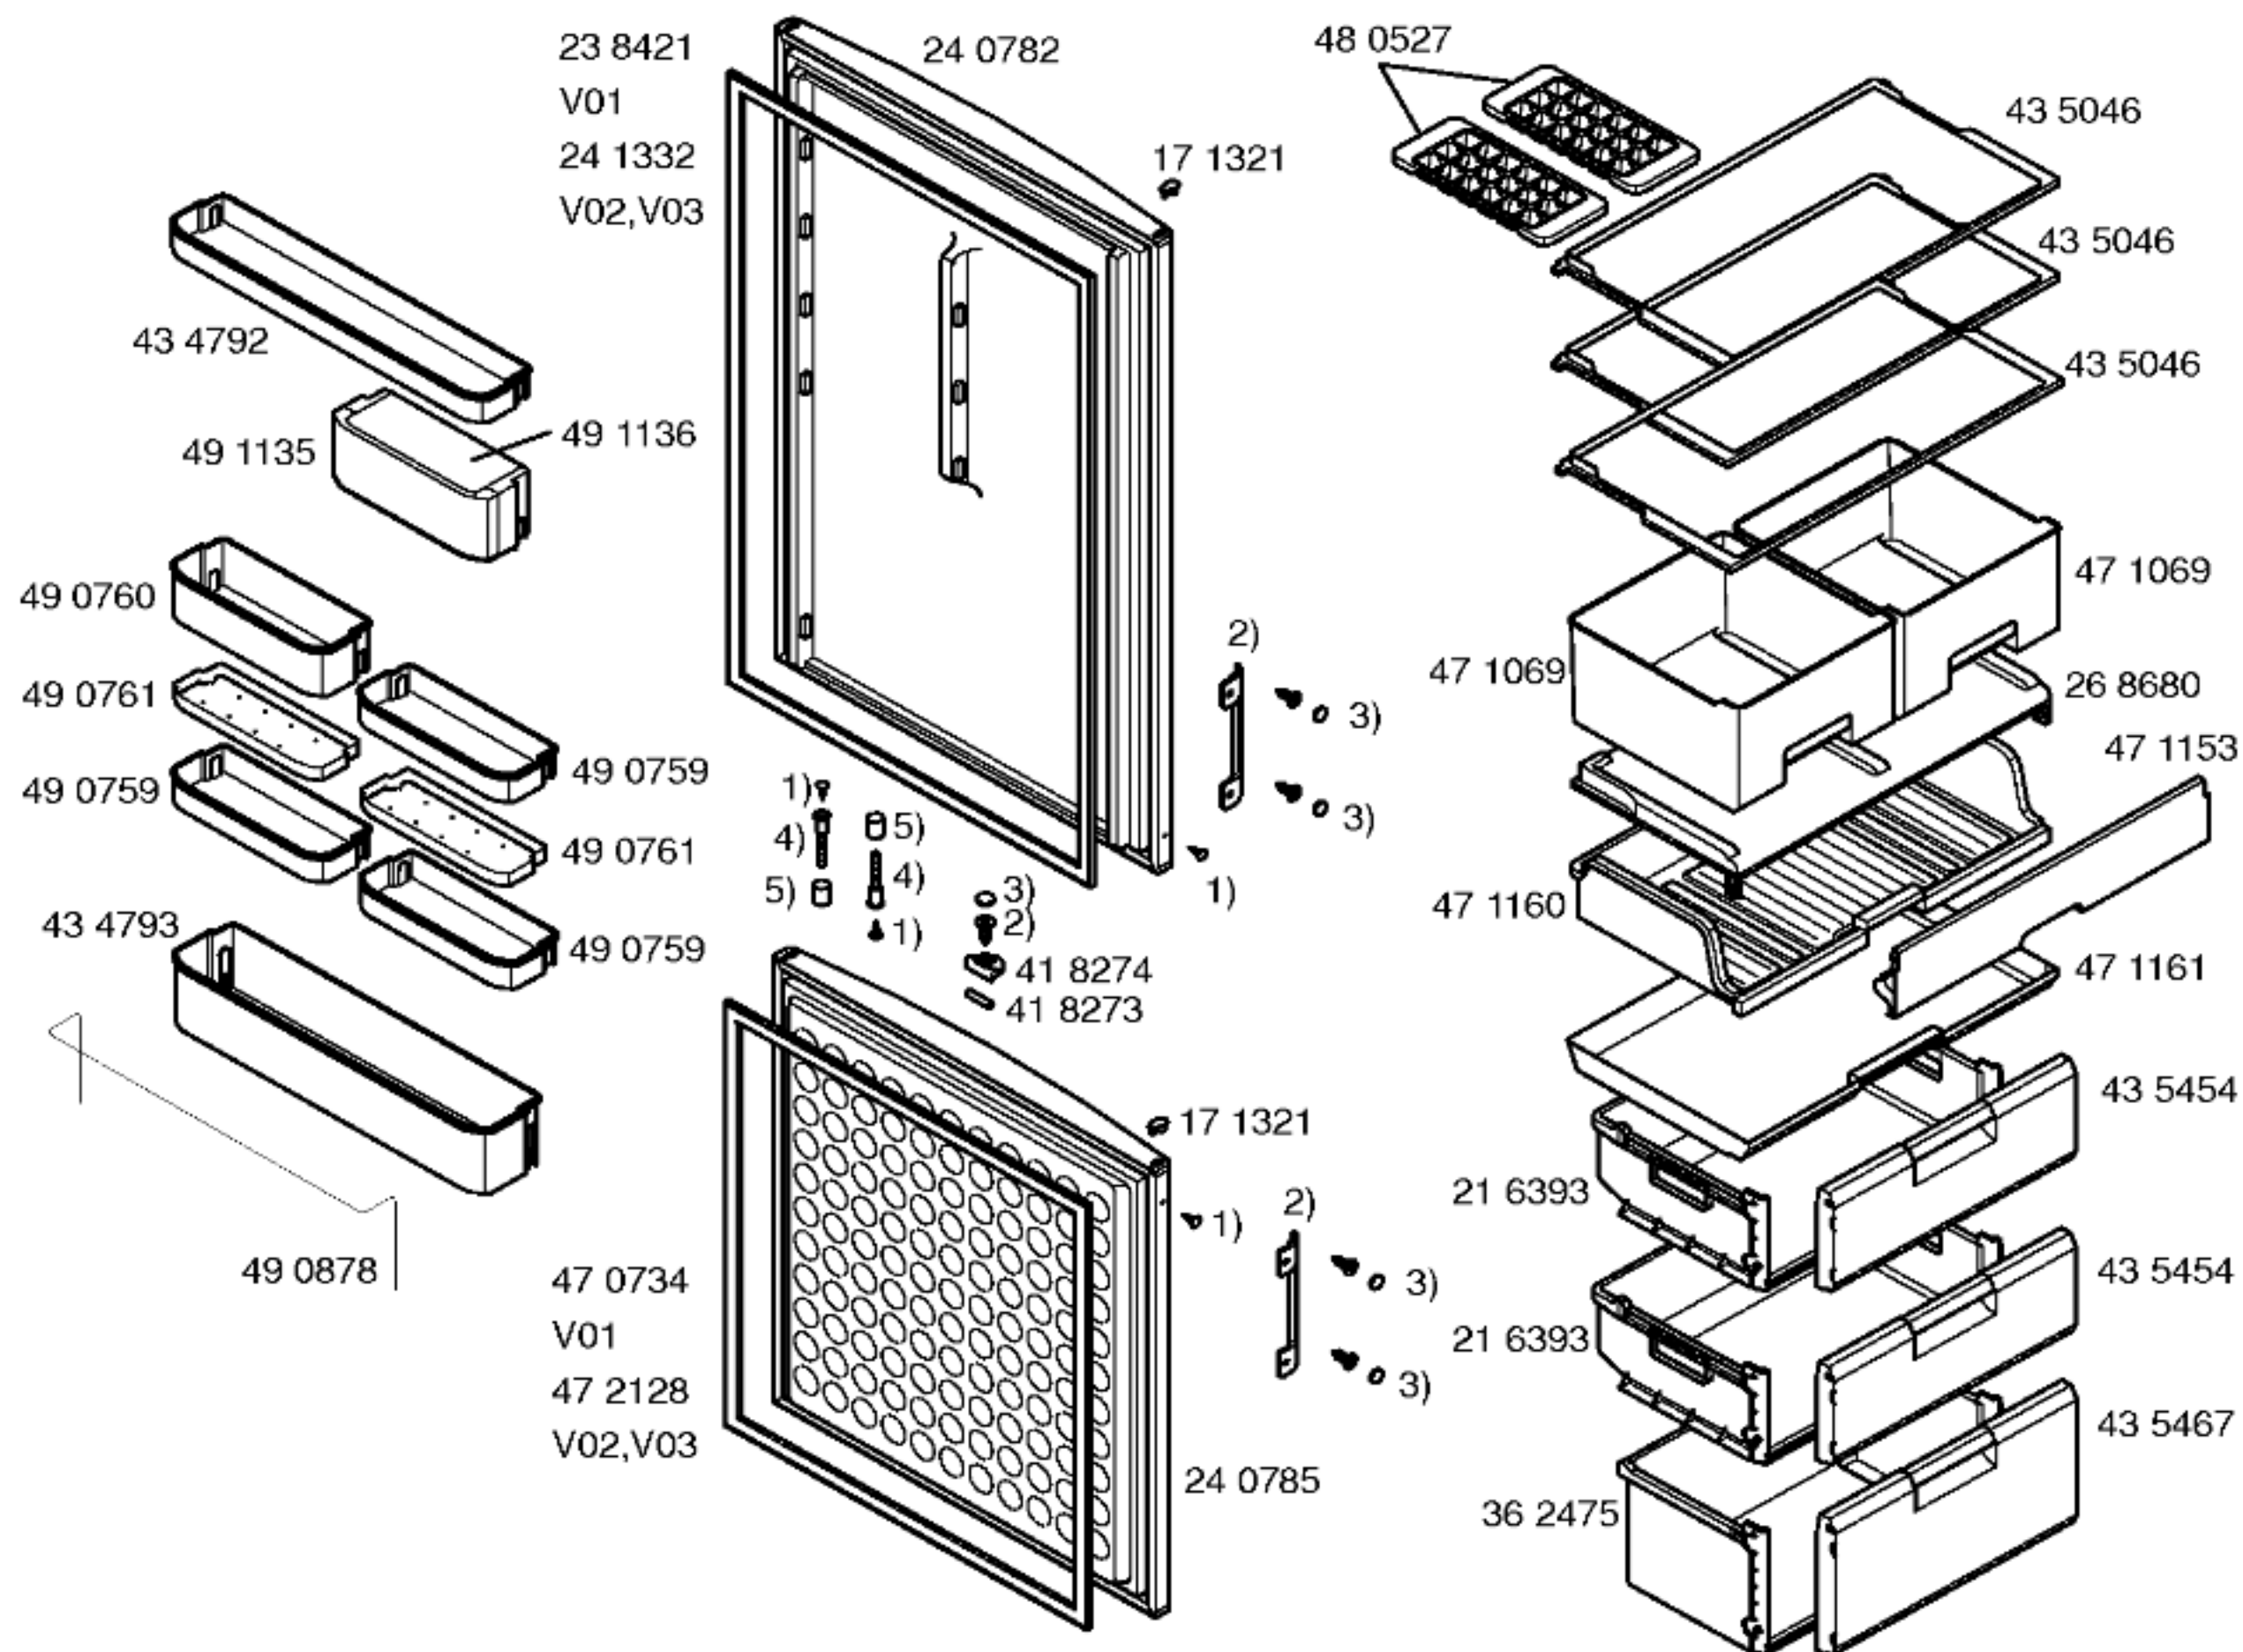

- 1) 06 0083
- 2) 49 0705
- 3) 16 5557
- 4) 18 8194
- 5) 18 8188

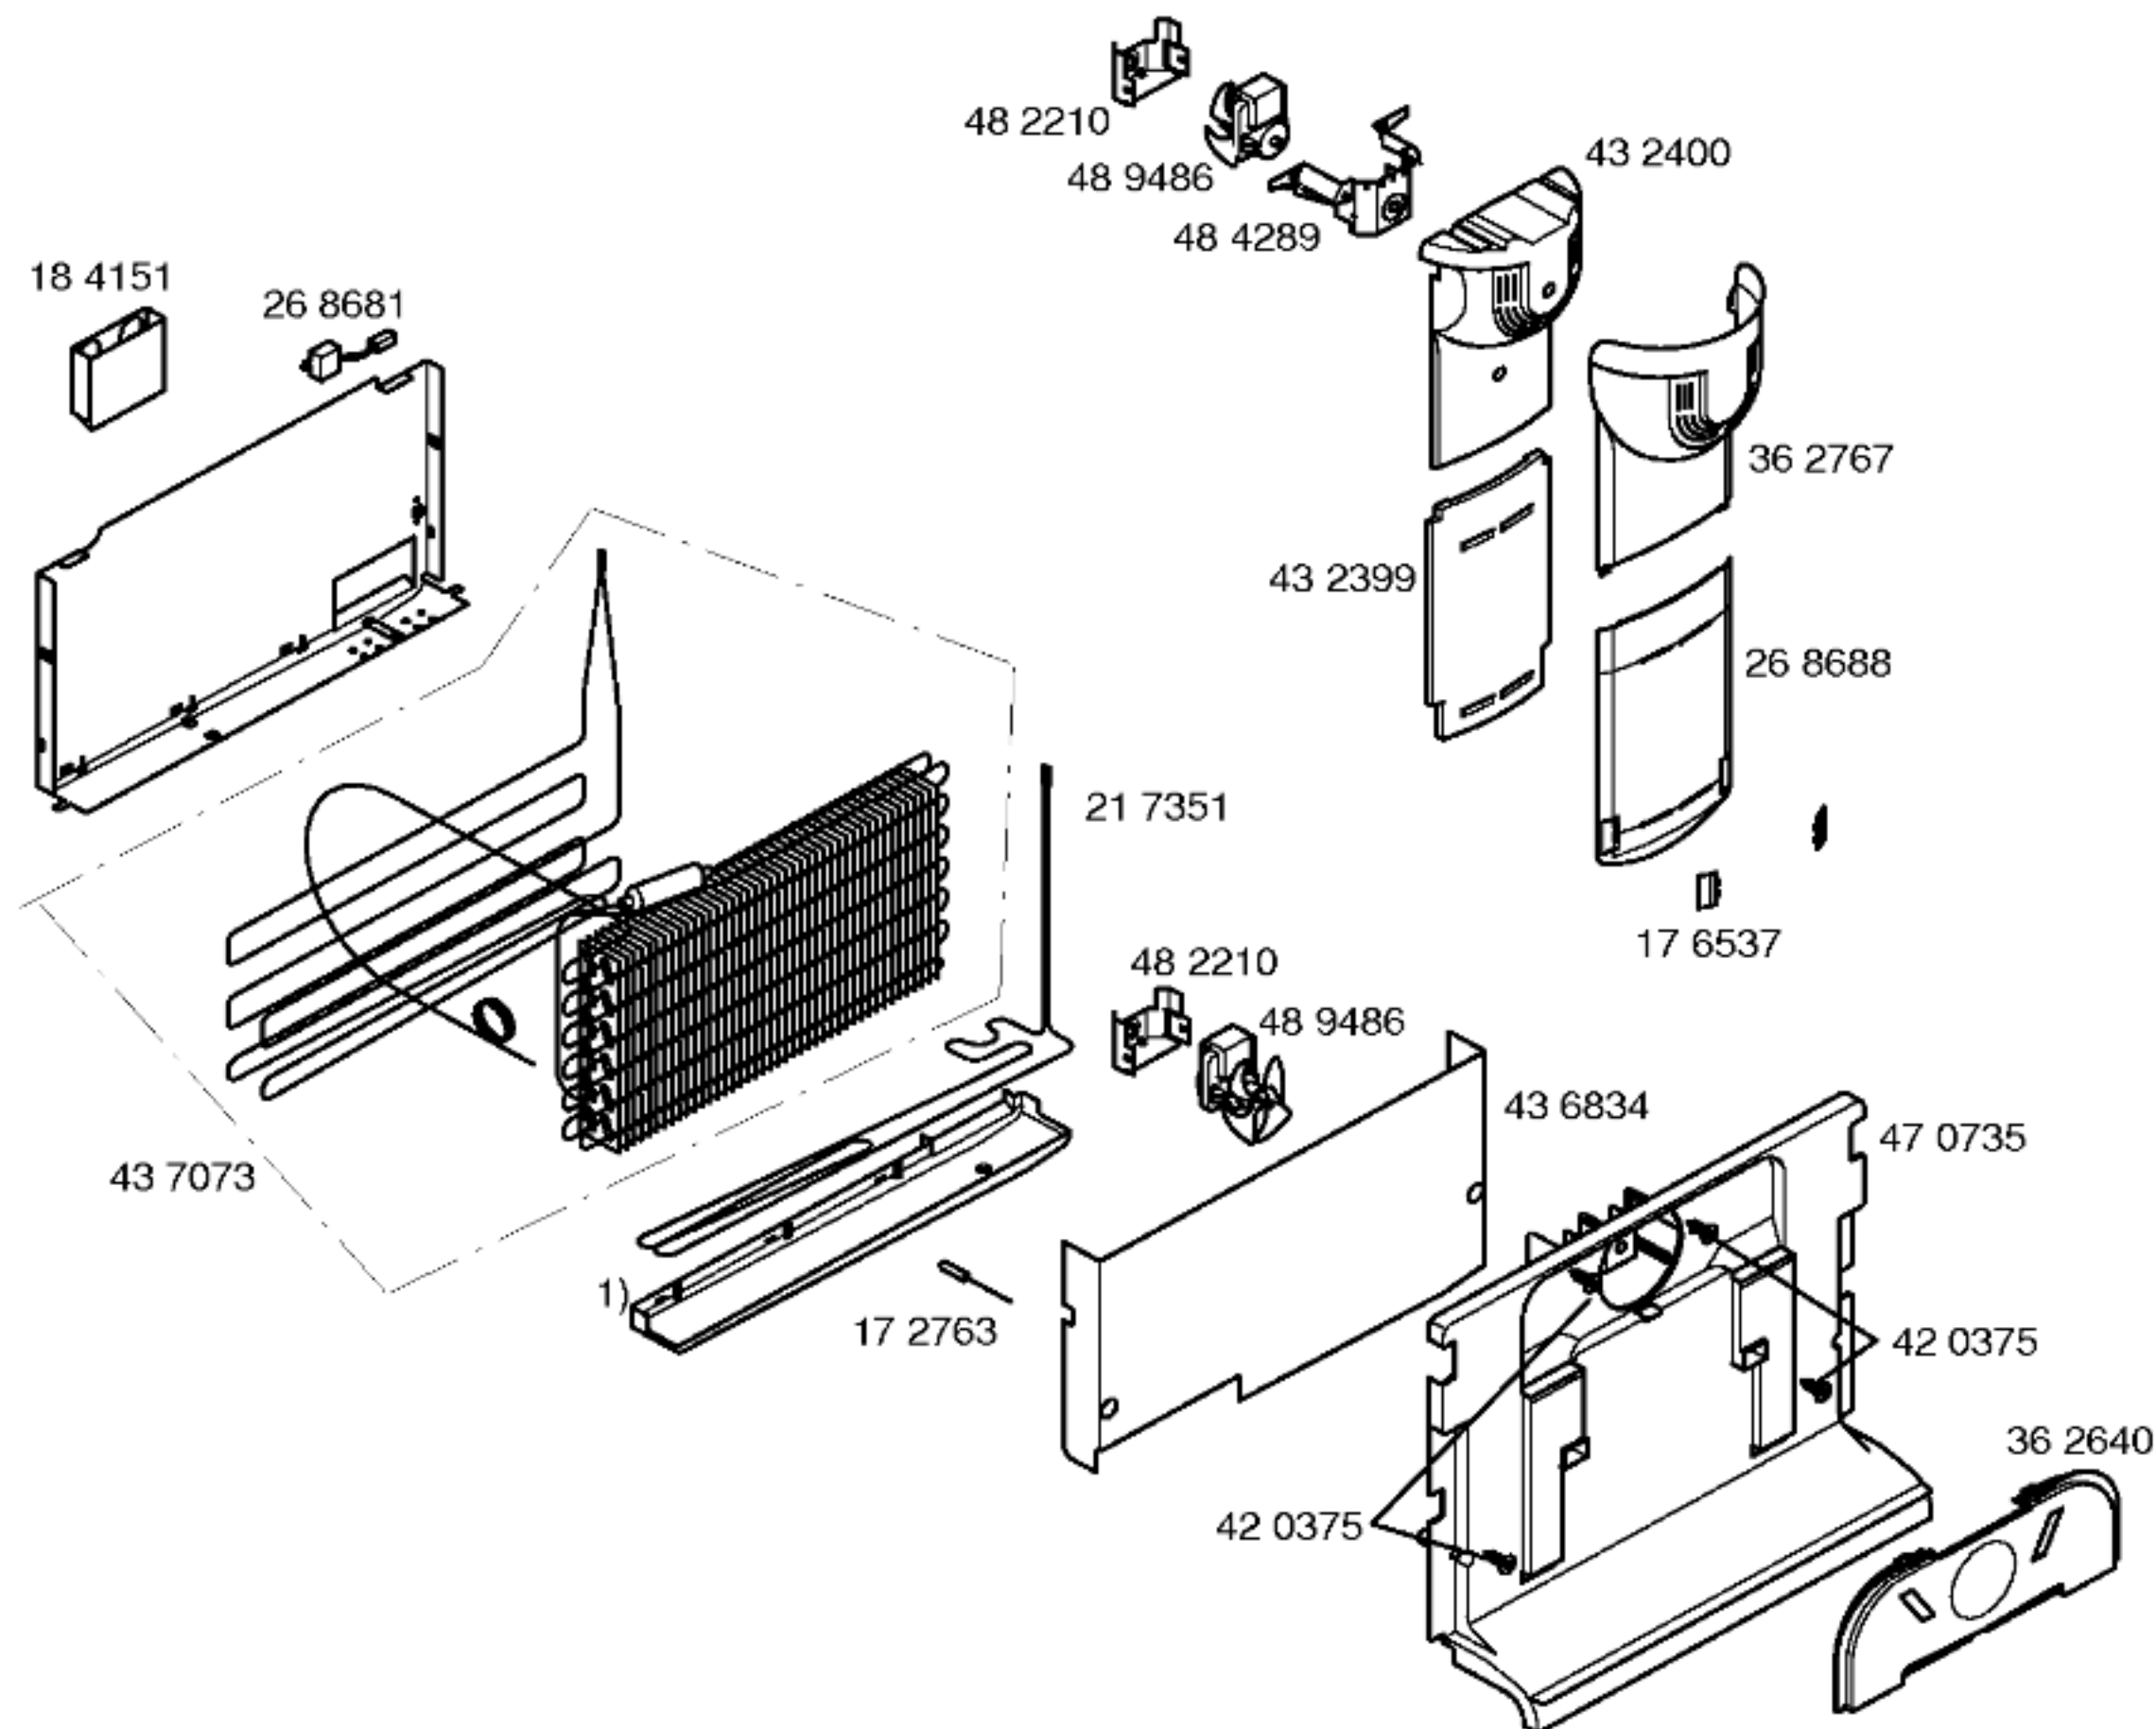

1) 43 2966

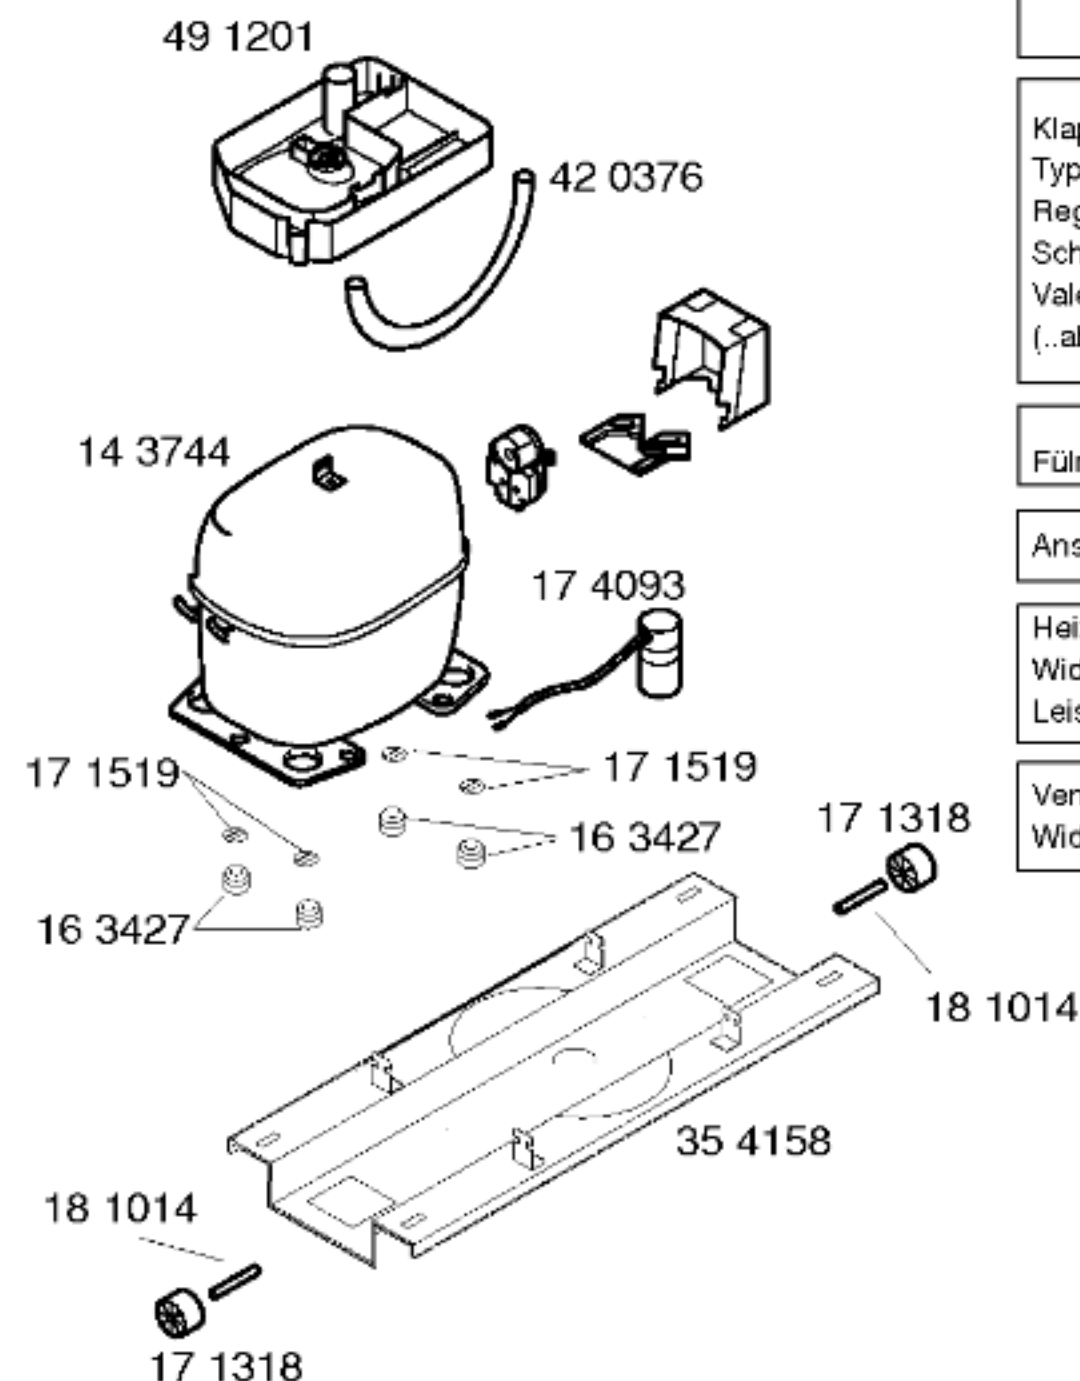

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
	V01,V02	V03	
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int. arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Danfoss NLE15 KTK2	Danfoss NLX15KK	
Klappe Therm./Thermostat/Termostat Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Descon. ..aus"/descon. (..abtaven' od) ..alarm'	RANCO K59/p1777 +3.5 +3.5 -31 -21		
Füllmenge/Fill. quantity/Charge/Carga R600 g	65		
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	247		
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia KΩ Leistung/Power/Puissance/Potencia W	267	81	4
Ventilator/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia KΩ	Verdichter	Verdampfer	