


**BOSCH**

V3404-0722044429-D1
V3404-0722044438-N1,SF1

WASCHGERÄTE
Waschvollautomaten

Ident - Nummern - Konstante
3740

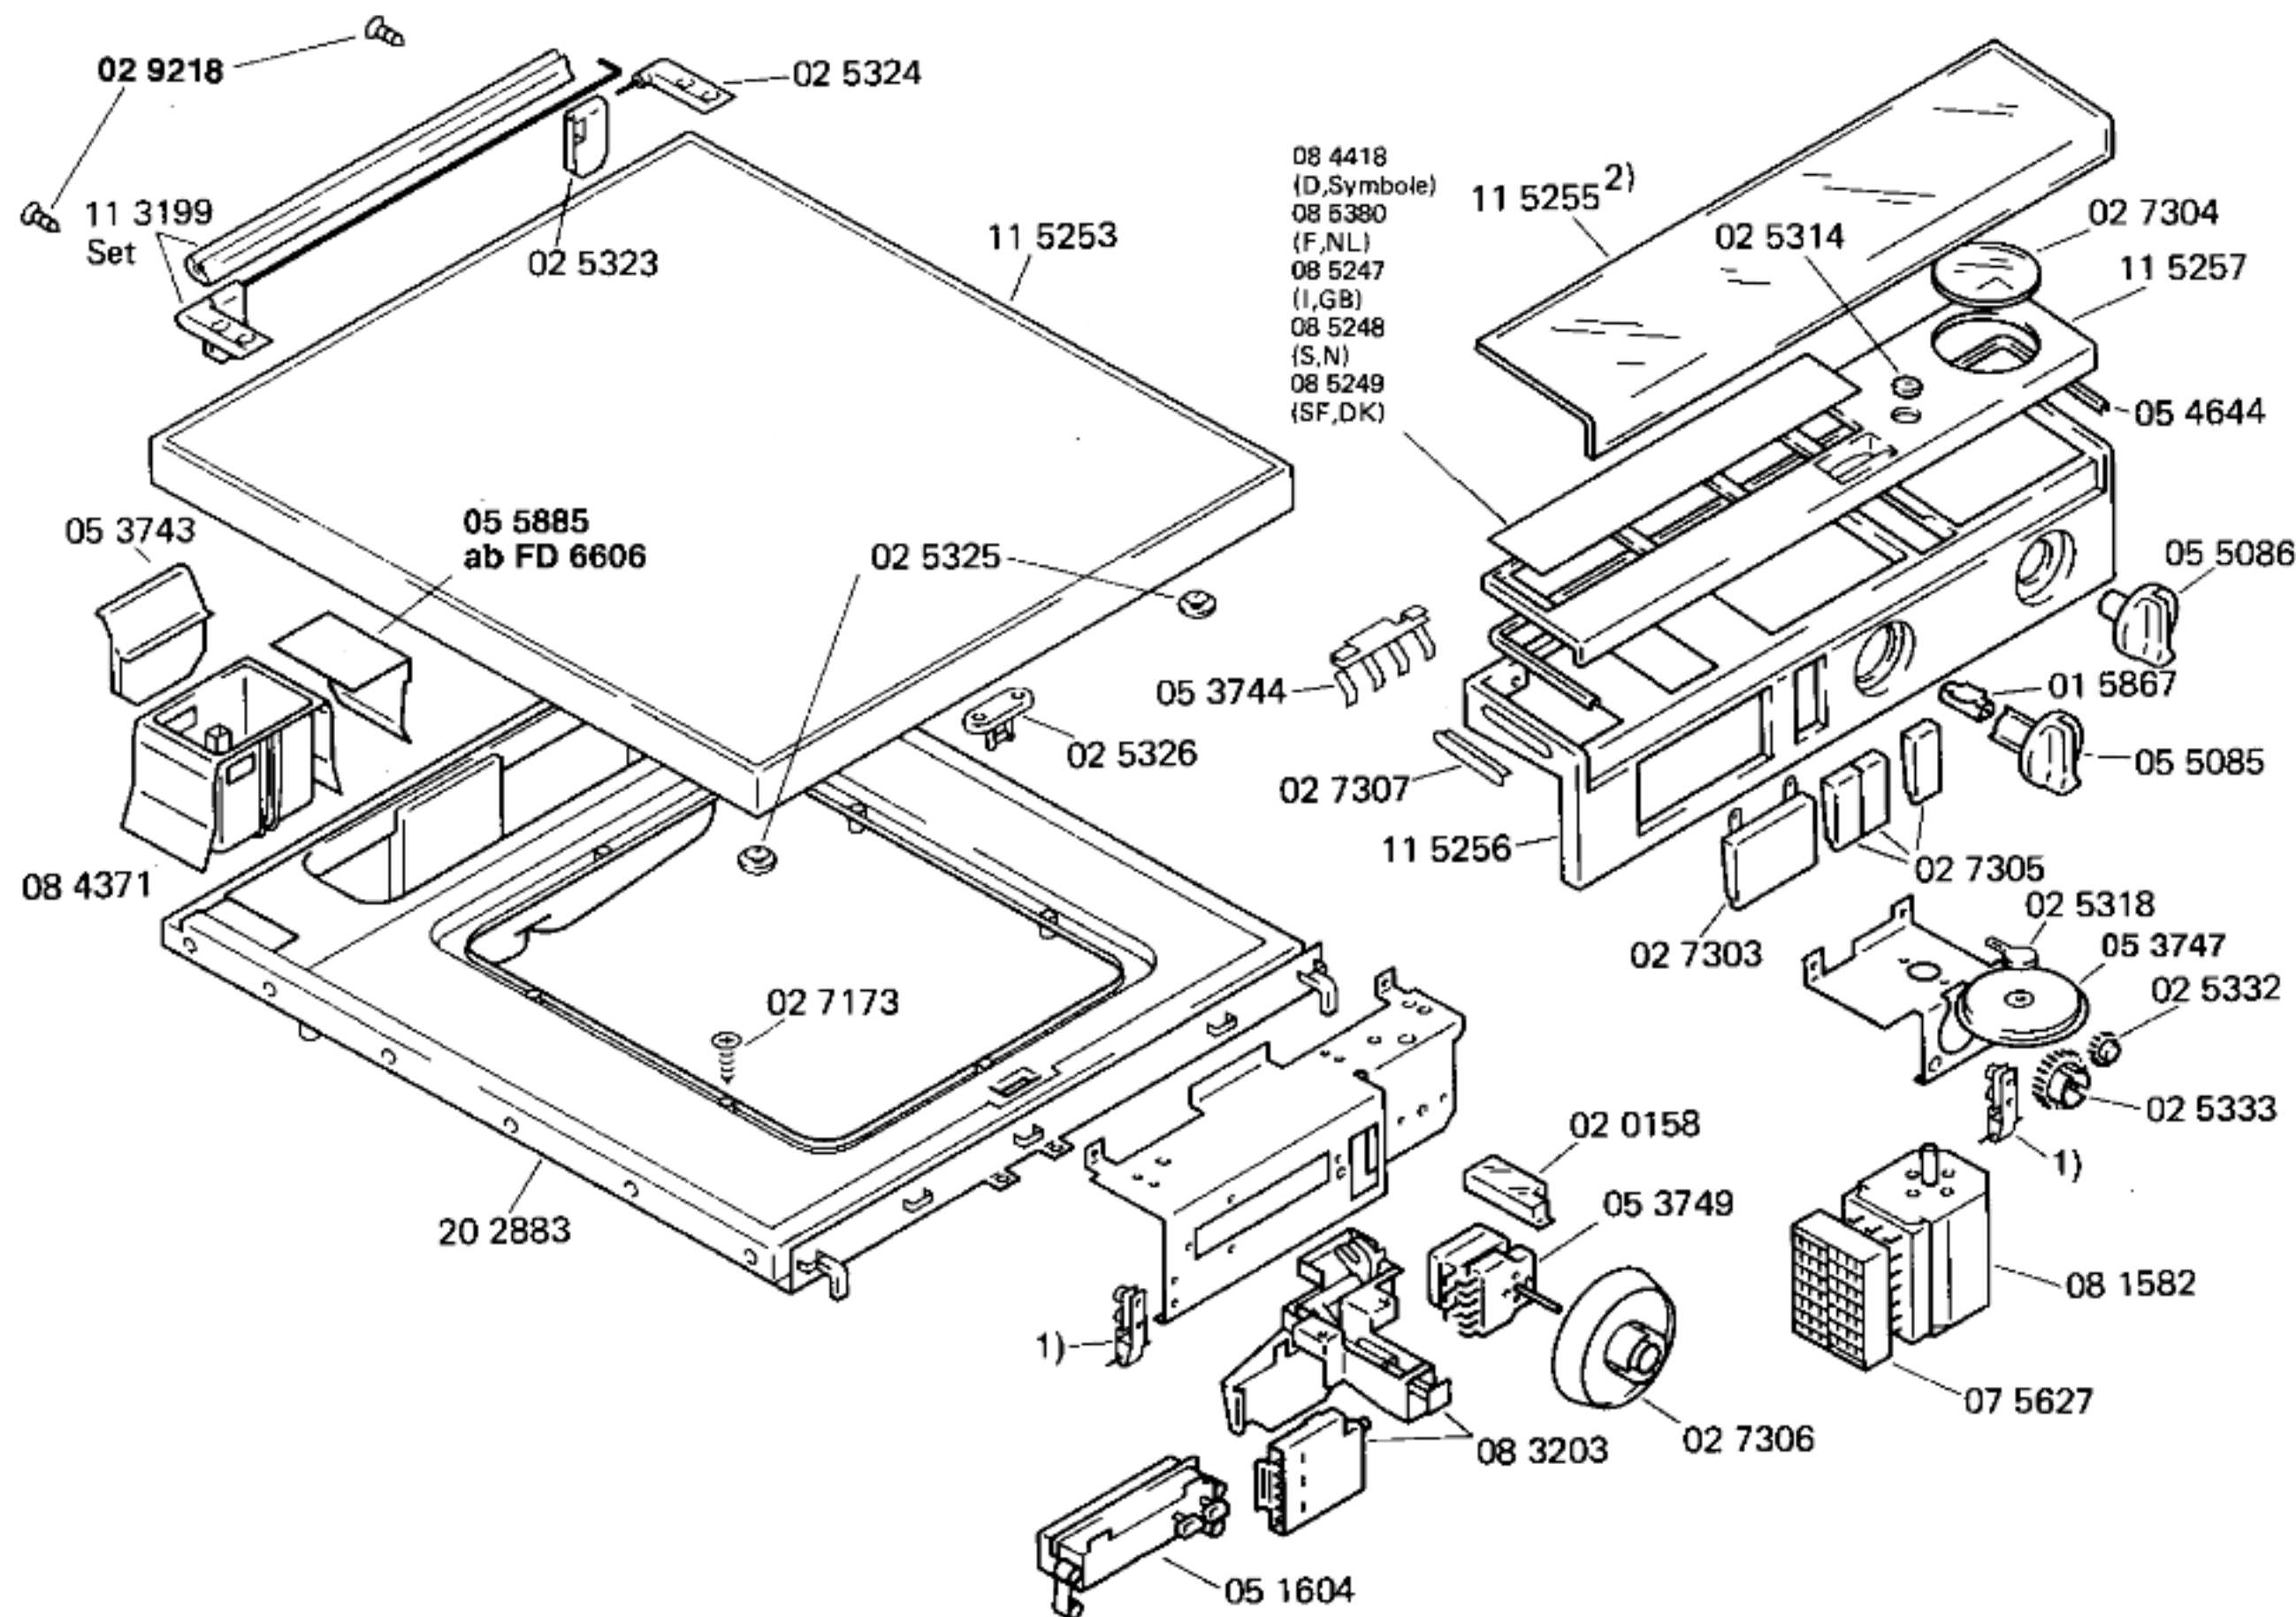

Aufstellanweisungen

51 1497
(D,GB,F,I,NL)
11 1674
(D,I,DK,N,SF)

Gebrauchsanweisungen

51 2229
(D)
51 2482
(D,I,S,DK,N,SF)

Programmtabellen

51 1499
(D,GB,F,I,NL)
51 1634
(D,I,S,DK,SF)

1) 02 5334


2) einschl. 05 4644

**BOSCH**

V3404-0722044429-D1
V3404-0722044438-N1,SF1

WASCHGERÄTE
Waschvollautomaten

Ident - Nummern - Konstante
3740

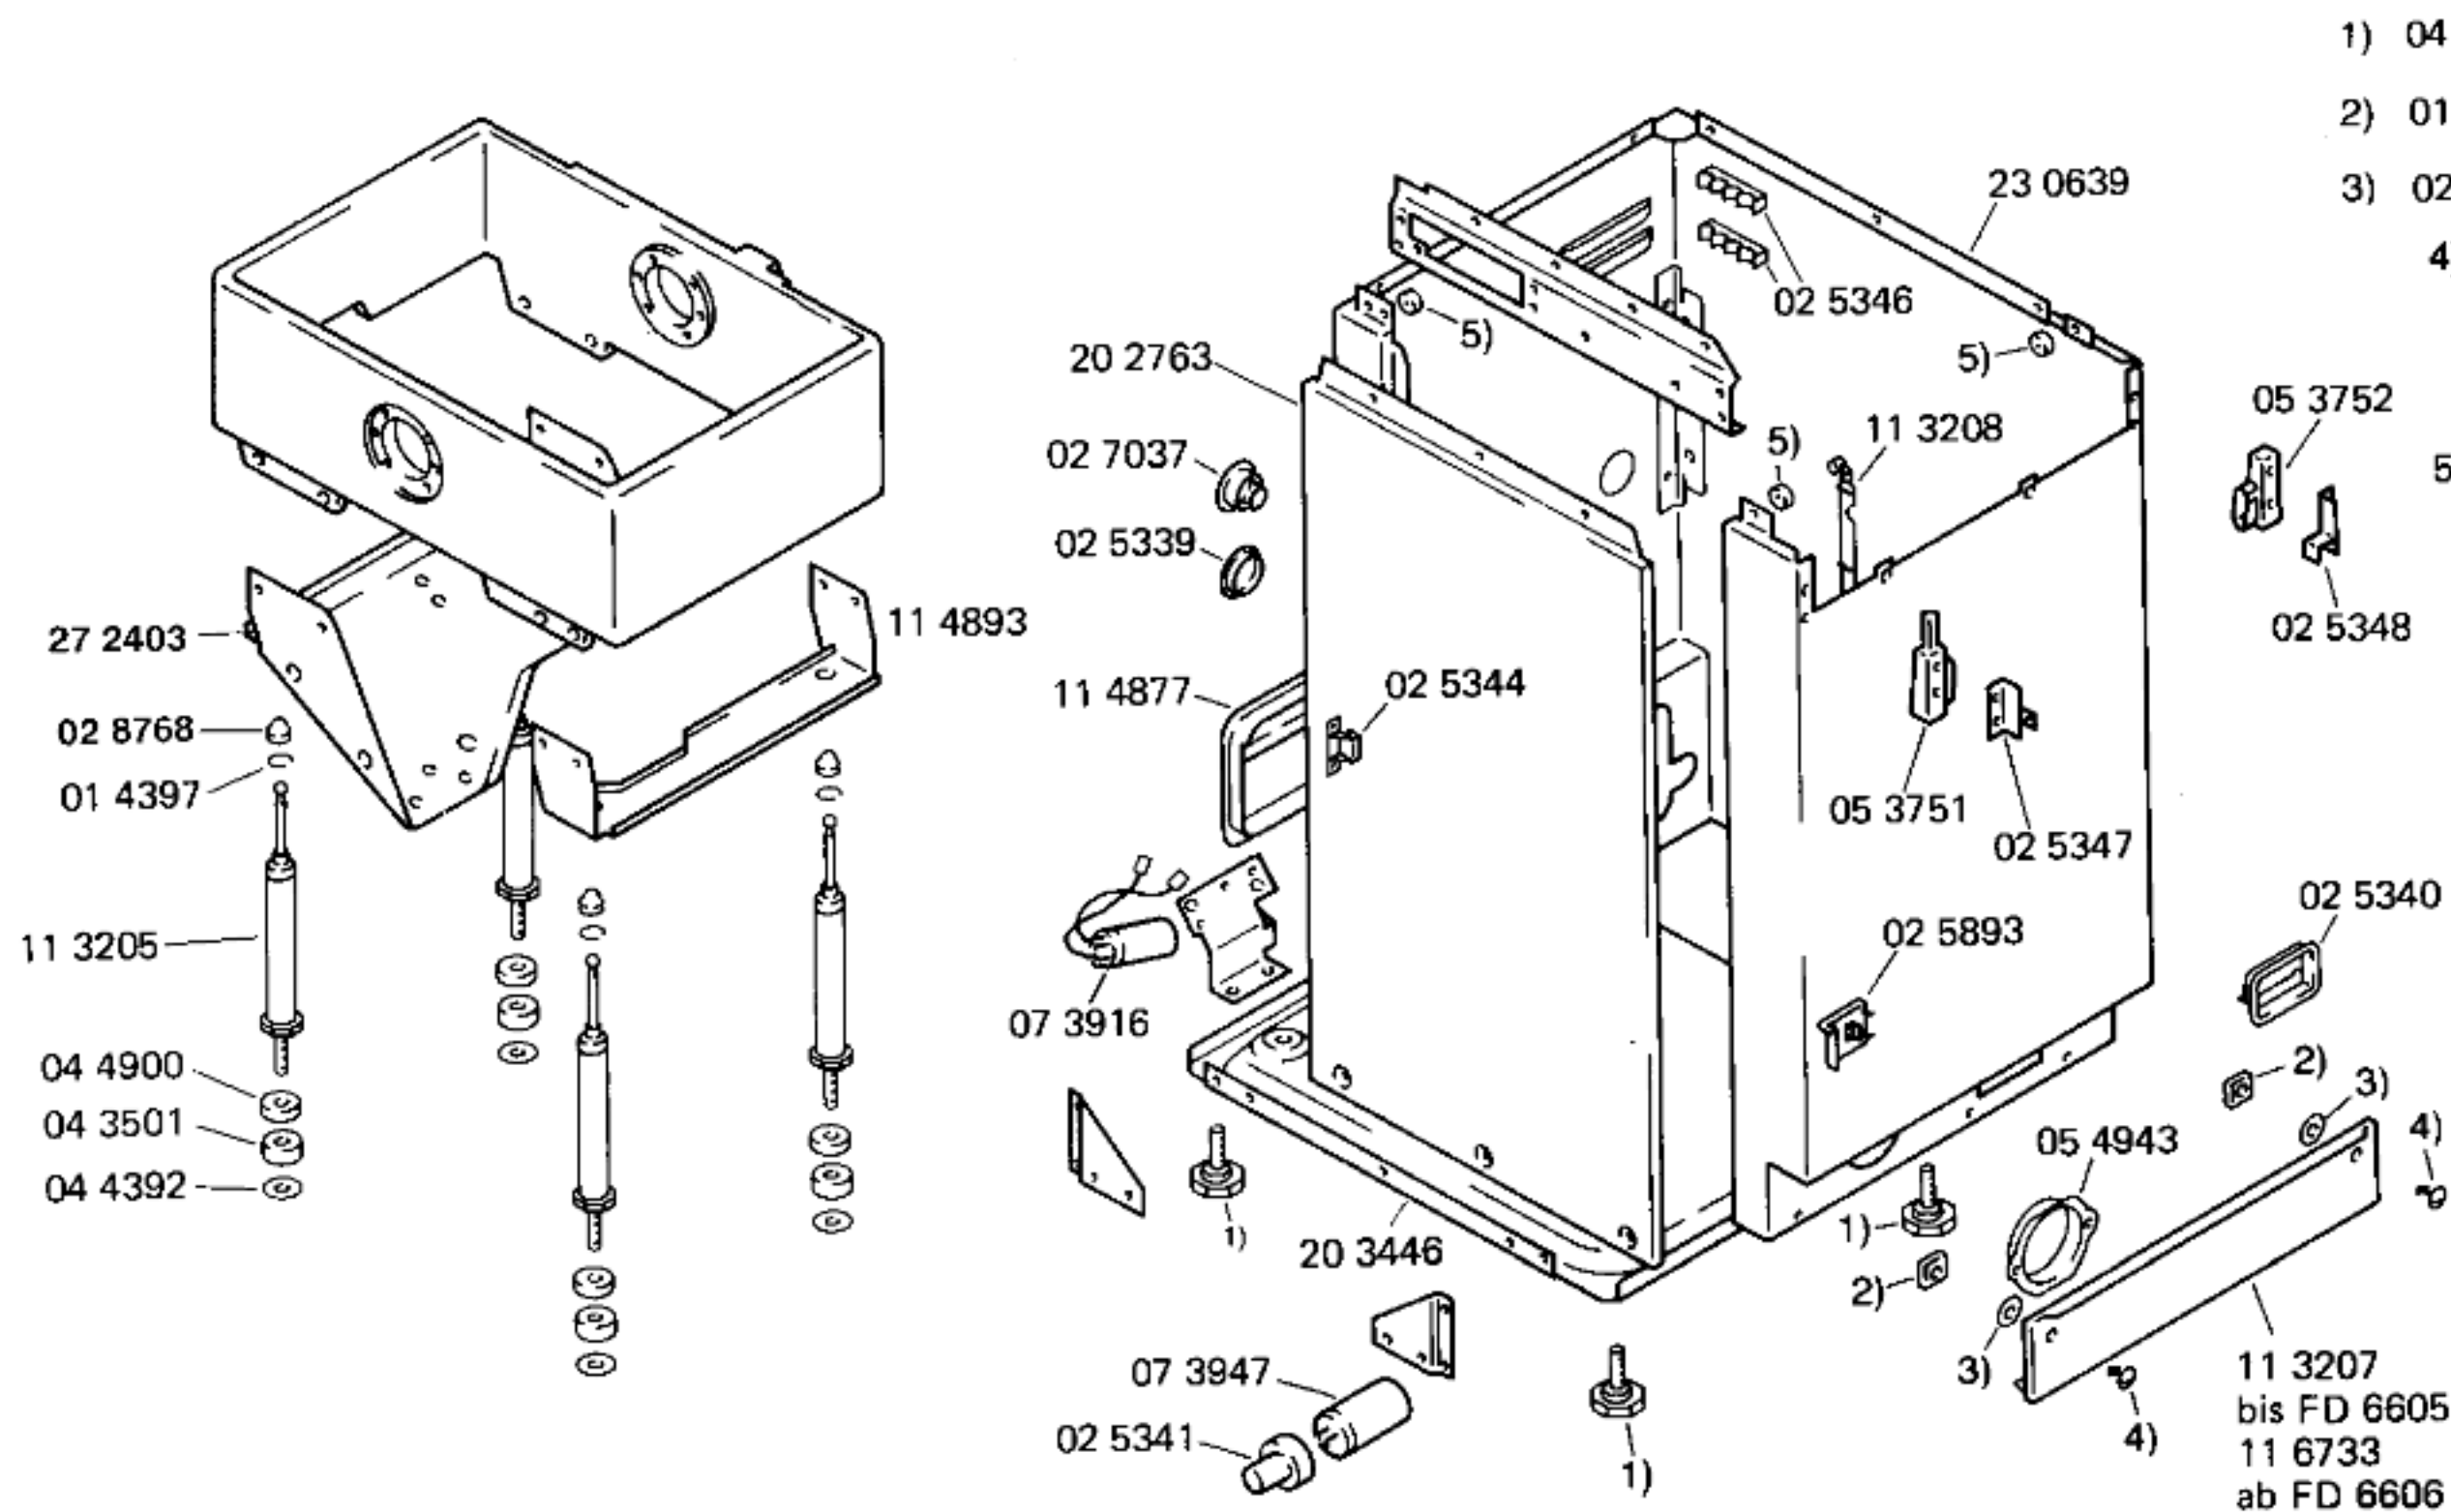


**BOSCH**

V3404-0722044429-D1
V3404-0722044438-N1,SF1

WASCHGERÄTE
Waschvollautomaten

Ident - Nummern - Konstante
3740

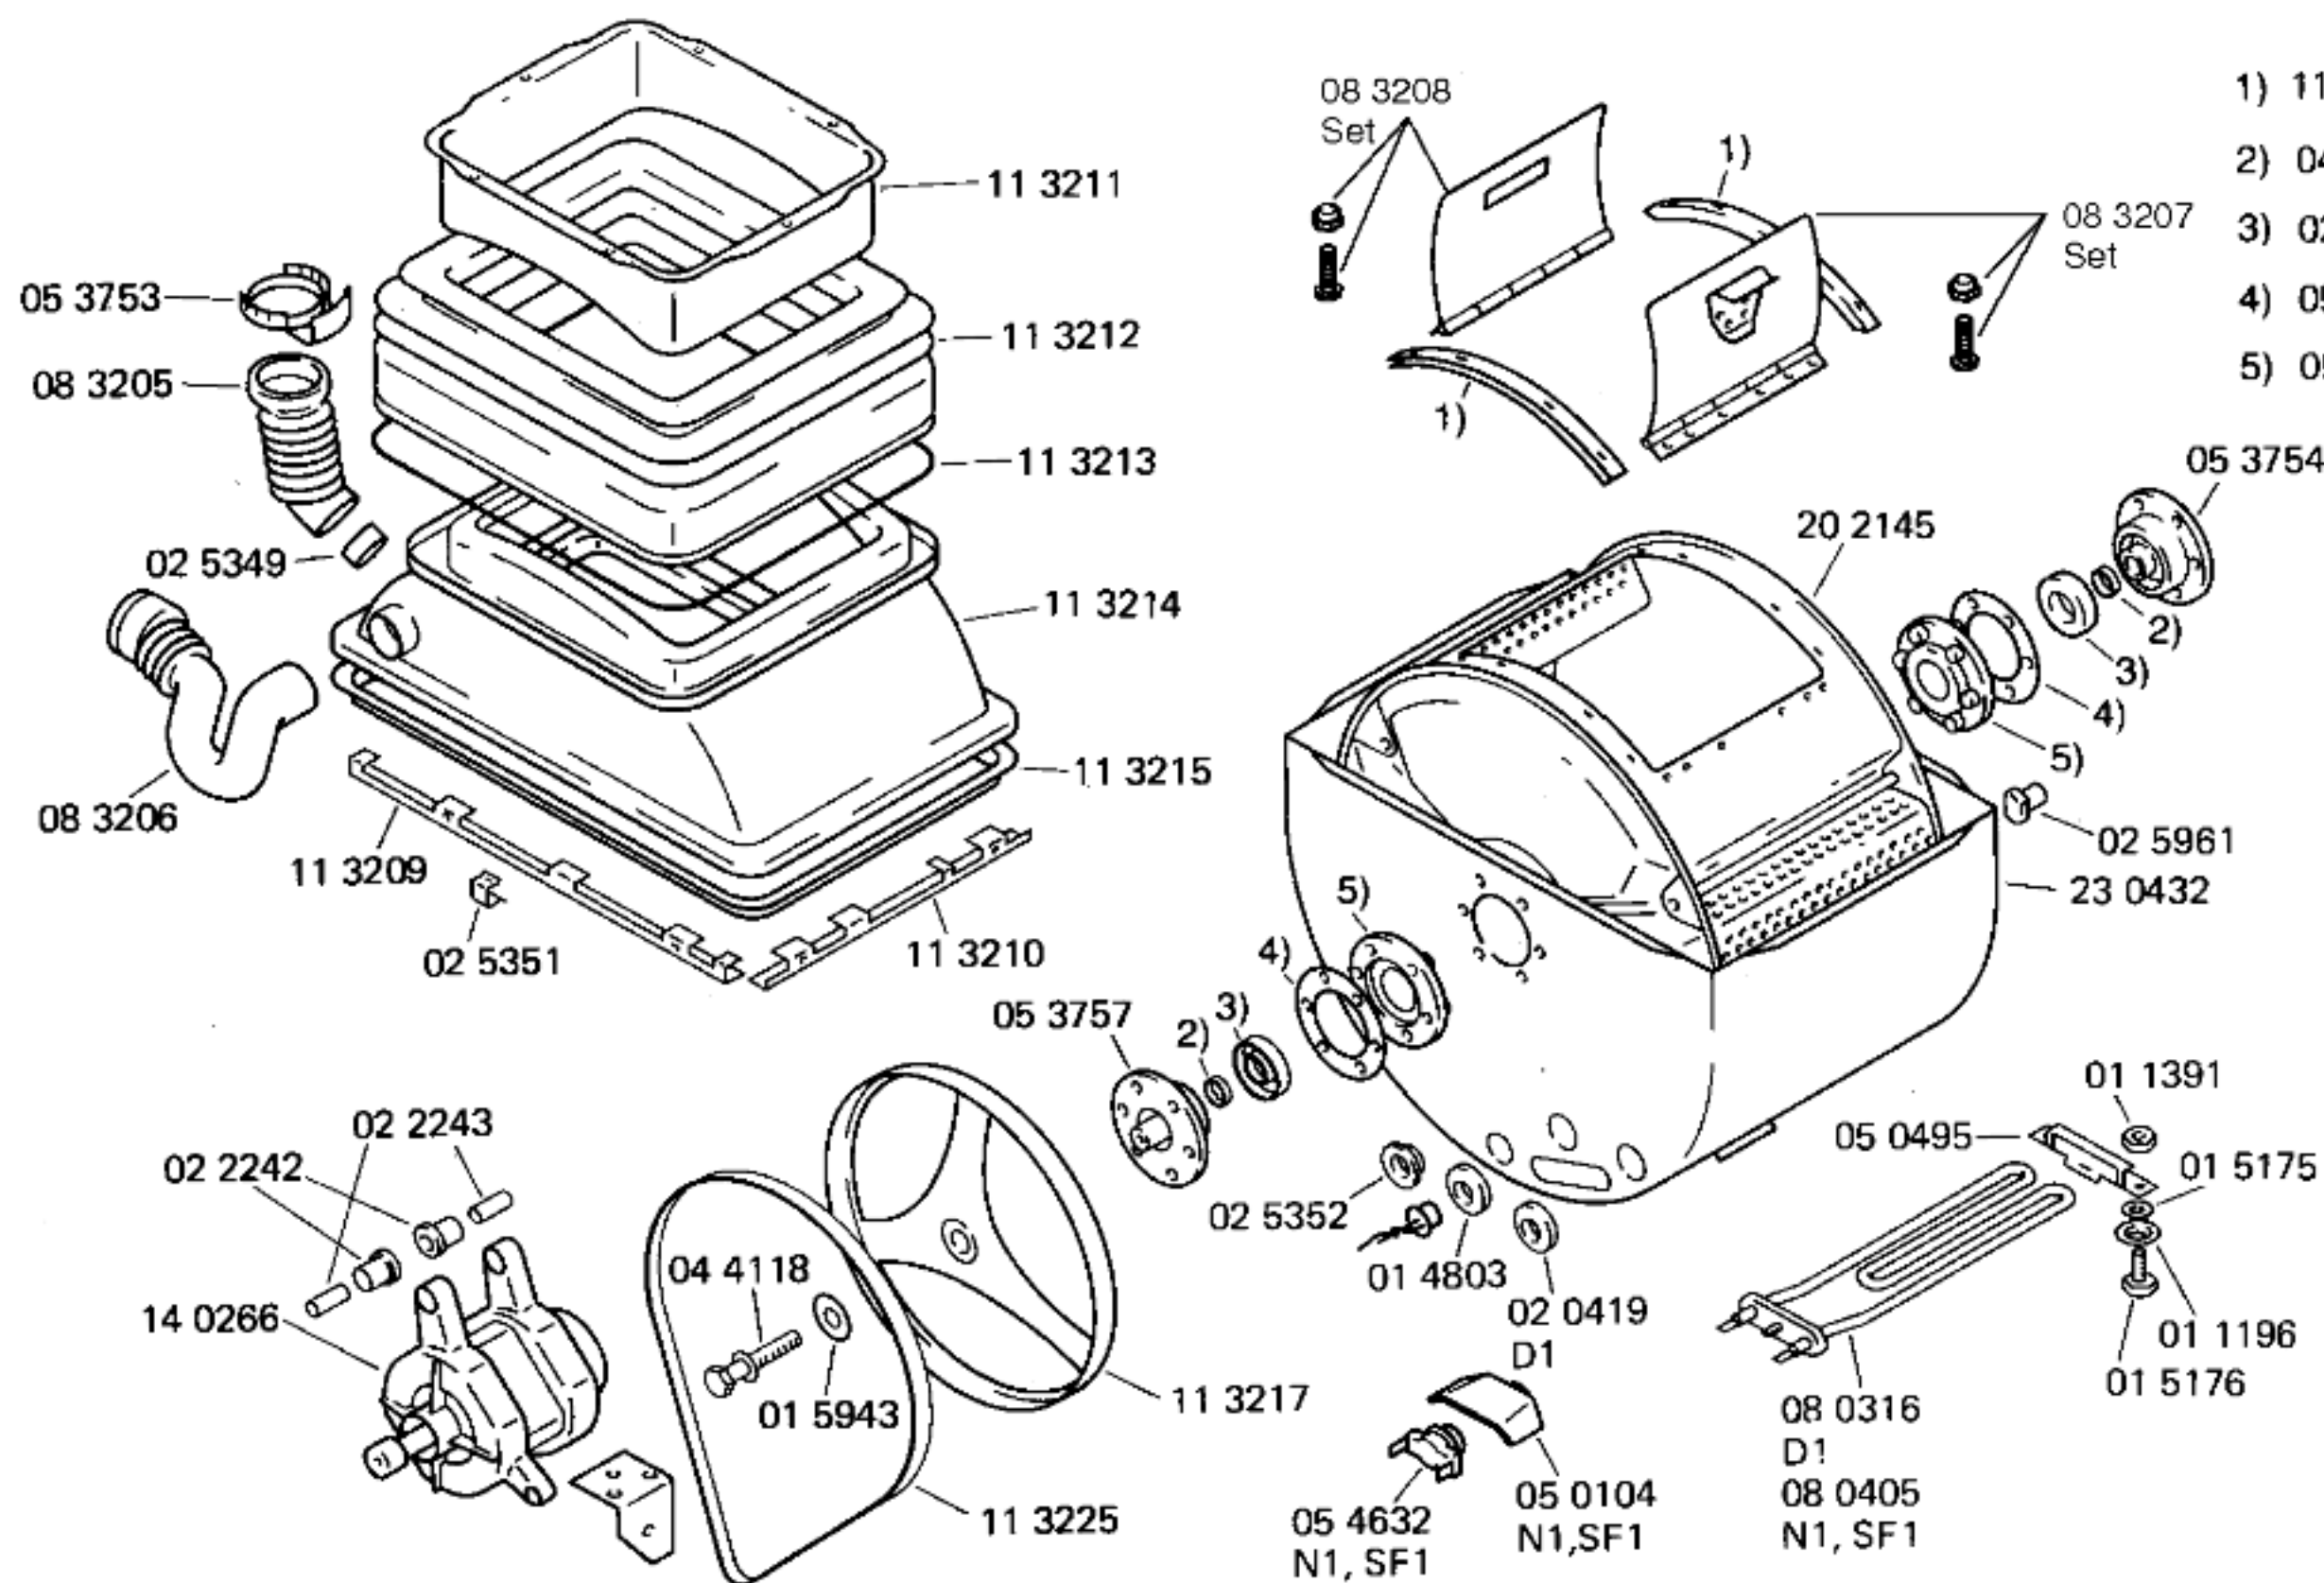

Ident - Nummern - Konstante
3740